

## MAZDA车系V16.00版本可

年份	车型	系统	协议
2001年以后		PCM	CAN协议
		TCM	CAN协议
		ICM	CAN协议
		RCM	CAN协议
		GEM	CAN协议
		ABS	CAN协议
		EPS	CAN协议
		PCM	MAZDA协议
		TCM	MAZDA协议
		ABS/TCS	MAZDA协议
		RCM	MAZDA协议
		PCM	PWM协议
		ICM	PWM协议
		PATS	PWM协议
	01. 01 GY AT MPV(CALIF.)	PCM	PCM_CLASS
		ABS	ABS_CLASS
		CCM	flash code
	02. 01 GY A T MPV(FED,CANADA)	PCM	PCM_CLASS
		ABS	ABS_CLASS
		CCM	Flash code
	03. 01 ZM MT PROTEG	PCM	PCM_CLASS
		ABS	ABS_CLASS
		CCM	flash code
	04. 01 ZM AT PROTEGE	PCM	PCM_CLASS
		ABS	ABS_CLASS
		CCM	flash code
	05. 01 FP MT PROTEGE	PCM	PCM_CLASS
		ABS	ABS_CLASS
		CCM	flash code
	06. 01 FP AT PROTEGE	PCM	PCM_CLASS
		ABS	ABS_CLASS
		CCM	flash code
	07. 01 FS MT 626	PCM	PCM_pwm
		ABS	ABS_CLASS
	08. 01 FS AT 626	PCM	PCM_pwm
ABS		ABS_CLASS	
09. 01 KL MT 626	PCM	PCM_pwm	
	ABS	ABS_CLASS	
10. 01 KL AT 626	PCM	PCM_pwm	
	ABS	ABS_CLASS	
11. 01 BP MT MIATA	PCM	PCM_CLASS	
	ABS	ABS_CLASS	

	CCM	flash code
12.01 BP AT MIATA	PCM	PCM_CLASS
	ABS	ABS_CLASS
	CCM	flash code
13.01 KL AT MILLENIA	PCM	PCM_CLASS
	ABS	ABS_CLASS
	CCM	flash code
	A/C	flash code
14.01 KJ AT MILLENIA	PCM	PCM_CLASS
	ABS	ABS_CLASS
	CCM	flash code
	A/C	flash code
15.01 YF MT TRIBUTE(EP)	PCM	PCM_pwm
	ABS	ABS_CLASS
	GEM	GEM_CLASS
	ICM	ICM_pwm
	RCM	RCM_CLASS
16.01 YF AT TRIBUTE(EP)	PCM	PCM_pwm
	ABS	ABS_CLASS
	GEM	GEM_CLASS
	ICM	ICM_pwm
	RCM	RCM_CLASS
17.01 AJ AT TRIBUTE(EP)	PCM	PCM_pwm
	ABS	ABS_CLASS
	GEM	GEM_CLASS
	ICM	ICM_pwm
	RCM	RCM_CLASS
18.01 2.3L AT B2300	PCM	PCM_pwm
	ABS	ABS_CLASS
	GEM	GEM_CLASS
	IABM	IABM_CLASS
	RAP	RAP_CLASS
	-4X4	-4X4_CLASS
19.01 2.3L MT B2300	PCM	PCM_pwm
	ABS	ABS_CLASS
	GEM	GEM_CLASS
	IABM	IABM_CLASS
	RAP	RAP_CLASS
	-4X4	-4X4_CLASS
20.01 2.5L AT B2500	PCM	PCM_pwm
	ABS	ABS_CLASS
	GEM	GEM_CLASS
	IABM	IABM_CLASS
	RAP	RAP_CLASS
	-4X4	-4X4_CLASS
	PCM	PCM_pwm

21. 01 2.5L MT B2500	ABS	ABS_CLASS
	GEM	GEM_CLASS
	IABM	IABM_CLASS
	RAP	RAP_CLASS
	-4X4	4X4_CLASS
22. 01 3.0L AT B3000	PCM	PCM_pwm
	ABS	ABS_CLASS
	GEM	GEM_CLASS
	IABM	IABM_CLASS
	RAP	RAP_CLASS
23. 01 3.0L MT B3000	-4X4	4X4_CLASS
	PCM	PCM_pwm
	ABS	ABS_CLASS
	GEM	GEM_CLASS
	IABM	IABM_CLASS
24. 01 4.0L AT B4000	RAP	RAP_CLASS
	-4X4	4X4_CLASS
	PCM	PCM_pwm
	ABS	ABS_CLASS
	GEM	GEM_CLASS
25. 01 4.0L MT B4000	IABM	IABM_CLASS
	RAP	RAP_CLASS
	-4X4	4X4_CLASS
	PCM	PCM_pwm
	ABS	ABS_CLASS
121 (DB) B3(MT/AT)	PCM	flash code
	TCM	flash code
121 (DB) B5(MT/AT)	PCM	flash code
	TCM	flash code
121 (DB) B5(MT/AT) DB1053	PCM	flash code
121/121 DEMIO(DW) B3(MT)	PCM	PCM_CLASS
	ABS	ABS_CLASS/flash code
121/121 DEMIO(DW) B3(AT)	PCM	PCM CLASS
	ABS	ABS_CLASS/flash code
121/121 DEMIO(DW) B5(MT)	PCM	PCM CLASS
	PCM	PCM CLASS
121/121 DEMIO(DW) B5(AT)	ABS	ABS_CLASS/flash code
121/121 DEMIO(DW) B3(MT) DW1052	PCM	PCM_CLASS
	ABS	ABS_CLASS
121/121 DEMIO(DW) B3(AT) DW1052	PCM	PCM_CLASS

121/121 DEMIO(DW) B5(AT) DW1052	ABS	ABS_CLASS
121/121 DEMIO(DW) B3(MT) DW1032#203028	PCM	PCM_CLASS
	ABS	ABS_CLASS
121/121 DEMIO(DW) B3(AT) DW1032#203028	PCM	PCM_CLASS
	ABS	ABS_CLASS
121/121 DEMIO(DW) B5(MT) DW1052	PCM	PCM_CLASS
	ABS	ABS_CLASS
121/121 DEMIO(DW) B5(AT) DW1052	PCM	PCM_CLASS
	ABS	ABS_CLASS
121/121 DEMIO(DW) B5(MT) DW1032#203028	PCM	PCM_CLASS
	ABS	ABS_CLASS
121/121 DEMIO(DW) B5(AT) DW1032#203028	PCM	PCM_CLASS
	ABS	ABS_CLASS
323 (BG) B3(MT/AT)	PCM	flash code
	ABS	flash code
	TCM	flash code
323 (BG) B6(MT/AT)	PCM	flash code
	ABS	flash code
	TCM	flash code
323 (BG) BP(MT/AT)	PCM	flash code
	ABS	flash code
	TCM	flash code
323 (BG) ADR BP-SOHC(AT) BG10P2	PCM	flash code
	ABS	flash code
323 (BA) B3(MT)	PCM	PCM_CLASS/flash code
	ABS	flash code
323 (BJ) B3(MT)	PCM	PCM_CLASS
	ABS	ABS_CLASS/flash code
323 (BJ) ZL(MT)	PCM	PCM_CLASS
	ABS	ABS_CLASS/flash code
323 (BJ) ZL(AT)	PCM	PCM_CLASS
	ABS	ABS_CLASS/flash code
323 (BJ) ZM(MT)	PCM	PCM_CLASS
	ABS	ABS_CLASS/flash code
323 (BJ) ZM(AT)	PCM	PCM_CLASS
	ABS	ABS_CLASS/flash code
323 (BJ) FP(MT)	PCM	PCM_CLASS
	ABS	ABS_CLASS/flash code
	PCM	PCM_CLASS

	ABS	ABS_CLASS/flash code
323 (BJ) FP(AT)		
323 (BJ) RF-I(MT)	PCM	PCM_CLASS
323 (BJ) B3(MT) #200001	PCM	PCM_CLASS
	ABS	ABS_CLASS
323 (BJ) ZL(MT) #200001	PCM	PCM_CLASS
	ABS	ABS_CLASS
323 (BJ) ZL(AT) #200001	PCM	PCM_CLASS
	ABS	ABS_CLASS
323 (BJ) ZM(MT) #200001	PCM	PCM_CLASS
	ABS	ABS_CLASS
323 (BJ) ZM(AT) #200001	PCM	PCM_CLASS
	ABS	ABS_CLASS
323 (BJ) FP(MT) #200001	PCM	PCM_CLASS
	ABS	ABS_CLASS
323 (BJ) FP(AT) #200001	PCM	PCM_CLASS
	ABS	ABS_CLASS
MX-5 (NB) BP(MT)	PCM	PCM_CLASS
MX-5 (NB) BP(AT)	PCM	PCM_CLASS
MX-5 (NB) BP(MT) NB30P2	PCM	PCM_CLASS
	ABS	ABS_CLASS
MPV(LW) FS(AT)	PCM	PCM_CLASS
	ABS	ABS_CLASS
MPV(LW) GY(AT)	PCM	PCM_CLASS
B-SERIES(UF) G6(MT)	PCM	PCM_CLASS
B-SERIES(UF) G6(AT)	PCM	PCM_CLASS
B-SERIES(UF) F2(MT)	PCM	PCM_CLASS
B-SERIES(UN) G6(MT)	PCM	PCM_CLASS
B-SERIES(UN) G6(MT)	PCM	PCM_CLASS
B-SERIES(UN) F2(MT)	PCM	PCM_CLASS
E-SERIES (SR) FE-EGI(MT)	PCM	PCM_CLASS
E-SERIES(SK,SL) F8-EGI(MT)	PCM	PCM_CLASS
E-SERIES(SK,SL) FE-EGI(MT)	PCM	PCM_CLASS
BONGO FRIENDEE(SG) J5(AT)	PCM	PCM_CLASS
BONGO FRIENDEE(SG) J5(AT) SG10J4	PCM	PCM_CLASS
	A/C	flash code
	ABS	flash code
	TCM	TCM_CLASS
PREMACY (CP) FP(AT)	PCM	PCM_CLASS
	ABS	ABS_CLASS
626 (GF) FS(MT)	PCM	PCM_PWM
626 (GF) FS(AT)	PCM	PCM_PWM
626 (GF) FS(MT) #200001	PCM	PCM_CLASS
	ABS	ABS_CLASS
626 (GF) FS(AT) #200001	PCM	PCM_CLASS
	ABS	ABS_CLASS

	626 WAGON(GW) FS(MT)	PCM	PCM_PWM
	626 WAGON(GW) FS(AT)	PCM	PCM_PWM
	626 WAGON(GW) FS(MT) #200001	PCM	PCM_PWM
	626 WAGON(GW) FS(MT) #200001	PCM	PCM_PWM
02. 2000-VIN#10:Y	1. 00 GY AT MPV(CALIF.)	PCM	PCM_CLASS
		ABS	ABS_CLASS
		CCM	flash code
	2. 00 GY AT MPV(FED,CANADA)	PCM	PCM_CLASS
		ABS	ABS_CLASS
		CCM	flash code
	3 00 ZM MT PROTEGE	PCM	PCM_CLASS
		ABS	ABS_CLASS
		CCM	flash code
	4 00 ZM AT PROTEGE	PCM	PCM_CLASS
		ABS	ABS_CLASS
		CCM	flash code
	5 00 FP MT PROTEGE	PCM	PCM_CLASS
		ABS	ABS_CLASS
		CCM	flash code
	6 00 FP AT PROTEGE	PCM	PCM_CLASS
		ABS	ABS_CLASS
		CCM	flash code
	7 00 FS MT 626	PCM	PCM_pwm
		ABS	ABS_CLASS
	8 00 FS AT 626	PCM	PCM_pwm
		ABS	ABS_CLASS
	9 00 KL MT 626	PCM	PCM_pwm
		ABS	ABS_CLASS
	10 00 KL AT 626	PCM	PCM_pwm
		ABS	ABS_CLASS
	11 00 BP MT MIATA	PCM	PCM_CLASS
		ABS	flash code
		CCM	flash code
	12 00 BP AT MIATA	PCM	PCM_CLASS
ABS		flash code	
CCM		flash code	
13 00 KL AT MILLENIA	PCM	PCM_CLASS	
	A/C	flash code	
	ABS	ABS_CLASS	
14 00 KJ AT MILLENIA	CCM	flash code	
	PCM	PCM_CLASS	
	A/C	flash code	
		ABS	ABS_CLASS
		PCM	PCM_pwm
		ABS	ABS_CLASS

	15 00 2.5L AT B2500	GEM	GEM_CLASS
		IABM	IABM_CLASS
		PATS	PATS_pwm CLASS
		RAP	RAP_CLASS
	16 00 2.5L MT B2500	PCM	PCM_pwm
		ABS	ABS_CLASS
		GEM	GEM_CLASS
		IABM	IABM_CLASS
		PATS	PATS_pwm CLASS
	17 00 3.0L AT B3000	RAP	RAP_CLASS
		PCM	PCM_pwm
		ABS	ABS_CLASS
		GEM	GEM_CLASS
		IABM	IABM_CLASS
	18 00 3.0L MT B3000	PATS	PATS_pwm CLASS
		RAP	RAP_CLASS
		PCM	PCM_pwm
		ABS	ABS_CLASS
		GEM	GEM_CLASS
			IABM
PATS			PATS_pwm CLASS
RAP			RAP_CLASS
PCM			PCM_pwm
ABS			ABS_CLASS
GEM			GEM_CLASS
20 00 4.0 L MT B4000		IABM	IABM_CLASS
		PATS	PATS_pwm CLASS
		RAP	RAP_CLASS
		PCM	PCM_pwm
		ABS	ABS_CLASS
		GEM	GEM_CLASS
1 99 ZM MT PROTEGE		IABM	IABM_CLASS
		PATS	PATS_pwm CLASS
		RAP	RAP_CLASS
2 99 ZM AT PROTEGE		PCM	PCM_CLASS
		ABS	Flashcode
		CCM	Flashcode
3 99 FP MT PROTEGE		PCM	PCM_CLASS
		ABS	Flashcode
		CCM	Flashcode
4 99 FP AT PROTEGE		PCM	PCM_CLASS
		ABS	Flashcode
		CCM	Flashcode

03. 1999-VIN#10:X

5 99 FS MT 626	PCM	PCM_pwm
	ABS	ABS_CLASS
6 99 FS AT 626	PCM	PCM_pwm
	ABS	ABS_CLASS
7 99 KL MT 626	PCM	PCM_pwm
	ABS	ABS_CLASS
8 99 KL AT 626	PCM	PCM_pwm
	ABS	ABS_CLASS
9 99 BP MT MIATA	PCM	PCM_CLASS
	ABS	Flashcode
	CCM	Flashcode
10 99 BP AT MIATA	PCM	PCM_CLASS
	ABS	Flashcode
	CCM	Flashcode
11 99 JE AT MPV	PCM	PCM_CLASS
	ABS	Flashcode
	CCM	Flashcode
12 99 KL AT MILLENIA	PCM	PCM_CLASS
	A/C	Flashcode
	ABS	Flashcode
13 99 KJ AT MILLENIA	PCM	PCM_CLASS
	A/C	Flashcode
	ABS	Flashcode
14 99 KL AT MILLENIA(NEW ABS)	PCM	PCM_CLASS
	A/C	Flashcode
	ABS	ABS_CLASS
15 99 KJ AT MILLENIA(NEW ABS)	PCM	PCM_CLASS
	A/C	Flashcode
	ABS	ABS_CLASS
16 99 2.5L AT B2500	CCM	Flashcode
	PCM	PCM_pwm
	ABS	ABS_CLASS
	GEM	GEM_CLASS
	PATS	PATS_pwm CLASS
	RAP	RAP_CLASS
17 99 2.5L MT B2500	RCM	RCM_CLASS
	PCM	PCM_pwm
	ABS	ABS_CLASS
	GEM	GEM_CLASS
	PATS	PATS_pwm CLASS
	RAP	RAP_CLASS
	RCM	RCM_CLASS
	PCM	PCM_pwm



	18 99 3.0L AT B3000	ABS	ABS_CLASS
		GEM	GEM_CLASS
		PATS	PATS_pwm CLASS
		RAP	RAP_CLASS
		RCM	RCM_CLASS
	19 99 3.0L MT B3000	PCM	PCM_pwm
		ABS	ABS_CLASS
		GEM	GEM_CLASS
		PATS	PATS_pwm CLASS
		RAP	RAP_CLASS
	20 99 4.0L AT B4000	RCM	PCM_CLASS
		PCM	PCM_pwm
		ABS	ABS_CLASS
		GEM	GEM_CLASS
		PATS	PATS_pwm CLASS
21 99 4.0L MT B4000	RAP	RAP_CLASS	
	RCM	RCM_CLASS	
	PCM	PCM_pwm	
	ABS	ABS_CLASS	
	GEM	GEM_CLASS	
	1 98 Z5 MT PROTEGE	PATS	PATS_pwm CLASS
		RAP	RAP_CLASS
	2 98 Z5 ECAT PROTEGE	RCM	RCM_CLASS
		PCM	PCM_CLASS
	3 98 BP MT PROTEGE	ABS	Flashcode
		CCM	Flashcode
		PCM	PCM_CLASS
	4 98 BP ECAT PROTEGE	ABS	Flashcode
		CCM	Flashcode
		PCM	PCM_CLASS
	5 98 FS MT 626	PCM	PCM_pwm
		ABS	ABS_CLASS
	6 98 FS ECAT 626	PCM	PCM_pwm
		ABS	ABS_CLASS
	7 98 KL MT 626	PCM	PCM_pwm
ABS		ABS_CLASS	
8 98 KL ECAT 626	PCM	PCM_pwm	
	ABS	ABS_CLASS	
9 98 JE ECAT MPV	PCM	PCM_CLASS	
	ABS	Flashcode	
	CCM	Flashcode	
10 98 KL ECAT MILLENIA	PCM	PCM_CLASS	
	A/C	Flashcode	

04. 1998-VIN#10:W

10 98 NL ECAT MILLENIA	ABS	Flashcode
	CCM	Flashcode
11 98 KJ ECAT MILLENIA	PCM	PCM_CLASS
	A/C	Flashcode
	ABS	Flashcode
	CCM	Flashcode
12 98 2.5L AT B2500	PCM	PCM_pwm
	ABS	ABS_CLASS
	GEM	GEM_CLASS
	IABM	IABM_CLASS
	RAP	RAP_CLASS
13 98 2.5L MT B2500	PCM	PCM_pwm
	ABS	ABS_CLASS
	GEM	GEM_CLASS
	IABM	IABM_CLASS
	RAP	RAP_CLASS
14 98 3.0L AT B3000	PCM	PCM_pw
	ABS	ABS_CLASS
	GEM	GEM_CLASS
	IABM	IABM_CLASS
	RAP	RAP_CLASS
15 98 3.0L MT B3000	PCM	PCM_pwm
	ABS	ABS_CLASS
	GEM	GEM_CLASS
	IABM	IABM_CLASS
	RAP	RAP_CLASS
16 98 4.0L AT B4000	PCM	PCM_pwm
	ABS	ABS_CLASS
	GEM	GEM_CLASS
	IABM	IABM_CLASS
	RAP	RAP_CLASS
17 98 4.0L MT B4000	PCM	PCM_pwm
	ABS	ABS_CLASS
	GEM	GEM_CLASS
	IABM	IABM_CLASS
	RAP	RAP_CLASS
1 97 Z5 MT 323/PROTEGE	PCM	PCM_CLASS
	ABS	Flashcode
2 97 Z5 ECAT 323/PROTEGE	PCM	PCM_CLASS
	ABS	Flashcode
3 97 BP MT 323/PROTEGE	PCM	PCM_CLASS
	ABS	Flashcode
4 97 BP ECAT 323/PROTEGE	PCM	PCM_CLASS
	ABS	Flashcode
5 97 FS MT 626/MX-6	PCM	PCM_CLASS
	ABS	Flashcode

05. 1997-VIN#10:V

	CCM	Flashcode
6 97 FS ECAT 626/MX-6	PCM	PCM_pwm
	ABS	Flashcode
	CCM	Flashcode
.7 97 KL MT 626/MX-6	PCM	PCM_CLASS
	ABS	Flashcode
	CCM	Flashcode
8 97 KL ECAT 626/MX-6	PCM	PCM_CLASS
	ABS	Flashcode
	CCM	Flashcode
9 97 BP MT MIATA	PCM	PCM_CLASS
	ABS	Flashcode
	CCM	Flashcode
10 97 BP ECAT MIATA	PCM	PCM_CLASS
	ABS	Flashcode
	CCM	Flashcode
11 97 JE ECAT MPV	PCM	PCM_CLASS
	ABS	Flashcode
	CCM	Flashcode
12 97 KL ECAT MILLENIA	PCM	PCM_CLASS
	A/C	Flashcode
	ABS	Flashcode
13 97 KJ ECAT MILLENIA	CCM	Flashcode
	PCM	PCM_CLASS
	A/C	Flashcode
14 97 2.3L AT B2300	ABS	Flashcode
	PCM	PCM_CLASS
	PCM_pwm	PCM_pwm
	ABS_CLASS	ABS_CLASS
	GEM_CLASS	GEM_CLASS
15 97 2.3L MT B2300	IABM_CLASS	IABM_CLASS
	RAP_CLASS	RAP_CLASS
	PCM_pwm	PCM_pwm
	ABS_CLASS	ABS_CLASS
	GEM_CLASS	GEM_CLASS
16 97 3.0L AT B3000	IABM_CLASS	IABM_CLASS
	RAP_CLASS	RAP_CLASS
	PCM_pwm	PCM_pwm
	ABS_CLASS	ABS_CLASS
	GEM_CLASS	GEM_CLASS
17 97 3.0L MT B3000	IABM_CLASS	IABM_CLASS
	RAP_CLASS	RAP_CLASS
	PCM_pwm	PCM_pwm
	ABS_CLASS	ABS_CLASS

		RAP	RAP_CLASS
	18 97 4.0L AT B4000	PCM	PCM_pwm
		ABS	ABS_CLASS
		GEM	GEM_CLASS
		IABM	IABM_CLASS
		RAP	RAP_CLASS
	19 97 4.0L AT B4000	PCM	PCM_pwm
		ABS	ABS_CLASS
		GEM	GEM_CLASS
		IABM	IABM_CLASS
		RAP	RAP_CLASS
	1 96 Z5 MT 323/PROTEGE	PCM	PCM_CLASS
		ABS	Flashcode
		CCM	Flashcode
	2 96 Z5 ECAT 323/PROTEGE	PCM	PCM_CLASS
		ABS	Flashcode
		CCM	Flashcode
	3 96 BP MT 323/PROTEGE	PCM	PCM_CLASS
		ABS	Flashcode
		CCM	Flashcode
	4 96 BP ECAT 323/PROTEGE	PCM	PCM_CLASS
		ABS	Flashcode
		CCM	Flashcode
	5 96 FS MT 626/MX-6	PCM	PCM_CLASS
		ABS	Flashcode
		CCM	Flashcode
	6 96 FS ECAT 626/MX-6	PCM	PCM_pwm
		ABS	Flashcode
		CCM	Flashcode
	7 96 KL MT 626/MX-6	PCM	PCM_CLASS
		ABS	Flashcode
		CCM	Flashcode
	8 96 KL ECAT 626/MX-6	PCM	PCM_CLASS
		ABS	Flashcode
		CCM	Flashcode
9 96 ECAT 929	PCM	PCM_CLASS	
	A/C	Flashcode	
	ABS	Flashcode	
10 96 BP MT MIATA	CCM	Flashcode	
	PCM	PCM_CLASS	
11 96 BP ECAT MIATA	ABS	Flashcode	
	PCM	PCM_CLASS	
12 96 B6 MT MX-3	ABS	Flashcode	
	PCM	PCM_CLASS	
13 96 B6 ECAT MX-3	ABS	Flashcode	
	PCM	PCM_CLASS	

06. 1996-VIN#10:T

13 96 BU ECAT MX-3	ABS	Flashcode
14 96 K8 MT MX-3	PCM	PCM_CLASS
	ABS	Flashcode
15 96 K8 ECAT MX-3	PCM	PCM_CLASS
	ABS	Flashcode
16 96 JE ECAT MPV	PCM	PCM_CLASS
	ABS	Flashcode
	CCM	Flashcode
17 96 KL ECAT MILLENIA	PCM	PCM_CLASS
	A/C	Flashcode
	ABS	Flashcode
18 96 KJ ECAT MILLENIA	CCM	Flashcode
	PCM	PCM_CLASS
	A/C	Flashcode
19 96 2.3L AT B2300	ABS	Flashcode
	CCM	Flashcode
	PCM	PCM_pwm
	ABS	ABS_CLASS
20 96 2.3L MT B2300	GEM	GEM_CLASS
	IABM	IABM_CLASS
	RAP	RAP_CLASS
	PCM	PCM_pwm
	ABS	ABS_CLASS
21 96 3.0L AT B3000	GEM	GEM_CLASS
	IABM	IABM_CLASS
	RAP	RAP_CLASS
	PCM	PCM_pwm
22 96 3.0L MT B3000	ABS	ABS_CLASS
	GEM	GEM_CLASS
	IABM	IABM_CLASS
	RAP	RAP_CLASS
	PCM	PCM_pwm
23 96 4.0L AT B4000	ABS	ABS_CLASS
	GEM	GEM_CLASS
	IABM	IABM_CLASS
	RAP	RAP_CLASS
24 96 4.0L MT B4000	PCM	PCM_pwm
	ABS	ABS_CLASS
	GEM	GEM_CLASS
	IABM	IABM_CLASS
	RAP	RAP_CLASS

06. 1995-VIN#10:T	1 95 Z5 MT 323/PROTEGE	PCM	PCM_pwm_95_323
		ABS	Flashcode
		CCM	Flashcode
	2 95 Z5 ECAT 323/PROTEGE	PCM	PCM_pwm_95_323
		ABS	flashcode
		CCM	flashcode
	3 95 BP MT 323/PROTEGE	PCM	PCM_pwm_95_323
		ABS	Flashcode
		CCM	Flashcode
	4 95 BP ECAT 323/PROTEGE	PCM	PCM_pwm_95_323
		ABS	Flashcode
		CCM	Flashcode
	5 95 FS MT 626/MX-6	PCM	Flashcode
		ABS	Flashcode
		CCM	Flashcode
6 95 FS ECAT 626/MX-6	PCM	Ford flash code	
	ABS	Flashcode	
	CCM	Flashcode	
7 95 KL 626/MX-6	PCM	Flashcode	
	ABS	Flashcode	
	CCM	Flashcode	
	TCM	Flashcode	
8 95 ALL 929	PCM	Flashcode	
	A/C	Flashcode	
	ABS	Flashcode	
	CCM	Flashcode	
	TCM	Flashcode	
9 95 B6 MX-3	PCM	Flashcode	
	ABS	Flashcode	
	TCM	Flashcode	
10 95 K8 MX-3	PCM	Flashcode	
	ABS	Flashcode	
	TCM	Flashcode	
11 95 ALL MIATA	PCM	Flashcode	
	ABS	Flashcode	
	TCM	Flashcode	
12 95 ALL RX-7	PCM	Flashcode	
	ABS	Flashcode	
	CCM	Flashcode	
	TCM	Flashcode	
13 95 G6 MPV	PCM	Flashcode	
14 95 JE MPV	PCM	Flashcode	
	TCM	Flashcode	
15 95 KL MILLENIA	PCM	PCM_pwm_95_323	
	A/C	Flashcode	
	ABS	Flashcode	

		<b>CCM</b>	Flashcode
16 95 KJ MILLENIA		<b>PCM</b>	PCM_pwm_95_323
		<b>A/C</b>	Flashcode
		<b>ABS</b>	Flashcode
		<b>CCM</b>	Flashcode
17 95 2.3L AT B2300		<b>PCM</b>	PCM_pwm
		<b>ABS</b>	ABS_CLASS
		<b>GEM</b>	GEM_CLASS
		<b>RAP</b>	RAP_CLASS
18 95 2.3L MT B2300		<b>PCM</b>	PCM_pwm
		<b>ABS</b>	ABS_CLASS
		<b>GEM</b>	GEM_CLASS
		<b>RAP</b>	RAP_CLASS
19 95 3.0L AT B3000		<b>PCM</b>	PCM_pwm
		<b>ABS</b>	ABS_CLASS
		<b>GEM</b>	GEM_CLASS
		<b>RAP</b>	RAP_CLASS
20 95 3.0L MT B3000		<b>PCM</b>	PCM_pwm
		<b>ABS</b>	ABS_CLASS
		<b>GEM</b>	GEM_CLASS
		<b>RAP</b>	RAP_CLASS
21 95 4.0L AT B4000		<b>PCM</b>	PCM_pwm
		<b>ABS</b>	ABS_CLASS
		<b>GEM</b>	GEM_CLASS
		<b>RAP</b>	RAP_CLASS
22 95 4.0L MT B4000		<b>PCM</b>	PCM_pwm
		<b>ABS</b>	ABS_CLASS
		<b>GEM</b>	GEM_CLASS
		<b>RAP</b>	RAP_CLASS
1 94 ALL 323/PROTEGE		<b>PCM</b>	Flascode
		<b>TCM</b>	Flashcode
2 94 FS MT 626/MX-6		<b>PCM</b>	Flashcode
		<b>ABS</b>	Flashcode
3 94 FS ECAT 626/MX-6		<b>CCM</b>	Flashcode
		<b>PCM</b>	Ford flash code
		<b>ABS</b>	Flashcode
4 94 KL 626/MX-6		<b>C CM</b>	Flashcode
		<b>PCM</b>	Flashcode
		<b>ABS</b>	Flashcode
		<b>CCM</b>	Flashcode
5 94 ALL 929		<b>TCM</b>	Flashcode
		<b>PCM</b>	flashcode
		<b>A/C</b>	flashcode
		<b>CCM</b>	flashcode
		<b>TCM</b>	Flashcode
		<b>PCM</b>	Flashcode

08: 1994-VIN#10:R	6 94 B6 MX-3	ABS	Flashcode
		TCM	Flashcode
	7 94 K8 MX-3	PCM	Flashcode
		ABS	Flashcode
	8 94 ALL MIATA	TCM	Flashcode
		PCM	Flashcode
	9 94 ALL RX-7	TCM	Flashcode
		CCM	Flashcode
	10 94 G6 MPV	TCM	Flashcode
		PCM	Flashcode
	11 94 JE MPV	TCM	Flashcode
		PCM	Flashcode
	12 94 4.0L NAVAJO	PCM	Ford flash code
		ABS	Flashcode
	13 94 2.3L 49S B2300	PCM	Ford flash code
	14 94 2.3L CAL B2300	PCM	Ford flash code
	15 94 3.0L B3000	PCM	Ford flash code
16 94 4.0L 49S B4000	PCM	Ford flash code	
17 94 4.0L CAL B4000	PCM	Ford flash code	
09: 1993-VIN#10:P	93 ALL VEHICLES EXCEPT NAVAJO	PCM	flash code
		A/C	flash code
		ABS	flash code
		CCM	flash code
		TCM	flash code
	93 4.0L 49S NAVAJO	PCM	Ford flash code
		ABS	flash code
	93 4.0L CAL NAVAJO	PCM	Ford flash code
ABS		flash code	
10: 1992-VIN#10:N	92 ALL VEHICLES EXCEPT NAVAJO	PCM	flash code
		A/C	flash code
		ABS	flash code
		CCM	flash code
	TCM	flash code	
92 4.0L NAVAJO	PCM	Ford flash code	
11: 1991-VIN#10:M	91 ALL VEHICLES EXCEPT NAVAJO	PCM	flash code
		TCM	flash code
	91 4.0L NAVAJO	PCM	Ford flash code
12: 1990-VIN#10:L	90 ALL VEHICLES	PCM	flash code
		TCM	flash code
13: 1989-VIN#10:K	89 ALL VEHICLES	PCM	flash code
		TCM	flash code
14: 1988-VIN#10:J	88 ALL VEHICLES	PCM	flash code
		TCM	flash code







	√	√	√		√
	√	√	√	√	√
	√	√	√	√	√
	√	√	√	√	√
	√	√	√	√	√
	√	√	√		
	√	√	√		√
	√	√	√	√	√
	√	√	√	√	√
	√	√	√	√	√
	√	√	√	√	√
	√	√	√		
	√	√	√		√
	√	√	√	√	√
	√	√	√	√	√
	√	√	√	√	√
	√	√	√	√	√
	√	√	√		
	√	√	√		√
	√	√	√	√	√
	√	√	√	√	√
	√	√	√	√	√
	√	√	√	√	√
	√	√	√		
	√	√	√		√
	√	√	√	√	√
	√	√	√		
	√	√	√		√
	√	√	√	√	√
	√	√	√	√	√
	√	√	√	√	√
	√	√	√		
	√	√	√	√	√
	√	√	√		
	√	√	√	√	√
	√	√	√	√	√
	√	√	√	√	√
	√	√	√		
	√	√	√	√	√
	√	√	√	√	√
	√	√	√	√	√
	√	√	√	√	√









	√	√	√		
	√	√			
	√	√	√		
	√	√	√		√
	√	√	√		
	√	√	√		√
	√	√	√		
	√	√	√		√
	√	√	√		√
	√	√			
	√	√			
	√	√	√		√
	√	√			
	√	√	√		√
	√	√			
	√	√			
	√	√	√		√
	√	√			
	√	√			
	√	√	√		√
	√	√			
	√	√			
	√	√	√		√
	√	√	√		√
	√	√	√	√	√
	√	√	√		
	√	√	√	√	√
	√	√	√	√	√
	√	√	√		√
	√	√	√	√	√
	√	√	√	√	√
	√	√	√	√	√
	√	√	√		





















## Mazda V11.40 Diagnostics List (Note: For reference only)

Year	Make	Model	PCM	ABS	TCM	ICM	RCM	EATC	EPS	GEM	4X4	ACU	AFS	DSM	ECS	FFH	LCM	LHID	LTM	MID	PAM	RHT	RKE	RVM	TPM
		MAZDA6(EURO STG3-4 and General)	CD	CD	CD	CD	CD			CD	C					CD	C	CD					CD		
		ATENZA(JPN)/MAZDA6(General)	CD	CD	CD	CD	CD	CD		CD	C														
		MPV(JPN/GENERAL)	CD	CD	CD																				
		MPV(Europe/General)	CD	CD												CD									
		MAZDA6(North America/General)	CD	CD	CD	CD	CD	CD		CD	C						C								CD
		MAZDA2(EURO STG3/4 Specs.)	CDV	CD	CD	CD	CD																		
		MAZDA3(EURO STG3/4/5 and General specs.)	CD	CD		CD	CD	C	CD	CD						CD									
		AXELA-MAZDA3(Japan-General Specs.)	CD	CD	CD	CD	CD	C	CD	CD	C														
		MAZDA3(North America/General)	CD	CD	CD	CD	CD	C	CD	CD	C														CD
		Escape/Tribute(-2006/3)	CD	CD	CD	CD	CD			CD	CD														
		BONGO/BONGO	CD	CD	CD																				
		BRAWNY/SPECTRON	CD	CD	CD																				
		MPV(North America/General)	CD	CD	CD		CD																		
		TITAN DASH	CD		CD																				
		MAZDA5(EURO STG3/4/5 and General specs.) / i-MAX	CD	CD	CD	CD	CD	CD	CD	CD						CD									
		PREMACY/MAZDA5(Japan General specs.)	CD	CD	CD	CD	CD	CD	CD	CD	C														
		MAZDA5(North America Specs.)	CD	CD	CD	CD	CD	CD	CD	CD															CD
		MX-5(Europe/General Specs.)	CD	CD	CD	CD	CD																CD	CD	
		ROADSTER/MX-5(Japan/General Specs.)	CD	CD	CD	CD	CD																CD	CD	
		MX-5(North America/General Specs.)	CD	CD	CD	CD	CD																CD	CD	
		RX-8(North America Specs.)	CD		CD	CD	CD		CD								CD							CD	CD
		MPV/Mazda8(JPN/General)	CD	CD	CD	CD	CD			CD	C						CD		C						
		RX-8(Europe/General/Japan Specs.)	CD	CD	CD	CD	CD		CD								CD						CD		
		Escape/Tribute(2006/4-)	CD	CD		CD	CD			CD															
		CX-7(North America/General Specs.)	CD	CD	CD	CD	CD	CD		CD	C	C					CD			CD					









VSM
CD