

阅读指南	
标记	具体描述
√	支持此功能
*	新增或者完善的功能

V30/PC-MAX 测试功能表													
汽车制造商:				Ford									
软件版本:				V2.6									
品牌	区域	年款	车型名称	车辆信息	ECU类别	系统名称	ECU供应商	系统信息	读故障码	清故障码	数据流	元件测试	特殊功能
Ford	America	1996	Aerostar 3.0L/4.0L			PCM		√	√	√	√		
Ford	America	1997	Aerostar 3.0L/4.0L			PCM		√	√	√	√		
Ford	America	1996	Aspire 1.3L/1.5L			PCM		√	√	√	√		
Ford	America	2003	Aviator 4.6L			PCM		√	√	√	√		
Ford	America	2004	Aviator 4.6L			PCM		√	√	√	√		
Ford	America	2004	Aviator 4.6L			4X4M			√	√	√		
Ford	America	2003	Aviator 4.6L			ABS			√	√	√		
Ford	America	2004	Aviator 4.6L			ABS			√	√	√		
Ford	America	2003	Aviator 4.6L			IC			√	√	√		
Ford	America	2004	Aviator 4.6L			IC			√	√	√		
Ford	America	2003	Aviator 4.6L			EATC			√	√			
Ford	America	2003	Aviator 4.6L			NAV			√	√			
Ford	America	2004	Aviator 4.6L			NAV			√	√			
Ford	America	2003	Aviator 4.6L			PAM			√	√			
Ford	America	2004	Aviator 4.6L			PAM			√	√			
Ford	America	2003	Aviator 4.6L			RCM			√	√	√		
Ford	America	2004	Aviator 4.6L			RCM			√	√	√		
Ford	America	2003	Aviator 4.6L			TPM			√	√			
Ford	America	2004	Aviator 4.6L			TPM			√	√			
Ford	America	2004	Aviator 4.6L			VAPS			√	√			
Ford	America	2004	Aviator 4.6L			CSM			√	√	√		
Ford	America	2003	Aviator 4.6L			VEMS			√	√			

Ford	America	2004	Aviator 4.6L			DSM			√	√	√		
Ford	America	1996	Bronco 4.9L/5.0L/5.8L			PCM		√	√	√	√		
Ford	America	2002	Blackwood 5.4L			PCM		√	√	√	√		
Ford	America	2003	Blackwood 5.4L			PCM		√	√	√	√		
Ford	America	2002	Blackwood 5.4L			ABS			√	√	√		
Ford	America	2003	Blackwood 5.4L			ABS			√	√	√		
Ford	America	2002	Blackwood 5.4L			DSM			√	√			
Ford	America	2003	Blackwood 5.4L			DSM			√	√			
Ford	America	2002	Blackwood 5.4L			EATC			√	√			
Ford	America	2003	Blackwood 5.4L			EATC			√	√			
Ford	America	2002	Blackwood 5.4L			GEM			√	√			
Ford	America	2003	Blackwood 5.4L			GEM			√	√			
Ford	America	2002	Blackwood 5.4L			HEC			√	√			
Ford	America	2003	Blackwood 5.4L			HEC			√	√			
Ford	America	2002	Blackwood 5.4L			LTM			√	√			
Ford	America	2003	Blackwood 5.4L			LTM			√	√			
Ford	America	2002	Blackwood 5.4L			PAM			√	√			
Ford	America	2003	Blackwood 5.4L			PAM			√	√			
Ford	America	2002	Blackwood 5.4L			RAP			√	√			
Ford	America	2003	Blackwood 5.4L			RAP			√	√			
Ford	America	2002	Blackwood 5.4L			RASM			√	√			
Ford	America	2003	Blackwood 5.4L			RASM			√	√			
Ford	America	2002	Blackwood 5.4L			RCM			√	√	√		
Ford	America	2003	Blackwood 5.4L			RCM			√	√	√		
Ford	America	1996	Crown Victoria 4.6L			PCM		√	√	√	√		
Ford	America	1997	Crown Victoria 4.6L			PCM		√	√	√	√		
Ford	America	1998	Crown Victoria 4.6L			PCM		√	√	√	√		
Ford	America	1999	Crown Victoria 4.6L			PCM		√	√	√	√		
Ford	America	2000	Crown Victoria 4.6L			PCM		√	√	√	√		
Ford	America	2001	Crown Victoria 4.6L			PCM		√	√	√	√		
Ford	America	2002	Crown Victoria 4.6L			PCM		√	√	√	√		
Ford	America	2003	Crown Victoria 4.6L			PCM		√	√	√	√		
Ford	America	2004	Crown Victoria 4.6L			PCM		√	√	√	√		
Ford	America	1996	Crown Victoria 4.6L			ABS			√	√	√		
Ford	America	1997	Crown Victoria 4.6L			ABS			√	√	√		

Ford	America	1998	Crown Victoria 4.6L			ABS			√	√	√		
Ford	America	1999	Crown Victoria 4.6L			ABS			√	√	√		
Ford	America	2000	Crown Victoria 4.6L			ABS			√	√	√		
Ford	America	2001	Crown Victoria 4.6L			ABS			√	√	√		
Ford	America	2002	Crown Victoria 4.6L			ABS			√	√	√		
Ford	America	2003	Crown Victoria 4.6L			ABS			√	√	√		
Ford	America	2004	Crown Victoria 4.6L			ABS			√	√	√		
Ford	America	2002	Crown Victoria 4.6L			DDM			√	√	√		
Ford	America	2003	Crown Victoria 4.6L			DDM			√	√	√		
Ford	America	2004	Crown Victoria 4.6L			DDM			√	√	√		
Ford	America	1996	Crown Victoria 4.6L			DDM			√	√	√		
Ford	America	1997	Crown Victoria 4.6L			DDM			√	√	√		
Ford	America	1998	Crown Victoria 4.6L			DDM			√	√	√		
Ford	America	1999	Crown Victoria 4.6L			DDM			√	√	√		
Ford	America	2000	Crown Victoria 4.6L			DDM			√	√	√		
Ford	America	1996	Crown Victoria 4.6L			DSM			√	√			
Ford	America	1997	Crown Victoria 4.6L			DSM			√	√			
Ford	America	2002	Crown Victoria 4.6L			EATC			√	√	√		
Ford	America	2003	Crown Victoria 4.6L			EATC			√	√	√		
Ford	America	2004	Crown Victoria 4.6L			EATC			√	√	√		
Ford	America	1996	Crown Victoria 4.6L			EATC			√	√	√		
Ford	America	1997	Crown Victoria 4.6L			EATC			√	√	√		
Ford	America	1998	Crown Victoria 4.6L			EATC			√	√	√		
Ford	America	1999	Crown Victoria 4.6L			EATC			√	√	√		
Ford	America	2000	Crown Victoria 4.6L			EATC			√	√	√		
Ford	America	1996	Crown Victoria 4.6L			IABM			√	√			
Ford	America	1997	Crown Victoria 4.6L			IABM			√	√			
Ford	America	1999	Crown Victoria 4.6L			ECS			√	√			
Ford	America	2000	Crown Victoria 4.6L			ECS			√	√			
Ford	America	2002	Crown Victoria 4.6L			FIM			√	√			
Ford	America	2003	Crown Victoria 4.6L			FIM			√	√			
Ford	America	2004	Crown Victoria 4.6L			FIM			√	√			
Ford	America	1996	Crown Victoria 4.6L			FIM			√	√			
Ford	America	1997	Crown Victoria 4.6L			FIM			√	√			

Ford	America	1998	Crown Victoria 4.6L			FIM			√	√			
Ford	America	1999	Crown Victoria 4.6L			FIM			√	√			
Ford	America	2000	Crown Victoria 4.6L			FIM			√	√			
Ford	America	2002	Crown Victoria 4.6L			LCM			√	√			
Ford	America	2003	Crown Victoria 4.6L			LCM			√	√			
Ford	America	2004	Crown Victoria 4.6L			LCM			√	√			
Ford	America	1996	Crown Victoria 4.6L			LCM			√	√			
Ford	America	1997	Crown Victoria 4.6L			LCM			√	√			
Ford	America	1998	Crown Victoria 4.6L			LCM			√	√			
Ford	America	1999	Crown Victoria 4.6L			LCM			√	√			
Ford	America	2000	Crown Victoria 4.6L			LCM			√	√			
Ford	America	2002	Crown Victoria 4.6L			PATS			√	√			
Ford	America	1998	Crown Victoria 4.6L			PATS			√	√			
Ford	America	1999	Crown Victoria 4.6L			PATS			√	√			
Ford	America	2000	Crown Victoria 4.6L			PATS			√	√			
Ford	America	2004	Crown Victoria 4.6L			MC			√	√			
Ford	America	2003	Crown Victoria 4.6L			RASM			√	√			
Ford	America	2004	Crown Victoria 4.6L			RASM			√	√			
Ford	America	2003	Crown Victoria 4.6L			RCM			√	√	√		
Ford	America	2004	Crown Victoria 4.6L			RCM			√	√	√		
Ford	America	2003	Crown Victoria 4.6L			VAPS			√	√			
Ford	America	2004	Crown Victoria 4.6L			VAPS			√	√			
Ford	America	2006	Crown Victoria 4.6L			PCM			√	√	√		
Ford	America	2006	Crown Victoria 4.6L			ABS			√	√	√		
Ford	America	2006	Crown Victoria 4.6L			RCM			√	√	√		
Ford	America	2006	Crown Victoria 4.6L			IC			√	√	√		
Ford	America	2007	Crown Victoria 4.6L			PCM			√	√	√		
Ford	America	2007	Crown Victoria 4.6L			ABS			√	√	√		
Ford	America	2007	Crown Victoria 4.6L			RCM			√	√	√		
Ford	America	2007	Crown Victoria 4.6L			IC			√	√	√		
Ford	America	1999	Cougar 2.0L/2.5L			PCM		√	√	√	√		
Ford	America	2000	Cougar 2.0L/2.5L			PCM		√	√	√	√		
Ford	America	2001	Cougar 2.0L/2.5L			PCM		√	√	√	√		
Ford	America	2002	Cougar 2.0L/2.5L			PCM		√	√	√	√		

Ford	America	1999	Cougar 2.0L/2.5L			ABS			√	√	√		
Ford	America	2000	Cougar 2.0L/2.5L			ABS			√	√	√		
Ford	America	2001	Cougar 2.0L/2.5L			ABS			√	√	√		
Ford	America	2002	Cougar 2.0L/2.5L			ABS			√	√	√		
Ford	America	1999	Cougar 2.0L/2.5L			CSM			√	√			
Ford	America	2000	Cougar 2.0L/2.5L			CSM			√	√			
Ford	America	2001	Cougar 2.0L/2.5L			CSM			√	√			
Ford	America	2002	Cougar 2.0L/2.5L			CSM			√	√			
Ford	America	1999	Cougar 2.0L/2.5L			HEC			√	√			
Ford	America	2000	Cougar 2.0L/2.5L			HEC			√	√			
Ford	America	2001	Cougar 2.0L/2.5L			HEC			√	√			
Ford	America	2002	Cougar 2.0L/2.5L			HEC			√	√			
Ford	America	2002	Cougar 2.0L/2.5L			IABM			√	√			
Ford	America	1999	Cougar 2.0L/2.5L			IABM			√	√			
Ford	America	2000	Cougar 2.0L/2.5L			IABM			√	√			
Ford	America	1996	Cougar 3.8L/4.6L			PCM		√	√	√	√		
Ford	America	1997	Cougar 3.8L/4.6L			PCM		√	√	√	√		
Ford	America	1996	Cougar 3.8L/4.6L			HEC			√	√			
Ford	America	1997	Cougar 3.8L/4.6L			HEC			√	√			
Ford	America	1996	Contour 2.0L/2.5L			PCM		√	√	√	√		
Ford	America	1997	Contour 2.0L/2.5L			PCM		√	√	√	√		
Ford	America	1998	Contour 2.0L/2.5L			PCM		√	√	√	√		
Ford	America	1999	Contour 2.0L/2.5L			PCM		√	√	√	√		
Ford	America	2000	Contour 2.0L/2.5L			PCM		√	√	√	√		
Ford	America	1996	Contour 2.0L/2.5L			ABS			√	√	√		
Ford	America	1997	Contour 2.0L/2.5L			ABS			√	√	√		
Ford	America	1998	Contour 2.0L/2.5L			ABS			√	√	√		
Ford	America	1999	Contour 2.0L/2.5L			ABS			√	√	√		
Ford	America	2000	Contour 2.0L/2.5L			ABS			√	√	√		
Ford	America	1998	Contour 2.0L/2.5L			CSM			√	√			
Ford	America	1999	Contour 2.0L/2.5L			CSM			√	√			
Ford	America	2000	Contour 2.0L/2.5L			CSM			√	√			
Ford	America	1998	Contour 2.0L/2.5L			PATS			√	√			
Ford	America	1998	Contour 2.0L/2.5L			RCM			√	√	√		
Ford	America	1999	Contour 2.0L/2.5L			RCM			√	√	√		

Ford	America	2000	Contour 2.0L/2.5L			RCM			√	√	√		
Ford	America	1996	Continental 4.6L			PCM		√	√	√	√		
Ford	America	1997	Continental 4.6L			PCM		√	√	√	√		
Ford	America	1998	Continental 4.6L			PCM		√	√	√	√		
Ford	America	1999	Continental 4.6L			PCM		√	√	√	√		
Ford	America	2000	Continental 4.6L			PCM		√	√	√	√		
Ford	America	2001	Continental 4.6L			PCM		√	√	√	√		
Ford	America	2002	Continental 4.6L			PCM		√	√	√	√		
Ford	America	1996	Continental 4.6L			ABS			√	√	√		
Ford	America	1997	Continental 4.6L			ABS			√	√	√		
Ford	America	1998	Continental 4.6L			ABS			√	√	√		
Ford	America	1999	Continental 4.6L			ABS			√	√	√		
Ford	America	2000	Continental 4.6L			ABS			√	√	√		
Ford	America	2001	Continental 4.6L			ABS			√	√	√		
Ford	America	2002	Continental 4.6L			ABS			√	√	√		
Ford	America	2002	Continental 4.6L			ACM			√	√			
Ford	America	1996	Continental 4.6L			ACM			√	√			
Ford	America	1997	Continental 4.6L			ACM			√	√			
Ford	America	1998	Continental 4.6L			ACM			√	√			
Ford	America	1999	Continental 4.6L			ACM			√	√			
Ford	America	2000	Continental 4.6L			ACM			√	√			
Ford	America	1996	Continental 4.6L			CPM			√	√			
Ford	America	1997	Continental 4.6L			CPM			√	√			
Ford	America	1998	Continental 4.6L			CPM			√	√			
Ford	America	1999	Continental 4.6L			CPM			√	√			
Ford	America	2000	Continental 4.6L			CPM			√	√			
Ford	America	2001	Continental 4.6L			CPM			√	√			
Ford	America	2002	Continental 4.6L			CPM			√	√			
Ford	America	2002	Continental 4.6L			DDM			√	√			
Ford	America	1996	Continental 4.6L			DDM			√	√			
Ford	America	1997	Continental 4.6L			DDM			√	√			
Ford	America	1998	Continental 4.6L			DDM			√	√			
Ford	America	1999	Continental 4.6L			DDM			√	√			
Ford	America	2000	Continental 4.6L			DDM			√	√			
Ford	America	2002	Continental 4.6L			DSM			√	√			

Ford	America	1996	Continental 4.6L			DSM			√	√			
Ford	America	1997	Continental 4.6L			DSM			√	√			
Ford	America	1998	Continental 4.6L			DSM			√	√			
Ford	America	1999	Continental 4.6L			DSM			√	√			
Ford	America	2000	Continental 4.6L			DSM			√	√			
Ford	America	2002	Continental 4.6L			EATC			√	√			
Ford	America	1996	Continental 4.6L			EATC			√	√			
Ford	America	1997	Continental 4.6L			EATC			√	√			
Ford	America	1998	Continental 4.6L			EATC			√	√			
Ford	America	1999	Continental 4.6L			EATC			√	√			
Ford	America	2000	Continental 4.6L			EATC			√	√			
Ford	America	1996	Continental 4.6L			IABM			√	√			
Ford	America	1997	Continental 4.6L			IABM			√	√			
Ford	America	1998	Continental 4.6L			ECS			√	√			
Ford	America	2002	Continental 4.6L			LCM			√	√			
Ford	America	1996	Continental 4.6L			LCM			√	√			
Ford	America	1997	Continental 4.6L			LCM			√	√			
Ford	America	1998	Continental 4.6L			LCM			√	√			
Ford	America	1999	Continental 4.6L			LCM			√	√			
Ford	America	2000	Continental 4.6L			LCM			√	√			
Ford	America	2002	Continental 4.6L			NGSC			√	√			
Ford	America	1998	Continental 4.6L			NGSC			√	√			
Ford	America	1999	Continental 4.6L			NGSC			√	√			
Ford	America	2000	Continental 4.6L			NGSC			√	√			
Ford	America	1999	Continental 4.6L			RCM			√	√	√		
Ford	America	2000	Continental 4.6L			RCM			√	√	√		
Ford	America	2001	Continental 4.6L			RCM			√	√	√		
Ford	America	2002	Continental 4.6L			RCM			√	√	√		
Ford	America	1996	Continental 4.6L			RESCU			√	√			
Ford	America	1997	Continental 4.6L			RESCU			√	√			
Ford	America	1998	Continental 4.6L			RESCU			√	√			
Ford	America	1999	Continental 4.6L			RESCU			√	√			
Ford	America	2000	Continental 4.6L			RESCU			√	√			
Ford	America	1996	Continental 4.6L			VDM			√	√			

Ford	America	1997	Continental 4.6L			VDM			√	√			
Ford	America	1998	Continental 4.6L			VDM			√	√			
Ford	America	1999	Continental 4.6L			VDM			√	√			
Ford	America	2000	Continental 4.6L			VDM			√	√			
Ford	America	2001	Continental 4.6L			VDM			√	√			
Ford	America	2002	Continental 4.6L			VDM			√	√			
Ford	America	2002	Continental 4.6L			VIC			√	√			
Ford	America	1996	Continental 4.6L			VIC			√	√			
Ford	America	1997	Continental 4.6L			VIC			√	√			
Ford	America	1998	Continental 4.6L			VIC			√	√			
Ford	America	1999	Continental 4.6L			VIC			√	√			
Ford	America	2000	Continental 4.6L			VIC			√	√			
Ford	America	2006	Econoline 6.0L Diesel			PCM			√	√	√		
Ford	America	2006	Econoline 6.0L Diesel			ABS			√	√	√		
Ford	America	2006	Econoline 6.0L Diesel			RCM			√	√	√		
Ford	America	2006	Econoline 6.0L Diesel			IC			√	√	√		
Ford	America	2006	Econoline 4.6L			PCM			√	√	√		
Ford	America	2006	Econoline 4.6L			ABS			√	√	√		
Ford	America	2006	Econoline 4.6L			RCM			√	√	√		
Ford	America	2006	Econoline 4.6L			IC			√	√	√		
Ford	America	2006	Econoline 5.4L			PCM			√	√	√		
Ford	America	2006	Econoline 5.4L			ABS			√	√	√		
Ford	America	2006	Econoline 5.4L			RCM			√	√	√		
Ford	America	2006	Econoline 5.4L			IC			√	√	√		
Ford	America	2006	Econoline 6.8L			PCM			√	√	√		
Ford	America	2006	Econoline 6.8L			ABS			√	√	√		
Ford	America	2006	Econoline 6.8L			RCM			√	√	√		
Ford	America	2006	Econoline 6.8L			IC			√	√	√		
Ford	America	2007	Econoline 6.0L Diesel			PCM			√	√	√		
Ford	America	2007	Econoline 6.0L Diesel			ABS			√	√	√		
Ford	America	2007	Econoline 6.0L Diesel			RCM			√	√	√		
Ford	America	2007	Econoline 6.0L Diesel			IC			√	√	√		
Ford	America	2007	Econoline 4.6L			PCM			√	√	√		
Ford	America	2007	Econoline 4.6L			ABS			√	√	√		

Ford	America	2007	Econoline 4.6L			RCM			√	√	√		
Ford	America	2007	Econoline 4.6L			IC			√	√	√		
Ford	America	2007	Econoline 5.4L			PCM			√	√	√		
Ford	America	2007	Econoline 5.4L			ABS			√	√	√		
Ford	America	2007	Econoline 5.4L			RCM			√	√	√		
Ford	America	2007	Econoline 5.4L			IC			√	√	√		
Ford	America	2007	Econoline 6.8L			PCM			√	√	√		
Ford	America	2007	Econoline 6.8L			ABS			√	√	√		
Ford	America	2007	Econoline 6.8L			RCM			√	√	√		
Ford	America	2007	Econoline 6.8L			IC			√	√	√		
Ford	America	2007	EDGE 3.5L			PCM			√	√	√		
Ford	America	2007	EDGE 3.5L			ABS			√	√	√		
Ford	America	2007	EDGE 3.5L			RCM			√	√	√		
Ford	America	2007	EDGE 3.5L			GEM			√	√	√		
Ford	America	2007	EDGE 3.5L			IC			√	√	√		
Ford	America	1998	Explorer 4.0L			PCM		√	√	√	√		
Ford	America	1999	Explorer 4.0L			PCM		√	√	√	√		
Ford	America	2000	Explorer 4.0L			PCM		√	√	√	√		
Ford	America	2001	Explorer 4.0L			PCM		√	√	√	√		
Ford	America	2002	Explorer 4.0L			PCM		√	√	√	√		
Ford	America	2003	Explorer 4.0L			PCM		√	√	√	√		
Ford	America	2004	Explorer 4.0L			PCM		√	√	√	√		
Ford	America	1998	Explorer 4.0L			ABS			√	√	√		
Ford	America	1999	Explorer 4.0L			ABS			√	√	√		
Ford	America	2000	Explorer 4.0L			ABS			√	√	√		
Ford	America	2001	Explorer 4.0L			ABS			√	√	√		
Ford	America	2002	Explorer 4.0L			ABS			√	√	√		
Ford	America	2003	Explorer 4.0L			ABS			√	√	√		
Ford	America	2004	Explorer 4.0L			ABS			√	√	√		
Ford	America	1998	Explorer 4.0L			ARC			√	√			
Ford	America	1999	Explorer 4.0L			ARC			√	√			
Ford	America	2000	Explorer 4.0L			ARC			√	√			
Ford	America	2004	Explorer 4.0L			4X4M			√	√	√		
Ford	America	2002	Explorer 4.0L			4X4M			√	√	√		

Ford	America	2004	Explorer 4.0L			IC			√	√	√		
Ford	America	2002	Explorer 4.0L			IC			√	√	√		
Ford	America	2002	Explorer 4.0L			PAM			√	√			
Ford	America	2003	Explorer 4.0L			PAM			√	√			
Ford	America	2004	Explorer 4.0L			PAM			√	√			
Ford	America	1998	Explorer 4.0L			PAM			√	√			
Ford	America	1999	Explorer 4.0L			PAM			√	√			
Ford	America	2000	Explorer 4.0L			PAM			√	√			
Ford	America	1998	Explorer 4.0L			PATS			√	√			
Ford	America	1999	Explorer 4.0L			PATS			√	√			
Ford	America	2000	Explorer 4.0L			PATS			√	√			
Ford	America	2000	Explorer 4.0L			RAP			√	√			
Ford	America	1999	Explorer 4.0L			RAP			√	√			
Ford	America	1998	Explorer 4.0L			RAP			√	√			
Ford	America	2002	Explorer 4.0L			RCM			√	√	√		
Ford	America	2003	Explorer 4.0L			RCM			√	√	√		
Ford	America	2004	Explorer 4.0L			RCM			√	√	√		
Ford	America	1999	Explorer 4.0L			RCM			√	√	√		
Ford	America	2000	Explorer 4.0L			RCM			√	√	√		
Ford	America	2002	Explorer 4.0L			DSM			√	√	√		
Ford	America	2003	Explorer 4.0L			DSM			√	√	√		
Ford	America	2004	Explorer 4.0L			DSM			√	√	√		
Ford	America	1998	Explorer 4.0L			DSM			√	√	√		
Ford	America	1999	Explorer 4.0L			DSM			√	√	√		
Ford	America	2000	Explorer 4.0L			DSM			√	√	√		
Ford	America	2002	Explorer 4.0L			EATC			√	√			
Ford	America	2003	Explorer 4.0L			EATC			√	√			
Ford	America	1998	Explorer 4.0L			EATC			√	√			
Ford	America	1999	Explorer 4.0L			EATC			√	√			
Ford	America	2000	Explorer 4.0L			EATC			√	√			
Ford	America	1998	Explorer 4.0L			GEM			√	√			
Ford	America	1999	Explorer 4.0L			GEM			√	√			
Ford	America	2000	Explorer 4.0L			GEM			√	√			
Ford	America	1998	Explorer 4.0L			IABM			√	√			

Ford	America	1999	Explorer 4.0L			MC			√	√			
Ford	America	2003	Explorer 4.0L			HEC			√	√			
Ford	America	2002	Explorer 4.0L			TPM			√	√			
Ford	America	2003	Explorer 4.0L			TPM			√	√			
Ford	America	2004	Explorer 4.0L			CSM			√	√	√		
Ford	America	2006	Explorer 4.0L			PCM			√	√	√		
Ford	America	2006	Explorer 4.0L			ABS			√	√	√		
Ford	America	2006	Explorer 4.0L			RCM			√	√	√		
Ford	America	2006	Explorer 4.0L			GEM			√	√	√		
Ford	America	2006	Explorer 4.0L			IC			√	√	√		
Ford	America	2006	Explorer 4.6L			PCM			√	√	√		
Ford	America	2006	Explorer 4.6L			ABS			√	√	√		
Ford	America	2006	Explorer 4.6L			RCM			√	√	√		
Ford	America	2006	Explorer 4.6L			GEM			√	√	√		
Ford	America	2006	Explorer 4.6L			IC			√	√	√		
Ford	America	2007	Explorer 4.0L			PCM			√	√	√		
Ford	America	2007	Explorer 4.0L			ABS			√	√	√		
Ford	America	2007	Explorer 4.0L			RCM			√	√	√		
Ford	America	2007	Explorer 4.0L			GEM			√	√	√		
Ford	America	2007	Explorer 4.0L			IC			√	√	√		
Ford	America	2007	Explorer 4.6L			PCM			√	√	√		
Ford	America	2007	Explorer 4.6L			ABS			√	√	√		
Ford	America	2007	Explorer 4.6L			RCM			√	√	√		
Ford	America	2007	Explorer 4.6L			GEM			√	√	√		
Ford	America	2007	Explorer 4.6L			IC			√	√	√		
Ford	America	1996	Explorer 4.0L ATX/MTX			PCM		√	√	√	√		
Ford	America	1997	Explorer 4.0L ATX/MTX			PCM		√	√	√	√		
Ford	America	1996	Explorer 4.0L ATX/MTX			ABS			√	√	√		
Ford	America	1997	Explorer 4.0L ATX/MTX			ABS			√	√	√		
Ford	America	1996	Explorer 4.0L ATX/MTX			ARC			√	√			
Ford	America	1997	Explorer 4.0L ATX/MTX			ARC			√	√			
Ford	America	1996	Explorer 4.0L ATX/MTX			EATC			√	√			
Ford	America	1997	Explorer 4.0L ATX/MTX			EATC			√	√			
Ford	America	1996	Explorer 4.0L ATX/MTX			GEM			√	√			

Ford	America	1997	Explorer 4.0L ATX/MTX			GEM			√	√			
Ford	America	1996	Explorer 4.0L ATX/MTX			IABM			√	√			
Ford	America	1997	Explorer 4.0L ATX/MTX			IABM			√	√			
Ford	America	1996	Explorer 4.0L ATX/MTX			RAP			√	√			
Ford	America	1997	Explorer 4.0L ATX/MTX			RAP			√	√			
Ford	America	2002	Explorer 4.6L			PCM		√	√	√	√		
Ford	America	2003	Explorer 4.6L			PCM		√	√	√	√		
Ford	America	2004	Explorer 4.6L			PCM		√	√	√	√		
Ford	America	2002	Explorer 4.6L			ABS			√	√	√		
Ford	America	2003	Explorer 4.6L			ABS			√	√	√		
Ford	America	2004	Explorer 4.6L			ABS			√	√	√		
Ford	America	2002	Explorer 4.6L			EATC			√	√			
Ford	America	2003	Explorer 4.6L			EATC			√	√			
Ford	America	2003	Explorer 4.6L			HEC			√	√			
Ford	America	2004	Explorer 4.6L			4X4M			√	√	√		
Ford	America	2002	Explorer 4.6L			4X4M			√	√	√		
Ford	America	2004	Explorer 4.6L			IC			√	√	√		
Ford	America	2002	Explorer 4.6L			IC			√	√	√		
Ford	America	2002	Explorer 4.6L			PAM			√	√			
Ford	America	2003	Explorer 4.6L			PAM			√	√			
Ford	America	2004	Explorer 4.6L			PAM			√	√			
Ford	America	2002	Explorer 4.6L			RCM			√	√	√		
Ford	America	2003	Explorer 4.6L			RCM			√	√	√		
Ford	America	2004	Explorer 4.6L			RCM			√	√	√		
Ford	America	2003	Explorer 4.6L			TPM			√	√			
Ford	America	2002	Explorer 4.6L			TPM			√	√			
Ford	America	2004	Explorer 4.6L			DSM			√	√	√		
Ford	America	2002	Explorer 4.6L			DSM			√	√	√		
Ford	America	2004	Explorer 4.6L			CSM			√	√	√		
Ford	America	1996	Explorer 5.0L			PCM		√	√	√	√		
Ford	America	1997	Explorer 5.0L			PCM		√	√	√	√		
Ford	America	1998	Explorer 5.0L			PCM		√	√	√	√		
Ford	America	1999	Explorer 5.0L			PCM		√	√	√	√		
Ford	America	2000	Explorer 5.0L			PCM		√	√	√	√		
Ford	America	2001	Explorer 5.0L			PCM		√	√	√	√		

Ford	America	1997	Explorer 5.0L			ARC			√	√			
Ford	America	1998	Explorer 5.0L			ARC			√	√			
Ford	America	1999	Explorer 5.0L			ARC			√	√			
Ford	America	2000	Explorer 5.0L			ARC			√	√			
Ford	America	1998	Explorer 5.0L			DSM			√	√			
Ford	America	1999	Explorer 5.0L			DSM			√	√			
Ford	America	2000	Explorer 5.0L			DSM			√	√			
Ford	America	1996	Explorer 5.0L			EATC			√	√			
Ford	America	1997	Explorer 5.0L			EATC			√	√			
Ford	America	1998	Explorer 5.0L			EATC			√	√			
Ford	America	1999	Explorer 5.0L			EATC			√	√			
Ford	America	2000	Explorer 5.0L			EATC			√	√			
Ford	America	1996	Explorer 5.0L			GEM			√	√			
Ford	America	1997	Explorer 5.0L			GEM			√	√			
Ford	America	1998	Explorer 5.0L			GEM			√	√			
Ford	America	1999	Explorer 5.0L			GEM			√	√			
Ford	America	2000	Explorer 5.0L			GEM			√	√			
Ford	America	1996	Explorer 5.0L			IABM			√	√			
Ford	America	1997	Explorer 5.0L			IABM			√	√			
Ford	America	1998	Explorer 5.0L			IABM			√	√			
Ford	America	1998	Explorer 5.0L			PAM			√	√			
Ford	America	1999	Explorer 5.0L			PAM			√	√			
Ford	America	2000	Explorer 5.0L			PAM			√	√			
Ford	America	1998	Explorer 5.0L			PATS			√	√			
Ford	America	1999	Explorer 5.0L			PATS			√	√			
Ford	America	2000	Explorer 5.0L			PATS			√	√			
Ford	America	1996	Explorer 5.0L			RAP			√	√			
Ford	America	1997	Explorer 5.0L			RAP			√	√			
Ford	America	1998	Explorer 5.0L			RAP			√	√			
Ford	America	1999	Explorer 5.0L			RAP			√	√			
Ford	America	2000	Explorer 5.0L			RAP			√	√			
Ford	America	1999	Explorer 5.0L			RCM			√	√	√		
Ford	America	2000	Explorer 5.0L			RCM			√	√	√		
Ford	America	1996	Explorer 5.0L			ABS			√	√	√		

Ford	America	1997	Explorer 5.0L			ABS			√	√	√		
Ford	America	1998	Explorer 5.0L			ABS			√	√	√		
Ford	America	1999	Explorer 5.0L			ABS			√	√	√		
Ford	America	2000	Explorer 5.0L			ABS			√	√	√		
Ford	America	2001	Explorer 5.0L			ABS			√	√	√		
Ford	America	2001	Explorer Sport 4.0L			PCM		√	√	√	√		
Ford	America	2002	Explorer Sport 4.0L			PCM		√	√	√	√		
Ford	America	2003	Explorer Sport 4.0L			PCM		√	√	√	√		
Ford	America	2004	Explorer Sport 4.0L			PCM		√	√	√	√		
Ford	America	2001	Explorer Sport 4.0L			ABS			√	√	√		
Ford	America	2002	Explorer Sport 4.0L			ABS			√	√	√		
Ford	America	2003	Explorer Sport 4.0L			ABS			√	√	√		
Ford	America	2004	Explorer Sport 4.0L			ABS			√	√	√		
Ford	America	2001	Explorer Sport 4.0L			4X4M			√	√	√		
Ford	America	2002	Explorer Sport 4.0L			4X4M			√	√	√		
Ford	America	2003	Explorer Sport 4.0L			4X4M			√	√	√		
Ford	America	2004	Explorer Sport 4.0L			4X4M			√	√	√		
Ford	America	2001	Explorer Sport 4.0L			HEC			√	√			
Ford	America	2002	Explorer Sport 4.0L			HEC			√	√			
Ford	America	2003	Explorer Sport 4.0L			HEC			√	√			
Ford	America	2004	Explorer Sport 4.0L			HEC			√	√			
Ford	America	2001	Explorer Sport 4.0L			RAP			√	√			
Ford	America	2002	Explorer Sport 4.0L			RAP			√	√			
Ford	America	2003	Explorer Sport 4.0L			RAP			√	√			
Ford	America	2004	Explorer Sport 4.0L			RAP			√	√			
Ford	America	2001	Explorer Sport 4.0L			RCM			√	√	√		
Ford	America	2002	Explorer Sport 4.0L			RCM			√	√	√		
Ford	America	2003	Explorer Sport 4.0L			RCM			√	√	√		
Ford	America	2004	Explorer Sport 4.0L			RCM			√	√	√		
Ford	America	2001	Explorer SportTrac 4.0L			PCM		√	√	√	√		
Ford	America	2002	Explorer SportTrac 4.0L			PCM		√	√	√	√		
Ford	America	2003	Explorer SportTrac 4.0L			PCM		√	√	√	√		
Ford	America	2004	Explorer SportTrac 4.0L			PCM		√	√	√	√		
Ford	America	2001	Explorer SportTrac 4.0L			ABS			√	√	√		

Ford	America	2002	Explorer SportTrac 4.0L			ABS			√	√	√		
Ford	America	2003	Explorer SportTrac 4.0L			ABS			√	√	√		
Ford	America	2004	Explorer SportTrac 4.0L			ABS			√	√	√		
Ford	America	2001	Explorer SportTrac 4.0L			4X4M			√	√	√		
Ford	America	2002	Explorer SportTrac 4.0L			4X4M			√	√	√		
Ford	America	2003	Explorer SportTrac 4.0L			4X4M			√	√	√		
Ford	America	2004	Explorer SportTrac 4.0L			4X4M			√	√	√		
Ford	America	2001	Explorer SportTrac 4.0L			HEC			√	√			
Ford	America	2002	Explorer SportTrac 4.0L			HEC			√	√			
Ford	America	2003	Explorer SportTrac 4.0L			HEC			√	√			
Ford	America	2004	Explorer SportTrac 4.0L			HEC			√	√			
Ford	America	2001	Explorer SportTrac 4.0L			RAP			√	√			
Ford	America	2002	Explorer SportTrac 4.0L			RAP			√	√			
Ford	America	2003	Explorer SportTrac 4.0L			RAP			√	√			
Ford	America	2004	Explorer SportTrac 4.0L			RAP			√	√			
Ford	America	2001	Explorer SportTrac 4.0L			RCM			√	√	√		
Ford	America	2002	Explorer SportTrac 4.0L			RCM			√	√	√		
Ford	America	2003	Explorer SportTrac 4.0L			RCM			√	√	√		
Ford	America	2004	Explorer SportTrac 4.0L			RCM			√	√	√		
Ford	America	2007	Explorer Sport T 4.6L			PCM			√	√	√		
Ford	America	2007	Explorer Sport T 4.6L			ABS			√	√	√		
Ford	America	2007	Explorer Sport T 4.6L			RCM			√	√	√		
Ford	America	2007	Explorer Sport T 4.6L			GEM			√	√	√		
Ford	America	2007	Explorer Sport T 4.6L			IC			√	√	√		
Ford	America	2007	Explorer Sport T 4.0L			PCM			√	√	√		
Ford	America	2007	Explorer Sport T 4.0L			ABS			√	√	√		
Ford	America	2007	Explorer Sport T 4.0L			RCM			√	√	√		
Ford	America	2007	Explorer Sport T 4.0L			GEM			√	√	√		
Ford	America	2007	Explorer Sport T 4.0L			IC			√	√	√		
Ford	America	1998	F-150 4.2L			PCM		√	√	√	√		
Ford	America	1999	F-150 4.2L			PCM		√	√	√	√		
Ford	America	2000	F-150 4.2L			PCM		√	√	√	√		
Ford	America	2001	F-150 4.2L			PCM		√	√	√	√		
Ford	America	2002	F-150 4.2L			PCM		√	√	√	√		
Ford	America	2003	F-150 4.2L			PCM		√	√	√	√		

Ford	America	1998	F-150 4.2L			ABS			√	√	√		
Ford	America	1999	F-150 4.2L			ABS			√	√	√		
Ford	America	2000	F-150 4.2L			ABS			√	√	√		
Ford	America	2001	F-150 4.2L			ABS			√	√	√		
Ford	America	2002	F-150 4.2L			ABS			√	√	√		
Ford	America	2003	F-150 4.2L			ABS			√	√	√		
Ford	America	1998	F-150 4.2L			AFCM			√	√			
Ford	America	1999	F-150 4.2L			AFCM			√	√			
Ford	America	2000	F-150 4.2L			AFCM			√	√			
Ford	America	2001	F-150 4.2L			AFCM			√	√			
Ford	America	2002	F-150 4.2L			AFCM			√	√			
Ford	America	2003	F-150 4.2L			AFCM			√	√			
Ford	America	1998	F-150 4.2L			GEM			√	√			
Ford	America	1999	F-150 4.2L			GEM			√	√			
Ford	America	2000	F-150 4.2L			GEM			√	√			
Ford	America	2001	F-150 4.2L			GEM			√	√			
Ford	America	2002	F-150 4.2L			GEM			√	√			
Ford	America	2003	F-150 4.2L			GEM			√	√			
Ford	America	1998	F-150 4.2L			IC			√	√			
Ford	America	1999	F-150 4.2L			IC			√	√			
Ford	America	2000	F-150 4.2L			IC			√	√			
Ford	America	2001	F-150 4.2L			IC			√	√			
Ford	America	2002	F-150 4.2L			IC			√	√			
Ford	America	2003	F-150 4.2L			IC			√	√			
Ford	America	1998	F-150 4.2L			RAP			√	√			
Ford	America	1999	F-150 4.2L			RAP			√	√			
Ford	America	2000	F-150 4.2L			RAP			√	√			
Ford	America	2001	F-150 4.2L			RAP			√	√			
Ford	America	2002	F-150 4.2L			RAP			√	√			
Ford	America	2003	F-150 4.2L			RAP			√	√			
Ford	America	1998	F-150 4.2L			RCM			√	√	√		
Ford	America	1999	F-150 4.2L			RCM			√	√	√		
Ford	America	2000	F-150 4.2L			RCM			√	√	√		
Ford	America	2001	F-150 4.2L			RCM			√	√	√		

Ford	America	2002	F-150 4.2L			RCM			√	√	√		
Ford	America	2003	F-150 4.2L			RCM			√	√	√		
Ford	America	1997	F-150 4.2L ATX/MTX			PCM		√	√	√	√		
Ford	America	1997	F-150 4.2L ATX/MTX			ABS			√	√	√		
Ford	America	1997	F-150 4.2L ATX/MTX			AFCM			√	√			
Ford	America	1997	F-150 4.2L ATX/MTX			GEM			√	√			
Ford	America	1997	F-150 4.2L ATX/MTX			IABM			√	√			
Ford	America	1997	F-150 4.2L ATX/MTX			RAP			√	√			
Ford	America	1998	F-150 4.6L			PCM		√	√	√	√		
Ford	America	1999	F-150 4.6L			PCM		√	√	√	√		
Ford	America	2000	F-150 4.6L			PCM		√	√	√	√		
Ford	America	2001	F-150 4.6L			PCM		√	√	√	√		
Ford	America	2002	F-150 4.6L			PCM		√	√	√	√		
Ford	America	2003	F-150 4.6L			PCM		√	√	√	√		
Ford	America	2004	F-150 4.6L			PCM		√	√	√	√		
Ford	America	1998	F-150 4.6L			4X4M			√	√	√		
Ford	America	1999	F-150 4.6L			4X4M			√	√	√		
Ford	America	2000	F-150 4.6L			4X4M			√	√	√		
Ford	America	2001	F-150 4.6L			4X4M			√	√	√		
Ford	America	2002	F-150 4.6L			4X4M			√	√	√		
Ford	America	2003	F-150 4.6L			4X4M			√	√	√		
Ford	America	2004	F-150 4.6L			4X4M			√	√	√		
Ford	America	1998	F-150 4.6L			ABS			√	√	√		
Ford	America	1999	F-150 4.6L			ABS			√	√	√		
Ford	America	2000	F-150 4.6L			ABS			√	√	√		
Ford	America	2001	F-150 4.6L			ABS			√	√	√		
Ford	America	2002	F-150 4.6L			ABS			√	√	√		
Ford	America	2003	F-150 4.6L			ABS			√	√	√		
Ford	America	2004	F-150 4.6L			ABS			√	√	√		
Ford	America	1998	F-150 4.6L			DSM			√	√	√		
Ford	America	1999	F-150 4.6L			DSM			√	√	√		
Ford	America	2000	F-150 4.6L			DSM			√	√	√		
Ford	America	2001	F-150 4.6L			DSM			√	√	√		
Ford	America	2002	F-150 4.6L			DSM			√	√	√		
Ford	America	2003	F-150 4.6L			DSM			√	√	√		

Ford	America	2004	F-150 4.6L			DSM			√	√	√		
Ford	America	1998	F-150 4.6L			EATC			√	√	√		
Ford	America	1999	F-150 4.6L			EATC			√	√	√		
Ford	America	2000	F-150 4.6L			EATC			√	√	√		
Ford	America	2001	F-150 4.6L			EATC			√	√	√		
Ford	America	2002	F-150 4.6L			EATC			√	√	√		
Ford	America	2003	F-150 4.6L			EATC			√	√	√		
Ford	America	2004	F-150 4.6L			EATC			√	√	√		
Ford	America	1998	F-150 4.6L			GEM			√	√			
Ford	America	1999	F-150 4.6L			GEM			√	√			
Ford	America	2000	F-150 4.6L			GEM			√	√			
Ford	America	2001	F-150 4.6L			GEM			√	√			
Ford	America	2002	F-150 4.6L			GEM			√	√			
Ford	America	2003	F-150 4.6L			GEM			√	√			
Ford	America	2004	F-150 4.6L			GEM			√	√			
Ford	America	1998	F-150 4.6L			PAM			√	√			
Ford	America	1999	F-150 4.6L			PAM			√	√			
Ford	America	2000	F-150 4.6L			PAM			√	√			
Ford	America	2001	F-150 4.6L			PAM			√	√			
Ford	America	2002	F-150 4.6L			PAM			√	√			
Ford	America	2003	F-150 4.6L			PAM			√	√			
Ford	America	2004	F-150 4.6L			PAM			√	√			
Ford	America	1998	F-150 4.6L			RAP			√	√			
Ford	America	1999	F-150 4.6L			RAP			√	√			
Ford	America	2000	F-150 4.6L			RAP			√	√			
Ford	America	2001	F-150 4.6L			RAP			√	√			
Ford	America	2002	F-150 4.6L			RAP			√	√			
Ford	America	2003	F-150 4.6L			RAP			√	√			
Ford	America	2004	F-150 4.6L			RAP			√	√			
Ford	America	1998	F-150 4.6L			RCM			√	√	√		
Ford	America	1999	F-150 4.6L			RCM			√	√	√		
Ford	America	2000	F-150 4.6L			RCM			√	√	√		
Ford	America	2001	F-150 4.6L			RCM			√	√	√		
Ford	America	2002	F-150 4.6L			RCM			√	√	√		

Ford	America	2003	F-150 4.6L			RCM			√	√	√		
Ford	America	2004	F-150 4.6L			RCM			√	√	√		
Ford	America	1998	F-150 4.6L			CSM			√	√	√		
Ford	America	1999	F-150 4.6L			CSM			√	√	√		
Ford	America	2000	F-150 4.6L			CSM			√	√	√		
Ford	America	2001	F-150 4.6L			CSM			√	√	√		
Ford	America	2002	F-150 4.6L			CSM			√	√	√		
Ford	America	2003	F-150 4.6L			CSM			√	√	√		
Ford	America	2004	F-150 4.6L			CSM			√	√	√		
Ford	America	1997	F-150 4.6L ATX/MTX			PCM		√	√	√	√		
Ford	America	1997	F-150 4.6L ATX/MTX			ABS			√	√	√		
Ford	America	1997	F-150 4.6L ATX/MTX			AFCM			√	√			
Ford	America	1997	F-150 4.6L ATX/MTX			GEM			√	√			
Ford	America	1997	F-150 4.6L ATX/MTX			IABM			√	√			
Ford	America	1997	F-150 4.6L ATX/MTX			RAP			√	√			
Ford	America	1998	F-150 5.4L			PCM		√	√	√	√		
Ford	America	1999	F-150 5.4L			PCM		√	√	√	√		
Ford	America	2000	F-150 5.4L			PCM		√	√	√	√		
Ford	America	2001	F-150 5.4L			PCM		√	√	√	√		
Ford	America	2002	F-150 5.4L			PCM		√	√	√	√		
Ford	America	2003	F-150 5.4L			PCM		√	√	√	√		
Ford	America	2004	F-150 5.4L			PCM		√	√	√	√		
Ford	America	1998	F-150 5.4L			4X4M			√	√	√		
Ford	America	1999	F-150 5.4L			4X4M			√	√	√		
Ford	America	2000	F-150 5.4L			4X4M			√	√	√		
Ford	America	2001	F-150 5.4L			4X4M			√	√	√		
Ford	America	2002	F-150 5.4L			4X4M			√	√	√		
Ford	America	2003	F-150 5.4L			4X4M			√	√	√		
Ford	America	2004	F-150 5.4L			4X4M			√	√	√		
Ford	America	1998	F-150 5.4L			ABS			√	√	√		
Ford	America	1999	F-150 5.4L			ABS			√	√	√		
Ford	America	2000	F-150 5.4L			ABS			√	√	√		
Ford	America	2001	F-150 5.4L			ABS			√	√	√		
Ford	America	2002	F-150 5.4L			ABS			√	√	√		
Ford	America	2003	F-150 5.4L			ABS			√	√	√		

Ford	America	2004	F-150 5.4L			ABS			√	√	√		
Ford	America	1998	F-150 5.4L			AFCM			√	√			
Ford	America	1999	F-150 5.4L			AFCM			√	√			
Ford	America	2000	F-150 5.4L			AFCM			√	√			
Ford	America	2001	F-150 5.4L			AFCM			√	√			
Ford	America	2002	F-150 5.4L			AFCM			√	√			
Ford	America	2003	F-150 5.4L			AFCM			√	√			
Ford	America	2004	F-150 5.4L			AFCM			√	√			
Ford	America	1998	F-150 5.4L			DSM			√	√	√		
Ford	America	1999	F-150 5.4L			DSM			√	√	√		
Ford	America	2000	F-150 5.4L			DSM			√	√	√		
Ford	America	2001	F-150 5.4L			DSM			√	√	√		
Ford	America	2002	F-150 5.4L			DSM			√	√	√		
Ford	America	2003	F-150 5.4L			DSM			√	√	√		
Ford	America	2004	F-150 5.4L			DSM			√	√	√		
Ford	America	1998	F-150 5.4L			EATC			√	√	√		
Ford	America	1999	F-150 5.4L			EATC			√	√	√		
Ford	America	2000	F-150 5.4L			EATC			√	√	√		
Ford	America	2001	F-150 5.4L			EATC			√	√	√		
Ford	America	2002	F-150 5.4L			EATC			√	√	√		
Ford	America	2003	F-150 5.4L			EATC			√	√	√		
Ford	America	2004	F-150 5.4L			EATC			√	√	√		
Ford	America	1998	F-150 5.4L			GEM			√	√			
Ford	America	1999	F-150 5.4L			GEM			√	√			
Ford	America	2000	F-150 5.4L			GEM			√	√			
Ford	America	2001	F-150 5.4L			GEM			√	√			
Ford	America	2002	F-150 5.4L			GEM			√	√			
Ford	America	2003	F-150 5.4L			GEM			√	√			
Ford	America	2004	F-150 5.4L			GEM			√	√			
Ford	America	1998	F-150 5.4L			PAM			√	√			
Ford	America	1999	F-150 5.4L			PAM			√	√			
Ford	America	2000	F-150 5.4L			PAM			√	√			
Ford	America	2001	F-150 5.4L			PAM			√	√			
Ford	America	2002	F-150 5.4L			PAM			√	√			
Ford	America	2003	F-150 5.4L			PAM			√	√			

Ford	America	2004	F-150 5.4L			PAM			√	√			
Ford	America	1998	F-150 5.4L			RAP			√	√			
Ford	America	1999	F-150 5.4L			RAP			√	√			
Ford	America	2000	F-150 5.4L			RAP			√	√			
Ford	America	2001	F-150 5.4L			RAP			√	√			
Ford	America	2002	F-150 5.4L			RAP			√	√			
Ford	America	2003	F-150 5.4L			RAP			√	√			
Ford	America	2004	F-150 5.4L			RAP			√	√			
Ford	America	1998	F-150 5.4L			RCM			√	√		√	
Ford	America	1999	F-150 5.4L			RCM			√	√		√	
Ford	America	2000	F-150 5.4L			RCM			√	√		√	
Ford	America	2001	F-150 5.4L			RCM			√	√		√	
Ford	America	2002	F-150 5.4L			RCM			√	√		√	
Ford	America	2003	F-150 5.4L			RCM			√	√		√	
Ford	America	2004	F-150 5.4L			RCM			√	√		√	
Ford	America	1998	F-150 5.4L			CSM			√	√		√	
Ford	America	1999	F-150 5.4L			CSM			√	√		√	
Ford	America	2000	F-150 5.4L			CSM			√	√		√	
Ford	America	2001	F-150 5.4L			CSM			√	√		√	
Ford	America	2002	F-150 5.4L			CSM			√	√		√	
Ford	America	2003	F-150 5.4L			CSM			√	√		√	
Ford	America	2004	F-150 5.4L			CSM			√	√		√	
Ford	America	1997	F-150 5.4L ATX/MTX			PCM		√	√	√		√	
Ford	America	1997	F-150 5.4L ATX/MTX			ABS			√	√		√	
Ford	America	1997	F-150 5.4L ATX/MTX			AFCM			√	√			
Ford	America	1997	F-150 5.4L ATX/MTX			GEM			√	√			
Ford	America	1997	F-150 5.4L ATX/MTX			IABM			√	√			
Ford	America	1997	F-150 5.4L ATX/MTX			RAP			√	√			
Ford	America	2004	F-150 Heritage 4.2L/ 4.6L/5.4L/5.4L+			ABS			√	√		√	
Ford	America	2006	F-150 4.2L			PCM			√	√		√	
Ford	America	2006	F-150 4.2L			ABS			√	√		√	
Ford	America	2006	F-150 4.2L			RCM			√	√		√	
Ford	America	2006	F-150 4.2L			IC			√	√		√	
Ford	America	2006	F-150 4.6L			PCM			√	√		√	
Ford	America	2006	F-150 4.6L			ABS			√	√		√	

Ford	America	2006	F-150 4.6L			RCM			√	√	√		
Ford	America	2006	F-150 4.6L			IC			√	√	√		
Ford	America	2006	F-150 5.4L			PCM			√	√	√		
Ford	America	2006	F-150 5.4L			ABS			√	√	√		
Ford	America	2006	F-150 5.4L			RCM			√	√	√		
Ford	America	2006	F-150 5.4L			IC			√	√	√		
Ford	America	2007	F-150 4.2L			PCM			√	√	√		
Ford	America	2007	F-150 4.2L			ABS			√	√	√		
Ford	America	2007	F-150 4.2L			RCM			√	√	√		
Ford	America	2007	F-150 4.2L			IC			√	√	√		
Ford	America	2007	F-150 4.6L			PCM			√	√	√		
Ford	America	2007	F-150 4.6L			ABS			√	√	√		
Ford	America	2007	F-150 4.6L			RCM			√	√	√		
Ford	America	2007	F-150 4.6L			IC			√	√	√		
Ford	America	2007	F-150 5.4L			PCM			√	√	√		
Ford	America	2007	F-150 5.4L			ABS			√	√	√		
Ford	America	2007	F-150 5.4L			RCM			√	√	√		
Ford	America	2007	F-150 5.4L			IC			√	√	√		
Ford	America	1998	F-250 4.6+			PCM		√	√	√	√		
Ford	America	1999	F-250 4.6+			PCM		√	√	√	√		
Ford	America	2000	F-250 4.6+			PCM		√	√	√	√		
Ford	America	2001	F-250 4.6+			PCM		√	√	√	√		
Ford	America	1998	F-250 4.6+			ABS			√	√	√		
Ford	America	1999	F-250 4.6+			ABS			√	√	√		
Ford	America	2000	F-250 4.6+			ABS			√	√	√		
Ford	America	2001	F-250 4.6+			ABS			√	√	√		
Ford	America	1998	F-250 4.6+			AFCM			√	√			
Ford	America	1999	F-250 4.6+			AFCM			√	√			
Ford	America	2000	F-250 4.6+			AFCM			√	√			
Ford	America	2001	F-250 4.6+			AFCM			√	√			
Ford	America	1998	F-250 4.6+			GEM			√	√			
Ford	America	1999	F-250 4.6+			GEM			√	√			
Ford	America	2000	F-250 4.6+			GEM			√	√			
Ford	America	2001	F-250 4.6+			GEM			√	√			
Ford	America	1998	F-250 4.6+			IC			√	√			
Ford	America	1999	F-250 4.6+			IC			√	√			

Ford	America	2000	F-250 4.6+			IC			√	√			
Ford	America	2001	F-250 4.6+			IC			√	√			
Ford	America	1998	F-250 4.6+			RAP			√	√			
Ford	America	1999	F-250 4.6+			RAP			√	√			
Ford	America	2000	F-250 4.6+			RAP			√	√			
Ford	America	2001	F-250 4.6+			RAP			√	√			
Ford	America	1998	F-250 4.6+			RCM			√	√	√		
Ford	America	1999	F-250 4.6+			RCM			√	√	√		
Ford	America	2000	F-250 4.6+			RCM			√	√	√		
Ford	America	2001	F-250 4.6+			RCM			√	√	√		
Ford	America	1997	F-250 4.6L ATX/MTX			PCM	√		√	√	√		
Ford	America	1997	F-250 4.6L ATX/MTX			ABS			√	√	√		
Ford	America	1997	F-250 4.6L ATX/MTX			AFCM			√	√			
Ford	America	1997	F-250 4.6L ATX/MTX			GEM			√	√			
Ford	America	1997	F-250 4.6L ATX/MTX			IABM			√	√			
Ford	America	1997	F-250 4.6L ATX/MTX			RAP			√	√			
Ford	America	1997	F-250/350 5.4+			PCM	√		√	√	√		
Ford	America	1998	F-250/350 5.4+			PCM	√		√	√	√		
Ford	America	1999	F-250/350 5.4+			PCM	√		√	√	√		
Ford	America	2000	F-250/350 5.4+			PCM	√		√	√	√		
Ford	America	2001	F-250/350 5.4+			PCM	√		√	√	√		
Ford	America	1997	F-250/350 5.4+			ABS			√	√	√		
Ford	America	1998	F-250/350 5.4+			ABS			√	√	√		
Ford	America	1999	F-250/350 5.4+			ABS			√	√	√		
Ford	America	2000	F-250/350 5.4+			ABS			√	√	√		
Ford	America	2001	F-250/350 5.4+			ABS			√	√	√		
Ford	America	1997	F-250/350 5.4+			AFCM			√	√			
Ford	America	1998	F-250/350 5.4+			AFCM			√	√			
Ford	America	1999	F-250/350 5.4+			AFCM			√	√			
Ford	America	2000	F-250/350 5.4+			AFCM			√	√			
Ford	America	2001	F-250/350 5.4+			AFCM			√	√			
Ford	America	1997	F-250/350 5.4+			GEM			√	√			
Ford	America	1998	F-250/350 5.4+			GEM			√	√			
Ford	America	1999	F-250/350 5.4+			GEM			√	√			
Ford	America	2000	F-250/350 5.4+			GEM			√	√			
Ford	America	2001	F-250/350 5.4+			GEM			√	√			

Ford	America	1997	F-250/350 5.4+			IC			√	√			
Ford	America	1998	F-250/350 5.4+			IC			√	√			
Ford	America	1999	F-250/350 5.4+			IC			√	√			
Ford	America	2000	F-250/350 5.4+			IC			√	√			
Ford	America	2001	F-250/350 5.4+			IC			√	√			
Ford	America	1997	F-250/350 5.4+			RAP			√	√			
Ford	America	1998	F-250/350 5.4+			RAP			√	√			
Ford	America	1999	F-250/350 5.4+			RAP			√	√			
Ford	America	2000	F-250/350 5.4+			RAP			√	√			
Ford	America	2001	F-250/350 5.4+			RAP			√	√			
Ford	America	1997	F-250/350 5.4+			RCM			√	√	√		
Ford	America	1998	F-250/350 5.4+			RCM			√	√	√		
Ford	America	1999	F-250/350 5.4+			RCM			√	√	√		
Ford	America	2000	F-250/350 5.4+			RCM			√	√	√		
Ford	America	2001	F-250/350 5.4+			RCM			√	√	√		
Ford	America	1997	F-250 5.4L NGV			PCM	√		√	√	√		
Ford	America	1997	F-250 5.4L NGV			ABS			√	√	√		
Ford	America	1997	F-250 5.4L NGV			AFCM			√	√			
Ford	America	1997	F-250 5.4L NGV			GEM			√	√			
Ford	America	1997	F-250 5.4L NGV			IABM			√	√			
Ford	America	1997	F-250 5.4L NGV			RAP			√	√			
Ford	America	1997	F-250 5.8L/5.8LCAL/ 7.3L/7.5L /7.5LCAL			PCM	√		√	√	√		
Ford	America	1997	F-250 5.8L/5.8LCAL/ 7.3L/7.5L /7.5LCAL			ABS			√	√	√		
Ford	America	1997	F-250 5.8L/5.8LCAL/ 7.3L/7.5L /7.5LCAL			AFCM			√	√			
Ford	America	1997	F-250 5.8L/5.8LCAL/ 7.3L/7.5L /7.5LCAL			RAP			√	√			
Ford	America	1997	F-350 4.6L ATX/MTX 5.4L/5.4L NGV 5.8L/5.8L CAL 7.3L/7.5L/7.5L CAL			PCM	√		√	√	√		
Ford	America	1997	F-350 4.6L ATX/MTX 5.4L/5.4L NGV 5.8L/5.8L CAL 7.3L/7.5L/7.5L CAL			ABS			√	√	√		
Ford	America	1997	F-600/700/800 7.0L			PCM	√		√	√	√		

Ford	America	2001	Escape 2.0L/3.0L			PCM		√	√	√	√		
Ford	America	2002	Escape 2.0L/3.0L			PCM		√	√	√	√		
Ford	America	2003	Escape 2.0L/3.0L			PCM		√	√	√	√		
Ford	America	2004	Escape 2.0L/3.0L			PCM		√	√	√	√		
Ford	America	2001	Escape 2.0L/3.0L			ABS			√	√	√		
Ford	America	2002	Escape 2.0L/3.0L			ABS			√	√	√		
Ford	America	2003	Escape 2.0L/3.0L			ABS			√	√	√		
Ford	America	2004	Escape 2.0L/3.0L			ABS			√	√	√		
Ford	America	2001	Escape 2.0L/3.0L			GEM			√	√			
Ford	America	2002	Escape 2.0L/3.0L			GEM			√	√			
Ford	America	2003	Escape 2.0L/3.0L			GEM			√	√			
Ford	America	2004	Escape 2.0L/3.0L			GEM			√	√			
Ford	America	2001	Escape 2.0L/3.0L			IC			√	√			
Ford	America	2002	Escape 2.0L/3.0L			IC			√	√			
Ford	America	2003	Escape 2.0L/3.0L			IC			√	√			
Ford	America	2004	Escape 2.0L/3.0L			IC			√	√			
Ford	America	2001	Escape 2.0L/3.0L			PAM			√	√			
Ford	America	2002	Escape 2.0L/3.0L			PAM			√	√			
Ford	America	2003	Escape 2.0L/3.0L			PAM			√	√			
Ford	America	2004	Escape 2.0L/3.0L			PAM			√	√			
Ford	America	2001	Escape 2.0L/3.0L			RCM			√	√	√		
Ford	America	2002	Escape 2.0L/3.0L			RCM			√	√	√		
Ford	America	2003	Escape 2.0L/3.0L			RCM			√	√	√		
Ford	America	2004	Escape 2.0L/3.0L			RCM			√	√	√		
Ford	America	2006	Escape 2.3L			PCM			√	√	√		
Ford	America	2006	Escape 2.3L			ABS			√	√	√		
Ford	America	2006	Escape 2.3L			RCM			√	√	√		
Ford	America	2006	Escape 2.3L			GEM			√	√	√		
Ford	America	2006	Escape 2.3L			IC			√	√	√		
Ford	America	2006	Escape 2.3L HYB			PCM			√	√	√		
Ford	America	2006	Escape 2.3L HYB			ABS			√	√	√		
Ford	America	2006	Escape 2.3L HYB			RCM			√	√	√		
Ford	America	2006	Escape 2.3L HYB			GEM			√	√	√		
Ford	America	2006	Escape 2.3L HYB			IC			√	√	√		
Ford	America	2006	Escape 3.0L			PCM			√	√	√		
Ford	America	2006	Escape 3.0L			ABS			√	√	√		

Ford	America	2006	Escape 3.0L			RCM			√	√	√		
Ford	America	2006	Escape 3.0L			GEM			√	√	√		
Ford	America	2006	Escape 3.0L			IC			√	√	√		
Ford	America	2007	Escape 2.3L			PCM			√	√	√		
Ford	America	2007	Escape 2.3L			ABS			√	√	√		
Ford	America	2007	Escape 2.3L			RCM			√	√	√		
Ford	America	2007	Escape 2.3L			GEM			√	√	√		
Ford	America	2007	Escape 2.3L			IC			√	√	√		
Ford	America	2007	Escape 2.3L HYB			PCM			√	√	√		
Ford	America	2007	Escape 2.3L HYB			GEM			√	√	√		
Ford	America	2007	Escape 2.3L HYB			RCM			√	√	√		
Ford	America	2007	Escape 2.3L HYB			IC			√	√	√		
Ford	America	2007	Escape 3.0L			PCM			√	√	√		
Ford	America	2007	Escape 3.0L			ABS			√	√	√		
Ford	America	2007	Escape 3.0L			RCM			√	√	√		
Ford	America	2007	Escape 3.0L			GEM			√	√	√		
Ford	America	2007	Escape 3.0L			IC			√	√	√		
Ford	America	1997	Escort 2.0L			PCM		√	√	√	√		
Ford	America	1998	Escort 2.0L			PCM		√	√	√	√		
Ford	America	1999	Escort 2.0L			PCM		√	√	√	√		
Ford	America	2000	Escort 2.0L			PCM		√	√	√	√		
Ford	America	2001	Escort 2.0L			PCM		√	√	√	√		
Ford	America	2002	Escort 2.0L			PCM		√	√	√	√		
Ford	America	2003	Escort 2.0L			PCM		√	√	√	√		
Ford	America	1997	Escort 2.0L			ABS			√	√	√		
Ford	America	1998	Escort 2.0L			ABS			√	√	√		
Ford	America	1999	Escort 2.0L			ABS			√	√	√		
Ford	America	2000	Escort 2.0L			ABS			√	√	√		
Ford	America	2001	Escort 2.0L			ABS			√	√	√		
Ford	America	2002	Escort 2.0L			ABS			√	√	√		
Ford	America	2003	Escort 2.0L			ABS			√	√	√		
Ford	America	1997	Escort 2.0L			CSM			√	√			
Ford	America	1998	Escort 2.0L			CSM			√	√			
Ford	America	1999	Escort 2.0L			CSM			√	√			
Ford	America	2000	Escort 2.0L			CSM			√	√			
Ford	America	2001	Escort 2.0L			CSM			√	√			

Ford	America	2002	Escort 2.0L			CSM			√	√			
Ford	America	2003	Escort 2.0L			CSM			√	√			
Ford	America	1997	Escort 2.0L			ECS			√	√			
Ford	America	1998	Escort 2.0L			ECS			√	√			
Ford	America	1999	Escort 2.0L			ECS			√	√			
Ford	America	2000	Escort 2.0L			ECS			√	√			
Ford	America	2001	Escort 2.0L			ECS			√	√			
Ford	America	2002	Escort 2.0L			ECS			√	√			
Ford	America	2003	Escort 2.0L			ECS			√	√			
Ford	America	1997	Escort 2.0L			PATS			√	√			
Ford	America	1998	Escort 2.0L			PATS			√	√			
Ford	America	1999	Escort 2.0L			PATS			√	√			
Ford	America	2000	Escort 2.0L			PATS			√	√			
Ford	America	2001	Escort 2.0L			PATS			√	√			
Ford	America	2002	Escort 2.0L			PATS			√	√			
Ford	America	2003	Escort 2.0L			PATS			√	√			
Ford	America	1997	Escort 2.0L			RAP			√	√			
Ford	America	1998	Escort 2.0L			RAP			√	√			
Ford	America	1999	Escort 2.0L			RAP			√	√			
Ford	America	2000	Escort 2.0L			RAP			√	√			
Ford	America	2001	Escort 2.0L			RAP			√	√			
Ford	America	2002	Escort 2.0L			RAP			√	√			
Ford	America	2003	Escort 2.0L			RAP			√	√			
Ford	America	1997	E-Series 4.2L			PCM		√	√	√	√		
Ford	America	1998	E-Series 4.2L			PCM		√	√	√	√		
Ford	America	1999	E-Series 4.2L			PCM		√	√	√	√		
Ford	America	2000	E-Series 4.2L			PCM		√	√	√	√		
Ford	America	2001	E-Series 4.2L			PCM		√	√	√	√		
Ford	America	2002	E-Series 4.2L			PCM		√	√	√	√		
Ford	America	2003	E-Series 4.2L			PCM		√	√	√	√		
Ford	America	2004	E-Series 4.2L			PCM		√	√	√	√		
Ford	America	1997	E-Series 4.2L			ABS			√	√	√		
Ford	America	1998	E-Series 4.2L			ABS			√	√	√		
Ford	America	1999	E-Series 4.2L			ABS			√	√	√		
Ford	America	2000	E-Series 4.2L			ABS			√	√	√		
Ford	America	2001	E-Series 4.2L			ABS			√	√	√		

Ford	America	2002	E-Series 4.2L			ABS			√	√	√		
Ford	America	2003	E-Series 4.2L			ABS			√	√	√		
Ford	America	2004	E-Series 4.2L			ABS			√	√	√		
Ford	America	1997	E-Series 4.2L			AFCM			√	√			
Ford	America	1998	E-Series 4.2L			AFCM			√	√			
Ford	America	1999	E-Series 4.2L			AFCM			√	√			
Ford	America	2000	E-Series 4.2L			AFCM			√	√			
Ford	America	2001	E-Series 4.2L			AFCM			√	√			
Ford	America	2002	E-Series 4.2L			AFCM			√	√			
Ford	America	2003	E-Series 4.2L			AFCM			√	√			
Ford	America	2004	E-Series 4.2L			AFCM			√	√			
Ford	America	1997	E-Series 4.2L			ECS			√	√			
Ford	America	1998	E-Series 4.2L			ECS			√	√			
Ford	America	1999	E-Series 4.2L			ECS			√	√			
Ford	America	2000	E-Series 4.2L			ECS			√	√			
Ford	America	2001	E-Series 4.2L			ECS			√	√			
Ford	America	2002	E-Series 4.2L			ECS			√	√			
Ford	America	2003	E-Series 4.2L			ECS			√	√			
Ford	America	2004	E-Series 4.2L			ECS			√	√			
Ford	America	1999	E-Series E250 4.2L			ABS			√	√	√		
Ford	America	1997	E-Series 4.6L			PCM		√	√	√	√		
Ford	America	1998	E-Series 4.6L			PCM		√	√	√	√		
Ford	America	1999	E-Series 4.6L			PCM		√	√	√	√		
Ford	America	2000	E-Series 4.6L			PCM		√	√	√	√		
Ford	America	2001	E-Series 4.6L			PCM		√	√	√	√		
Ford	America	2002	E-Series 4.6L			PCM		√	√	√	√		
Ford	America	2003	E-Series 4.6L			PCM		√	√	√	√		
Ford	America	2004	E-Series 4.6L			PCM		√	√	√	√		
Ford	America	1997	E-Series 4.6L			ABS			√	√	√		
Ford	America	1998	E-Series 4.6L			ABS			√	√	√		
Ford	America	1999	E-Series 4.6L			ABS			√	√	√		
Ford	America	2000	E-Series 4.6L			ABS			√	√	√		
Ford	America	2001	E-Series 4.6L			ABS			√	√	√		
Ford	America	2002	E-Series 4.6L			ABS			√	√	√		
Ford	America	2003	E-Series 4.6L			ABS			√	√	√		
Ford	America	2004	E-Series 4.6L			ABS			√	√	√		

Ford	America	1997	E-Series 4.6L			IC			√	√	√		
Ford	America	1998	E-Series 4.6L			IC			√	√	√		
Ford	America	1999	E-Series 4.6L			IC			√	√	√		
Ford	America	2000	E-Series 4.6L			IC			√	√	√		
Ford	America	2001	E-Series 4.6L			IC			√	√	√		
Ford	America	2002	E-Series 4.6L			IC			√	√	√		
Ford	America	2003	E-Series 4.6L			IC			√	√	√		
Ford	America	2004	E-Series 4.6L			IC			√	√	√		
Ford	America	1997	E-Series 4.6L			RAP			√	√			
Ford	America	1998	E-Series 4.6L			RAP			√	√			
Ford	America	1999	E-Series 4.6L			RAP			√	√			
Ford	America	2000	E-Series 4.6L			RAP			√	√			
Ford	America	2001	E-Series 4.6L			RAP			√	√			
Ford	America	2002	E-Series 4.6L			RAP			√	√			
Ford	America	2003	E-Series 4.6L			RAP			√	√			
Ford	America	2004	E-Series 4.6L			RAP			√	√			
Ford	America	1997	E-Series 4.6L			RCM			√	√	√		
Ford	America	1998	E-Series 4.6L			RCM			√	√	√		
Ford	America	1999	E-Series 4.6L			RCM			√	√	√		
Ford	America	2000	E-Series 4.6L			RCM			√	√	√		
Ford	America	2001	E-Series 4.6L			RCM			√	√	√		
Ford	America	2002	E-Series 4.6L			RCM			√	√	√		
Ford	America	2003	E-Series 4.6L			RCM			√	√	√		
Ford	America	2004	E-Series 4.6L			RCM			√	√	√		
Ford	America	1996	E-Series 4.9L/5.0L			PCM		√	√	√	√		
Ford	America	1996	E-Series 4.9L/5.0L			AFCM			√	√			
Ford	America	1997	E-Series 5.4L			PCM		√	√	√	√		
Ford	America	1998	E-Series 5.4L			PCM		√	√	√	√		
Ford	America	1999	E-Series 5.4L			PCM		√	√	√	√		
Ford	America	2000	E-Series 5.4L			PCM		√	√	√	√		
Ford	America	2001	E-Series 5.4L			PCM		√	√	√	√		
Ford	America	2002	E-Series 5.4L			PCM		√	√	√	√		
Ford	America	2003	E-Series 5.4L			PCM		√	√	√	√		
Ford	America	2004	E-Series 5.4L			PCM		√	√	√	√		
Ford	America	1997	E-Series 5.4L			ABS			√	√	√		
Ford	America	1998	E-Series 5.4L			ABS			√	√	√		

Ford	America	1999	E-Series 5.4L			ABS			√	√	√		
Ford	America	2000	E-Series 5.4L			ABS			√	√	√		
Ford	America	2001	E-Series 5.4L			ABS			√	√	√		
Ford	America	2002	E-Series 5.4L			ABS			√	√	√		
Ford	America	2003	E-Series 5.4L			ABS			√	√	√		
Ford	America	2004	E-Series 5.4L			ABS			√	√	√		
Ford	America	1997	E-Series 5.4L			IC			√	√	√		
Ford	America	1998	E-Series 5.4L			IC			√	√	√		
Ford	America	1999	E-Series 5.4L			IC			√	√	√		
Ford	America	2000	E-Series 5.4L			IC			√	√	√		
Ford	America	2001	E-Series 5.4L			IC			√	√	√		
Ford	America	2002	E-Series 5.4L			IC			√	√	√		
Ford	America	2003	E-Series 5.4L			IC			√	√	√		
Ford	America	2004	E-Series 5.4L			IC			√	√	√		
Ford	America	1997	E-Series 5.4L			RAP			√	√			
Ford	America	1998	E-Series 5.4L			RAP			√	√			
Ford	America	1999	E-Series 5.4L			RAP			√	√			
Ford	America	2000	E-Series 5.4L			RAP			√	√			
Ford	America	2001	E-Series 5.4L			RAP			√	√			
Ford	America	2002	E-Series 5.4L			RAP			√	√			
Ford	America	2003	E-Series 5.4L			RAP			√	√			
Ford	America	2004	E-Series 5.4L			RAP			√	√			
Ford	America	1997	E-Series 5.4L			RCM			√	√	√		
Ford	America	1998	E-Series 5.4L			RCM			√	√	√		
Ford	America	1999	E-Series 5.4L			RCM			√	√	√		
Ford	America	2000	E-Series 5.4L			RCM			√	√	√		
Ford	America	2001	E-Series 5.4L			RCM			√	√	√		
Ford	America	2002	E-Series 5.4L			RCM			√	√	√		
Ford	America	2003	E-Series 5.4L			RCM			√	√	√		
Ford	America	2004	E-Series 5.4L			RCM			√	√	√		
Ford	America	1997	E-Series 5.4L			AFCM			√	√			
Ford	America	1998	E-Series 5.4L			AFCM			√	√			
Ford	America	1999	E-Series 5.4L			AFCM			√	√			
Ford	America	2000	E-Series 5.4L			AFCM			√	√			
Ford	America	2001	E-Series 5.4L			AFCM			√	√			
Ford	America	2002	E-Series 5.4L			AFCM			√	√			

Ford	America	2003	E-Series 5.4L			AFCM			√	√			
Ford	America	2004	E-Series 5.4L			AFCM			√	√			
Ford	America	1997	E-Series 5.4L NGV			PCM		√	√	√	√		
Ford	America	1997	E-Series 5.4L NGV			ABS			√	√	√	√	
Ford	America	1997	E-Series 5.4L NGV			ECS			√	√			
Ford	America	1997	E-Series 5.4L NGV			AFCM			√	√			
Ford	America	1996	E-Series 5.8L-/5.8L+ /5.8L+ CAL			PCM		√	√	√	√		
Ford	America	1996	E-Series 5.8L-/5.8L+ /5.8L+ CAL			AFCM			√	√			
Ford	America	2004	E-Series 6.0L			ABS			√	√	√		
Ford	America	2004	E-Series 6.0L			IC			√	√	√		
Ford	America	2004	E-Series 6.0L			RAP			√	√			
Ford	America	2004	E-Series 6.0L			RCM			√	√	√		
Ford	America	1997	E-Series 6.8L			ABS			√	√	√		
Ford	America	1998	E-Series 6.8L			ABS			√	√	√		
Ford	America	1999	E-Series 6.8L			ABS			√	√	√		
Ford	America	2000	E-Series 6.8L			ABS			√	√	√		
Ford	America	2001	E-Series 6.8L			ABS			√	√	√		
Ford	America	2002	E-Series 6.8L			ABS			√	√	√		
Ford	America	2003	E-Series 6.8L			ABS			√	√	√		
Ford	America	2004	E-Series 6.8L			ABS			√	√	√		
Ford	America	1997	E-Series 6.8L			PCM		√	√	√	√		
Ford	America	1998	E-Series 6.8L			PCM		√	√	√	√		
Ford	America	1999	E-Series 6.8L			PCM		√	√	√	√		
Ford	America	2000	E-Series 6.8L			PCM		√	√	√	√		
Ford	America	2001	E-Series 6.8L			PCM		√	√	√	√		
Ford	America	2002	E-Series 6.8L			PCM		√	√	√	√		
Ford	America	2003	E-Series 6.8L			PCM		√	√	√	√		
Ford	America	1997	E-Series 6.8L			IC			√	√	√		
Ford	America	1998	E-Series 6.8L			IC			√	√	√		
Ford	America	1999	E-Series 6.8L			IC			√	√	√		
Ford	America	2000	E-Series 6.8L			IC			√	√	√		
Ford	America	2001	E-Series 6.8L			IC			√	√	√		
Ford	America	2002	E-Series 6.8L			IC			√	√	√		

Ford	America	2003	E-Series 6.8L			IC			√	√	√		
Ford	America	2004	E-Series 6.8L			IC			√	√	√		
Ford	America	1997	E-Series 6.8L			RAP			√	√			
Ford	America	1998	E-Series 6.8L			RAP			√	√			
Ford	America	1999	E-Series 6.8L			RAP			√	√			
Ford	America	2000	E-Series 6.8L			RAP			√	√			
Ford	America	2001	E-Series 6.8L			RAP			√	√			
Ford	America	2002	E-Series 6.8L			RAP			√	√			
Ford	America	2003	E-Series 6.8L			RAP			√	√			
Ford	America	2004	E-Series 6.8L			RAP			√	√			
Ford	America	1997	E-Series 6.8L			RCM			√	√	√		
Ford	America	1998	E-Series 6.8L			RCM			√	√	√		
Ford	America	1999	E-Series 6.8L			RCM			√	√	√		
Ford	America	2000	E-Series 6.8L			RCM			√	√	√		
Ford	America	2001	E-Series 6.8L			RCM			√	√	√		
Ford	America	2002	E-Series 6.8L			RCM			√	√	√		
Ford	America	2003	E-Series 6.8L			RCM			√	√	√		
Ford	America	2004	E-Series 6.8L			RCM			√	√	√		
Ford	America	1996	E-Series 7.3L			PCM		√	√	√	√		
Ford	America	1997	E-Series 7.3L			PCM		√	√	√	√		
Ford	America	1998	E-Series 7.3L			PCM		√	√	√	√		
Ford	America	1999	E-Series 7.3L			PCM		√	√	√	√		
Ford	America	2000	E-Series 7.3L			PCM		√	√	√	√		
Ford	America	2001	E-Series 7.3L			PCM		√	√	√	√		
Ford	America	2002	E-Series 7.3L			PCM		√	√	√	√		
Ford	America	2003	E-Series 7.3L			PCM		√	√	√	√		
Ford	America	1996	E-Series 7.3L			ABS			√	√	√		
Ford	America	1997	E-Series 7.3L			ABS			√	√	√		
Ford	America	1998	E-Series 7.3L			ABS			√	√	√		
Ford	America	1999	E-Series 7.3L			ABS			√	√	√		
Ford	America	2000	E-Series 7.3L			ABS			√	√	√		
Ford	America	2001	E-Series 7.3L			ABS			√	√	√		
Ford	America	2002	E-Series 7.3L			ABS			√	√	√		
Ford	America	2003	E-Series 7.3L			ABS			√	√	√		
Ford	America	1996	E-Series 7.3L			AFCM			√	√			
Ford	America	1997	E-Series 7.3L			AFCM			√	√			

Ford	America	1998	E-Series 7.3L			AFCM			√	√			
Ford	America	1999	E-Series 7.3L			AFCM			√	√			
Ford	America	2000	E-Series 7.3L			AFCM			√	√			
Ford	America	2001	E-Series 7.3L			AFCM			√	√			
Ford	America	2002	E-Series 7.3L			AFCM			√	√			
Ford	America	2003	E-Series 7.3L			AFCM			√	√			
Ford	America	1996	E-Series 7.3L			ECS			√	√			
Ford	America	1997	E-Series 7.3L			ECS			√	√			
Ford	America	1998	E-Series 7.3L			ECS			√	√			
Ford	America	1999	E-Series 7.3L			ECS			√	√			
Ford	America	2000	E-Series 7.3L			ECS			√	√			
Ford	America	2001	E-Series 7.3L			ECS			√	√			
Ford	America	2002	E-Series 7.3L			ECS			√	√			
Ford	America	2003	E-Series 7.3L			ECS			√	√			
Ford	America	1996	E-Series 7.5L CAL/7.5L E4OD			PCM		√	√	√		√	
Ford	America	1996	E-Series 7.5L CAL/7.5L E4OD			AFCM			√	√			
Ford	America	2000	Excursion 5.4L			PCM		√	√	√		√	
Ford	America	2001	Excursion 5.4L			PCM		√	√	√		√	
Ford	America	2002	Excursion 5.4L			PCM		√	√	√		√	
Ford	America	2003	Excursion 5.4L			PCM		√	√	√		√	
Ford	America	2004	Excursion 5.4L			PCM		√	√	√		√	
Ford	America	2000	Excursion 5.4L			ABS			√	√		√	
Ford	America	2001	Excursion 5.4L			ABS			√	√		√	
Ford	America	2002	Excursion 5.4L			ABS			√	√		√	
Ford	America	2003	Excursion 5.4L			ABS			√	√		√	
Ford	America	2004	Excursion 5.4L			ABS			√	√		√	
Ford	America	2000	Excursion 5.4L			DSM			√	√		√	
Ford	America	2001	Excursion 5.4L			DSM			√	√		√	
Ford	America	2002	Excursion 5.4L			DSM			√	√		√	
Ford	America	2003	Excursion 5.4L			DSM			√	√		√	
Ford	America	2004	Excursion 5.4L			DSM			√	√		√	
Ford	America	2000	Excursion 5.4L			EATC			√	√		√	
Ford	America	2001	Excursion 5.4L			EATC			√	√		√	
Ford	America	2002	Excursion 5.4L			EATC			√	√		√	
Ford	America	2003	Excursion 5.4L			EATC			√	√		√	
Ford	America	2004	Excursion 5.4L			EATC			√	√		√	

Ford	America	2000	Excursion 5.4L			ECS			√	√			
Ford	America	2001	Excursion 5.4L			ECS			√	√			
Ford	America	2002	Excursion 5.4L			ECS			√	√			
Ford	America	2003	Excursion 5.4L			ECS			√	√			
Ford	America	2004	Excursion 5.4L			ECS			√	√			
Ford	America	2000	Excursion 5.4L			GEM			√	√			
Ford	America	2001	Excursion 5.4L			GEM			√	√			
Ford	America	2002	Excursion 5.4L			GEM			√	√			
Ford	America	2003	Excursion 5.4L			GEM			√	√			
Ford	America	2004	Excursion 5.4L			GEM			√	√			
Ford	America	2000	Excursion 5.4L			HEC			√	√			
Ford	America	2001	Excursion 5.4L			HEC			√	√			
Ford	America	2002	Excursion 5.4L			HEC			√	√			
Ford	America	2003	Excursion 5.4L			HEC			√	√			
Ford	America	2004	Excursion 5.4L			HEC			√	√			
Ford	America	2000	Excursion 5.4L			OTC			√	√			
Ford	America	2001	Excursion 5.4L			OTC			√	√			
Ford	America	2002	Excursion 5.4L			OTC			√	√			
Ford	America	2003	Excursion 5.4L			OTC			√	√			
Ford	America	2004	Excursion 5.4L			OTC			√	√			
Ford	America	2000	Excursion 5.4L			PAM			√	√			
Ford	America	2001	Excursion 5.4L			PAM			√	√			
Ford	America	2002	Excursion 5.4L			PAM			√	√			
Ford	America	2003	Excursion 5.4L			PAM			√	√			
Ford	America	2004	Excursion 5.4L			PAM			√	√			
Ford	America	2000	Excursion 5.4L			PATS			√	√			
Ford	America	2001	Excursion 5.4L			PATS			√	√			
Ford	America	2002	Excursion 5.4L			PATS			√	√			
Ford	America	2003	Excursion 5.4L			PATS			√	√			
Ford	America	2004	Excursion 5.4L			PATS			√	√			
Ford	America	2000	Excursion 5.4L			CSM			√	√	√		
Ford	America	2001	Excursion 5.4L			CSM			√	√	√		
Ford	America	2002	Excursion 5.4L			CSM			√	√	√		
Ford	America	2003	Excursion 5.4L			CSM			√	√	√		
Ford	America	2004	Excursion 5.4L			CSM			√	√	√		
Ford	America	2003	Excursion 6.0L			ABS			√	√	√		

Ford	America	2004	Excursion 6.0L			ABS			√	√	√		
Ford	America	2003	Excursion 6.0L			DSM			√	√	√		
Ford	America	2004	Excursion 6.0L			DSM			√	√	√		
Ford	America	2003	Excursion 6.0L			EATC			√	√	√		
Ford	America	2004	Excursion 6.0L			EATC			√	√	√		
Ford	America	2003	Excursion 6.0L			ECS			√	√			
Ford	America	2004	Excursion 6.0L			ECS			√	√			
Ford	America	2003	Excursion 6.0L			GEM			√	√			
Ford	America	2004	Excursion 6.0L			GEM			√	√			
Ford	America	2003	Excursion 6.0L			HEC			√	√			
Ford	America	2004	Excursion 6.0L			HEC			√	√			
Ford	America	2003	Excursion 6.0L			OTC			√	√			
Ford	America	2004	Excursion 6.0L			OTC			√	√			
Ford	America	2003	Excursion 6.0L			PAM			√	√			
Ford	America	2004	Excursion 6.0L			PAM			√	√			
Ford	America	2003	Excursion 6.0L			PATS			√	√			
Ford	America	2004	Excursion 6.0L			PATS			√	√			
Ford	America	2003	Excursion 6.0L			CSM			√	√	√		
Ford	America	2004	Excursion 6.0L			CSM			√	√	√		
Ford	America	2000	Excursion 6.8L			ABS		√	√	√	√		
Ford	America	2001	Excursion 6.8L			ABS		√	√	√	√		
Ford	America	2002	Excursion 6.8L			ABS		√	√	√	√		
Ford	America	2003	Excursion 6.8L			ABS		√	√	√	√		
Ford	America	2004	Excursion 6.8L			ABS		√	√	√	√		
Ford	America	2000	Excursion 6.8L			DSM			√	√	√		
Ford	America	2001	Excursion 6.8L			DSM			√	√	√		
Ford	America	2002	Excursion 6.8L			DSM			√	√	√		
Ford	America	2003	Excursion 6.8L			DSM			√	√	√		
Ford	America	2004	Excursion 6.8L			DSM			√	√	√		
Ford	America	2000	Excursion 6.8L			EATC			√	√	√		
Ford	America	2001	Excursion 6.8L			EATC			√	√	√		
Ford	America	2002	Excursion 6.8L			EATC			√	√	√		
Ford	America	2003	Excursion 6.8L			EATC			√	√	√		
Ford	America	2004	Excursion 6.8L			EATC			√	√	√		
Ford	America	2000	Excursion 6.8L			ECS			√	√			
Ford	America	2001	Excursion 6.8L			ECS			√	√			

Ford	America	2002	Excursion 6.8L			ECS			√	√			
Ford	America	2003	Excursion 6.8L			ECS			√	√			
Ford	America	2004	Excursion 6.8L			ECS			√	√			
Ford	America	2000	Excursion 6.8L			GEM			√	√			
Ford	America	2001	Excursion 6.8L			GEM			√	√			
Ford	America	2002	Excursion 6.8L			GEM			√	√			
Ford	America	2003	Excursion 6.8L			GEM			√	√			
Ford	America	2004	Excursion 6.8L			GEM			√	√			
Ford	America	2000	Excursion 6.8L			HEC			√	√			
Ford	America	2001	Excursion 6.8L			HEC			√	√			
Ford	America	2002	Excursion 6.8L			HEC			√	√			
Ford	America	2003	Excursion 6.8L			HEC			√	√			
Ford	America	2004	Excursion 6.8L			HEC			√	√			
Ford	America	2000	Excursion 6.8L			OTC			√	√			
Ford	America	2001	Excursion 6.8L			OTC			√	√			
Ford	America	2002	Excursion 6.8L			OTC			√	√			
Ford	America	2003	Excursion 6.8L			OTC			√	√			
Ford	America	2004	Excursion 6.8L			OTC			√	√			
Ford	America	2000	Excursion 6.8L			PAM			√	√			
Ford	America	2001	Excursion 6.8L			PAM			√	√			
Ford	America	2002	Excursion 6.8L			PAM			√	√			
Ford	America	2003	Excursion 6.8L			PAM			√	√			
Ford	America	2004	Excursion 6.8L			PAM			√	√			
Ford	America	2000	Excursion 6.8L			PATS			√	√			
Ford	America	2001	Excursion 6.8L			PATS			√	√			
Ford	America	2002	Excursion 6.8L			PATS			√	√			
Ford	America	2003	Excursion 6.8L			PATS			√	√			
Ford	America	2004	Excursion 6.8L			PATS			√	√			
Ford	America	2000	Excursion 6.8L			CSM			√	√	√		
Ford	America	2001	Excursion 6.8L			CSM			√	√	√		
Ford	America	2002	Excursion 6.8L			CSM			√	√	√		
Ford	America	2003	Excursion 6.8L			CSM			√	√	√		
Ford	America	2004	Excursion 6.8L			CSM			√	√	√		
Ford	America	2000	Excursion 7.3L			ABS			√	√	√		
Ford	America	2001	Excursion 7.3L			ABS			√	√	√		
Ford	America	2002	Excursion 7.3L			ABS			√	√	√		

Ford	America	2003	Excursion 7.3L			ABS			√	√	√		
Ford	America	2000	Excursion 7.3L			ECS			√	√			
Ford	America	2001	Excursion 7.3L			ECS			√	√			
Ford	America	2002	Excursion 7.3L			ECS			√	√			
Ford	America	2003	Excursion 7.3L			ECS			√	√			
Ford	America	2000	Excursion 7.3L			FOH			√	√			
Ford	America	2001	Excursion 7.3L			FOH			√	√			
Ford	America	2002	Excursion 7.3L			FOH			√	√			
Ford	America	2003	Excursion 7.3L			FOH			√	√			
Ford	America	2000	Excursion 7.3L			GEM			√	√			
Ford	America	2001	Excursion 7.3L			GEM			√	√			
Ford	America	2002	Excursion 7.3L			GEM			√	√			
Ford	America	2003	Excursion 7.3L			GEM			√	√			
Ford	America	2000	Excursion 7.3L			HEC			√	√			
Ford	America	2001	Excursion 7.3L			HEC			√	√			
Ford	America	2002	Excursion 7.3L			HEC			√	√			
Ford	America	2003	Excursion 7.3L			HEC			√	√			
Ford	America	2000	Excursion 7.3L			OTC			√	√			
Ford	America	2001	Excursion 7.3L			OTC			√	√			
Ford	America	2002	Excursion 7.3L			OTC			√	√			
Ford	America	2003	Excursion 7.3L			OTC			√	√			
Ford	America	2000	Excursion 7.3L			PAM			√	√			
Ford	America	2001	Excursion 7.3L			PAM			√	√			
Ford	America	2002	Excursion 7.3L			PAM			√	√			
Ford	America	2003	Excursion 7.3L			PAM			√	√			
Ford	America	2000	Excursion 7.3L			PATS			√	√			
Ford	America	2001	Excursion 7.3L			PATS			√	√			
Ford	America	2002	Excursion 7.3L			PATS			√	√			
Ford	America	2003	Excursion 7.3L			PATS			√	√			
Ford	America	1997	Expedition 4.6L/5.4L			PCM		√	√	√	√		
Ford	America	1998	Expedition 4.6L/5.4L			PCM		√	√	√	√		
Ford	America	1999	Expedition 4.6L/5.4L			PCM		√	√	√	√		
Ford	America	2000	Expedition 4.6L/5.4L			PCM		√	√	√	√		
Ford	America	2001	Expedition 4.6L/5.4L			PCM		√	√	√	√		
Ford	America	2002	Expedition 4.6L/5.4L			PCM		√	√	√	√		
Ford	America	2003	Expedition 4.6L/5.4L			PCM		√	√	√	√		

Ford	America	2004	Expedition 4.6L/5.4L			PCM		√	√	√	√		
Ford	America	1997	Expedition 4.6L/5.4L			4X4M			√	√	√		
Ford	America	1998	Expedition 4.6L/5.4L			4X4M			√	√	√		
Ford	America	1999	Expedition 4.6L/5.4L			4X4M			√	√	√		
Ford	America	2000	Expedition 4.6L/5.4L			4X4M			√	√	√		
Ford	America	2001	Expedition 4.6L/5.4L			4X4M			√	√	√		
Ford	America	2002	Expedition 4.6L/5.4L			4X4M			√	√	√		
Ford	America	2003	Expedition 4.6L/5.4L			4X4M			√	√	√		
Ford	America	2004	Expedition 4.6L/5.4L			4X4M			√	√	√		
Ford	America	1997	Expedition 4.6L/5.4L			ABS			√	√	√		
Ford	America	1998	Expedition 4.6L/5.4L			ABS			√	√	√		
Ford	America	1999	Expedition 4.6L/5.4L			ABS			√	√	√		
Ford	America	2000	Expedition 4.6L/5.4L			ABS			√	√	√		
Ford	America	2001	Expedition 4.6L/5.4L			ABS			√	√	√		
Ford	America	2002	Expedition 4.6L/5.4L			ABS			√	√	√		
Ford	America	2003	Expedition 4.6L/5.4L			ABS			√	√	√		
Ford	America	2004	Expedition 4.6L/5.4L			ABS			√	√	√		
Ford	America	1997	Expedition 4.6L/5.4L			DSM			√	√	√		
Ford	America	1998	Expedition 4.6L/5.4L			DSM			√	√	√		
Ford	America	1999	Expedition 4.6L/5.4L			DSM			√	√	√		
Ford	America	2000	Expedition 4.6L/5.4L			DSM			√	√	√		
Ford	America	2001	Expedition 4.6L/5.4L			DSM			√	√	√		
Ford	America	2002	Expedition 4.6L/5.4L			DSM			√	√	√		
Ford	America	2003	Expedition 4.6L/5.4L			DSM			√	√	√		
Ford	America	2004	Expedition 4.6L/5.4L			DSM			√	√	√		
Ford	America	1997	Expedition 4.6L/5.4L			EATC			√	√	√		
Ford	America	1998	Expedition 4.6L/5.4L			EATC			√	√	√		
Ford	America	1999	Expedition 4.6L/5.4L			EATC			√	√	√		
Ford	America	2000	Expedition 4.6L/5.4L			EATC			√	√	√		
Ford	America	2001	Expedition 4.6L/5.4L			EATC			√	√	√		
Ford	America	2002	Expedition 4.6L/5.4L			EATC			√	√	√		
Ford	America	2003	Expedition 4.6L/5.4L			EATC			√	√	√		
Ford	America	2004	Expedition 4.6L/5.4L			EATC			√	√	√		
Ford	America	1997	Expedition 4.6L/5.4L			HEC			√	√			
Ford	America	1998	Expedition 4.6L/5.4L			HEC			√	√			
Ford	America	1999	Expedition 4.6L/5.4L			HEC			√	√			

Ford	America	2000	Expedition 4.6L/5.4L			HEC			√	√			
Ford	America	2001	Expedition 4.6L/5.4L			HEC			√	√			
Ford	America	2002	Expedition 4.6L/5.4L			HEC			√	√			
Ford	America	2003	Expedition 4.6L/5.4L			HEC			√	√			
Ford	America	2004	Expedition 4.6L/5.4L			HEC			√	√			
Ford	America	1997	Expedition 4.6L/5.4L			PAM			√	√			
Ford	America	1998	Expedition 4.6L/5.4L			PAM			√	√			
Ford	America	1999	Expedition 4.6L/5.4L			PAM			√	√			
Ford	America	2000	Expedition 4.6L/5.4L			PAM			√	√			
Ford	America	2001	Expedition 4.6L/5.4L			PAM			√	√			
Ford	America	2002	Expedition 4.6L/5.4L			PAM			√	√			
Ford	America	2003	Expedition 4.6L/5.4L			PAM			√	√			
Ford	America	2004	Expedition 4.6L/5.4L			PAM			√	√			
Ford	America	1997	Expedition 4.6L/5.4L			RCM			√	√	√		
Ford	America	1998	Expedition 4.6L/5.4L			RCM			√	√	√		
Ford	America	1999	Expedition 4.6L/5.4L			RCM			√	√	√		
Ford	America	2000	Expedition 4.6L/5.4L			RCM			√	√	√		
Ford	America	2001	Expedition 4.6L/5.4L			RCM			√	√	√		
Ford	America	2002	Expedition 4.6L/5.4L			RCM			√	√	√		
Ford	America	2003	Expedition 4.6L/5.4L			RCM			√	√	√		
Ford	America	2004	Expedition 4.6L/5.4L			RCM			√	√	√		
Ford	America	1997	Expedition 4.6L/5.4L			TPM			√	√			
Ford	America	1998	Expedition 4.6L/5.4L			TPM			√	√			
Ford	America	1999	Expedition 4.6L/5.4L			TPM			√	√			
Ford	America	2000	Expedition 4.6L/5.4L			TPM			√	√			
Ford	America	2001	Expedition 4.6L/5.4L			TPM			√	√			
Ford	America	2002	Expedition 4.6L/5.4L			TPM			√	√			
Ford	America	2003	Expedition 4.6L/5.4L			TPM			√	√			
Ford	America	2004	Expedition 4.6L/5.4L			TPM			√	√			
Ford	America	1997	Expedition 4.6L/5.4L			CSM			√	√	√		
Ford	America	1998	Expedition 4.6L/5.4L			CSM			√	√	√		
Ford	America	1999	Expedition 4.6L/5.4L			CSM			√	√	√		
Ford	America	2000	Expedition 4.6L/5.4L			CSM			√	√	√		
Ford	America	2001	Expedition 4.6L/5.4L			CSM			√	√	√		
Ford	America	2002	Expedition 4.6L/5.4L			CSM			√	√	√		
Ford	America	2003	Expedition 4.6L/5.4L			CSM			√	√	√		

Ford	America	2004	Expedition 4.6L/5.4L			CSM			√	√	√		
Ford	America	2006	Expedition 4.6L			PCM			√	√	√		
Ford	America	2006	Expedition 4.6L			ABS			√	√	√		
Ford	America	2006	Expedition 4.6L			RCM			√	√	√		
Ford	America	2006	Expedition 4.6L			IC			√	√	√		
Ford	America	2006	Expedition 5.4L			PCM			√	√	√		
Ford	America	2006	Expedition 5.4L			ABS			√	√	√		
Ford	America	2006	Expedition 5.4L			RCM			√	√	√		
Ford	America	2006	Expedition 5.4L			IC			√	√	√		
Ford	America	2007	Expedition 5.4L			PCM			√	√	√		
Ford	America	2007	Expedition 5.4L			ABS			√	√	√		
Ford	America	2007	Expedition 5.4L			RCM			√	√	√		
Ford	America	2007	Expedition 5.4L			GEM			√	√	√		
Ford	America	2007	Expedition 5.4L			IC			√	√	√		
Ford	America	2007	Expedition EL 5.4L			PCM			√	√	√		
Ford	America	2007	Expedition EL 5.4L			ABS			√	√	√		
Ford	America	2007	Expedition EL 5.4L			RCM			√	√	√		
Ford	America	2007	Expedition EL 5.4L			GEM			√	√	√		
Ford	America	2007	Expedition EL 5.4L			IC			√	√	√		
Ford	America	2001	F800 5.9L CUMMINS			ABS			√	√	√		
Ford	America	2002	F800 5.9L CUMMINS			ABS			√	√	√		
Ford	America	2003	F800 5.9L CUMMINS			ABS			√	√	√		
Ford	America	2004	F800 5.9L CUMMINS			ABS			√	√	√		
Ford	America	2001	F800 3126-CAT			ABS			√	√	√		
Ford	America	2002	F800 3126-CAT			ABS			√	√	√		
Ford	America	2003	F800 3126-CAT			ABS			√	√	√		
Ford	America	2001	F800 7.3L DIESEL			ABS			√	√	√		
Ford	America	2002	F800 7.3L DIESEL			ABS			√	√	√		
Ford	America	2003	F800 7.3L DIESEL			ABS			√	√	√		
Ford	America	2001	F12000/14000 5.9L Die			ABS			√	√	√		
Ford	America	2000	F-650/F-750 5.9L			PCM		√	√	√	√		
Ford	America	2001	F-650/F-750 5.9L			PCM		√	√	√	√		
Ford	America	2002	F-650/F-750 5.9L			PCM		√	√	√	√		
Ford	America	2003	F-650/F-750 5.9L			PCM		√	√	√	√		
Ford	America	2000	F-650/F-750 5.9L			ABS			√	√	√		
Ford	America	2001	F-650/F-750 5.9L			ABS			√	√	√		

Ford	America	2002	F-650/F-750 5.9L			ABS			√	√	√		
Ford	America	2003	F-650/F-750 5.9L			ABS			√	√	√		
Ford	America	2000	F-650/F-750 5.9L			GEM			√	√			
Ford	America	2001	F-650/F-750 5.9L			GEM			√	√			
Ford	America	2002	F-650/F-750 5.9L			GEM			√	√			
Ford	America	2003	F-650/F-750 5.9L			GEM			√	√			
Ford	America	2004	F-650/F-750 6.0L DIE			PCM		√	√	√	√		
Ford	America	2004	F-650/F-750 6.0L DIE			GEM			√	√			
Ford	America	2004	F-650/F-750 6.0L DIE			ABS			√	√	√		
Ford	America	2000	F-650/F-750 7.2L DIE			PCM		√	√	√	√		
Ford	America	2001	F-650/F-750 7.2L DIE			PCM		√	√	√	√		
Ford	America	2002	F-650/F-750 7.2L DIE			PCM		√	√	√	√		
Ford	America	2003	F-650/F-750 7.2L DIE			PCM		√	√	√	√		
Ford	America	2004	F-650/F-750 7.2L DIE			PCM		√	√	√	√		
Ford	America	2000	F-650/F-750 7.2L DIE			GEM			√	√			
Ford	America	2001	F-650/F-750 7.2L DIE			GEM			√	√			
Ford	America	2002	F-650/F-750 7.2L DIE			GEM			√	√			
Ford	America	2003	F-650/F-750 7.2L DIE			GEM			√	√			
Ford	America	2004	F-650/F-750 7.2L DIE			GEM			√	√			
Ford	America	2000	F-650/F-750 7.2L DIE			ABS			√	√	√		
Ford	America	2001	F-650/F-750 7.2L DIE			ABS			√	√	√		
Ford	America	2002	F-650/F-750 7.2L DIE			ABS			√	√	√		
Ford	America	2003	F-650/F-750 7.2L DIE			ABS			√	√	√		
Ford	America	2004	F-650/F-750 7.2L DIE			ABS			√	√	√		
Ford	America	2000	F-650/F-750 7.3L			PCM		√	√	√	√		
Ford	America	2001	F-650/F-750 7.3L			PCM		√	√	√	√		
Ford	America	2002	F-650/F-750 7.3L			PCM		√	√	√	√		
Ford	America	2003	F-650/F-750 7.3L			PCM		√	√	√	√		
Ford	America	2000	F-650/F-750 7.3L			GEM			√	√			
Ford	America	2001	F-650/F-750 7.3L			GEM			√	√			
Ford	America	2002	F-650/F-750 7.3L			GEM			√	√			
Ford	America	2003	F-650/F-750 7.3L			GEM			√	√			
Ford	America	2000	F-650/F-750 7.3L			ABS			√	√	√		
Ford	America	2001	F-650/F-750 7.3L			ABS			√	√	√		
Ford	America	2002	F-650/F-750 7.3L			ABS			√	√	√		
Ford	America	2003	F-650/F-750 7.3L			ABS			√	√	√		

Ford	America	2001	F7000/8000 5.9L Diesel			PCM		√	√	√	√		
Ford	America	2001	F7000/8000 5.9L Diesel			ABS			√	√	√	√	
Ford	America	2001	Fiesta 1.25L Mtx/Ctx			PCM		√	√	√	√		
Ford	America	2001	Fiesta 1.25L Mtx/Ctx			ABS			√	√	√	√	
Ford	America	2001	Fiesta 1.3L			PCM		√	√	√	√		
Ford	America	1998	Fiesta 1.3L			PCM		√	√	√	√		
Ford	America	2001	Fiesta 1.3L			ABS			√	√	√	√	
Ford	America	1998	Fiesta 1.3L			ABS			√	√	√	√	
Ford	America	1998	Fiesta 1.4L			ABS			√	√	√	√	
Ford	America	2001	Fiesta 1.4L 2V/4V			PCM		√	√	√	√		
Ford	America	2001	Fiesta 1.4L 2V/4V			ABS			√	√	√	√	
Ford	America	2001	Fiesta 1.8L Diesel			PCM		√	√	√	√		
Ford	America	2001	Fiesta 1.8L Diesel			ABS			√	√	√	√	
Ford	America	2001	Focus 1.8L Diesel			PCM		√	√	√	√		
Ford	America	2001	Focus 1.8L Diesel			ABS			√	√	√	√	
Ford	America	2001	Focus 1.8L Diesel			CSM			√	√			
Ford	America	2001	Focus 1.8L Diesel			CTM			√	√			
Ford	America	2001	Focus 1.8L Diesel			ECS			√	√			
Ford	America	2001	Focus 1.8L Diesel			FFH			√	√			
Ford	America	2001	Focus 1.8L Diesel			FIP			√	√			
Ford	America	2001	Focus 1.8L Diesel			HEC			√	√			
Ford	America	2001	Focus 1.8L Diesel			ICU			√	√			
Ford	America	2001	Focus 1.8L Diesel			MC			√	√			
Ford	America	2000	Focus 2.0L 2V/4V			PCM		√	√	√	√		
Ford	America	2001	Focus 2.0L 2V/4V			PCM		√	√	√	√		
Ford	America	2002	Focus 2.0L 2V/4V			PCM		√	√	√	√		
Ford	America	2003	Focus 2.0L 2V/4V			PCM		√	√	√	√		
Ford	America	2004	Focus 2.0L 2V/4V			PCM		√	√	√	√		
Ford	America	2000	Focus 2.0L 2V/4V			ABS			√	√	√	√	
Ford	America	2001	Focus 2.0L 2V/4V			ABS			√	√	√	√	
Ford	America	2002	Focus 2.0L 2V/4V			ABS			√	√	√	√	
Ford	America	2003	Focus 2.0L 2V/4V			ABS			√	√	√	√	
Ford	America	2004	Focus 2.0L 2V/4V			ABS			√	√	√	√	
Ford	America	2000	Focus 2.0L 2V/4V			FIP			√	√			
Ford	America	2001	Focus 2.0L 2V/4V			FIP			√	√			
Ford	America	2002	Focus 2.0L 2V/4V			FIP			√	√			

Ford	America	2003	Focus 2.0L 2V/4V			FIP			√	√			
Ford	America	2004	Focus 2.0L 2V/4V			FIP			√	√			
Ford	America	2000	Focus 2.0L 2V/4V			GEM			√	√			
Ford	America	2001	Focus 2.0L 2V/4V			GEM			√	√			
Ford	America	2002	Focus 2.0L 2V/4V			GEM			√	√			
Ford	America	2003	Focus 2.0L 2V/4V			GEM			√	√			
Ford	America	2004	Focus 2.0L 2V/4V			GEM			√	√			
Ford	America	2000	Focus 2.0L 2V/4V			HEC			√	√			
Ford	America	2001	Focus 2.0L 2V/4V			HEC			√	√			
Ford	America	2002	Focus 2.0L 2V/4V			HEC			√	√			
Ford	America	2003	Focus 2.0L 2V/4V			HEC			√	√			
Ford	America	2004	Focus 2.0L 2V/4V			HEC			√	√			
Ford	America	2000	Focus 2.0L 2V/4V			MC			√	√			
Ford	America	2001	Focus 2.0L 2V/4V			MC			√	√			
Ford	America	2002	Focus 2.0L 2V/4V			MC			√	√			
Ford	America	2003	Focus 2.0L 2V/4V			MC			√	√			
Ford	America	2004	Focus 2.0L 2V/4V			MC			√	√			
Ford	America	2000	Focus 2.0L 2V/4V			RCM			√	√	√		
Ford	America	2001	Focus 2.0L 2V/4V			RCM			√	√	√		
Ford	America	2002	Focus 2.0L 2V/4V			RCM			√	√	√		
Ford	America	2003	Focus 2.0L 2V/4V			RCM			√	√	√		
Ford	America	2004	Focus 2.0L 2V/4V			RCM			√	√	√		
Ford	America	2003	Focus 2.3L PZEV			ABS			√	√	√		
Ford	America	2004	Focus 2.3L PZEV			ABS			√	√	√		
Ford	America	2003	Focus 2.3L PZEV			HEC			√	√			
Ford	America	2004	Focus 2.3L PZEV			HEC			√	√			
Ford	America	2003	Focus 2.3L PZEV			FIP			√	√			
Ford	America	2004	Focus 2.3L PZEV			FIP			√	√			
Ford	America	2003	Focus 2.3L PZEV			GEM			√	√			
Ford	America	2004	Focus 2.3L PZEV			GEM			√	√			
Ford	America	2003	Focus 2.3L PZEV			HEC			√	√			
Ford	America	2004	Focus 2.3L PZEV			HEC			√	√			
Ford	America	2003	Focus 2.3L PZEV			MC			√	√			
Ford	America	2004	Focus 2.3L PZEV			MC			√	√			
Ford	America	2003	Focus 2.3L PZEV			PATS			√	√			
Ford	America	2004	Focus 2.3L PZEV			PATS			√	√			

Ford	America	2003	Focus 2.3L PZEV			RCM			√	√	√		
Ford	America	2004	Focus 2.3L PZEV			RCM			√	√	√		
Ford	America	2006	Focus 2.3L			PCM			√	√	√		
Ford	America	2006	Focus 2.3L			ABS			√	√	√		
Ford	America	2006	Focus 2.3L			RCM			√	√	√		
Ford	America	2006	Focus 2.3L			GEM			√	√	√		
Ford	America	2006	Focus 2.0L			PCM			√	√	√		
Ford	America	2006	Focus 2.0L			ABS			√	√	√		
Ford	America	2006	Focus 2.0L			RCM			√	√	√		
Ford	America	2006	Focus 2.0L			GEM			√	√	√		
Ford	America	2006	Focus 2.0L PZEV			PCM			√	√	√		
Ford	America	2006	Focus 2.0L PZEV			ABS			√	√	√		
Ford	America	2006	Focus 2.0L PZEV			RCM			√	√	√		
Ford	America	2006	Focus 2.0L PZEV			GEM			√	√	√		
Ford	America	2007	Focus 2.0L PZEV			PCM			√	√	√		
Ford	America	2007	Focus 2.0L PZEV			ABS			√	√	√		
Ford	America	2007	Focus 2.0L PZEV			RCM			√	√	√		
Ford	America	2007	Focus 2.0L PZEV			GEM			√	√	√		
Ford	America	2007	Focus 2.0L PZEV			IC			√	√	√		
Ford	America	2007	Focus 2.3L			PCM			√	√	√		
Ford	America	2007	Focus 2.3L			ABS			√	√	√		
Ford	America	2007	Focus 2.3L			RCM			√	√	√		
Ford	America	2007	Focus 2.3L			GEM			√	√	√		
Ford	America	2007	Focus 2.3L			IC			√	√	√		
Ford	America	2007	Focus 2.0L NON-PZEV			PCM			√	√	√		
Ford	America	2007	Focus 2.0L NON-PZEV			ABS			√	√	√		
Ford	America	2007	Focus 2.0L NON-PZEV			RCM			√	√	√		
Ford	America	2007	Focus 2.0L NON-PZEV			GEM			√	√	√		
Ford	America	2007	Focus 2.0L NON-PZEV			IC			√	√	√		
Ford	America	2004	Freestar/Monterey 3.9L/4.2L			PCM		√	√	√	√		
Ford	America	2004	Freestar/Monterey 3.9L/4.2L			ABS			√	√	√		
Ford	America	2004	Freestar/Monterey 3.9L/4.2L			DSM			√	√	√		
Ford	America	2004	Freestar/Monterey 3.9L/4.2L			GEM			√	√			
Ford	America	2004	Freestar/Monterey 3.9L/4.2L			IC			√	√	√		
Ford	America	2004	Freestar/Monterey 3.9L/4.2L			LPSDM			√	√			
Ford	America	2004	Freestar/Monterey 3.9L/4.2L			LTM			√	√			

Ford	America	2004	Freestar/Monterey 3.9L/4.2L			NGSC			√	√			
Ford	America	2004	Freestar/Monterey 3.9L/4.2L			PAM			√	√			
Ford	America	2004	Freestar/Monterey 3.9L/4.2L			RCM			√	√	√		
Ford	America	2004	Freestar/Monterey 3.9L/4.2L			RPSDM			√	√			
Ford	America	2006	Freestar/Monte 3.9L			PCM			√	√	√		
Ford	America	2006	Freestar/Monte 3.9L			ABS			√	√	√		
Ford	America	2006	Freestar/Monte 3.9L			RCM			√	√	√		
Ford	America	2006	Freestar/Monte 3.9L			GEM			√	√	√		
Ford	America	2006	Freestar/Monte 3.9L			IC			√	√	√		
Ford	America	2006	Freestar/Monte 4.2L			PCM			√	√	√		
Ford	America	2006	Freestar/Monte 4.2L			ABS			√	√	√		
Ford	America	2006	Freestar/Monte 4.2L			RCM			√	√	√		
Ford	America	2006	Freestar/Monte 4.2L			GEM			√	√	√		
Ford	America	2006	Freestar/Monte 4.2L			IC			√	√	√		
Ford	America	2007	FreeStar 3.9L			PCM			√	√	√		
Ford	America	2007	FreeStar 3.9L			ABS			√	√	√		
Ford	America	2007	FreeStar 3.9L			RCM			√	√	√		
Ford	America	2007	FreeStar 3.9L			GEM			√	√	√		
Ford	America	2007	FreeStar 3.9L			IC			√	√	√		
Ford	America	2007	FreeStar 4.2L			PCM			√	√	√		
Ford	America	2007	FreeStar 4.2L			ABS			√	√	√		
Ford	America	2007	FreeStar 4.2L			RCM			√	√	√		
Ford	America	2007	FreeStar 4.2L			GEM			√	√	√		
Ford	America	2007	FreeStar 4.2L			IC			√	√	√		
Ford	America	2006	Freestyle 3.0L			PCM			√	√	√		
Ford	America	2006	Freestyle 3.0L			ABS			√	√	√		
Ford	America	2006	Freestyle 3.0L			RCM			√	√	√		
Ford	America	2006	Freestyle 3.0L			GEM			√	√	√		
Ford	America	2006	Freestyle 3.0L			IC			√	√	√		
Ford	America	2007	Freestyle 3.0L			PCM			√	√	√		
Ford	America	2007	Freestyle 3.0L			ABS			√	√	√		
Ford	America	2007	Freestyle 3.0L			RCM			√	√	√		
Ford	America	2007	Freestyle 3.0L			GEM			√	√	√		
Ford	America	2007	Freestyle 3.0L			IC			√	√	√		
Ford	America	2001	F-Series Super Duty 3.9L+/4.2L/4.2L Die			ABS			√	√	√		

Ford	America	1996	F-Series 4.9L/5.0L			PCM		√	√	√	√		
Ford	America	1999	F-Series Super Duty 5.4L			PCM		√	√	√	√		
Ford	America	2000	F-Series Super Duty 5.4L			PCM		√	√	√	√		
Ford	America	2001	F-Series Super Duty 5.4L			PCM		√	√	√	√		
Ford	America	2002	F-Series Super Duty 5.4L			PCM		√	√	√	√		
Ford	America	2003	F-Series Super Duty 5.4L			PCM		√	√	√	√		
Ford	America	2004	F-Series Super Duty 5.4L			PCM		√	√	√	√		
Ford	America	1999	F-Series Super Duty 5.4L			ABS			√	√	√		
Ford	America	2000	F-Series Super Duty 5.4L			ABS			√	√	√		
Ford	America	2001	F-Series Super Duty 5.4L			ABS			√	√	√		
Ford	America	2002	F-Series Super Duty 5.4L			ABS			√	√	√		
Ford	America	2003	F-Series Super Duty 5.4L			ABS			√	√	√		
Ford	America	2004	F-Series Super Duty 5.4L			ABS			√	√	√		
Ford	America	1999	F-Series Super Duty 5.4L			AFCM			√	√			
Ford	America	2000	F-Series Super Duty 5.4L			AFCM			√	√			
Ford	America	2001	F-Series Super Duty 5.4L			AFCM			√	√			
Ford	America	2002	F-Series Super Duty 5.4L			AFCM			√	√			
Ford	America	2003	F-Series Super Duty 5.4L			AFCM			√	√			
Ford	America	2004	F-Series Super Duty 5.4L			AFCM			√	√			
Ford	America	1999	F-Series Super Duty 5.4L			GEM			√	√			
Ford	America	2000	F-Series Super Duty 5.4L			GEM			√	√			
Ford	America	2001	F-Series Super Duty 5.4L			GEM			√	√			
Ford	America	2002	F-Series Super Duty 5.4L			GEM			√	√			
Ford	America	2003	F-Series Super Duty 5.4L			GEM			√	√			
Ford	America	2004	F-Series Super Duty 5.4L			GEM			√	√			
Ford	America	1999	F-Series Super Duty 5.4L			HEC			√	√			
Ford	America	2000	F-Series Super Duty 5.4L			HEC			√	√			
Ford	America	2001	F-Series Super Duty 5.4L			HEC			√	√			
Ford	America	2002	F-Series Super Duty 5.4L			HEC			√	√			
Ford	America	2003	F-Series Super Duty 5.4L			HEC			√	√			
Ford	America	2004	F-Series Super Duty 5.4L			HEC			√	√			
Ford	America	1999	F-Series Super Duty 5.4L			OTC			√	√			
Ford	America	2000	F-Series Super Duty 5.4L			OTC			√	√			
Ford	America	2001	F-Series Super Duty 5.4L			OTC			√	√			
Ford	America	2002	F-Series Super Duty 5.4L			OTC			√	√			
Ford	America	2003	F-Series Super Duty 5.4L			OTC			√	√			

Ford	America	2004	F-Series Super Duty 5.4L			OTC			√	√			
Ford	America	1999	F-Series Super Duty 5.4L			PAM			√	√			
Ford	America	2000	F-Series Super Duty 5.4L			PAM			√	√			
Ford	America	2001	F-Series Super Duty 5.4L			PAM			√	√			
Ford	America	2002	F-Series Super Duty 5.4L			PAM			√	√			
Ford	America	2003	F-Series Super Duty 5.4L			PAM			√	√			
Ford	America	2004	F-Series Super Duty 5.4L			PAM			√	√			
Ford	America	1999	F-Series Super Duty 5.4L			PATS			√	√			
Ford	America	2000	F-Series Super Duty 5.4L			PATS			√	√			
Ford	America	2001	F-Series Super Duty 5.4L			PATS			√	√			
Ford	America	2002	F-Series Super Duty 5.4L			PATS			√	√			
Ford	America	2003	F-Series Super Duty 5.4L			PATS			√	√			
Ford	America	2004	F-Series Super Duty 5.4L			PATS			√	√			
Ford	America	1999	F-Series Super Duty 5.4L			RCM			√	√	√		
Ford	America	2000	F-Series Super Duty 5.4L			RCM			√	√	√		
Ford	America	2001	F-Series Super Duty 5.4L			RCM			√	√	√		
Ford	America	2002	F-Series Super Duty 5.4L			RCM			√	√	√		
Ford	America	2003	F-Series Super Duty 5.4L			RCM			√	√	√		
Ford	America	2004	F-Series Super Duty 5.4L			RCM			√	√	√		
Ford	America	1999	F-Series Super Duty 5.4L			CSM			√	√	√		
Ford	America	2000	F-Series Super Duty 5.4L			CSM			√	√	√		
Ford	America	2001	F-Series Super Duty 5.4L			CSM			√	√	√		
Ford	America	2002	F-Series Super Duty 5.4L			CSM			√	√	√		
Ford	America	2003	F-Series Super Duty 5.4L			CSM			√	√	√		
Ford	America	2004	F-Series Super Duty 5.4L			CSM			√	√	√		
Ford	America	1996	F-Series 5.8L-/5.8L+/ 5.8L+CAL/5.8L+E4OD			PCM		√	√	√	√		
Ford	America	2003	F-Series Super Duty 6.0L			ABS			√	√	√		
Ford	America	2004	F-Series Super Duty 6.0L			ABS			√	√	√		
Ford	America	2003	F-Series Super Duty 6.0L			AFCM			√	√			
Ford	America	2004	F-Series Super Duty 6.0L			AFCM			√	√			
Ford	America	2003	F-Series Super Duty 6.0L			FOH			√	√			
Ford	America	2004	F-Series Super Duty 6.0L			FOH			√	√			
Ford	America	2003	F-Series Super Duty 6.0L			GEM			√	√			
Ford	America	2004	F-Series Super Duty 6.0L			GEM			√	√			
Ford	America	2003	F-Series Super Duty 6.0L			HEC			√	√			

Ford	America	2004	F-Series Super Duty 6.0L			HEC			√	√			
Ford	America	2003	F-Series Super Duty 6.0L			OTC			√	√			
Ford	America	2004	F-Series Super Duty 6.0L			OTC			√	√			
Ford	America	2003	F-Series Super Duty 6.0L			PAM			√	√			
Ford	America	2004	F-Series Super Duty 6.0L			PAM			√	√			
Ford	America	2003	F-Series Super Duty 6.0L			PATS			√	√			
Ford	America	2004	F-Series Super Duty 6.0L			PATS			√	√			
Ford	America	2003	F-Series Super Duty 6.0L			RCM			√	√	√		
Ford	America	2004	F-Series Super Duty 6.0L			RCM			√	√	√		
Ford	America	2003	F-Series Super Duty 6.0L			CSM			√	√	√		
Ford	America	2004	F-Series Super Duty 6.0L			CSM			√	√	√		
Ford	America	1999	F-Series Super Duty 6.8L			ABS			√	√	√		
Ford	America	2000	F-Series Super Duty 6.8L			ABS			√	√	√		
Ford	America	2001	F-Series Super Duty 6.8L			ABS			√	√	√		
Ford	America	2002	F-Series Super Duty 6.8L			ABS			√	√	√		
Ford	America	2003	F-Series Super Duty 6.8L			ABS			√	√	√		
Ford	America	2004	F-Series Super Duty 6.8L			ABS			√	√	√		
Ford	America	1999	F-Series Super Duty 6.8L			AFCM			√	√			
Ford	America	2000	F-Series Super Duty 6.8L			AFCM			√	√			
Ford	America	2001	F-Series Super Duty 6.8L			AFCM			√	√			
Ford	America	2002	F-Series Super Duty 6.8L			AFCM			√	√			
Ford	America	2003	F-Series Super Duty 6.8L			AFCM			√	√			
Ford	America	2004	F-Series Super Duty 6.8L			AFCM			√	√			
Ford	America	1999	F-Series Super Duty 6.8L			FOH			√	√			
Ford	America	2000	F-Series Super Duty 6.8L			FOH			√	√			
Ford	America	2001	F-Series Super Duty 6.8L			FOH			√	√			
Ford	America	2002	F-Series Super Duty 6.8L			FOH			√	√			
Ford	America	2003	F-Series Super Duty 6.8L			FOH			√	√			
Ford	America	2004	F-Series Super Duty 6.8L			FOH			√	√			
Ford	America	1999	F-Series Super Duty 6.8L			GEM			√	√			
Ford	America	2000	F-Series Super Duty 6.8L			GEM			√	√			
Ford	America	2001	F-Series Super Duty 6.8L			GEM			√	√			
Ford	America	2002	F-Series Super Duty 6.8L			GEM			√	√			
Ford	America	2003	F-Series Super Duty 6.8L			GEM			√	√			
Ford	America	2004	F-Series Super Duty 6.8L			GEM			√	√			
Ford	America	1999	F-Series Super Duty 6.8L			HEC			√	√			

Ford	America	2000	F-Series Super Duty 6.8L			HEC			√	√			
Ford	America	2001	F-Series Super Duty 6.8L			HEC			√	√			
Ford	America	2002	F-Series Super Duty 6.8L			HEC			√	√			
Ford	America	2003	F-Series Super Duty 6.8L			HEC			√	√			
Ford	America	2004	F-Series Super Duty 6.8L			HEC			√	√			
Ford	America	1999	F-Series Super Duty 6.8L			OTC			√	√			
Ford	America	2000	F-Series Super Duty 6.8L			OTC			√	√			
Ford	America	2001	F-Series Super Duty 6.8L			OTC			√	√			
Ford	America	2002	F-Series Super Duty 6.8L			OTC			√	√			
Ford	America	2003	F-Series Super Duty 6.8L			OTC			√	√			
Ford	America	2004	F-Series Super Duty 6.8L			OTC			√	√			
Ford	America	1999	F-Series Super Duty 6.8L			PAM			√	√			
Ford	America	2000	F-Series Super Duty 6.8L			PAM			√	√			
Ford	America	2001	F-Series Super Duty 6.8L			PAM			√	√			
Ford	America	2002	F-Series Super Duty 6.8L			PAM			√	√			
Ford	America	2003	F-Series Super Duty 6.8L			PAM			√	√			
Ford	America	2004	F-Series Super Duty 6.8L			PAM			√	√			
Ford	America	1999	F-Series Super Duty 6.8L			PATS			√	√			
Ford	America	2000	F-Series Super Duty 6.8L			PATS			√	√			
Ford	America	2001	F-Series Super Duty 6.8L			PATS			√	√			
Ford	America	2002	F-Series Super Duty 6.8L			PATS			√	√			
Ford	America	2003	F-Series Super Duty 6.8L			PATS			√	√			
Ford	America	2004	F-Series Super Duty 6.8L			PATS			√	√			
Ford	America	1999	F-Series Super Duty 6.8L			RCM			√	√	√		
Ford	America	2000	F-Series Super Duty 6.8L			RCM			√	√	√		
Ford	America	2001	F-Series Super Duty 6.8L			RCM			√	√	√		
Ford	America	2002	F-Series Super Duty 6.8L			RCM			√	√	√		
Ford	America	2003	F-Series Super Duty 6.8L			RCM			√	√	√		
Ford	America	2004	F-Series Super Duty 6.8L			RCM			√	√	√		
Ford	America	1999	F-Series Super Duty 6.8L			CSM			√	√	√		
Ford	America	2000	F-Series Super Duty 6.8L			CSM			√	√	√		
Ford	America	2001	F-Series Super Duty 6.8L			CSM			√	√	√		
Ford	America	2002	F-Series Super Duty 6.8L			CSM			√	√	√		
Ford	America	2003	F-Series Super Duty 6.8L			CSM			√	√	√		
Ford	America	2004	F-Series Super Duty 6.8L			CSM			√	√	√		

Ford	America	1996	F-Series 7.0L/7.3L/7.5L/ 7.5LCAL/7.5LE4OD			PCM		√	√	√	√		
Ford	America	1999	F-Series Super Duty 7.3L			ABS			√	√	√		
Ford	America	2000	F-Series Super Duty 7.3L			ABS			√	√	√		
Ford	America	2001	F-Series Super Duty 7.3L			ABS			√	√	√		
Ford	America	2002	F-Series Super Duty 7.3L			ABS			√	√	√		
Ford	America	2003	F-Series Super Duty 7.3L			ABS			√	√	√		
Ford	America	1999	F-Series Super Duty 7.3L			AFCM			√	√			
Ford	America	2000	F-Series Super Duty 7.3L			AFCM			√	√			
Ford	America	2001	F-Series Super Duty 7.3L			AFCM			√	√			
Ford	America	2002	F-Series Super Duty 7.3L			AFCM			√	√			
Ford	America	2003	F-Series Super Duty 7.3L			AFCM			√	√			
Ford	America	1999	F-Series Super Duty 7.3L			FOH			√	√			
Ford	America	2000	F-Series Super Duty 7.3L			FOH			√	√			
Ford	America	2001	F-Series Super Duty 7.3L			FOH			√	√			
Ford	America	2002	F-Series Super Duty 7.3L			FOH			√	√			
Ford	America	2003	F-Series Super Duty 7.3L			FOH			√	√			
Ford	America	1999	F-Series Super Duty 7.3L			GEM			√	√			
Ford	America	2000	F-Series Super Duty 7.3L			GEM			√	√			
Ford	America	2001	F-Series Super Duty 7.3L			GEM			√	√			
Ford	America	2002	F-Series Super Duty 7.3L			GEM			√	√			
Ford	America	2003	F-Series Super Duty 7.3L			GEM			√	√			
Ford	America	1999	F-Series Super Duty 7.3L			HEC			√	√			
Ford	America	2000	F-Series Super Duty 7.3L			HEC			√	√			
Ford	America	2001	F-Series Super Duty 7.3L			HEC			√	√			
Ford	America	2002	F-Series Super Duty 7.3L			HEC			√	√			
Ford	America	2003	F-Series Super Duty 7.3L			HEC			√	√			
Ford	America	1999	F-Series Super Duty 7.3L			OTC			√	√			
Ford	America	2000	F-Series Super Duty 7.3L			OTC			√	√			
Ford	America	2001	F-Series Super Duty 7.3L			OTC			√	√			
Ford	America	2002	F-Series Super Duty 7.3L			OTC			√	√			
Ford	America	2003	F-Series Super Duty 7.3L			OTC			√	√			
Ford	America	1999	F-Series Super Duty 7.3L			PAM			√	√			
Ford	America	2000	F-Series Super Duty 7.3L			PAM			√	√			
Ford	America	2001	F-Series Super Duty 7.3L			PAM			√	√			
Ford	America	2002	F-Series Super Duty 7.3L			PAM			√	√			

Ford	America	2003	F-Series Super Duty 7.3L			PAM			√	√			
Ford	America	1999	F-Series Super Duty 7.3L			PATS			√	√			
Ford	America	2000	F-Series Super Duty 7.3L			PATS			√	√			
Ford	America	2001	F-Series Super Duty 7.3L			PATS			√	√			
Ford	America	2002	F-Series Super Duty 7.3L			PATS			√	√			
Ford	America	2003	F-Series Super Duty 7.3L			PATS			√	√			
Ford	America	1999	F-Series Super Duty 7.3L			RCM			√	√	√		
Ford	America	2000	F-Series Super Duty 7.3L			RCM			√	√	√		
Ford	America	2001	F-Series Super Duty 7.3L			RCM			√	√	√		
Ford	America	2002	F-Series Super Duty 7.3L			RCM			√	√	√		
Ford	America	2003	F-Series Super Duty 7.3L			RCM			√	√	√		
Ford	America	2006	F-Series Super Duty 6.0L Diesel			PCM			√	√	√		
Ford	America	2006	F-Series Super Duty 6.0L Diesel			ABS			√	√	√		
Ford	America	2006	F-Series Super Duty 6.0L Diesel			GEM			√	√	√		
Ford	America	2006	F-Series Super Duty 6.0L Diesel			IC			√	√	√		
Ford	America	2006	F-Series Super Duty 5.4L			PCM			√	√	√		
Ford	America	2006	F-Series Super Duty 5.4L			ABS			√	√	√		
Ford	America	2006	F-Series Super Duty 5.4L			RCM			√	√	√		
Ford	America	2006	F-Series Super Duty 5.4L			GEM			√	√	√		
Ford	America	2006	F-Series Super Duty 5.4L			IC			√	√	√		
Ford	America	2006	F-Series Super Duty 6.8L			PCM			√	√	√		
Ford	America	2006	F-Series Super Duty 6.8L			ABS			√	√	√		
Ford	America	2006	F-Series Super Duty 6.8L			RCM			√	√	√		
Ford	America	2006	F-Series Super Duty 6.8L			GEM			√	√	√		
Ford	America	2006	F-Series Super Duty 6.8L			IC			√	√	√		
Ford	America	2007	F-Series Super Duty 6.0L Diesel			PCM			√	√	√		
Ford	America	2007	F-Series Super Duty 6.0L Diesel			ABS			√	√	√		
Ford	America	2007	F-Series Super Duty 6.0L Diesel			IC			√	√	√		
Ford	America	2007	F-Series Super Duty 5.4L			PCM			√	√	√		

Ford	America	2007	F-Series Super Duty 5.4L			ABS			√	√	√		
Ford	America	2007	F-Series Super Duty 5.4L			IC			√	√	√		
Ford	America	2007	F-Series Super Duty 6.4L Diesel			PCM			√	√	√		
Ford	America	2007	F-Series Super Duty 6.4L Diesel			ABS			√	√	√		
Ford	America	2007	F-Series Super Duty 6.4L Diesel			IC			√	√	√		
Ford	America	2007	F-Series Super Duty 6.8L			PCM			√	√	√		
Ford	America	2007	F-Series Super Duty 6.8L			ABS			√	√	√		
Ford	America	2007	F-Series Super Duty 6.8L			IC			√	√	√		
Ford	America	2006	Five Hundered 3.0L			PCM			√	√	√		
Ford	America	2006	Five Hundered 3.0L			ABS			√	√	√		
Ford	America	2006	Five Hundered 3.0L			RCM			√	√	√		
Ford	America	2006	Five Hundered 3.0L			GEM			√	√	√		
Ford	America	2006	Five Hundered 3.0L			IC			√	√	√		
Ford	America	2007	Five Hundered 3.0L			PCM			√	√	√		
Ford	America	2007	Five Hundered 3.0L			ABS			√	√	√		
Ford	America	2007	Five Hundered 3.0L			RCM			√	√	√		
Ford	America	2007	Five Hundered 3.0L			GEM			√	√	√		
Ford	America	2007	Five Hundered 3.0L			IC			√	√	√		
Ford	America	2006	Ford GT 5.4L			PCM			√	√	√		
Ford	America	2006	Ford GT 5.4L			ABS			√	√	√		
Ford	America	2006	Ford GT 5.4L			RCM			√	√	√		
Ford	America	2006	Ford GT 5.4L			GEM			√	√	√		
Ford	America	2006	Ford GT 5.4L			IC			√	√	√		
Ford	America	2006	Ford Motor Home 6.8L			PCM			√	√	√		
Ford	America	2006	Ford Motor Home 6.8L			ABS			√	√	√		
Ford	America	2006	Ford Motor Home 6.8L			RCM			√	√	√		
Ford	America	2006	Ford Motor Home 6.8L			GEM			√	√	√		
Ford	America	2006	Ford Motor Home 6.8L			IC			√	√	√		
Ford	America	2006	Fusion 2.3L			PCM			√	√	√		
Ford	America	2006	Fusion 2.3L			ABS			√	√	√		
Ford	America	2006	Fusion 2.3L			RCM			√	√	√		
Ford	America	2006	Fusion 2.3L			GEM			√	√	√		
Ford	America	2006	Fusion 2.3L			IC			√	√	√		

Ford	America	2006	Fusion 3.0L			PCM			√	√	√		
Ford	America	2006	Fusion 3.0L			ABS			√	√	√		
Ford	America	2006	Fusion 3.0L			RCM			√	√	√		
Ford	America	2006	Fusion 3.0L			GEM			√	√	√		
Ford	America	2006	Fusion 3.0L			IC			√	√	√		
Ford	America	2007	Fusion 2.3L			PCM			√	√	√		
Ford	America	2007	Fusion 2.3L			ABS			√	√	√		
Ford	America	2007	Fusion 2.3L			RCM			√	√	√		
Ford	America	2007	Fusion 2.3L			GEM			√	√	√		
Ford	America	2007	Fusion 2.3L			IC			√	√	√		
Ford	America	2007	Fusion 3.0L			PCM			√	√	√		
Ford	America	2007	Fusion 3.0L			ABS			√	√	√		
Ford	America	2007	Fusion 3.0L			RCM			√	√	√		
Ford	America	2007	Fusion 3.0L			GEM			√	√	√		
Ford	America	2007	Fusion 3.0L			IC			√	√	√		
Ford	America	1996	Grand Marquis 4.6L			PCM		√	√	√	√		
Ford	America	1997	Grand Marquis 4.6L			PCM		√	√	√	√		
Ford	America	1998	Grand Marquis 4.6L			PCM		√	√	√	√		
Ford	America	1999	Grand Marquis 4.6L			PCM		√	√	√	√		
Ford	America	2000	Grand Marquis 4.6L			PCM		√	√	√	√		
Ford	America	2001	Grand Marquis 4.6L			PCM		√	√	√	√		
Ford	America	2002	Grand Marquis 4.6L			PCM		√	√	√	√		
Ford	America	2003	Grand Marquis 4.6L			PCM		√	√	√	√		
Ford	America	2004	Grand Marquis 4.6L			PCM		√	√	√	√		
Ford	America	1996	Grand Marquis 4.6L			ABS			√	√	√		
Ford	America	1997	Grand Marquis 4.6L			ABS			√	√	√		
Ford	America	1998	Grand Marquis 4.6L			ABS			√	√	√		
Ford	America	1999	Grand Marquis 4.6L			ABS			√	√	√		
Ford	America	2000	Grand Marquis 4.6L			ABS			√	√	√		
Ford	America	2001	Grand Marquis 4.6L			ABS			√	√	√		
Ford	America	2002	Grand Marquis 4.6L			ABS			√	√	√		
Ford	America	2003	Grand Marquis 4.6L			ABS			√	√	√		
Ford	America	2004	Grand Marquis 4.6L			ABS			√	√	√		
Ford	America	1996	Grand Marquis 4.6L			DDM			√	√	√		
Ford	America	1997	Grand Marquis 4.6L			DDM			√	√	√		
Ford	America	1998	Grand Marquis 4.6L			DDM			√	√	√		

Ford	America	1999	Grand Marquis 4.6L			DDM			√	√	√		
Ford	America	2000	Grand Marquis 4.6L			DDM			√	√	√		
Ford	America	2001	Grand Marquis 4.6L			DDM			√	√	√		
Ford	America	2002	Grand Marquis 4.6L			DDM			√	√	√		
Ford	America	2003	Grand Marquis 4.6L			DDM			√	√	√		
Ford	America	2004	Grand Marquis 4.6L			DDM			√	√	√		
Ford	America	1996	Grand Marquis 4.6L			EATC			√	√	√		
Ford	America	1997	Grand Marquis 4.6L			EATC			√	√	√		
Ford	America	1998	Grand Marquis 4.6L			EATC			√	√	√		
Ford	America	1999	Grand Marquis 4.6L			EATC			√	√	√		
Ford	America	2000	Grand Marquis 4.6L			EATC			√	√	√		
Ford	America	2001	Grand Marquis 4.6L			EATC			√	√	√		
Ford	America	2002	Grand Marquis 4.6L			EATC			√	√	√		
Ford	America	2003	Grand Marquis 4.6L			EATC			√	√	√		
Ford	America	2004	Grand Marquis 4.6L			EATC			√	√	√		
Ford	America	1996	Grand Marquis 4.6L			LCM			√	√			
Ford	America	1997	Grand Marquis 4.6L			LCM			√	√			
Ford	America	1998	Grand Marquis 4.6L			LCM			√	√			
Ford	America	1999	Grand Marquis 4.6L			LCM			√	√			
Ford	America	2000	Grand Marquis 4.6L			LCM			√	√			
Ford	America	2001	Grand Marquis 4.6L			LCM			√	√			
Ford	America	2002	Grand Marquis 4.6L			LCM			√	√			
Ford	America	2003	Grand Marquis 4.6L			LCM			√	√			
Ford	America	2004	Grand Marquis 4.6L			LCM			√	√			
Ford	America	1996	Grand Marquis 4.6L			MC			√	√			
Ford	America	1997	Grand Marquis 4.6L			MC			√	√			
Ford	America	1998	Grand Marquis 4.6L			MC			√	√			
Ford	America	1999	Grand Marquis 4.6L			MC			√	√			
Ford	America	2000	Grand Marquis 4.6L			MC			√	√			
Ford	America	2001	Grand Marquis 4.6L			MC			√	√			
Ford	America	2002	Grand Marquis 4.6L			MC			√	√			
Ford	America	2003	Grand Marquis 4.6L			MC			√	√			
Ford	America	2004	Grand Marquis 4.6L			MC			√	√			
Ford	America	1996	Grand Marquis 4.6L			RASM			√	√			
Ford	America	1997	Grand Marquis 4.6L			RASM			√	√			
Ford	America	1998	Grand Marquis 4.6L			RASM			√	√			

Ford	America	1999	Grand Marquis 4.6L			RASM			√	√			
Ford	America	2000	Grand Marquis 4.6L			RASM			√	√			
Ford	America	2001	Grand Marquis 4.6L			RASM			√	√			
Ford	America	2002	Grand Marquis 4.6L			RASM			√	√			
Ford	America	2003	Grand Marquis 4.6L			RASM			√	√			
Ford	America	2004	Grand Marquis 4.6L			RASM			√	√			
Ford	America	1996	Grand Marquis 4.6L			RCM			√	√	√		
Ford	America	1997	Grand Marquis 4.6L			RCM			√	√	√		
Ford	America	1998	Grand Marquis 4.6L			RCM			√	√	√		
Ford	America	1999	Grand Marquis 4.6L			RCM			√	√	√		
Ford	America	2000	Grand Marquis 4.6L			RCM			√	√	√		
Ford	America	2001	Grand Marquis 4.6L			RCM			√	√	√		
Ford	America	2002	Grand Marquis 4.6L			RCM			√	√	√		
Ford	America	2003	Grand Marquis 4.6L			RCM			√	√	√		
Ford	America	2004	Grand Marquis 4.6L			RCM			√	√	√		
Ford	America	1996	Grand Marquis 4.6L			VAPS			√	√			
Ford	America	1997	Grand Marquis 4.6L			VAPS			√	√			
Ford	America	1998	Grand Marquis 4.6L			VAPS			√	√			
Ford	America	1999	Grand Marquis 4.6L			VAPS			√	√			
Ford	America	2000	Grand Marquis 4.6L			VAPS			√	√			
Ford	America	2001	Grand Marquis 4.6L			VAPS			√	√			
Ford	America	2002	Grand Marquis 4.6L			VAPS			√	√			
Ford	America	2003	Grand Marquis 4.6L			VAPS			√	√			
Ford	America	2004	Grand Marquis 4.6L			VAPS			√	√			
Ford	America	2006	Grand Marquis 4.6L			PCM			√	√	√		
Ford	America	2006	Grand Marquis 4.6L			ABS			√	√	√		
Ford	America	2006	Grand Marquis 4.6L			RCM			√	√	√		
Ford	America	2006	Grand Marquis 4.6L			IC			√	√	√		
Ford	America	2007	Grand Marquis 4.6L			PCM			√	√	√		
Ford	America	2007	Grand Marquis 4.6L			ABS			√	√	√		
Ford	America	2007	Grand Marquis 4.6L			RCM			√	√	√		
Ford	America	2007	Grand Marquis 4.6L			ICM			√	√	√		
Ford	America	2007	Lincoln Mark LT 5.4L			PCM			√	√	√		
Ford	America	2007	Lincoln Mark LT 5.4L			ABS			√	√	√		
Ford	America	2007	Lincoln Mark LT 5.4L			RCM			√	√	√		
Ford	America	2007	Lincoln Mark LT 5.4L			ICM			√	√	√		

Ford	America	2007	Lincoln MKX 3.5L			PCM			√	√	√		
Ford	America	2007	Lincoln MKX 3.5L			ABS			√	√	√		
Ford	America	2007	Lincoln MKX 3.5L			RCM			√	√	√		
Ford	America	2007	Lincoln MKX 3.5L			GEM			√	√	√		
Ford	America	2007	Lincoln MKX 3.5L			IC			√	√	√		
Ford	America	2007	Lincoln MKZ 3.5L			PCM			√	√	√		
Ford	America	2007	Lincoln MKZ 3.5L			ABS			√	√	√		
Ford	America	2007	Lincoln MKZ 3.5L			RCM			√	√	√		
Ford	America	2007	Lincoln MKZ 3.5L			ICM			√	√	√		
Ford	America	1996	L Series 7.0L			PCM		√	√	√	√		
Ford	America	1996	L Series 7.0L			ACM			√	√			
Ford	America	1996	L Series 7.0L			DDM			√	√			
Ford	America	1996	L Series 7.0L			DSM			√	√			
Ford	America	1996	L Series 7.0L			GEM			√	√			
Ford	America	1996	L Series 7.0L			REM			√	√			
Ford	America	1996	L Series 7.0L			SCLM			√	√			
Ford	America	2001	KA 1.3L			ABS			√	√	√		
Ford	America	1999	LS 3.0L/3.9L			ABS			√	√	√		
Ford	America	2000	LS 3.0L/3.9L			ABS			√	√	√		
Ford	America	2001	LS 3.0L/3.9L			ABS			√	√	√		
Ford	America	2002	LS 3.0L/3.9L			ABS			√	√	√		
Ford	America	2003	LS 3.0L/3.9L			ABS			√	√	√		
Ford	America	2004	LS 3.0L/3.9L			ABS			√	√	√		
Ford	America	1999	LS 3.0L/3.9L			ACM			√	√			
Ford	America	2000	LS 3.0L/3.9L			ACM			√	√			
Ford	America	2001	LS 3.0L/3.9L			ACM			√	√			
Ford	America	2002	LS 3.0L/3.9L			ACM			√	√			
Ford	America	2003	LS 3.0L/3.9L			ACM			√	√			
Ford	America	2004	LS 3.0L/3.9L			ACM			√	√			
Ford	America	1999	LS 3.0L/3.9L			DDM			√	√	√		
Ford	America	2000	LS 3.0L/3.9L			DDM			√	√	√		
Ford	America	2001	LS 3.0L/3.9L			DDM			√	√	√		
Ford	America	2002	LS 3.0L/3.9L			DDM			√	√	√		
Ford	America	2003	LS 3.0L/3.9L			DDM			√	√	√		
Ford	America	2004	LS 3.0L/3.9L			DDM			√	√	√		
Ford	America	1999	LS 3.0L/3.9L			DSM			√	√	√		

Ford	America	2000	LS 3.0L/3.9L			DSM			√	√	√		
Ford	America	2001	LS 3.0L/3.9L			DSM			√	√	√		
Ford	America	2002	LS 3.0L/3.9L			DSM			√	√	√		
Ford	America	2003	LS 3.0L/3.9L			DSM			√	√	√		
Ford	America	2004	LS 3.0L/3.9L			DSM			√	√	√		
Ford	America	1999	LS 3.0L/3.9L			EPB			√	√			
Ford	America	2000	LS 3.0L/3.9L			EPB			√	√			
Ford	America	2001	LS 3.0L/3.9L			EPB			√	√			
Ford	America	2002	LS 3.0L/3.9L			EPB			√	√			
Ford	America	2003	LS 3.0L/3.9L			EPB			√	√			
Ford	America	2004	LS 3.0L/3.9L			EPB			√	√			
Ford	America	1999	LS 3.0L/3.9L			GEM			√	√			
Ford	America	2000	LS 3.0L/3.9L			GEM			√	√			
Ford	America	2001	LS 3.0L/3.9L			GEM			√	√			
Ford	America	2002	LS 3.0L/3.9L			GEM			√	√			
Ford	America	2003	LS 3.0L/3.9L			GEM			√	√			
Ford	America	2004	LS 3.0L/3.9L			GEM			√	√			
Ford	America	1999	LS 3.0L/3.9L			HEC			√	√			
Ford	America	2000	LS 3.0L/3.9L			HEC			√	√			
Ford	America	2001	LS 3.0L/3.9L			HEC			√	√			
Ford	America	2002	LS 3.0L/3.9L			HEC			√	√			
Ford	America	2003	LS 3.0L/3.9L			HEC			√	√			
Ford	America	2004	LS 3.0L/3.9L			HEC			√	√			
Ford	America	1999	LS 3.0L/3.9L			MC			√	√			
Ford	America	2000	LS 3.0L/3.9L			MC			√	√			
Ford	America	2001	LS 3.0L/3.9L			MC			√	√			
Ford	America	2002	LS 3.0L/3.9L			MC			√	√			
Ford	America	2003	LS 3.0L/3.9L			MC			√	√			
Ford	America	2004	LS 3.0L/3.9L			MC			√	√			
Ford	America	1999	LS 3.0L/3.9L			NAV			√	√			
Ford	America	2000	LS 3.0L/3.9L			NAV			√	√			
Ford	America	2001	LS 3.0L/3.9L			NAV			√	√			
Ford	America	2002	LS 3.0L/3.9L			NAV			√	√			
Ford	America	2003	LS 3.0L/3.9L			NAV			√	√			
Ford	America	2004	LS 3.0L/3.9L			NAV			√	√			
Ford	America	1999	LS 3.0L/3.9L			RCM			√	√	√		

Ford	America	2000	LS 3.0L/3.9L			RCM			√	√	√		
Ford	America	2001	LS 3.0L/3.9L			RCM			√	√	√		
Ford	America	2002	LS 3.0L/3.9L			RCM			√	√	√		
Ford	America	2003	LS 3.0L/3.9L			RCM			√	√	√		
Ford	America	2004	LS 3.0L/3.9L			RCM			√	√	√		
Ford	America	1999	LS 3.0L/3.9L			REM			√	√			
Ford	America	2000	LS 3.0L/3.9L			REM			√	√			
Ford	America	2001	LS 3.0L/3.9L			REM			√	√			
Ford	America	2002	LS 3.0L/3.9L			REM			√	√			
Ford	America	2003	LS 3.0L/3.9L			REM			√	√			
Ford	America	2004	LS 3.0L/3.9L			REM			√	√			
Ford	America	1999	LS 3.0L/3.9L			SCLM			√	√			
Ford	America	2000	LS 3.0L/3.9L			SCLM			√	√			
Ford	America	2001	LS 3.0L/3.9L			SCLM			√	√			
Ford	America	2002	LS 3.0L/3.9L			SCLM			√	√			
Ford	America	2003	LS 3.0L/3.9L			SCLM			√	√			
Ford	America	2004	LS 3.0L/3.9L			SCLM			√	√			
Ford	America	2006	LS 3.0L			PCM			√	√	√		
Ford	America	2006	LS 3.0L			ABS			√	√	√		
Ford	America	2006	LS 3.0L			RCM			√	√	√		
Ford	America	2006	LS 3.0L			IC			√	√	√		
Ford	America	2006	LS 3.9L			PCM			√	√	√		
Ford	America	2006	LS 3.9L			ABS			√	√	√		
Ford	America	2006	LS 3.9L			RCM			√	√	√		
Ford	America	2006	LS 3.9L			IC			√	√	√		
Ford	America	2006	Mariner 2.3L			PCM			√	√	√		
Ford	America	2006	Mariner 2.3L			ABS			√	√	√		
Ford	America	2006	Mariner 2.3L			RCM			√	√	√		
Ford	America	2006	Mariner 2.3L			GEM			√	√	√		
Ford	America	2006	Mariner 2.3L			IC			√	√	√		
Ford	America	2006	Mariner 3.0L			PCM			√	√	√		
Ford	America	2006	Mariner 3.0L			ABS			√	√	√		
Ford	America	2006	Mariner 3.0L			RCM			√	√	√		
Ford	America	2006	Mariner 3.0L			GEM			√	√	√		
Ford	America	2006	Mariner 3.0L			ICM			√	√	√		
Ford	America	2006	Mariner Hybrid 2.3L HYB			PCM			√	√	√		

Ford	America	2006	Mariner Hybrid 2.3L HYB			ABS			√	√	√		
Ford	America	2006	Mariner Hybrid 2.3L HYB			RCM			√	√	√		
Ford	America	2006	Mariner Hybrid 2.3L HYB			GEM			√	√	√		
Ford	America	2006	Mariner Hybrid 2.3L HYB			IC			√	√	√		
Ford	America	2007	Mariner 2.3L			PCM			√	√	√		
Ford	America	2007	Mariner 2.3L			ABS			√	√	√		
Ford	America	2007	Mariner 2.3L			RCM			√	√	√		
Ford	America	2007	Mariner 2.3L			GEM			√	√	√		
Ford	America	2007	Mariner 2.3L			IC			√	√	√		
Ford	America	2007	Mariner 3.0L			PCM			√	√	√		
Ford	America	2007	Mariner 3.0L			ABS			√	√	√		
Ford	America	2007	Mariner 3.0L			RCM			√	√	√		
Ford	America	2007	Mariner 3.0L			GEM			√	√	√		
Ford	America	2007	Mariner 3.0L			IC			√	√	√		
Ford	America	2007	Mariner Hybrid 2.3L			PCM			√	√	√		
Ford	America	2007	Mariner Hybrid 2.3L			RCM			√	√	√		
Ford	America	2007	Mariner Hybrid 2.3L			GEM			√	√	√		
Ford	America	2007	Mariner Hybrid 2.3L			IC			√	√	√		
Ford	America	1996	Mark VIII 4.6L			PCM		√	√	√	√		
Ford	America	1997	Mark VIII 4.6L			PCM		√	√	√	√		
Ford	America	1998	Mark VIII 4.6L			PCM		√	√	√	√		
Ford	America	1996	Mark VIII 4.6L			ABS			√	√	√		
Ford	America	1997	Mark VIII 4.6L			ABS			√	√	√		
Ford	America	1998	Mark VIII 4.6L			ABS			√	√	√		
Ford	America	1996	Mark VIII 4.6L			CPM			√	√			
Ford	America	1997	Mark VIII 4.6L			CPM			√	√			
Ford	America	1998	Mark VIII 4.6L			CPM			√	√			
Ford	America	1996	Mark VIII 4.6L			DDM			√	√			
Ford	America	1997	Mark VIII 4.6L			DDM			√	√			
Ford	America	1998	Mark VIII 4.6L			DDM			√	√			
Ford	America	1996	Mark VIII 4.6L			DSM			√	√			
Ford	America	1997	Mark VIII 4.6L			DSM			√	√			
Ford	America	1998	Mark VIII 4.6L			DSM			√	√			
Ford	America	1996	Mark VIII 4.6L			EATC			√	√			
Ford	America	1997	Mark VIII 4.6L			EATC			√	√			
Ford	America	1998	Mark VIII 4.6L			EATC			√	√			

Ford	America	1996	Mark VIII 4.6L			HEC			√	√			
Ford	America	1997	Mark VIII 4.6L			HEC			√	√			
Ford	America	1998	Mark VIII 4.6L			HEC			√	√			
Ford	America	1996	Mark VIII 4.6L			MC			√	√			
Ford	America	1997	Mark VIII 4.6L			MC			√	√			
Ford	America	1998	Mark VIII 4.6L			MC			√	√			
Ford	America	1996	Mark VIII 4.6L			PSM			√	√			
Ford	America	1997	Mark VIII 4.6L			PSM			√	√			
Ford	America	1998	Mark VIII 4.6L			PSM			√	√			
Ford	America	1996	Mark VIII 4.6L			SCIL			√	√			
Ford	America	1997	Mark VIII 4.6L			SCIL			√	√			
Ford	America	1998	Mark VIII 4.6L			SCIL			√	√			
Ford	America	2006	MARK LT 5.4L			PCM			√	√	√		
Ford	America	2006	MARK LT 5.4L			ABS			√	√	√		
Ford	America	2006	MARK LT 5.4L			RCM			√	√	√		
Ford	America	2006	MARK LT 5.4L			IC			√	√	√		
Ford	America	2006	Milan 2.3L			PCM			√	√	√		
Ford	America	2006	Milan 2.3L			ABS			√	√	√		
Ford	America	2006	Milan 2.3L			RCM			√	√	√		
Ford	America	2006	Milan 2.3L			GEM			√	√	√		
Ford	America	2006	Milan 2.3L			IC			√	√	√		
Ford	America	2006	Milan 3.0L			PCM			√	√	√		
Ford	America	2006	Milan 3.0L			ABS			√	√	√		
Ford	America	2006	Milan 3.0L			RCM			√	√	√		
Ford	America	2006	Milan 3.0L			GEM			√	√	√		
Ford	America	2006	Milan 3.0L			IC			√	√	√		
Ford	America	2007	Milan 2.3L			PCM			√	√	√		
Ford	America	2007	Milan 2.3L			ABS			√	√	√		
Ford	America	2007	Milan 2.3L			RCM			√	√	√		
Ford	America	2007	Milan 2.3L			GEM			√	√	√		
Ford	America	2007	Milan 2.3L			IC			√	√	√		
Ford	America	2007	Milan 3.0L			PCM			√	√	√		
Ford	America	2007	Milan 3.0L			ABS			√	√	√		
Ford	America	2007	Milan 3.0L			RCM			√	√	√		
Ford	America	2007	Milan 3.0L			GEM			√	√	√		
Ford	America	2007	Milan 3.0L			IC			√	√	√		

Ford	America	2004	MONTEREY 4.2L			ABS			√	√	√		
Ford	America	2006	Monterey 4.2L			PCM			√	√	√		
Ford	America	2006	Monterey 4.2L			ABS			√	√	√		
Ford	America	2006	Monterey 4.2L			RCM			√	√	√		
Ford	America	2006	Monterey 4.2L			GEM			√	√	√		
Ford	America	2006	Monterey 4.2L			IC			√	√	√		
Ford	America	2007	Monterey 4.2L			PCM			√	√	√		
Ford	America	2007	Monterey 4.2L			ABS			√	√	√		
Ford	America	2007	Monterey 4.2L			RCM			√	√	√		
Ford	America	2007	Monterey 4.2L			GEM			√	√	√		
Ford	America	2007	Monterey 4.2L			IC			√	√	√		
Ford	America	2006	Montego 3.0L			PCM			√	√	√		
Ford	America	2006	Montego 3.0L			ABS			√	√	√		
Ford	America	2006	Montego 3.0L			RCM			√	√	√		
Ford	America	2006	Montego 3.0L			GEM			√	√	√		
Ford	America	2006	Montego 3.0L			IC			√	√	√		
Ford	America	2007	Montego 3.0L			PCM			√	√	√		
Ford	America	2007	Montego 3.0L			ABS			√	√	√		
Ford	America	2007	Montego 3.0L			RCM			√	√	√		
Ford	America	2007	Montego 3.0L			GEM			√	√	√		
Ford	America	2007	Montego 3.0L			IC			√	√	√		
Ford	America	2007	Motorhome 4.2L			PCM			√	√	√		
Ford	America	2007	Motorhome 4.2L			ABS			√	√	√		
Ford	America	2007	Motorhome 4.2L			RCM			√	√	√		
Ford	America	2007	Motorhome 4.2L			GEM			√	√	√		
Ford	America	2007	Motorhome 4.2L			IC			√	√	√		
Ford	America	1998	Mountaineer 4.0L			4X4M			√	√	√		
Ford	America	1999	Mountaineer 4.0L			4X4M			√	√	√		
Ford	America	2000	Mountaineer 4.0L			4X4M			√	√	√		
Ford	America	2001	Mountaineer 4.0L			4X4M			√	√	√		
Ford	America	2002	Mountaineer 4.0L			4X4M			√	√	√		
Ford	America	2003	Mountaineer 4.0L			4X4M			√	√	√		
Ford	America	2004	Mountaineer 4.0L			4X4M			√	√	√		
Ford	America	1998	Mountaineer 4.0L			ABS			√	√	√		
Ford	America	1999	Mountaineer 4.0L			ABS			√	√	√		
Ford	America	2000	Mountaineer 4.0L			ABS			√	√	√		

Ford	America	2001	Mountaineer 4.0L			ABS			√	√	√		
Ford	America	2002	Mountaineer 4.0L			ABS			√	√	√		
Ford	America	2003	Mountaineer 4.0L			ABS			√	√	√		
Ford	America	2004	Mountaineer 4.0L			ABS			√	√	√		
Ford	America	1998	Mountaineer 4.0L			DSM			√	√	√		
Ford	America	1999	Mountaineer 4.0L			DSM			√	√	√		
Ford	America	2000	Mountaineer 4.0L			DSM			√	√	√		
Ford	America	2001	Mountaineer 4.0L			DSM			√	√	√		
Ford	America	2002	Mountaineer 4.0L			DSM			√	√	√		
Ford	America	2003	Mountaineer 4.0L			DSM			√	√	√		
Ford	America	2004	Mountaineer 4.0L			DSM			√	√	√		
Ford	America	1998	Mountaineer 4.0L			IC			√	√	√		
Ford	America	1999	Mountaineer 4.0L			IC			√	√	√		
Ford	America	2000	Mountaineer 4.0L			IC			√	√	√		
Ford	America	2001	Mountaineer 4.0L			IC			√	√	√		
Ford	America	2002	Mountaineer 4.0L			IC			√	√	√		
Ford	America	2003	Mountaineer 4.0L			IC			√	√	√		
Ford	America	2004	Mountaineer 4.0L			IC			√	√	√		
Ford	America	1998	Mountaineer 4.0L			PAM			√	√			
Ford	America	1999	Mountaineer 4.0L			PAM			√	√			
Ford	America	2000	Mountaineer 4.0L			PAM			√	√			
Ford	America	2001	Mountaineer 4.0L			PAM			√	√			
Ford	America	2002	Mountaineer 4.0L			PAM			√	√			
Ford	America	2003	Mountaineer 4.0L			PAM			√	√			
Ford	America	2004	Mountaineer 4.0L			PAM			√	√			
Ford	America	1998	Mountaineer 4.0L			RCM			√	√	√		
Ford	America	1999	Mountaineer 4.0L			RCM			√	√	√		
Ford	America	2000	Mountaineer 4.0L			RCM			√	√	√		
Ford	America	2001	Mountaineer 4.0L			RCM			√	√	√		
Ford	America	2002	Mountaineer 4.0L			RCM			√	√	√		
Ford	America	2003	Mountaineer 4.0L			RCM			√	√	√		
Ford	America	2004	Mountaineer 4.0L			RCM			√	√	√		
Ford	America	1998	Mountaineer 4.0L			CSM			√	√	√		
Ford	America	1999	Mountaineer 4.0L			CSM			√	√	√		
Ford	America	2000	Mountaineer 4.0L			CSM			√	√	√		
Ford	America	2001	Mountaineer 4.0L			CSM			√	√	√		

Ford	America	2002	Mountaineer 4.0L			CSM			√	√	√		
Ford	America	2003	Mountaineer 4.0L			CSM			√	√	√		
Ford	America	2004	Mountaineer 4.0L			CSM			√	√	√		
Ford	America	2002	Mountaineer 4.6L			4X4M			√	√	√		
Ford	America	2003	Mountaineer 4.6L			4X4M			√	√	√		
Ford	America	2004	Mountaineer 4.6L			4X4M			√	√	√		
Ford	America	2002	Mountaineer 4.6L			ABS			√	√	√		
Ford	America	2003	Mountaineer 4.6L			ABS			√	√	√		
Ford	America	2004	Mountaineer 4.6L			ABS			√	√	√		
Ford	America	2002	Mountaineer 4.6L			DSM			√	√	√		
Ford	America	2003	Mountaineer 4.6L			DSM			√	√	√		
Ford	America	2004	Mountaineer 4.6L			DSM			√	√	√		
Ford	America	2002	Mountaineer 4.6L			IC			√	√	√		
Ford	America	2003	Mountaineer 4.6L			IC			√	√	√		
Ford	America	2004	Mountaineer 4.6L			IC			√	√	√		
Ford	America	2002	Mountaineer 4.6L			PAM			√	√			
Ford	America	2003	Mountaineer 4.6L			PAM			√	√			
Ford	America	2004	Mountaineer 4.6L			PAM			√	√			
Ford	America	2002	Mountaineer 4.6L			RCM			√	√	√		
Ford	America	2003	Mountaineer 4.6L			RCM			√	√	√		
Ford	America	2004	Mountaineer 4.6L			RCM			√	√	√		
Ford	America	2002	Mountaineer 4.6L			CSM			√	√	√		
Ford	America	2003	Mountaineer 4.6L			CSM			√	√	√		
Ford	America	2004	Mountaineer 4.6L			CSM			√	√	√		
Ford	America	1997	Mountaineer 5.0L			PCM		√	√	√	√		
Ford	America	1998	Mountaineer 5.0L			PCM		√	√	√	√		
Ford	America	1999	Mountaineer 5.0L			PCM		√	√	√	√		
Ford	America	2000	Mountaineer 5.0L			PCM		√	√	√	√		
Ford	America	2001	Mountaineer 5.0L			PCM		√	√	√	√		
Ford	America	1997	Mountaineer 5.0L			ABS			√	√	√		
Ford	America	1998	Mountaineer 5.0L			ABS			√	√	√		
Ford	America	1999	Mountaineer 5.0L			ABS			√	√	√		
Ford	America	2000	Mountaineer 5.0L			ABS			√	√	√		
Ford	America	2001	Mountaineer 5.0L			ABS			√	√	√		
Ford	America	1997	Mountaineer 5.0L			DSM			√	√			
Ford	America	1998	Mountaineer 5.0L			DSM			√	√			

Ford	America	1999	Mountaineer 5.0L			DSM			√	√			
Ford	America	2000	Mountaineer 5.0L			DSM			√	√			
Ford	America	2001	Mountaineer 5.0L			DSM			√	√			
Ford	America	1997	Mountaineer 5.0L			EATC			√	√			
Ford	America	1998	Mountaineer 5.0L			EATC			√	√			
Ford	America	1999	Mountaineer 5.0L			EATC			√	√			
Ford	America	2000	Mountaineer 5.0L			EATC			√	√			
Ford	America	2001	Mountaineer 5.0L			EATC			√	√			
Ford	America	1997	Mountaineer 5.0L			GEM			√	√			
Ford	America	1998	Mountaineer 5.0L			GEM			√	√			
Ford	America	1999	Mountaineer 5.0L			GEM			√	√			
Ford	America	2000	Mountaineer 5.0L			GEM			√	√			
Ford	America	2001	Mountaineer 5.0L			GEM			√	√			
Ford	America	1997	Mountaineer 5.0L			IABM			√	√			
Ford	America	1998	Mountaineer 5.0L			IABM			√	√			
Ford	America	1999	Mountaineer 5.0L			IABM			√	√			
Ford	America	2000	Mountaineer 5.0L			IABM			√	√			
Ford	America	2001	Mountaineer 5.0L			IABM			√	√			
Ford	America	1997	Mountaineer 5.0L			PAM			√	√			
Ford	America	1998	Mountaineer 5.0L			PAM			√	√			
Ford	America	1999	Mountaineer 5.0L			PAM			√	√			
Ford	America	2000	Mountaineer 5.0L			PAM			√	√			
Ford	America	2001	Mountaineer 5.0L			PAM			√	√			
Ford	America	1997	Mountaineer 5.0L			PATS			√	√			
Ford	America	1998	Mountaineer 5.0L			PATS			√	√			
Ford	America	1999	Mountaineer 5.0L			PATS			√	√			
Ford	America	2000	Mountaineer 5.0L			PATS			√	√			
Ford	America	2001	Mountaineer 5.0L			PATS			√	√			
Ford	America	1997	Mountaineer 5.0L			RAP			√	√			
Ford	America	1998	Mountaineer 5.0L			RAP			√	√			
Ford	America	1999	Mountaineer 5.0L			RAP			√	√			
Ford	America	2000	Mountaineer 5.0L			RAP			√	√			
Ford	America	2001	Mountaineer 5.0L			RAP			√	√			
Ford	America	1997	Mountaineer 5.0L			ARC			√	√			
Ford	America	1998	Mountaineer 5.0L			ARC			√	√			
Ford	America	1999	Mountaineer 5.0L			ARC			√	√			

Ford	America	2000	Mountaineer 5.0L			ARC			√	√			
Ford	America	2001	Mountaineer 5.0L			ARC			√	√			
Ford	America	2006	Mountaineer 4.0L			PCM			√	√	√		
Ford	America	2006	Mountaineer 4.0L			ABS			√	√	√		
Ford	America	2006	Mountaineer 4.0L			RCM			√	√	√		
Ford	America	2006	Mountaineer 4.0L			GEM			√	√	√		
Ford	America	2006	Mountaineer 4.0L			IC			√	√	√		
Ford	America	2006	Mountaineer 4.6L			PCM			√	√	√		
Ford	America	2006	Mountaineer 4.6L			ABS			√	√	√		
Ford	America	2006	Mountaineer 4.6L			RCM			√	√	√		
Ford	America	2006	Mountaineer 4.6L			GEM			√	√	√		
Ford	America	2006	Mountaineer 4.6L			IC			√	√	√		
Ford	America	2007	Mountaineer 4.0L			PCM			√	√	√		
Ford	America	2007	Mountaineer 4.0L			ABS			√	√	√		
Ford	America	2007	Mountaineer 4.0L			RCM			√	√	√		
Ford	America	2007	Mountaineer 4.0L			GEM			√	√	√		
Ford	America	2007	Mountaineer 4.0L			IC			√	√	√		
Ford	America	2007	Mountaineer 4.6L			PCM			√	√	√		
Ford	America	2007	Mountaineer 4.6L			ABS			√	√	√		
Ford	America	2007	Mountaineer 4.6L			RCM			√	√	√		
Ford	America	2007	Mountaineer 4.6L			GEM			√	√	√		
Ford	America	2007	Mountaineer 4.6L			IC			√	√	√		
Ford	America	1996	Mustang 3.8L			PCM		√	√	√	√		
Ford	America	1997	Mustang 3.8L			PCM		√	√	√	√		
Ford	America	1998	Mustang 3.8L			PCM		√	√	√	√		
Ford	America	1999	Mustang 3.8L			PCM		√	√	√	√		
Ford	America	2000	Mustang 3.8L			PCM		√	√	√	√		
Ford	America	2001	Mustang 3.8L			PCM		√	√	√	√		
Ford	America	2002	Mustang 3.8L			PCM		√	√	√	√		
Ford	America	2003	Mustang 3.8L			PCM		√	√	√	√		
Ford	America	1996	Mustang 3.8L			ABS			√	√	√		
Ford	America	1997	Mustang 3.8L			ABS			√	√	√		
Ford	America	1998	Mustang 3.8L			ABS			√	√	√		
Ford	America	1999	Mustang 3.8L			ABS			√	√	√		
Ford	America	2000	Mustang 3.8L			ABS			√	√	√		
Ford	America	2001	Mustang 3.8L			ABS			√	√	√		

Ford	America	2002	Mustang 3.8L			ABS			√	√	√		
Ford	America	2003	Mustang 3.8L			ABS			√	√	√		
Ford	America	1996	Mustang 3.8L			GEM			√	√			
Ford	America	1997	Mustang 3.8L			GEM			√	√			
Ford	America	1998	Mustang 3.8L			GEM			√	√			
Ford	America	1999	Mustang 3.8L			GEM			√	√			
Ford	America	2000	Mustang 3.8L			GEM			√	√			
Ford	America	2001	Mustang 3.8L			GEM			√	√			
Ford	America	2002	Mustang 3.8L			GEM			√	√			
Ford	America	2003	Mustang 3.8L			GEM			√	√			
Ford	America	1996	Mustang 3.8L			HEC			√	√			
Ford	America	1997	Mustang 3.8L			HEC			√	√			
Ford	America	1998	Mustang 3.8L			HEC			√	√			
Ford	America	1999	Mustang 3.8L			HEC			√	√			
Ford	America	2000	Mustang 3.8L			HEC			√	√			
Ford	America	2001	Mustang 3.8L			HEC			√	√			
Ford	America	2002	Mustang 3.8L			HEC			√	√			
Ford	America	2003	Mustang 3.8L			HEC			√	√			
Ford	America	1996	Mustang 3.8L			RCM			√	√	√		
Ford	America	1997	Mustang 3.8L			RCM			√	√	√		
Ford	America	1998	Mustang 3.8L			RCM			√	√	√		
Ford	America	1999	Mustang 3.8L			RCM			√	√	√		
Ford	America	2000	Mustang 3.8L			RCM			√	√	√		
Ford	America	2001	Mustang 3.8L			RCM			√	√	√		
Ford	America	2002	Mustang 3.8L			RCM			√	√	√		
Ford	America	2003	Mustang 3.8L			RCM			√	√	√		
Ford	America	2004	Mustang 3.9L			PCM			√	√	√		
Ford	America	2004	Mustang 3.9L			ABS			√	√	√		
Ford	America	2004	Mustang 3.9L			GEM			√	√			
Ford	America	2004	Mustang 3.9L			HEC			√	√			
Ford	America	2004	Mustang 3.9L			RCM			√	√	√		
Ford	America	2000	Mustang 4.6L			PCM		√	√	√	√		
Ford	America	1996	Mustang 4.6L			PCM		√	√	√	√		
Ford	America	1997	Mustang 4.6L			PCM		√	√	√	√		
Ford	America	2000	Mustang 4.6L			ABS			√	√	√		
Ford	America	1996	Mustang 4.6L			ABS			√	√	√		

Ford	America	1997	Mustang 4.6L			ABS			√	√	√		
Ford	America	2000	Mustang 4.6L			GEM			√	√			
Ford	America	1996	Mustang 4.6L			GEM			√	√			
Ford	America	1997	Mustang 4.6L			GEM			√	√			
Ford	America	2000	Mustang 4.6L			HEC			√	√			
Ford	America	1996	Mustang 4.6L			HEC			√	√			
Ford	America	1997	Mustang 4.6L			HEC			√	√			
Ford	America	2000	Mustang 4.6L			RCM			√	√	√		
Ford	America	1996	Mustang 4.6L			RCM			√	√	√		
Ford	America	1997	Mustang 4.6L			RCM			√	√	√		
Ford	America	2001	Mustang 4.6L 2V/4V			PCM		√	√	√	√		
Ford	America	2002	Mustang 4.6L 2V/4V			PCM		√	√	√	√		
Ford	America	2003	Mustang 4.6L 2V/4V			PCM		√	√	√	√		
Ford	America	2004	Mustang 4.6L 2V/4V			PCM		√	√	√	√		
Ford	America	1998	Mustang 4.6L 2V/4V			PCM		√	√	√	√		
Ford	America	2001	Mustang 4.6L 2V/4V			ABS			√	√	√		
Ford	America	2002	Mustang 4.6L 2V/4V			ABS			√	√	√		
Ford	America	2003	Mustang 4.6L 2V/4V			ABS			√	√	√		
Ford	America	2004	Mustang 4.6L 2V/4V			ABS			√	√	√		
Ford	America	1998	Mustang 4.6L 2V/4V			ABS			√	√	√		
Ford	America	2001	Mustang 4.6L 2V/4V			GEM			√	√			
Ford	America	2002	Mustang 4.6L 2V/4V			GEM			√	√			
Ford	America	2003	Mustang 4.6L 2V/4V			GEM			√	√			
Ford	America	2004	Mustang 4.6L 2V/4V			GEM			√	√			
Ford	America	1998	Mustang 4.6L 2V/4V			GEM			√	√			
Ford	America	2001	Mustang 4.6L 2V/4V			HEC			√	√			
Ford	America	2002	Mustang 4.6L 2V/4V			HEC			√	√			
Ford	America	2003	Mustang 4.6L 2V/4V			HEC			√	√			
Ford	America	2004	Mustang 4.6L 2V/4V			HEC			√	√			
Ford	America	1998	Mustang 4.6L 2V/4V			HEC			√	√			
Ford	America	2001	Mustang 4.6L 2V/4V			RCM			√	√	√		
Ford	America	2002	Mustang 4.6L 2V/4V			RCM			√	√	√		
Ford	America	2003	Mustang 4.6L 2V/4V			RCM			√	√	√		
Ford	America	2004	Mustang 4.6L 2V/4V			RCM			√	√	√		
Ford	America	1998	Mustang 4.6L 2V/4V			RCM			√	√	√		
Ford	America	1999	Mustang 4.6L 2V/4V			PCM		√	√	√	√		

Ford	America	2000	Mustang 4.6L 2V/4V			PCM		√	√	√	√		
Ford	America	1999	Mustang 4.6L 2V/4V			ABS			√	√	√		
Ford	America	2000	Mustang 4.6L 2V/4V			ABS			√	√	√		
Ford	America	1999	Mustang 4.6L 2V/4V			GEM			√	√			
Ford	America	2000	Mustang 4.6L 2V/4V			GEM			√	√			
Ford	America	1999	Mustang 4.6L 2V/4V			HEC			√	√			
Ford	America	2000	Mustang 4.6L 2V/4V			HEC			√	√			
Ford	America	1999	Mustang 4.6L 2V/4V			RCM			√	√	√		
Ford	America	2000	Mustang 4.6L 2V/4V			RCM			√	√	√		
Ford	America	2006	Mustang 4.0L			PCM			√	√	√		
Ford	America	2006	Mustang 4.0L			ABS			√	√	√		
Ford	America	2006	Mustang 4.0L			RCM			√	√	√		
Ford	America	2006	Mustang 4.0L			GEM			√	√	√		
Ford	America	2006	Mustang 4.0L			IC			√	√	√		
Ford	America	2006	Mustang 4.6L			PCM			√	√	√		
Ford	America	2006	Mustang 4.6L			ABS			√	√	√		
Ford	America	2006	Mustang 4.6L			RCM			√	√	√		
Ford	America	2006	Mustang 4.6L			GEM			√	√	√		
Ford	America	2006	Mustang 4.6L			IC			√	√	√		
Ford	America	2007	Mustang 4.0L			PCM			√	√	√		
Ford	America	2007	Mustang 4.0L			ABS			√	√	√		
Ford	America	2007	Mustang 4.0L			RCM			√	√	√		
Ford	America	2007	Mustang 4.0L			GEM			√	√	√		
Ford	America	2007	Mustang 4.0L			IC			√	√	√		
Ford	America	2007	Mustang 5.4L			PCM			√	√	√		
Ford	America	2007	Mustang 5.4L			ABS			√	√	√		
Ford	America	2007	Mustang 5.4L			RCM			√	√	√		
Ford	America	2007	Mustang 5.4L			GEM			√	√	√		
Ford	America	2007	Mustang 5.4L			IC			√	√	√		
Ford	America	2007	Mustang 4.6L			PCM			√	√	√		
Ford	America	2007	Mustang 4.6L			ABS			√	√	√		
Ford	America	2007	Mustang 4.6L			RCM			√	√	√		
Ford	America	2007	Mustang 4.6L			GEM			√	√	√		
Ford	America	2007	Mustang 4.6L			IC			√	√	√		
Ford	America	1996	Mystique 2.0L/2.5L			PCM		√	√	√	√		
Ford	America	1997	Mystique 2.0L/2.5L			PCM		√	√	√	√		

Ford	America	1998	Mystique 2.0L/2.5L			PCM		√	√	√	√		
Ford	America	1999	Mystique 2.0L/2.5L			PCM		√	√	√	√		
Ford	America	2000	Mystique 2.0L/2.5L			PCM		√	√	√	√		
Ford	America	1996	Mystique 2.0L/2.5L			ABS			√	√	√		
Ford	America	1997	Mystique 2.0L/2.5L			ABS			√	√	√		
Ford	America	1998	Mystique 2.0L/2.5L			ABS			√	√	√		
Ford	America	1999	Mystique 2.0L/2.5L			ABS			√	√	√		
Ford	America	2000	Mystique 2.0L/2.5L			ABS			√	√	√		
Ford	America	1996	Mystique 2.0L/2.5L			CSM			√	√			
Ford	America	1997	Mystique 2.0L/2.5L			CSM			√	√			
Ford	America	1998	Mystique 2.0L/2.5L			CSM			√	√			
Ford	America	1999	Mystique 2.0L/2.5L			CSM			√	√			
Ford	America	2000	Mystique 2.0L/2.5L			CSM			√	√			
Ford	America	1996	Mystique 2.0L/2.5L			RCM			√	√	√		
Ford	America	1997	Mystique 2.0L/2.5L			RCM			√	√	√		
Ford	America	1998	Mystique 2.0L/2.5L			RCM			√	√	√		
Ford	America	1999	Mystique 2.0L/2.5L			RCM			√	√	√		
Ford	America	2000	Mystique 2.0L/2.5L			RCM			√	√	√		
Ford	America	1998	Navigator 5.4L			PCM		√	√	√	√		
Ford	America	1999	Navigator 5.4L			PCM		√	√	√	√		
Ford	America	2000	Navigator 5.4L			PCM		√	√	√	√		
Ford	America	2001	Navigator 5.4L			PCM		√	√	√	√		
Ford	America	2002	Navigator 5.4L			PCM		√	√	√	√		
Ford	America	2003	Navigator 5.4L			PCM		√	√	√	√		
Ford	America	2004	Navigator 5.4L			PCM		√	√	√	√		
Ford	America	1998	Navigator 5.4L			4X4M			√	√	√		
Ford	America	1999	Navigator 5.4L			4X4M			√	√	√		
Ford	America	2000	Navigator 5.4L			4X4M			√	√	√		
Ford	America	2001	Navigator 5.4L			4X4M			√	√	√		
Ford	America	2002	Navigator 5.4L			4X4M			√	√	√		
Ford	America	2003	Navigator 5.4L			4X4M			√	√	√		
Ford	America	2004	Navigator 5.4L			4X4M			√	√	√		
Ford	America	1998	Navigator 5.4L			ABS			√	√	√		
Ford	America	1999	Navigator 5.4L			ABS			√	√	√		
Ford	America	2000	Navigator 5.4L			ABS			√	√	√		
Ford	America	2001	Navigator 5.4L			ABS			√	√	√		

Ford	America	2002	Navigator 5.4L			ABS			√	√	√		
Ford	America	2003	Navigator 5.4L			ABS			√	√	√		
Ford	America	2004	Navigator 5.4L			ABS			√	√	√		
Ford	America	1998	Navigator 5.4L			DSM			√	√	√		
Ford	America	1999	Navigator 5.4L			DSM			√	√	√		
Ford	America	2000	Navigator 5.4L			DSM			√	√	√		
Ford	America	2001	Navigator 5.4L			DSM			√	√	√		
Ford	America	2002	Navigator 5.4L			DSM			√	√	√		
Ford	America	2003	Navigator 5.4L			DSM			√	√	√		
Ford	America	2004	Navigator 5.4L			DSM			√	√	√		
Ford	America	1998	Navigator 5.4L			EATC			√	√	√		
Ford	America	1999	Navigator 5.4L			EATC			√	√	√		
Ford	America	2000	Navigator 5.4L			EATC			√	√	√		
Ford	America	2001	Navigator 5.4L			EATC			√	√	√		
Ford	America	2002	Navigator 5.4L			EATC			√	√	√		
Ford	America	2003	Navigator 5.4L			EATC			√	√	√		
Ford	America	2004	Navigator 5.4L			EATC			√	√	√		
Ford	America	1998	Navigator 5.4L			HEC			√	√			
Ford	America	1999	Navigator 5.4L			HEC			√	√			
Ford	America	2000	Navigator 5.4L			HEC			√	√			
Ford	America	2001	Navigator 5.4L			HEC			√	√			
Ford	America	2002	Navigator 5.4L			HEC			√	√			
Ford	America	2003	Navigator 5.4L			HEC			√	√			
Ford	America	2004	Navigator 5.4L			HEC			√	√			
Ford	America	1998	Navigator 5.4L			NAV			√	√			
Ford	America	1999	Navigator 5.4L			NAV			√	√			
Ford	America	2000	Navigator 5.4L			NAV			√	√			
Ford	America	2001	Navigator 5.4L			NAV			√	√			
Ford	America	2002	Navigator 5.4L			NAV			√	√			
Ford	America	2003	Navigator 5.4L			NAV			√	√			
Ford	America	2004	Navigator 5.4L			NAV			√	√			
Ford	America	1998	Navigator 5.4L			RCM			√	√	√		
Ford	America	1999	Navigator 5.4L			RCM			√	√	√		
Ford	America	2000	Navigator 5.4L			RCM			√	√	√		
Ford	America	2001	Navigator 5.4L			RCM			√	√	√		
Ford	America	2002	Navigator 5.4L			RCM			√	√	√		

Ford	America	2003	Navigator 5.4L			RCM			√	√	√		
Ford	America	2004	Navigator 5.4L			RCM			√	√	√		
Ford	America	1998	Navigator 5.4L			TPM			√	√			
Ford	America	1999	Navigator 5.4L			TPM			√	√			
Ford	America	2000	Navigator 5.4L			TPM			√	√			
Ford	America	2001	Navigator 5.4L			TPM			√	√			
Ford	America	2002	Navigator 5.4L			TPM			√	√			
Ford	America	2003	Navigator 5.4L			TPM			√	√			
Ford	America	2004	Navigator 5.4L			TPM			√	√			
Ford	America	1998	Navigator 5.4L			CSM			√	√	√		
Ford	America	1999	Navigator 5.4L			CSM			√	√	√		
Ford	America	2000	Navigator 5.4L			CSM			√	√	√		
Ford	America	2001	Navigator 5.4L			CSM			√	√	√		
Ford	America	2002	Navigator 5.4L			CSM			√	√	√		
Ford	America	2003	Navigator 5.4L			CSM			√	√	√		
Ford	America	2004	Navigator 5.4L			CSM			√	√	√		
Ford	America	2006	Navigator 5.4L			PCM			√	√	√		
Ford	America	2006	Navigator 5.4L			ABS			√	√	√		
Ford	America	2006	Navigator 5.4L			RCM			√	√	√		
Ford	America	2006	Navigator 5.4L			IC			√	√	√		
Ford	America	2007	Navigator 5.4L			PCM			√	√	√		
Ford	America	2007	Navigator 5.4L			ABS			√	√	√		
Ford	America	2007	Navigator 5.4L			RCM			√	√	√		
Ford	America	2007	Navigator 5.4L			GEM			√	√	√		
Ford	America	2007	Navigator 5.4L			IC			√	√	√		
Ford	America	2007	Navigator 5.5L			PCM			√	√	√		
Ford	America	2007	Navigator 5.5L			ABS			√	√	√		
Ford	America	2007	Navigator 5.5L			RCM			√	√	√		
Ford	America	2007	Navigator 5.5L			GEM			√	√	√		
Ford	America	2007	Navigator 5.5L			IC			√	√	√		
Ford	America	1997	Probe 2.0L			PCM		√	√	√	√		
Ford	America	1996	Probe 2.5L			PCM		√	√	√	√		
Ford	America	1997	Probe 2.5L			PCM		√	√	√	√		
Ford	America	2001	Ranger 2.3L			PCM		√	√	√	√		
Ford	America	2002	Ranger 2.3L			PCM		√	√	√	√		
Ford	America	2003	Ranger 2.3L			PCM		√	√	√	√		

Ford	America	2004	Ranger 2.3L			PCM		√	√	√	√		
Ford	America	1996	Ranger 2.3L			PCM		√	√	√	√		
Ford	America	1997	Ranger 2.3L			PCM		√	√	√	√		
Ford	America	2001	Ranger 2.3L			ABS			√	√	√		
Ford	America	2002	Ranger 2.3L			ABS			√	√	√		
Ford	America	2003	Ranger 2.3L			ABS			√	√	√		
Ford	America	2004	Ranger 2.3L			ABS			√	√	√		
Ford	America	1996	Ranger 2.3L			ABS			√	√	√		
Ford	America	1997	Ranger 2.3L			ABS			√	√	√		
Ford	America	2001	Ranger 2.3L			4X4M			√	√	√		
Ford	America	2002	Ranger 2.3L			4X4M			√	√	√		
Ford	America	2003	Ranger 2.3L			4X4M			√	√	√		
Ford	America	2004	Ranger 2.3L			4X4M			√	√	√		
Ford	America	1996	Ranger 2.3L			4X4M			√	√	√		
Ford	America	1997	Ranger 2.3L			4X4M			√	√	√		
Ford	America	2001	Ranger 2.3L			GEM			√	√			
Ford	America	2002	Ranger 2.3L			GEM			√	√			
Ford	America	2003	Ranger 2.3L			GEM			√	√			
Ford	America	2004	Ranger 2.3L			GEM			√	√			
Ford	America	1996	Ranger 2.3L			GEM			√	√			
Ford	America	1997	Ranger 2.3L			GEM			√	√			
Ford	America	2001	Ranger 2.3L			IC			√	√	√		
Ford	America	2002	Ranger 2.3L			IC			√	√	√		
Ford	America	2003	Ranger 2.3L			IC			√	√	√		
Ford	America	2004	Ranger 2.3L			IC			√	√	√		
Ford	America	1996	Ranger 2.3L			IC			√	√	√		
Ford	America	1997	Ranger 2.3L			IC			√	√	√		
Ford	America	2001	Ranger 2.3L			RCM			√	√	√		
Ford	America	2002	Ranger 2.3L			RCM			√	√	√		
Ford	America	2003	Ranger 2.3L			RCM			√	√	√		
Ford	America	2004	Ranger 2.3L			RCM			√	√	√		
Ford	America	1996	Ranger 2.3L			RCM			√	√	√		
Ford	America	1997	Ranger 2.3L			RCM			√	√	√		
Ford	America	1998	Ranger 2.5L			PCM		√	√	√	√		
Ford	America	1999	Ranger 2.5L			PCM		√	√	√	√		
Ford	America	2000	Ranger 2.5L			PCM		√	√	√	√		

Ford	America	2001	Ranger 2.5L			PCM		√	√	√	√		
Ford	America	2002	Ranger 2.5L			PCM		√	√	√	√		
Ford	America	2003	Ranger 2.5L			PCM		√	√	√	√		
Ford	America	1998	Ranger 2.5L			ABS			√	√	√		
Ford	America	1999	Ranger 2.5L			ABS			√	√	√		
Ford	America	2000	Ranger 2.5L			ABS			√	√	√		
Ford	America	2001	Ranger 2.5L			ABS			√	√	√		
Ford	America	2002	Ranger 2.5L			ABS			√	√	√		
Ford	America	2003	Ranger 2.5L			ABS			√	√	√		
Ford	America	1998	Ranger 2.5L			4X4M			√	√			
Ford	America	1999	Ranger 2.5L			4X4M			√	√			
Ford	America	2000	Ranger 2.5L			4X4M			√	√			
Ford	America	2001	Ranger 2.5L			4X4M			√	√			
Ford	America	2002	Ranger 2.5L			4X4M			√	√			
Ford	America	2003	Ranger 2.5L			4X4M			√	√			
Ford	America	1998	Ranger 2.5L			GEM			√	√			
Ford	America	1999	Ranger 2.5L			GEM			√	√			
Ford	America	2000	Ranger 2.5L			GEM			√	√			
Ford	America	2001	Ranger 2.5L			GEM			√	√			
Ford	America	2002	Ranger 2.5L			GEM			√	√			
Ford	America	2003	Ranger 2.5L			GEM			√	√			
Ford	America	1998	Ranger 2.5L			RAP			√	√			
Ford	America	1999	Ranger 2.5L			RAP			√	√			
Ford	America	2000	Ranger 2.5L			RAP			√	√			
Ford	America	2001	Ranger 2.5L			RAP			√	√			
Ford	America	2002	Ranger 2.5L			RAP			√	√			
Ford	America	2003	Ranger 2.5L			RAP			√	√			
Ford	America	1998	Ranger 2.5L			RCM			√	√	√		
Ford	America	1999	Ranger 2.5L			RCM			√	√	√		
Ford	America	2000	Ranger 2.5L			RCM			√	√	√		
Ford	America	2001	Ranger 2.5L			RCM			√	√	√		
Ford	America	2002	Ranger 2.5L			RCM			√	√	√		
Ford	America	2003	Ranger 2.5L			RCM			√	√	√		
Ford	America	1996	Ranger 3.0L/4.0L			PCM		√	√	√	√		
Ford	America	1997	Ranger 3.0L/4.0L			PCM		√	√	√	√		
Ford	America	1998	Ranger 3.0L/4.0L			PCM		√	√	√	√		

Ford	America	1999	Ranger 3.0L/4.0L			PCM		√	√	√	√		
Ford	America	2000	Ranger 3.0L/4.0L			PCM		√	√	√	√		
Ford	America	2001	Ranger 3.0L/4.0L			PCM		√	√	√	√		
Ford	America	2002	Ranger 3.0L/4.0L			PCM		√	√	√	√		
Ford	America	2003	Ranger 3.0L/4.0L			PCM		√	√	√	√		
Ford	America	2004	Ranger 3.0L/4.0L			PCM		√	√	√	√		
Ford	America	1996	Ranger 3.0L/4.0L			ABS			√	√	√		
Ford	America	1997	Ranger 3.0L/4.0L			ABS			√	√	√		
Ford	America	1998	Ranger 3.0L/4.0L			ABS			√	√	√		
Ford	America	1999	Ranger 3.0L/4.0L			ABS			√	√	√		
Ford	America	2000	Ranger 3.0L/4.0L			ABS			√	√	√		
Ford	America	2001	Ranger 3.0L/4.0L			ABS			√	√	√		
Ford	America	2002	Ranger 3.0L/4.0L			ABS			√	√	√		
Ford	America	2003	Ranger 3.0L/4.0L			ABS			√	√	√		
Ford	America	2004	Ranger 3.0L/4.0L			ABS			√	√	√		
Ford	America	1996	Ranger 3.0L/4.0L			4X4M			√	√	√		
Ford	America	1997	Ranger 3.0L/4.0L			4X4M			√	√	√		
Ford	America	1998	Ranger 3.0L/4.0L			4X4M			√	√	√		
Ford	America	1999	Ranger 3.0L/4.0L			4X4M			√	√	√		
Ford	America	2000	Ranger 3.0L/4.0L			4X4M			√	√	√		
Ford	America	2001	Ranger 3.0L/4.0L			4X4M			√	√	√		
Ford	America	2002	Ranger 3.0L/4.0L			4X4M			√	√	√		
Ford	America	2003	Ranger 3.0L/4.0L			4X4M			√	√	√		
Ford	America	2004	Ranger 3.0L/4.0L			4X4M			√	√	√		
Ford	America	1996	Ranger 3.0L/4.0L			GEM			√	√			
Ford	America	1997	Ranger 3.0L/4.0L			GEM			√	√			
Ford	America	1998	Ranger 3.0L/4.0L			GEM			√	√			
Ford	America	1999	Ranger 3.0L/4.0L			GEM			√	√			
Ford	America	2000	Ranger 3.0L/4.0L			GEM			√	√			
Ford	America	2001	Ranger 3.0L/4.0L			GEM			√	√			
Ford	America	2002	Ranger 3.0L/4.0L			GEM			√	√			
Ford	America	2003	Ranger 3.0L/4.0L			GEM			√	√			
Ford	America	2004	Ranger 3.0L/4.0L			GEM			√	√			
Ford	America	1996	Ranger 3.0L/4.0L			IC			√	√	√		
Ford	America	1997	Ranger 3.0L/4.0L			IC			√	√	√		
Ford	America	1998	Ranger 3.0L/4.0L			IC			√	√	√		

Ford	America	1999	Ranger 3.0L/4.0L			IC			√	√	√		
Ford	America	2000	Ranger 3.0L/4.0L			IC			√	√	√		
Ford	America	2001	Ranger 3.0L/4.0L			IC			√	√	√		
Ford	America	2002	Ranger 3.0L/4.0L			IC			√	√	√		
Ford	America	2003	Ranger 3.0L/4.0L			IC			√	√	√		
Ford	America	2004	Ranger 3.0L/4.0L			IC			√	√	√		
Ford	America	1996	Ranger 3.0L/4.0L			RCM			√	√	√		
Ford	America	1997	Ranger 3.0L/4.0L			RCM			√	√	√		
Ford	America	1998	Ranger 3.0L/4.0L			RCM			√	√	√		
Ford	America	1999	Ranger 3.0L/4.0L			RCM			√	√	√		
Ford	America	2000	Ranger 3.0L/4.0L			RCM			√	√	√		
Ford	America	2001	Ranger 3.0L/4.0L			RCM			√	√	√		
Ford	America	2002	Ranger 3.0L/4.0L			RCM			√	√	√		
Ford	America	2003	Ranger 3.0L/4.0L			RCM			√	√	√		
Ford	America	2004	Ranger 3.0L/4.0L			RCM			√	√	√		
Ford	America	2006	Ranger 2.3L			PCM			√	√	√		
Ford	America	2006	Ranger 2.3L			ABS			√	√	√		
Ford	America	2006	Ranger 2.3L			RCM			√	√	√		
Ford	America	2006	Ranger 2.3L			GEM			√	√	√		
Ford	America	2006	Ranger 2.3L			IC			√	√	√		
Ford	America	2006	Ranger 3.0L			PCM			√	√	√		
Ford	America	2006	Ranger 3.0L			ABS			√	√	√		
Ford	America	2006	Ranger 3.0L			RCM			√	√	√		
Ford	America	2006	Ranger 3.0L			GEM			√	√	√		
Ford	America	2006	Ranger 3.0L			IC			√	√	√		
Ford	America	2006	Ranger 4.0L			PCM			√	√	√		
Ford	America	2006	Ranger 4.0L			ABS			√	√	√		
Ford	America	2006	Ranger 4.0L			RCM			√	√	√		
Ford	America	2006	Ranger 4.0L			GEM			√	√	√		
Ford	America	2006	Ranger 4.0L			IC			√	√	√		
Ford	America	2007	Ranger 2.3L			PCM			√	√	√		
Ford	America	2007	Ranger 2.3L			ABS			√	√	√		
Ford	America	2007	Ranger 2.3L			RCM			√	√	√		
Ford	America	2007	Ranger 2.3L			GEM			√	√	√		
Ford	America	2007	Ranger 2.3L			IC			√	√	√		
Ford	America	2007	Ranger 3.0L			PCM			√	√	√		

Ford	America	2007	Ranger 3.0L			ABS			√	√	√		
Ford	America	2007	Ranger 3.0L			RCM			√	√	√		
Ford	America	2007	Ranger 3.0L			GEM			√	√	√		
Ford	America	2007	Ranger 3.0L			IC			√	√	√		
Ford	America	2007	Ranger 4.0L			PCM			√	√	√		
Ford	America	2007	Ranger 4.0L			ABS			√	√	√		
Ford	America	2007	Ranger 4.0L			RCM			√	√	√		
Ford	America	2007	Ranger 4.0L			GEM			√	√	√		
Ford	America	2007	Ranger 4.0L			IC			√	√	√		
Ford	America	1999	Sable 3.0L			PCM		√	√	√	√		
Ford	America	2000	Sable 3.0L			PCM		√	√	√	√		
Ford	America	2001	Sable 3.0L			PCM		√	√	√	√		
Ford	America	2002	Sable 3.0L			PCM		√	√	√	√		
Ford	America	2003	Sable 3.0L			PCM		√	√	√	√		
Ford	America	2004	Sable 3.0L			PCM		√	√	√	√		
Ford	America	1996	Sable 3.0L			PCM		√	√	√	√		
Ford	America	1997	Sable 3.0L			PCM		√	√	√	√		
Ford	America	1999	Sable 3.0L			ABS			√	√	√		
Ford	America	2000	Sable 3.0L			ABS			√	√	√		
Ford	America	2001	Sable 3.0L			ABS			√	√	√		
Ford	America	2002	Sable 3.0L			ABS			√	√	√		
Ford	America	2003	Sable 3.0L			ABS			√	√	√		
Ford	America	2004	Sable 3.0L			ABS			√	√	√		
Ford	America	1996	Sable 3.0L			ABS			√	√	√		
Ford	America	1997	Sable 3.0L			ABS			√	√	√		
Ford	America	1999	Sable 3.0L			EATC			√	√			
Ford	America	2000	Sable 3.0L			EATC			√	√			
Ford	America	2001	Sable 3.0L			EATC			√	√			
Ford	America	2002	Sable 3.0L			EATC			√	√			
Ford	America	2003	Sable 3.0L			EATC			√	√			
Ford	America	2004	Sable 3.0L			EATC			√	√			
Ford	America	1996	Sable 3.0L			EATC			√	√			
Ford	America	1997	Sable 3.0L			EATC			√	√			
Ford	America	1999	Sable 3.0L			GEM			√	√			
Ford	America	2000	Sable 3.0L			GEM			√	√			
Ford	America	2001	Sable 3.0L			GEM			√	√			

Ford	America	2002	Sable 3.0L			GEM			√	√			
Ford	America	2003	Sable 3.0L			GEM			√	√			
Ford	America	2004	Sable 3.0L			GEM			√	√			
Ford	America	1996	Sable 3.0L			GEM			√	√			
Ford	America	1997	Sable 3.0L			GEM			√	√			
Ford	America	1999	Sable 3.0L			RCM			√	√	√		
Ford	America	2000	Sable 3.0L			RCM			√	√	√		
Ford	America	2001	Sable 3.0L			RCM			√	√	√		
Ford	America	2002	Sable 3.0L			RCM			√	√	√		
Ford	America	2003	Sable 3.0L			RCM			√	√	√		
Ford	America	2004	Sable 3.0L			RCM			√	√	√		
Ford	America	1996	Sable 3.0L			RCM			√	√	√		
Ford	America	1997	Sable 3.0L			RCM			√	√	√		
Ford	America	1998	Sable 3.0L 2V			PCM		√	√	√	√		
Ford	America	1998	Sable 3.0L 2V			ABS			√	√	√		
Ford	America	1998	Sable 3.0L 2V			GEM			√	√			
Ford	America	1998	Sable 3.0L 2V			IABM			√	√			
Ford	America	1998	Sable 3.0L 2V			PATS			√	√			
Ford	America	1998	Sable 3.0L 2V			RAP			√	√			
Ford	America	1998	Sable 3.0L 2V			RCC			√	√			
Ford	America	1996	Sable 3.0L 4V			PCM		√	√	√	√		
Ford	America	1997	Sable 3.0L 4V			PCM		√	√	√	√		
Ford	America	1998	Sable 3.0L 4V			PCM		√	√	√	√		
Ford	America	1996	Sable 3.0L 4V			ABS			√	√	√		
Ford	America	1997	Sable 3.0L 4V			ABS			√	√	√		
Ford	America	1998	Sable 3.0L 4V			ABS			√	√	√		
Ford	America	1996	Sable 3.0L 4V			GEM			√	√			
Ford	America	1997	Sable 3.0L 4V			GEM			√	√			
Ford	America	1998	Sable 3.0L 4V			GEM			√	√			
Ford	America	1996	Sable 3.0L 4V			IABM			√	√			
Ford	America	1997	Sable 3.0L 4V			IABM			√	√			
Ford	America	1998	Sable 3.0L 4V			IABM			√	√			
Ford	America	1996	Sable 3.0L 4V			PATS			√	√			
Ford	America	1997	Sable 3.0L 4V			PATS			√	√			
Ford	America	1998	Sable 3.0L 4V			PATS			√	√			
Ford	America	1996	Sable 3.0L 4V			RAP			√	√			

Ford	America	1997	Sable 3.0L 4V			RAP			√	√			
Ford	America	1998	Sable 3.0L 4V			RAP			√	√			
Ford	America	1996	Sable 3.0L 4V			RCC			√	√			
Ford	America	1997	Sable 3.0L 4V			RCC			√	√			
Ford	America	1998	Sable 3.0L 4V			RCC			√	√			
Ford	America	1997	Sable 3.4L SHO			PCM		√	√	√	√		
Ford	America	1997	Sable 3.4L SHO			ABS			√	√	√	√	
Ford	America	1997	Sable 3.4L SHO			GEM			√	√			
Ford	America	1997	Sable 3.4L SHO			IABM			√	√			
Ford	America	1997	Sable 3.4L SHO			PATS			√	√			
Ford	America	1997	Sable 3.4L SHO			RAP			√	√			
Ford	America	1997	Sable 3.4L SHO			RCC			√	√			
Ford	America	1999	Taurus 3.0L			PCM		√	√	√	√		
Ford	America	2000	Taurus 3.0L			PCM		√	√	√	√		
Ford	America	2001	Taurus 3.0L			PCM		√	√	√	√		
Ford	America	2002	Taurus 3.0L			PCM		√	√	√	√		
Ford	America	2003	Taurus 3.0L			PCM		√	√	√	√		
Ford	America	2004	Taurus 3.0L			PCM		√	√	√	√		
Ford	America	1996	Taurus 3.0L			PCM		√	√	√	√		
Ford	America	1997	Taurus 3.0L			PCM		√	√	√	√		
Ford	America	1999	Taurus 3.0L			ABS			√	√	√		
Ford	America	2000	Taurus 3.0L			ABS			√	√	√		
Ford	America	2001	Taurus 3.0L			ABS			√	√	√		
Ford	America	2002	Taurus 3.0L			ABS			√	√	√		
Ford	America	2003	Taurus 3.0L			ABS			√	√	√		
Ford	America	2004	Taurus 3.0L			ABS			√	√	√		
Ford	America	1996	Taurus 3.0L			ABS			√	√	√		
Ford	America	1997	Taurus 3.0L			ABS			√	√	√		
Ford	America	1999	Taurus 3.0L			EATC			√	√	√		
Ford	America	2000	Taurus 3.0L			EATC			√	√	√		
Ford	America	2001	Taurus 3.0L			EATC			√	√	√		
Ford	America	2002	Taurus 3.0L			EATC			√	√	√		
Ford	America	2003	Taurus 3.0L			EATC			√	√	√		
Ford	America	2004	Taurus 3.0L			EATC			√	√	√		
Ford	America	1996	Taurus 3.0L			EATC			√	√	√		
Ford	America	1997	Taurus 3.0L			EATC			√	√	√		

Ford	America	1999	Taurus 3.0L			GEM			√	√			
Ford	America	2000	Taurus 3.0L			GEM			√	√			
Ford	America	2001	Taurus 3.0L			GEM			√	√			
Ford	America	2002	Taurus 3.0L			GEM			√	√			
Ford	America	2003	Taurus 3.0L			GEM			√	√			
Ford	America	2004	Taurus 3.0L			GEM			√	√			
Ford	America	1996	Taurus 3.0L			GEM			√	√			
Ford	America	1997	Taurus 3.0L			GEM			√	√			
Ford	America	1999	Taurus 3.0L			RCM			√	√		√	
Ford	America	2000	Taurus 3.0L			RCM			√	√		√	
Ford	America	2001	Taurus 3.0L			RCM			√	√		√	
Ford	America	2002	Taurus 3.0L			RCM			√	√		√	
Ford	America	2003	Taurus 3.0L			RCM			√	√		√	
Ford	America	2004	Taurus 3.0L			RCM			√	√		√	
Ford	America	1996	Taurus 3.0L			RCM			√	√		√	
Ford	America	1997	Taurus 3.0L			RCM			√	√		√	
Ford	America	1998	Taurus 3.0L 2V			PCM		√	√	√		√	
Ford	America	1998	Taurus 3.0L 2V			ABS			√	√		√	
Ford	America	1998	Taurus 3.0L 2V			GEM			√	√			
Ford	America	1998	Taurus 3.0L 2V			IABM			√	√			
Ford	America	1998	Taurus 3.0L 2V			PATS			√	√			
Ford	America	1998	Taurus 3.0L 2V			RAP			√	√			
Ford	America	1998	Taurus 3.0L 2V			RCC			√	√			
Ford	America	1996	Taurus 3.0L 4V			PCM		√	√	√		√	
Ford	America	1997	Taurus 3.0L 4V			PCM		√	√	√		√	
Ford	America	1998	Taurus 3.0L 4V			PCM		√	√	√		√	
Ford	America	1996	Taurus 3.0L 4V			ABS			√	√		√	
Ford	America	1997	Taurus 3.0L 4V			ABS			√	√		√	
Ford	America	1998	Taurus 3.0L 4V			ABS			√	√		√	
Ford	America	1996	Taurus 3.0L 4V			GEM			√	√			
Ford	America	1997	Taurus 3.0L 4V			GEM			√	√			
Ford	America	1998	Taurus 3.0L 4V			GEM			√	√			
Ford	America	1996	Taurus 3.0L 4V			IABM			√	√			
Ford	America	1997	Taurus 3.0L 4V			IABM			√	√			
Ford	America	1998	Taurus 3.0L 4V			IABM			√	√			
Ford	America	1996	Taurus 3.0L 4V			PATS			√	√			

Ford	America	1997	Taurus 3.0L 4V			PATS			√	√			
Ford	America	1998	Taurus 3.0L 4V			PATS			√	√			
Ford	America	1996	Taurus 3.0L 4V			RAP			√	√			
Ford	America	1997	Taurus 3.0L 4V			RAP			√	√			
Ford	America	1998	Taurus 3.0L 4V			RAP			√	√			
Ford	America	1996	Taurus 3.0L 4V			RCC			√	√			
Ford	America	1997	Taurus 3.0L 4V			RCC			√	√			
Ford	America	1998	Taurus 3.0L 4V			RCC			√	√			
Ford	America	1996	Taurus 3.4L SHO			PCM		√	√	√		√	
Ford	America	1997	Taurus 3.4L SHO			PCM		√	√	√		√	
Ford	America	1998	Taurus 3.4L SHO			PCM		√	√	√		√	
Ford	America	1996	Taurus 3.4L SHO			ABS			√	√		√	
Ford	America	1997	Taurus 3.4L SHO			ABS			√	√		√	
Ford	America	1998	Taurus 3.4L SHO			ABS			√	√		√	
Ford	America	1996	Taurus 3.4L SHO			GEM			√	√			
Ford	America	1997	Taurus 3.4L SHO			GEM			√	√			
Ford	America	1998	Taurus 3.4L SHO			GEM			√	√			
Ford	America	1996	Taurus 3.4L SHO			IABM			√	√			
Ford	America	1997	Taurus 3.4L SHO			IABM			√	√			
Ford	America	1998	Taurus 3.4L SHO			IABM			√	√			
Ford	America	1996	Taurus 3.4L SHO			PATS			√	√			
Ford	America	1997	Taurus 3.4L SHO			PATS			√	√			
Ford	America	1998	Taurus 3.4L SHO			PATS			√	√			
Ford	America	1996	Taurus 3.4L SHO			RAP			√	√			
Ford	America	1997	Taurus 3.4L SHO			RAP			√	√			
Ford	America	1998	Taurus 3.4L SHO			RAP			√	√			
Ford	America	1996	Taurus 3.4L SHO			RCC			√	√			
Ford	America	1997	Taurus 3.4L SHO			RCC			√	√			
Ford	America	1998	Taurus 3.4L SHO			RCC			√	√			
Ford	America	1996	Taurus 3.4L SHO			SARC			√	√			
Ford	America	1997	Taurus 3.4L SHO			SARC			√	√			
Ford	America	1998	Taurus 3.4L SHO			SARC			√	√			
Ford	America	1999	Taurus 3.4L			PCM		√	√	√		√	
Ford	America	1999	Taurus 3.4L			ABS			√	√		√	
Ford	America	1999	Taurus 3.4L			PATS			√	√			
Ford	America	1999	Taurus 3.4L			RAP			√	√			

Ford	America	1999	Taurus 3.4L			RCC			√	√			
Ford	America	2006	Taurus 3.0L			PCM			√	√	√		
Ford	America	2006	Taurus 3.0L			ABS			√	√	√		
Ford	America	2006	Taurus 3.0L			RCM			√	√	√		
Ford	America	2006	Taurus 3.0L			GEM			√	√	√		
Ford	America	2006	Taurus 3.0L			IC			√	√	√		
Ford	America	2007	Taurus 3.0L			PCM			√	√	√		
Ford	America	2007	Taurus 3.0L			ABS			√	√	√		
Ford	America	2007	Taurus 3.0L			RCM			√	√	√		
Ford	America	2007	Taurus 3.0L			GEM			√	√	√		
Ford	America	2007	Taurus 3.0L			IC			√	√	√		
Ford	America	1996	Thunderbird 3.8L			PCM		√	√	√	√		
Ford	America	1997	Thunderbird 3.8L			PCM		√	√	√	√		
Ford	America	2002	Thunderbird 3.9L			ABS			√	√	√		
Ford	America	2003	Thunderbird 3.9L			ABS			√	√	√		
Ford	America	2004	Thunderbird 3.9L			ABS			√	√	√		
Ford	America	2002	Thunderbird 3.9L			ACM			√	√			
Ford	America	2003	Thunderbird 3.9L			ACM			√	√			
Ford	America	2004	Thunderbird 3.9L			ACM			√	√			
Ford	America	2002	Thunderbird 3.9L			DDM			√	√	√		
Ford	America	2003	Thunderbird 3.9L			DDM			√	√	√		
Ford	America	2004	Thunderbird 3.9L			DDM			√	√	√		
Ford	America	2002	Thunderbird 3.9L			GEM			√	√			
Ford	America	2003	Thunderbird 3.9L			GEM			√	√			
Ford	America	2004	Thunderbird 3.9L			GEM			√	√			
Ford	America	2002	Thunderbird 3.9L			HEC			√	√			
Ford	America	2003	Thunderbird 3.9L			HEC			√	√			
Ford	America	2004	Thunderbird 3.9L			HEC			√	√			
Ford	America	2002	Thunderbird 3.9L			RCM			√	√	√		
Ford	America	2003	Thunderbird 3.9L			RCM			√	√	√		
Ford	America	2004	Thunderbird 3.9L			RCM			√	√	√		
Ford	America	2002	Thunderbird 3.9L			REM			√	√			
Ford	America	2003	Thunderbird 3.9L			REM			√	√			
Ford	America	2004	Thunderbird 3.9L			REM			√	√			
Ford	America	1996	Thunderbird 4.6L			PCM		√	√	√	√		
Ford	America	1997	Thunderbird 4.6L			PCM		√	√	√	√		

Ford	America	1996	Town Car 4.6L			PCM		√	√	√	√		
Ford	America	1997	Town Car 4.6L			PCM		√	√	√	√		
Ford	America	1998	Town Car 4.6L			PCM		√	√	√	√		
Ford	America	1999	Town Car 4.6L			PCM		√	√	√	√		
Ford	America	2000	Town Car 4.6L			PCM		√	√	√	√		
Ford	America	2001	Town Car 4.6L			PCM		√	√	√	√		
Ford	America	2002	Town Car 4.6L			PCM		√	√	√	√		
Ford	America	2003	Town Car 4.6L			PCM		√	√	√	√		
Ford	America	2004	Town Car 4.6L			PCM		√	√	√	√		
Ford	America	1996	Town Car 4.6L			ABS			√	√	√		
Ford	America	1997	Town Car 4.6L			ABS			√	√	√		
Ford	America	1998	Town Car 4.6L			ABS			√	√	√		
Ford	America	1999	Town Car 4.6L			ABS			√	√	√		
Ford	America	2000	Town Car 4.6L			ABS			√	√	√		
Ford	America	2001	Town Car 4.6L			ABS			√	√	√		
Ford	America	2002	Town Car 4.6L			ABS			√	√	√		
Ford	America	2003	Town Car 4.6L			ABS			√	√	√		
Ford	America	2004	Town Car 4.6L			ABS			√	√	√		
Ford	America	1996	Town Car 4.6L			ACM			√	√			
Ford	America	1997	Town Car 4.6L			ACM			√	√			
Ford	America	1998	Town Car 4.6L			ACM			√	√			
Ford	America	1999	Town Car 4.6L			ACM			√	√			
Ford	America	2000	Town Car 4.6L			ACM			√	√			
Ford	America	2001	Town Car 4.6L			ACM			√	√			
Ford	America	2002	Town Car 4.6L			ACM			√	√			
Ford	America	2003	Town Car 4.6L			ACM			√	√			
Ford	America	2004	Town Car 4.6L			ACM			√	√			
Ford	America	1996	Town Car 4.6L			DDM			√	√	√		
Ford	America	1997	Town Car 4.6L			DDM			√	√	√		
Ford	America	1998	Town Car 4.6L			DDM			√	√	√		
Ford	America	1999	Town Car 4.6L			DDM			√	√	√		
Ford	America	2000	Town Car 4.6L			DDM			√	√	√		
Ford	America	2001	Town Car 4.6L			DDM			√	√	√		
Ford	America	2002	Town Car 4.6L			DDM			√	√	√		
Ford	America	2003	Town Car 4.6L			DDM			√	√	√		
Ford	America	2004	Town Car 4.6L			DDM			√	√	√		

Ford	America	1996	Town Car 4.6L			DSM			√	√	√		
Ford	America	1997	Town Car 4.6L			DSM			√	√	√		
Ford	America	1998	Town Car 4.6L			DSM			√	√	√		
Ford	America	1999	Town Car 4.6L			DSM			√	√	√		
Ford	America	2000	Town Car 4.6L			DSM			√	√	√		
Ford	America	2001	Town Car 4.6L			DSM			√	√	√		
Ford	America	2002	Town Car 4.6L			DSM			√	√	√		
Ford	America	2003	Town Car 4.6L			DSM			√	√	√		
Ford	America	2004	Town Car 4.6L			DSM			√	√	√		
Ford	America	1996	Town Car 4.6L			HEC			√	√			
Ford	America	1997	Town Car 4.6L			HEC			√	√			
Ford	America	1998	Town Car 4.6L			HEC			√	√			
Ford	America	1999	Town Car 4.6L			HEC			√	√			
Ford	America	2000	Town Car 4.6L			HEC			√	√			
Ford	America	2001	Town Car 4.6L			HEC			√	√			
Ford	America	2002	Town Car 4.6L			HEC			√	√			
Ford	America	2003	Town Car 4.6L			HEC			√	√			
Ford	America	2004	Town Car 4.6L			HEC			√	√			
Ford	America	1996	Town Car 4.6L			LCM			√	√			
Ford	America	1997	Town Car 4.6L			LCM			√	√			
Ford	America	1998	Town Car 4.6L			LCM			√	√			
Ford	America	1999	Town Car 4.6L			LCM			√	√			
Ford	America	2000	Town Car 4.6L			LCM			√	√			
Ford	America	2001	Town Car 4.6L			LCM			√	√			
Ford	America	2002	Town Car 4.6L			LCM			√	√			
Ford	America	2003	Town Car 4.6L			LCM			√	√			
Ford	America	2004	Town Car 4.6L			LCM			√	√			
Ford	America	1996	Town Car 4.6L			LTM			√	√			
Ford	America	1997	Town Car 4.6L			LTM			√	√			
Ford	America	1998	Town Car 4.6L			LTM			√	√			
Ford	America	1999	Town Car 4.6L			LTM			√	√			
Ford	America	2000	Town Car 4.6L			LTM			√	√			
Ford	America	2001	Town Car 4.6L			LTM			√	√			
Ford	America	2002	Town Car 4.6L			LTM			√	√			
Ford	America	2003	Town Car 4.6L			LTM			√	√			
Ford	America	2004	Town Car 4.6L			LTM			√	√			

Ford	America	1996	Town Car 4.6L			MC			√	√			
Ford	America	1997	Town Car 4.6L			MC			√	√			
Ford	America	1998	Town Car 4.6L			MC			√	√			
Ford	America	1999	Town Car 4.6L			MC			√	√			
Ford	America	2000	Town Car 4.6L			MC			√	√			
Ford	America	2001	Town Car 4.6L			MC			√	√			
Ford	America	2002	Town Car 4.6L			MC			√	√			
Ford	America	2003	Town Car 4.6L			MC			√	√			
Ford	America	2004	Town Car 4.6L			MC			√	√			
Ford	America	1996	Town Car 4.6L			NAV			√	√			
Ford	America	1997	Town Car 4.6L			NAV			√	√			
Ford	America	1998	Town Car 4.6L			NAV			√	√			
Ford	America	1999	Town Car 4.6L			NAV			√	√			
Ford	America	2000	Town Car 4.6L			NAV			√	√			
Ford	America	2001	Town Car 4.6L			NAV			√	√			
Ford	America	2002	Town Car 4.6L			NAV			√	√			
Ford	America	2003	Town Car 4.6L			NAV			√	√			
Ford	America	2004	Town Car 4.6L			NAV			√	√			
Ford	America	1996	Town Car 4.6L			NGSC			√	√			
Ford	America	1997	Town Car 4.6L			NGSC			√	√			
Ford	America	1998	Town Car 4.6L			NGSC			√	√			
Ford	America	1999	Town Car 4.6L			NGSC			√	√			
Ford	America	2000	Town Car 4.6L			NGSC			√	√			
Ford	America	2001	Town Car 4.6L			NGSC			√	√			
Ford	America	2002	Town Car 4.6L			NGSC			√	√			
Ford	America	2003	Town Car 4.6L			NGSC			√	√			
Ford	America	2004	Town Car 4.6L			NGSC			√	√			
Ford	America	1996	Town Car 4.6L			RASM			√	√			
Ford	America	1997	Town Car 4.6L			RASM			√	√			
Ford	America	1998	Town Car 4.6L			RASM			√	√			
Ford	America	1999	Town Car 4.6L			RASM			√	√			
Ford	America	2000	Town Car 4.6L			RASM			√	√			
Ford	America	2001	Town Car 4.6L			RASM			√	√			
Ford	America	2002	Town Car 4.6L			RASM			√	√			
Ford	America	2003	Town Car 4.6L			RASM			√	√			
Ford	America	2004	Town Car 4.6L			RASM			√	√			

Ford	America	1996	Town Car 4.6L			RCM			√	√	√		
Ford	America	1997	Town Car 4.6L			RCM			√	√	√		
Ford	America	1998	Town Car 4.6L			RCM			√	√	√		
Ford	America	1999	Town Car 4.6L			RCM			√	√	√		
Ford	America	2000	Town Car 4.6L			RCM			√	√	√		
Ford	America	2001	Town Car 4.6L			RCM			√	√	√		
Ford	America	2002	Town Car 4.6L			RCM			√	√	√		
Ford	America	2003	Town Car 4.6L			RCM			√	√	√		
Ford	America	2004	Town Car 4.6L			RCM			√	√	√		
Ford	America	2006	Town Car 4.6L			PCM			√	√	√		
Ford	America	2006	Town Car 4.6L			ABS			√	√	√		
Ford	America	2006	Town Car 4.6L			RCM			√	√	√		
Ford	America	2007	Town Car 4.6L			PCM			√	√	√		
Ford	America	2007	Town Car 4.6L			ABS			√	√	√		
Ford	America	2007	Town Car 4.6L			RCM			√	√	√		
Ford	America	2007	Town Car 4.6L			IC			√	√	√		
Ford	America	1996	Tracer 1.8L/1.9L			PCM		√	√	√	√		
Ford	America	1996	Tracer 1.8L/1.9L			RAP			√	√			
Ford	America	1997	Tracer 2.0L			PCM		√	√	√	√		
Ford	America	1998	Tracer 2.0L			PCM		√	√	√	√		
Ford	America	1999	Tracer 2.0L			PCM		√	√	√	√		
Ford	America	1997	Tracer 2.0L			ABS			√	√	√		
Ford	America	1998	Tracer 2.0L			ABS			√	√	√		
Ford	America	1999	Tracer 2.0L			ABS			√	√	√		
Ford	America	1997	Tracer 2.0L			IABM			√	√			
Ford	America	1998	Tracer 2.0L			IABM			√	√			
Ford	America	1999	Tracer 2.0L			IABM			√	√			
Ford	America	1997	Tracer 2.0L			RAP			√	√			
Ford	America	1998	Tracer 2.0L			RAP			√	√			
Ford	America	1999	Tracer 2.0L			RAP			√	√			
Ford	America	2001	Villager 3.3L			PCM		√	√	√	√		
Ford	America	2002	Villager 3.3L			PCM		√	√	√	√		
Ford	America	1996	Windstar 3.0L			PCM		√	√	√	√		
Ford	America	1997	Windstar 3.0L			PCM		√	√	√	√		
Ford	America	1998	Windstar 3.0L			PCM		√	√	√	√		
Ford	America	1999	Windstar 3.0L			PCM		√	√	√	√		

Ford	America	2000	Windstar 3.0L			PCM		√	√	√	√		
Ford	America	1996	Windstar 3.0L			ABS			√	√	√		
Ford	America	1997	Windstar 3.0L			ABS			√	√	√		
Ford	America	1998	Windstar 3.0L			ABS			√	√	√		
Ford	America	1999	Windstar 3.0L			ABS			√	√	√		
Ford	America	2000	Windstar 3.0L			ABS			√	√	√		
Ford	America	1996	Windstar 3.0L			DDM			√	√			
Ford	America	1997	Windstar 3.0L			DDM			√	√			
Ford	America	1998	Windstar 3.0L			DDM			√	√			
Ford	America	1999	Windstar 3.0L			DDM			√	√			
Ford	America	2000	Windstar 3.0L			DDM			√	√			
Ford	America	1996	Windstar 3.0L			DSM			√	√			
Ford	America	1997	Windstar 3.0L			DSM			√	√			
Ford	America	1998	Windstar 3.0L			DSM			√	√			
Ford	America	1999	Windstar 3.0L			DSM			√	√			
Ford	America	2000	Windstar 3.0L			DSM			√	√			
Ford	America	1996	Windstar 3.0L			FEM			√	√			
Ford	America	1997	Windstar 3.0L			FEM			√	√			
Ford	America	1998	Windstar 3.0L			FEM			√	√			
Ford	America	1999	Windstar 3.0L			FEM			√	√			
Ford	America	2000	Windstar 3.0L			FEM			√	√			
Ford	America	1996	Windstar 3.0L			IC			√	√			
Ford	America	1997	Windstar 3.0L			IC			√	√			
Ford	America	1998	Windstar 3.0L			IC			√	√			
Ford	America	1999	Windstar 3.0L			IC			√	√			
Ford	America	2000	Windstar 3.0L			IC			√	√			
Ford	America	1996	Windstar 3.0L			LPSDM			√	√			
Ford	America	1997	Windstar 3.0L			LPSDM			√	√			
Ford	America	1998	Windstar 3.0L			LPSDM			√	√			
Ford	America	1999	Windstar 3.0L			LPSDM			√	√			
Ford	America	2000	Windstar 3.0L			LPSDM			√	√			
Ford	America	1996	Windstar 3.0L			MC			√	√			
Ford	America	1997	Windstar 3.0L			MC			√	√			
Ford	America	1998	Windstar 3.0L			MC			√	√			
Ford	America	1999	Windstar 3.0L			MC			√	√			
Ford	America	2000	Windstar 3.0L			MC			√	√			

Ford	America	1996	Windstar 3.0L			NGSC			√	√			
Ford	America	1997	Windstar 3.0L			NGSC			√	√			
Ford	America	1998	Windstar 3.0L			NGSC			√	√			
Ford	America	1999	Windstar 3.0L			NGSC			√	√			
Ford	America	2000	Windstar 3.0L			NGSC			√	√			
Ford	America	1996	Windstar 3.0L			PAM			√	√			
Ford	America	1997	Windstar 3.0L			PAM			√	√			
Ford	America	1998	Windstar 3.0L			PAM			√	√			
Ford	America	1999	Windstar 3.0L			PAM			√	√			
Ford	America	2000	Windstar 3.0L			PAM			√	√			
Ford	America	1996	Windstar 3.0L			RCM			√	√	√		
Ford	America	1997	Windstar 3.0L			RCM			√	√	√		
Ford	America	1998	Windstar 3.0L			RCM			√	√	√		
Ford	America	1999	Windstar 3.0L			RCM			√	√	√		
Ford	America	2000	Windstar 3.0L			RCM			√	√	√		
Ford	America	1996	Windstar 3.0L			REM			√	√			
Ford	America	1997	Windstar 3.0L			REM			√	√			
Ford	America	1998	Windstar 3.0L			REM			√	√			
Ford	America	1999	Windstar 3.0L			REM			√	√			
Ford	America	2000	Windstar 3.0L			REM			√	√			
Ford	America	1996	Windstar 3.0L			RPSDM			√	√			
Ford	America	1997	Windstar 3.0L			RPSDM			√	√			
Ford	America	1998	Windstar 3.0L			RPSDM			√	√			
Ford	America	1999	Windstar 3.0L			RPSDM			√	√			
Ford	America	2000	Windstar 3.0L			RPSDM			√	√			
Ford	America	1996	Windstar 3.8L			PCM		√	√	√	√		
Ford	America	1997	Windstar 3.8L			PCM		√	√	√	√		
Ford	America	1998	Windstar 3.8L			PCM		√	√	√	√		
Ford	America	1999	Windstar 3.8L			PCM		√	√	√	√		
Ford	America	2000	Windstar 3.8L			PCM		√	√	√	√		
Ford	America	2001	Windstar 3.8L			PCM		√	√	√	√		
Ford	America	2002	Windstar 3.8L			PCM		√	√	√	√		
Ford	America	2003	Windstar 3.8L			PCM		√	√	√	√		
Ford	America	1996	Windstar 3.8L			ABS			√	√	√		
Ford	America	1997	Windstar 3.8L			ABS			√	√	√		
Ford	America	1998	Windstar 3.8L			ABS			√	√	√		

Ford	America	1999	Windstar 3.8L			ABS			√	√	√		
Ford	America	2000	Windstar 3.8L			ABS			√	√	√		
Ford	America	2001	Windstar 3.8L			ABS			√	√	√		
Ford	America	2002	Windstar 3.8L			ABS			√	√	√		
Ford	America	2003	Windstar 3.8L			ABS			√	√	√		
Ford	America	1996	Windstar 3.8L			DDM			√	√			
Ford	America	1997	Windstar 3.8L			DDM			√	√			
Ford	America	1998	Windstar 3.8L			DDM			√	√			
Ford	America	1999	Windstar 3.8L			DDM			√	√			
Ford	America	2000	Windstar 3.8L			DDM			√	√			
Ford	America	2001	Windstar 3.8L			DDM			√	√			
Ford	America	2002	Windstar 3.8L			DDM			√	√			
Ford	America	2003	Windstar 3.8L			DDM			√	√			
Ford	America	1996	Windstar 3.8L			DSM			√	√			
Ford	America	1997	Windstar 3.8L			DSM			√	√			
Ford	America	1998	Windstar 3.8L			DSM			√	√			
Ford	America	1999	Windstar 3.8L			DSM			√	√			
Ford	America	2000	Windstar 3.8L			DSM			√	√			
Ford	America	2001	Windstar 3.8L			DSM			√	√			
Ford	America	2002	Windstar 3.8L			DSM			√	√			
Ford	America	2003	Windstar 3.8L			DSM			√	√			
Ford	America	1996	Windstar 3.8L			FEM			√	√			
Ford	America	1997	Windstar 3.8L			FEM			√	√			
Ford	America	1998	Windstar 3.8L			FEM			√	√			
Ford	America	1999	Windstar 3.8L			FEM			√	√			
Ford	America	2000	Windstar 3.8L			FEM			√	√			
Ford	America	2001	Windstar 3.8L			FEM			√	√			
Ford	America	2002	Windstar 3.8L			FEM			√	√			
Ford	America	2003	Windstar 3.8L			FEM			√	√			
Ford	America	1996	Windstar 3.8L			IC			√	√			
Ford	America	1997	Windstar 3.8L			IC			√	√			
Ford	America	1998	Windstar 3.8L			IC			√	√			
Ford	America	1999	Windstar 3.8L			IC			√	√			
Ford	America	2000	Windstar 3.8L			IC			√	√			
Ford	America	2001	Windstar 3.8L			IC			√	√			
Ford	America	2002	Windstar 3.8L			IC			√	√			

Ford	America	2003	Windstar 3.8L			IC			√	√			
Ford	America	1996	Windstar 3.8L			LPSDM			√	√			
Ford	America	1997	Windstar 3.8L			LPSDM			√	√			
Ford	America	1998	Windstar 3.8L			LPSDM			√	√			
Ford	America	1999	Windstar 3.8L			LPSDM			√	√			
Ford	America	2000	Windstar 3.8L			LPSDM			√	√			
Ford	America	2001	Windstar 3.8L			LPSDM			√	√			
Ford	America	2002	Windstar 3.8L			LPSDM			√	√			
Ford	America	2003	Windstar 3.8L			LPSDM			√	√			
Ford	America	1996	Windstar 3.8L			MC			√	√			
Ford	America	1997	Windstar 3.8L			MC			√	√			
Ford	America	1998	Windstar 3.8L			MC			√	√			
Ford	America	1999	Windstar 3.8L			MC			√	√			
Ford	America	2000	Windstar 3.8L			MC			√	√			
Ford	America	2001	Windstar 3.8L			MC			√	√			
Ford	America	2002	Windstar 3.8L			MC			√	√			
Ford	America	2003	Windstar 3.8L			MC			√	√			
Ford	America	1996	Windstar 3.8L			NGSC			√	√			
Ford	America	1997	Windstar 3.8L			NGSC			√	√			
Ford	America	1998	Windstar 3.8L			NGSC			√	√			
Ford	America	1999	Windstar 3.8L			NGSC			√	√			
Ford	America	2000	Windstar 3.8L			NGSC			√	√			
Ford	America	2001	Windstar 3.8L			NGSC			√	√			
Ford	America	2002	Windstar 3.8L			NGSC			√	√			
Ford	America	2003	Windstar 3.8L			NGSC			√	√			
Ford	America	1996	Windstar 3.8L			PAM			√	√			
Ford	America	1997	Windstar 3.8L			PAM			√	√			
Ford	America	1998	Windstar 3.8L			PAM			√	√			
Ford	America	1999	Windstar 3.8L			PAM			√	√			
Ford	America	2000	Windstar 3.8L			PAM			√	√			
Ford	America	2001	Windstar 3.8L			PAM			√	√			
Ford	America	2002	Windstar 3.8L			PAM			√	√			
Ford	America	2003	Windstar 3.8L			PAM			√	√			
Ford	America	1996	Windstar 3.8L			RCM			√	√	√		
Ford	America	1997	Windstar 3.8L			RCM			√	√	√		
Ford	America	1998	Windstar 3.8L			RCM			√	√	√		

Ford	America	1999	Windstar 3.8L			RCM			√	√	√		
Ford	America	2000	Windstar 3.8L			RCM			√	√	√		
Ford	America	2001	Windstar 3.8L			RCM			√	√	√		
Ford	America	2002	Windstar 3.8L			RCM			√	√	√		
Ford	America	2003	Windstar 3.8L			RCM			√	√	√		
Ford	America	1996	Windstar 3.8L			REM			√	√			
Ford	America	1997	Windstar 3.8L			REM			√	√			
Ford	America	1998	Windstar 3.8L			REM			√	√			
Ford	America	1999	Windstar 3.8L			REM			√	√			
Ford	America	2000	Windstar 3.8L			REM			√	√			
Ford	America	2001	Windstar 3.8L			REM			√	√			
Ford	America	2002	Windstar 3.8L			REM			√	√			
Ford	America	2003	Windstar 3.8L			REM			√	√			
Ford	America	1996	Windstar 3.8L			RPSDM			√	√			
Ford	America	1997	Windstar 3.8L			RPSDM			√	√			
Ford	America	1998	Windstar 3.8L			RPSDM			√	√			
Ford	America	1999	Windstar 3.8L			RPSDM			√	√			
Ford	America	2000	Windstar 3.8L			RPSDM			√	√			
Ford	America	2001	Windstar 3.8L			RPSDM			√	√			
Ford	America	2002	Windstar 3.8L			RPSDM			√	√			
Ford	America	2003	Windstar 3.8L			RPSDM			√	√			
Ford	America	2006	ZEPHYR 3.0L			PCM			√	√	√		
Ford	America	2006	ZEPHYR 3.0L			ABS			√	√	√		
Ford	America	2006	ZEPHYR 3.0L			RCM			√	√	√		
Ford	America	2006	ZEPHYR 3.0L			GEM			√	√	√		
Ford	America	2006	ZEPHYR 3.0L			IC			√	√	√		