

How to read this list:	
Mark	Description
√	Function is supported.
*	Function is added or developed newly

V30/PC-MAX Function List													
Automaker:				LEXUS									
Software Version:				V4.4									
Automaker	Region	Year	Model	Vehicle Type	ECU Type	System	ECU Supplier	Sys. Info.	Read Code	Clear Code	Data Stream	Actuations	Special Functions
LEXUS	All	All	17Pin			Engine			√	√	√		
LEXUS	All	All	17Pin			AT			√	√			
LEXUS	All	All	17Pin			ABS			√	√			
LEXUS	All	All	17Pin			SRS			√	√			
LEXUS	All	All	17Pin			CC			√	√			
LEXUS	All	All	22Pin			Engine			√	√	√		
LEXUS	All	All	22Pin			AT			√	√			
LEXUS	All	All	22Pin			ABS			√	√			
LEXUS	All	All	22Pin			SRS			√	√			
LEXUS	All	All	22Pin			CC			√	√			
LEXUS	All	-0107	IS200			Engine and ECT			√	√	√	√	*1. Check Mode *2. Reset Memory
LEXUS	All	-0107	IS200			ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)

LEXUS	A11	-0107	IS200		Air Conditioner			✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	-0107	IS200		Immobiliser			✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure *3. Auto Registration Closure
LEXUS	A11	-0107	IS200		Theft Deterrent			✓	✓	✓	✓	
LEXUS	A11	-0107	IS200		SRS Airbag			✓	✓			
LEXUS	A11	-0107	IS200		Body			✓	✓	✓	✓	
LEXUS	A11	-0107	IS200		Combination Meter					✓	✓	
LEXUS	A11	0107-	IS200		Engine and ECT			✓	✓	✓	✓	*1. Check Mode *2. Reset Memory
LEXUS	A11	0107-	IS200		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	0107-	IS200		Air Conditioner			✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	0107-	IS200		Immobiliser			✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure *3. Auto Registration Closure
LEXUS	A11	0107-	IS200		Theft Deterrent			✓	✓	✓	✓	
LEXUS	A11	0107-	IS200		SRS Airbag			✓	✓			
LEXUS	A11	0107-	IS200		Body			✓	✓	✓	✓	
LEXUS	A11	0107-	IS200		Combination Meter					✓	✓	
LEXUS	A11	A11	ARISTO		Engine and ECT			✓	✓	✓	✓	*1. Check Mode *2. Reset Memory

LEXUS	A11	A11	ARISTO		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	A11	ARISTO		Air Conditioner			✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	A11	ARISTO		Immobiliser			✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure *3. Auto Registration Closure
LEXUS	A11	A11	ARISTO		SRS Airbag			✓	✓			
LEXUS	A11	A11	ARISTO		Body			✓	✓	✓	✓	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	A11	ARISTO		Body No. 2					✓	✓	
LEXUS	A11	A11	ARISTO		Driver Door			✓	✓	✓	✓	
LEXUS	A11	A11	ARISTO		Passenger Door			✓	✓	✓	✓	
LEXUS	A11	A11	ARISTO		Rear Left Door			✓	✓	✓	✓	
LEXUS	A11	A11	ARISTO		Rear Right Door			✓	✓	✓	✓	
LEXUS	A11	A11	ARISTO		Driver Seat					✓	✓	
LEXUS	A11	A11	ARISTO		Sliding Roof					✓	✓	
LEXUS	A11	A11	ARISTO		Tilt&Telescopic			✓	✓	✓	✓	
LEXUS	A11	A11	ARISTO		Combination Meter					✓	✓	
LEXUS	A11	-0007	GS300		Engine and ECT			✓	✓	✓	✓	*1. Check Mode *2. Reset Memory

LEXUS	A11	-0007	GS300			ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	-0007	GS300			Air Conditioner			✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	-0007	GS300			Immobiliser			✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure *3. Auto Registration Closure
LEXUS	A11	-0007	GS300			SRS Airbag			✓	✓			
LEXUS	A11	-0007	GS300			Body			✓	✓	✓	✓	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	-0007	GS300			Body No. 2					✓	✓	
LEXUS	A11	-0007	GS300			Driver Door			✓	✓	✓	✓	
LEXUS	A11	-0007	GS300			Passenger Door			✓	✓	✓	✓	
LEXUS	A11	-0007	GS300			Rear Left Door			✓	✓	✓	✓	
LEXUS	A11	-0007	GS300			Rear Right Door			✓	✓	✓	✓	
LEXUS	A11	-0007	GS300			Driver Seat					✓	✓	
LEXUS	A11	-0007	GS300			Sliding Roof					✓	✓	
LEXUS	A11	-0007	GS300			Tilt&Telescopic			✓	✓	✓	✓	
LEXUS	A11	-0007	GS300			Combination Meter					✓	✓	
LEXUS	A11	0007-0108	GS300			Engine and ECT			✓	✓	✓	✓	*1. Check Mode *2. Reset Memory

LEXUS	A11	0007-0108	GS300		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	0007-0108	GS300		Air Conditioner			√	√	√	√	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	0007-0108	GS300		Immobiliser			√	√	√	√	1. Key Code Registration 2. Key Code Erasure *3. Auto Registration Closure
LEXUS	A11	0007-0108	GS300		SRS Airbag			√	√			
LEXUS	A11	0007-0108	GS300		Body			√	√	√	√	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	0007-0108	GS300		Body No. 2					√	√	
LEXUS	A11	0007-0108	GS300		Driver Door			√	√	√	√	
LEXUS	A11	0007-0108	GS300		Passenger Door			√	√	√	√	
LEXUS	A11	0007-0108	GS300		Rear Left Door			√	√	√	√	
LEXUS	A11	0007-0108	GS300		Rear Right Door			√	√	√	√	
LEXUS	A11	0007-0108	GS300		Driver Seat					√	√	
LEXUS	A11	0007-0108	GS300		Sliding Roof					√	√	
LEXUS	A11	0007-0108	GS300		Tilt&Telescopic			√	√	√	√	

LEXUS	A11	0007-0108	GS300		Combination Meter					✓	✓	
LEXUS	A11	0108-	GS300		Engine and ECT			✓	✓	✓	✓	*1. Check Mode *2. Reset Memory
LEXUS	A11	0108-	GS300		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	0108-	GS300		Air Conditioner			✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	0108-	GS300		Immobiliser			✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure *3. Auto Registration Closure
LEXUS	A11	0108-	GS300		SRS Airbag			✓	✓			
LEXUS	A11	0108-	GS300		Body			✓	✓	✓	✓	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	0108-	GS300		Body No. 2					✓	✓	
LEXUS	A11	0108-	GS300		Driver Door			✓	✓	✓	✓	
LEXUS	A11	0108-	GS300		Passenger Door			✓	✓	✓	✓	
LEXUS	A11	0108-	GS300		Rear Left Door			✓	✓	✓	✓	
LEXUS	A11	0108-	GS300		Rear Right Door			✓	✓	✓	✓	
LEXUS	A11	0108-	GS300		Driver Seat					✓	✓	
LEXUS	A11	0108-	GS300		Sliding Roof					✓	✓	
LEXUS	A11	0108-	GS300		Tilt&Telescopic			✓	✓	✓	✓	
LEXUS	A11	0108-	GS300		Combination Meter					✓	✓	
LEXUS	A11	A11	ES300		Engine and ECT			✓	✓	✓	✓	*1. Check Mode *2. Reset Memory
LEXUS	A11	A11	ES300		EMS			✓	✓	✓	✓	

LEXUS	A11	A11	ES300		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	A11	ES300		Immobiliser			√	√	√	√	1. Key Code Registration 2. Key Code Erasure *3. Auto Registration Closure
LEXUS	A11	A11	ES300		Theft Deterrent			√	√	√	√	
LEXUS	A11	A11	ES300		SRS Airbag			√	√			
LEXUS	A11	A11	ES300		Body			√	√	√	√	
LEXUS	A11	A11	ES300		Driver Door			√	√	√	√	
LEXUS	A11	A11	ES300		Passenger Door			√	√	√	√	
LEXUS	A11	-0009	ES300		Engine and ECT			√	√	√	√	*1. Check Mode *2. Reset Memory
LEXUS	A11	-0009	ES300		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	-0009	ES300		SRS Airbag			√	√			
LEXUS	A11	0009-	ES300		Engine and ECT			√	√	√	√	*1. Check Mode *2. Reset Memory
LEXUS	A11	0009-	ES300		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)

LEXUS	A11	0009-	ES300		SRS Airbag			✓	✓			
LEXUS	A11	-0008	LX470		Engine and ECT			✓	✓	✓	✓	*1. Check Mode *2. Reset Memory
LEXUS	A11	-0008	LX470		AHC			✓	✓	✓	✓	
LEXUS	A11	-0008	LX470		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down、Linear Valve Offset)
LEXUS	A11	-0008	LX470		Immobiliser			✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure *3. Auto Registration Closure
LEXUS	A11	-0008	LX470		SRS Airbag			✓	✓			
LEXUS	A11	-0008	LX470		Body			✓	✓	✓	✓	
LEXUS	A11	-0008	LX470		Driver Seat					✓	✓	
LEXUS	A11	-0008	LX470		Tilt&Telescopic			✓	✓	✓	✓	
LEXUS	A11	-0008	LX470		Mirror					✓	✓	
LEXUS	A11	0008-0208	LX470		Engine and ECT			✓	✓	✓	✓	*1. Check Mode *2. Reset Memory
LEXUS	A11	0008-0208	LX470		AHC			✓	✓	✓	✓	
LEXUS	A11	0008-0208	LX470		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down、Linear Valve Offset)
LEXUS	A11	0008-0208	LX470		Immobiliser			✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure *3. Auto Registration Closure

LEXUS	A11	0008-0208	LX470		SRS Airbag			✓	✓			
LEXUS	A11	0008-0208	LX470		Body			✓	✓	✓	✓	
LEXUS	A11	0008-0208	LX470		Driver Seat					✓	✓	
LEXUS	A11	0008-0208	LX470		Tilt&Telescopic			✓	✓	✓	✓	
LEXUS	A11	0008-0208	LX470		Mirror					✓	✓	
LEXUS	A11	0208-0408	LX470		Engine and ECT			✓	✓	✓	✓	*1. Check Mode *2. Reset Memory
LEXUS	A11	0208-0408	LX470		AHC			✓	✓	✓	✓	
LEXUS	A11	0208-0408	LX470		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	0208-0408	LX470		VGRS			✓	✓	✓		
LEXUS	A11	0208-0408	LX470		Immobiliser			✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure
LEXUS	A11	0208-0408	LX470		Theft Deterrent			✓	✓	✓	✓	
LEXUS	A11	0208-0408	LX470		SRS Airbag			✓	✓			
LEXUS	A11	0208-0408	LX470		Body			✓	✓	✓	✓	

LEXUS	A11	0208-0408	LX470		Body No. 2					√	√	
LEXUS	A11	0208-0408	LX470		Driver Door			√	√	√	√	
LEXUS	A11	0208-0408	LX470		Driver Seat					√	√	
LEXUS	A11	0208-0408	LX470		Sliding Roof					√	√	
LEXUS	A11	0208-0408	LX470		Tilt&Telescopic			√	√	√	√	
LEXUS	A11	0208-0408	LX470		Mirror					√	√	
LEXUS	A11	0208-0408	LX470		Rain Sensor					√		
LEXUS	A11	0208-0408	LX470		Wiper					√	√	
LEXUS	A11	0408-	LX470		Engine and ECT			√	√	√	√	*1. Check Mode *2. Reset Memory
LEXUS	A11	0408-	LX470		AHC			√	√	√	√	
LEXUS	A11	0408-	LX470		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down、Linear Valve Offset)
LEXUS	A11	0408-	LX470		VGRS			√	√	√		
LEXUS	A11	0408-	LX470		Immobiliser			√	√	√	√	1. Key Code Registration 2. Key Code Erasure
LEXUS	A11	0408-	LX470		Theft Deterrent			√	√	√	√	
LEXUS	A11	0408-	LX470		SRS Airbag			√	√			
LEXUS	A11	0408-	LX470		Body			√	√	√	√	

LEXUS	A11	0408-	LX470		Body No. 2				✓	✓		
LEXUS	A11	0408-	LX470		Driver Door		✓	✓	✓	✓		
LEXUS	A11	0408-	LX470		Driver Seat				✓	✓		
LEXUS	A11	0408-	LX470		Sliding Roof				✓	✓		
LEXUS	A11	0408-	LX470		Tilt&Telescopic		✓	✓	✓	✓		
LEXUS	A11	0408-	LX470		Mirror				✓	✓		
LEXUS	A11	0408-	LX470		Rain Sensor				✓			
LEXUS	A11	0408-	LX470		Wiper				✓	✓		
LEXUS	A11	A11	SC430		Engine and ECT		✓	✓	✓	✓		*1. Check Mode *2. Reset Memory
LEXUS	A11	A11	SC430		ABS/VSC/TRC		✓	✓	✓	✓		1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down、Linear Valve Offset)
LEXUS	A11	A11	SC430		Tire Pressure Monitor		✓	✓	✓			
LEXUS	A11	A11	SC430		Air Conditioner		✓	✓	✓	✓		1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	A11	SC430		Immobiliser		✓	✓	✓	✓		1. Key Code Registration 2. Key Code Erasure
LEXUS	A11	A11	SC430		Theft Deterrent		✓	✓	✓	✓		
LEXUS	A11	A11	SC430		SRS Airbag		✓	✓				
LEXUS	A11	A11	SC430		Gateway		✓	✓				
LEXUS	A11	A11	SC430		Body No. 2				✓	✓		
LEXUS	A11	A11	SC430		Body No. 3				✓	✓		
LEXUS	A11	A11	SC430		Body No. 4		✓	✓	✓	✓		
LEXUS	A11	A11	SC430		Body No. 5		✓	✓	✓	✓		
LEXUS	A11	A11	SC430		Driver Door		✓	✓	✓	✓		
LEXUS	A11	A11	SC430		Passenger Door		✓	✓	✓	✓		

LEXUS	All	All	SC430		Driver Seat					✓	✓	
LEXUS	All	All	SC430		Passenger Seat					✓	✓	
LEXUS	All	All	SC430		Retractable Hardtop			✓	✓	✓		
LEXUS	All	All	SC430		Tilt&Telescopic			✓	✓	✓	✓	
LEXUS	All	All	SC430		Combination Meter					✓	✓	
LEXUS	All	All	SC430		Combination Switch					✓		
LEXUS	All	All	SC430		Steering Pad Switch					✓		
LEXUS	Others	All	GS300, - 0608		Engine			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	Others	All	GS300, - 0608		ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	Others	All	GS300, - 0608		Cruise Control			✓	✓			
LEXUS	Others	All	GS300, - 0608		EMS			✓	✓	✓	✓	

LEXUS	Others	All	GS300, - 0608		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	Others	All	GS300, - 0608		Tire Pressure Monitor			√	√	√		
LEXUS	Others	All	GS300, - 0608		EMPS			√	√	√		1. Torque Sensor Adjustment
LEXUS	Others	All	GS300, - 0608		Air Conditioner			√	√	√	√	1. Compass calibration 2. Servomotor Initialization
LEXUS	Others	All	GS300, - 0608		SRS Airbag			√	√			
LEXUS	Others	All	GS300, - 0608		Body			√	√	√	√	
LEXUS	Others	All	GS300, - 0608		Gateway			√	√			
LEXUS	Others	All	GS300, - 0608		Body No. 3					√	√	
LEXUS	Others	All	GS300, - 0608		Body No. 4			√	√	√	√	
LEXUS	Others	All	GS300, - 0608		Body No. 5			√	√	√	√	
LEXUS	Others	All	GS300, - 0608		Driver Door			√	√	√	√	
LEXUS	Others	All	GS300, - 0608		Passenger Door			√	√	√	√	
LEXUS	Others	All	GS300, - 0608		Rear Left Door			√	√	√	√	

LEXUS	Others	All	GS300, - 0608			Rear Right Door			√	√	√	√	
LEXUS	Others	All	GS300, - 0608			Driver Seat					√	√	
LEXUS	Others	All	GS300, - 0608			Passenger Seat					√	√	
LEXUS	Others	All	GS300, - 0608			Master Switch					√	√	
LEXUS	Others	All	GS300, - 0608			D-SEAT SW					√		
LEXUS	Others	All	GS300, - 0608			Sliding Roof					√	√	
LEXUS	Others	All	GS300, - 0608			Tilt&Telescopic			√	√	√	√	
LEXUS	Others	All	GS300, - 0608			Combination Meter					√	√	
LEXUS	Others	All	GS300, - 0608			Combination Switch					√		
LEXUS	Others	All	GS300, - 0608			Clearance Sonar			√	√			
LEXUS	Others	All	GS300, - 0608			Rain Sensor					√		
LEXUS	Others	All	GS300, - 0608			AFS			√	√	√	√	
LEXUS	Others	All	GS300, - 0608			Entry&Start			√	√	√	√	
LEXUS	Others	All	GS300, - 0608			Power Source Control			√	√	√	√	
LEXUS	Others	All	GS300, - 0608			Pre-Crash			√	√	√	√	

SERVICE SOLUTIONS

LEXUS	MIDDLE EAST	All	GS300, - 0608	Engine	✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	MIDDLE EAST	All	GS300, - 0608	ECT	✓	✓	✓	✓	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	MIDDLE EAST	All	GS300, - 0608	Cruise Control	✓	✓			
LEXUS	MIDDLE EAST	All	GS300, - 0608	EMS	✓	✓	✓	✓	
LEXUS	MIDDLE EAST	All	GS300, - 0608	ABS/VSC/TRC	✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	MIDDLE EAST	All	GS300, - 0608	Tire Pressure Monitor	✓	✓	✓		
LEXUS	MIDDLE EAST	All	GS300, - 0608	EMPS	✓	✓	✓		1. Torque Sensor Adjustment
LEXUS	MIDDLE EAST	All	GS300, - 0608	Air Conditioner	✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization
LEXUS	MIDDLE EAST	All	GS300, - 0608	SRS Airbag	✓	✓			
LEXUS	MIDDLE EAST	All	GS300, - 0608	Body	✓	✓	✓	✓	

LEXUS	MIDDLE EAST	A11	GS300, - 0608			Gateway			√	√			
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Body No. 3					√	√	
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Body No. 4			√	√	√	√	
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Body No. 5			√	√	√	√	
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Driver Door			√	√	√	√	
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Passenger Door			√	√	√	√	
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Rear Left Door			√	√	√	√	
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Rear Right Door			√	√	√	√	
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Driver Seat					√	√	
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Passenger Seat					√	√	
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Master Switch					√	√	
LEXUS	MIDDLE EAST	A11	GS300, - 0608			D-SEAT SW					√		
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Sliding Roof					√	√	
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Tilt&Telescopic			√	√	√	√	
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Combination Meter					√	√	

LEXUS	MIDDLE EAST	All	GS300, -0608		Combination Switch					✓		
LEXUS	MIDDLE EAST	All	GS300, -0608		Clearance Sonar			✓	✓			
LEXUS	MIDDLE EAST	All	GS300, -0608		Rain Sensor					✓		
LEXUS	MIDDLE EAST	All	GS300, -0608		AFS			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	All	GS300, -0608		Entry&Start			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	All	GS300, -0608		Power Source Control			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 0608-0709		Engine			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	Others	All	GS300, 0608-0709		ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	Others	All	GS300, 0608-0709		Cruise Control			✓	✓			
LEXUS	Others	All	GS300, 0608-0709		EMS			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 0608-0709		Stabilizer			✓	✓	✓		

LEXUS	Others	All	GS300, 06 08-0709		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	Others	All	GS300, 06 08-0709		Tire Pressure Monitor			✓	✓	✓		
LEXUS	Others	All	GS300, 06 08-0709		EMPS			✓	✓	✓		1. Torque Sensor Adjustment
LEXUS	Others	All	GS300, 06 08-0709		Air Conditioner			✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization
LEXUS	Others	All	GS300, 06 08-0709		SRS Airbag			✓	✓			
LEXUS	Others	All	GS300, 06 08-0709		Body			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 06 08-0709		Gateway BEAN			✓	✓			
LEXUS	Others	All	GS300, 06 08-0709		Gateway CAN			✓	✓			1. Initialization
LEXUS	Others	All	GS300, 06 08-0709		Body No. 3					✓	✓	
LEXUS	Others	All	GS300, 06 08-0709		Body No. 4			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 06 08-0709		Body No. 5			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 06 08-0709		Driver Door			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 06 08-0709		Passenger Door			✓	✓	✓	✓	

LEXUS	Others	All	GS300, 06 08-0709			Rear Left Door			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 06 08-0709			Rear Right Door			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 06 08-0709			Driver Seat					✓	✓	
LEXUS	Others	All	GS300, 06 08-0709			Passenger Seat					✓	✓	
LEXUS	Others	All	GS300, 06 08-0709			Master Switch					✓	✓	
LEXUS	Others	All	GS300, 06 08-0709			D-SEAT SW					✓		
LEXUS	Others	All	GS300, 06 08-0709			Sliding Roof					✓	✓	
LEXUS	Others	All	GS300, 06 08-0709			Tilt&Telescopic			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 06 08-0709			Combination Meter					✓	✓	
LEXUS	Others	All	GS300, 06 08-0709			Combination Switch					✓		
LEXUS	Others	All	GS300, 06 08-0709			Clearance Sonar			✓	✓			
LEXUS	Others	All	GS300, 06 08-0709			Rain Sensor					✓		
LEXUS	Others	All	GS300, 06 08-0709			AFS			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 06 08-0709			Entry&Start			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 06 08-0709			Power Source Control			✓	✓	✓	✓	

LEXUS	Others	All	GS300, 06 08-0709		Occupant Detection			✓	✓	✓		
LEXUS	Others	All	GS300, 06 08-0709		Pre-Crash			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 06 08-0709		Gateway CAN			✓	✓			1. Initialization
LEXUS	MIDDLE EAST	All	GS300, 06 08-0709		Engine			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	MIDDLE EAST	All	GS300, 06 08-0709		ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	MIDDLE EAST	All	GS300, 06 08-0709		Cruise Control			✓	✓			
LEXUS	MIDDLE EAST	All	GS300, 06 08-0709		EMS			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	All	GS300, 06 08-0709		Stabilizer			✓	✓	✓		
LEXUS	MIDDLE EAST	All	GS300, 06 08-0709		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	MIDDLE EAST	All	GS300, 06 08-0709		Tire Pressure Monitor			✓	✓	✓		

LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709		EMPS			✓	✓	✓		1. Torque Sensor Adjustment
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709		Air Conditioner			✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709		SRS Airbag			✓	✓			
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709		Body			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709		Gateway BEAN			✓	✓			
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709		Gateway CAN			✓	✓			1. Initialization
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709		Body No. 3					✓	✓	
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709		Body No. 4			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709		Body No. 5			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709		Driver Door			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709		Passenger Door			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709		Rear Left Door			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709		Rear Right Door			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709		Driver Seat					✓	✓	
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709		Passenger Seat					✓	✓	

LEXUS	MIDDLE EAST	All	GS300, 06 08-0709		Master Switch					✓	✓	
LEXUS	MIDDLE EAST	All	GS300, 06 08-0709		D-SEAT SW					✓		
LEXUS	MIDDLE EAST	All	GS300, 06 08-0709		Sliding Roof					✓	✓	
LEXUS	MIDDLE EAST	All	GS300, 06 08-0709		Tilt&Telescopic			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	All	GS300, 06 08-0709		Combination Meter					✓	✓	
LEXUS	MIDDLE EAST	All	GS300, 06 08-0709		Combination Switch					✓		
LEXUS	MIDDLE EAST	All	GS300, 06 08-0709		Clearance Sonar			✓	✓			
LEXUS	MIDDLE EAST	All	GS300, 06 08-0709		Rain Sensor					✓		
LEXUS	MIDDLE EAST	All	GS300, 06 08-0709		AFS			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	All	GS300, 06 08-0709		Entry&Start			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	All	GS300, 06 08-0709		Power Source Control			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 07 09-0808		Engine			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode

LEXUS	Others	All	GS300, 07 09-0808		ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	Others	All	GS300, 07 09-0808		Cruise Control			✓	✓			
LEXUS	Others	All	GS300, 07 09-0808		EMS			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 07 09-0808		Stabilizer			✓	✓	✓		
LEXUS	Others	All	GS300, 07 09-0808		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	Others	All	GS300, 07 09-0808		Four Wheel Drive			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 07 09-0808		Tire Pressure Monitor			✓	✓	✓		
LEXUS	Others	All	GS300, 07 09-0808		EMPS			✓	✓	✓		1. Torque Sensor Adjustment
LEXUS	Others	All	GS300, 07 09-0808		VGRS			✓	✓	✓		
LEXUS	Others	All	GS300, 07 09-0808		Air Conditioner			✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization
LEXUS	Others	All	GS300, 07 09-0808		SRS Airbag			✓	✓			
LEXUS	Others	All	GS300, 07 09-0808		Body			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 07 09-0808		Gateway BEAN			✓	✓			

LEXUS	Others	All	GS300, 07 09-0808		Gateway CAN			√	√				1. Initialization
LEXUS	Others	All	GS300, 07 09-0808		Body No. 3					√		√	
LEXUS	Others	All	GS300, 07 09-0808		Body No. 4			√	√	√		√	
LEXUS	Others	All	GS300, 07 09-0808		Body No. 5			√	√	√		√	
LEXUS	Others	All	GS300, 07 09-0808		Driver Door			√	√	√		√	
LEXUS	Others	All	GS300, 07 09-0808		Passenger Door			√	√	√		√	
LEXUS	Others	All	GS300, 07 09-0808		Rear Left Door			√	√	√		√	
LEXUS	Others	All	GS300, 07 09-0808		Rear Right Door			√	√	√		√	
LEXUS	Others	All	GS300, 07 09-0808		Driver Seat					√		√	
LEXUS	Others	All	GS300, 07 09-0808		Passenger Seat					√		√	
LEXUS	Others	All	GS300, 07 09-0808		Master Switch					√		√	
LEXUS	Others	All	GS300, 07 09-0808		D-SEAT SW					√			
LEXUS	Others	All	GS300, 07 09-0808		Sliding Roof					√		√	
LEXUS	Others	All	GS300, 07 09-0808		Tilt&Telescopic			√	√	√		√	
LEXUS	Others	All	GS300, 07 09-0808		Combination Meter					√		√	

LEXUS	Others	All	GS300, 07 09-0808		Combination Switch					✓		
LEXUS	Others	All	GS300, 07 09-0808		Clearance Sonar			✓	✓			
LEXUS	Others	All	GS300, 07 09-0808		Rain Sensor					✓		
LEXUS	Others	All	GS300, 07 09-0808		AFS			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 07 09-0808		Entry&Start			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 07 09-0808		Power Source Control			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 07 09-0808		Occupant Detection			✓	✓	✓		
LEXUS	MIDDLE EAST	All	GS300, 07 09-0808		Engine			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	MIDDLE EAST	All	GS300, 07 09-0808		ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	MIDDLE EAST	All	GS300, 07 09-0808		Cruise Control			✓	✓			
LEXUS	MIDDLE EAST	All	GS300, 07 09-0808		EMS			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	All	GS300, 07 09-0808		Stabilizer			✓	✓	✓		

LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808		Tire Pressure Monitor			✓	✓	✓		
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808		EMPS			✓	✓	✓		1. Torque Sensor Adjustment
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808		VGRS			✓	✓	✓		
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808		Air Conditioner			✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808		SRS Airbag			✓	✓			
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808		Body			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808		Gateway BEAN			✓	✓			
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808		Gateway CAN			✓	✓			1. Initialization
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808		Body No. 3					✓	✓	
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808		Body No. 4			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808		Body No. 5			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808		Driver Door			✓	✓	✓	✓	

LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808		Passenger Door			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808		Rear Left Door			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808		Rear Right Door			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808		Driver Seat					✓	✓	
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808		Passenger Seat					✓	✓	
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808		Master Switch					✓	✓	
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808		D-SEAT SW					✓		
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808		Sliding Roof					✓	✓	
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808		Tilt&Telescopic			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808		Combination Meter					✓	✓	
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808		Combination Switch					✓		
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808		Clearance Sonar			✓	✓			
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808		Rain Sensor					✓		
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808		AFS			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808		Entry&Start			✓	✓	✓	✓	

LEXUS	MIDDLE EAST	All	GS300, 07 09-0808		Power Source Control			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 08 08-		Engine			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	Others	All	GS300, 08 08-		ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	Others	All	GS300, 08 08-		Cruise Control			✓	✓			
LEXUS	Others	All	GS300, 08 08-		EMS			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 08 08-		Stabilizer			✓	✓	✓		
LEXUS	Others	All	GS300, 08 08-		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	Others	All	GS300, 08 08-		Tire Pressure Monitor			✓	✓	✓		
LEXUS	Others	All	GS300, 08 08-		EMPS			✓	✓	✓		1. Torque Sensor Adjustment
LEXUS	Others	All	GS300, 08 08-		Air Conditioner			✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization

LEXUS	Others	All	GS300, 08 08-			SRS Airbag			✓	✓			
LEXUS	Others	All	GS300, 08 08-			Body			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 08 08-			Gateway BEAN			✓	✓			
LEXUS	Others	All	GS300, 08 08-			Gateway CAN			✓	✓			1. Initialization
LEXUS	Others	All	GS300, 08 08-			Body No. 3					✓	✓	
LEXUS	Others	All	GS300, 08 08-			Body No. 4			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 08 08-			Body No. 5			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 08 08-			Driver Door			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 08 08-			Passenger Door			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 08 08-			Rear Left Door			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 08 08-			Rear Right Door			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 08 08-			Driver Seat					✓	✓	
LEXUS	Others	All	GS300, 08 08-			Passenger Seat					✓	✓	
LEXUS	Others	All	GS300, 08 08-			Master Switch					✓	✓	
LEXUS	Others	All	GS300, 08 08-			D-SEAT SW					✓		

LEXUS	Others	All	GS300, 08 08-		Sliding Roof					✓	✓	
LEXUS	Others	All	GS300, 08 08-		Tilt&Telescopic			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 08 08-		Combination Meter					✓	✓	
LEXUS	Others	All	GS300, 08 08-		Combination Switch					✓		
LEXUS	Others	All	GS300, 08 08-		Clearance Sonar			✓	✓			
LEXUS	Others	All	GS300, 08 08-		Rain Sensor					✓		
LEXUS	Others	All	GS300, 08 08-		AFS			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 08 08-		Entry&Start			✓	✓	✓	✓	
LEXUS	Others	All	GS300, 08 08-		Power Source Control			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	All	GS300, 08 08-		Engine			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	MIDDLE EAST	All	GS300, 08 08-		ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	MIDDLE EAST	All	GS300, 08 08-		Cruise Control			✓	✓			

LEXUS	MIDDLE EAST	A11	GS300, 08-08-		EMS			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	A11	GS300, 08-08-		Stabilizer			✓	✓	✓		
LEXUS	MIDDLE EAST	A11	GS300, 08-08-		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	MIDDLE EAST	A11	GS300, 08-08-		Tire Pressure Monitor			✓	✓	✓		
LEXUS	MIDDLE EAST	A11	GS300, 08-08-		EMPS			✓	✓	✓		1. Torque Sensor Adjustment
LEXUS	MIDDLE EAST	A11	GS300, 08-08-		Air Conditioner			✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization
LEXUS	MIDDLE EAST	A11	GS300, 08-08-		SRS Airbag			✓	✓			
LEXUS	MIDDLE EAST	A11	GS300, 08-08-		Body			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	A11	GS300, 08-08-		Gateway BEAN			✓	✓			
LEXUS	MIDDLE EAST	A11	GS300, 08-08-		Gateway CAN			✓	✓			1. Initialization
LEXUS	MIDDLE EAST	A11	GS300, 08-08-		Body No. 3					✓	✓	
LEXUS	MIDDLE EAST	A11	GS300, 08-08-		Body No. 4			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	A11	GS300, 08-08-		Body No. 5			✓	✓	✓	✓	

LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Driver Door			√	√	√	√	
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Passenger Door			√	√	√	√	
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Rear Left Door			√	√	√	√	
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Rear Right Door			√	√	√	√	
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Driver Seat					√	√	
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Passenger Seat					√	√	
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Master Switch					√	√	
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			D-SEAT SW					√		
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Sliding Roof					√	√	
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Tilt&Telescopic			√	√	√	√	
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Combination Meter					√	√	
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Combination Switch					√		
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Clearance Sonar			√	√			
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Rain Sensor					√		
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			AFS			√	√	√	√	

LEXUS	MIDDLE EAST	A11	GS300, 08-08-		Entry&Start			√	√	√	√	
LEXUS	MIDDLE EAST	A11	GS300, 08-08-		Power Source Control			√	√	√	√	
LEXUS	A11	A11	GS350, -0808		Engine			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	A11	A11	GS350, -0808		ECT			√	√	√	√	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	A11	A11	GS350, -0808		Cruise Control			√	√			
LEXUS	A11	A11	GS350, -0808		EMS			√	√	√	√	
LEXUS	A11	A11	GS350, -0808		Stabilizer			√	√	√		
LEXUS	A11	A11	GS350, -0808		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	A11	GS350, -0808		Four Wheel Drive			√	√	√	√	
LEXUS	A11	A11	GS350, -0808		Tire Pressure Monitor			√	√	√		

LEXUS	A11	A11	GS350, - 0808		EMPS			✓	✓	✓		1. Torque Sensor Adjustment
LEXUS	A11	A11	GS350, - 0808		Air Conditioner			✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	A11	GS350, - 0808		SRS Airbag			✓	✓			
LEXUS	A11	A11	GS350, - 0808		Body			✓	✓	✓	✓	
LEXUS	A11	A11	GS350, - 0808		Gateway BEAN			✓	✓			
LEXUS	A11	A11	GS350, - 0808		Gateway CAN			✓	✓			1. Initialization
LEXUS	A11	A11	GS350, - 0808		Body No. 3					✓	✓	
LEXUS	A11	A11	GS350, - 0808		Body No. 4			✓	✓	✓	✓	
LEXUS	A11	A11	GS350, - 0808		Body No. 5			✓	✓	✓	✓	
LEXUS	A11	A11	GS350, - 0808		Driver Door			✓	✓	✓	✓	
LEXUS	A11	A11	GS350, - 0808		Passenger Door			✓	✓	✓	✓	
LEXUS	A11	A11	GS350, - 0808		Rear Left Door			✓	✓	✓	✓	
LEXUS	A11	A11	GS350, - 0808		Rear Right Door			✓	✓	✓	✓	
LEXUS	A11	A11	GS350, - 0808		Driver Seat					✓	✓	
LEXUS	A11	A11	GS350, - 0808		Passenger Seat					✓	✓	

LEXUS	A11	A11	GS350, - 0808			Master Switch					✓	✓	
LEXUS	A11	A11	GS350, - 0808			D-SEAT SW					✓		
LEXUS	A11	A11	GS350, - 0808			Sliding Roof					✓	✓	
LEXUS	A11	A11	GS350, - 0808			Tilt&Telescopic			✓	✓	✓	✓	
LEXUS	A11	A11	GS350, - 0808			Combination Meter					✓	✓	
LEXUS	A11	A11	GS350, - 0808			Combination Switch					✓		
LEXUS	A11	A11	GS350, - 0808			Clearance Sonar			✓	✓			
LEXUS	A11	A11	GS350, - 0808			Rain Sensor					✓		
LEXUS	A11	A11	GS350, - 0808			AFS			✓	✓	✓	✓	
LEXUS	A11	A11	GS350, - 0808			Entry&Start			✓	✓	✓	✓	
LEXUS	A11	A11	GS350, - 0808			Power Source Control			✓	✓	✓	✓	
LEXUS	A11	A11	GS350, - 0808			Occupant Detection			✓	✓	✓		

LEXUS	A11	A11	CELSIOR		Engine			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	A11	A11	CELSIOR		ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	A11	A11	CELSIOR		Radar Cruise			✓	✓	✓		1. Beam Axis Adjustment
LEXUS	A11	A11	CELSIOR		Air suspension			✓	✓	✓	✓	
LEXUS	A11	A11	CELSIOR		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down、Linear Valve Offset)
LEXUS	A11	A11	CELSIOR		Air Conditioner			✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	A11	CELSIOR		Steering Lock			✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure
LEXUS	A11	A11	CELSIOR		Theft Deterrent			✓	✓	✓	✓	
LEXUS	A11	A11	CELSIOR		SRS Airbag			✓	✓			
LEXUS	A11	A11	CELSIOR		Pre-Crash			✓	✓	✓	✓	
LEXUS	A11	A11	CELSIOR		Gateway			✓	✓			
LEXUS	A11	A11	CELSIOR		Body No. 2			✓	✓	✓	✓	
LEXUS	A11	A11	CELSIOR		Body No. 3					✓	✓	
LEXUS	A11	A11	CELSIOR		Body No. 4			✓	✓	✓	✓	
LEXUS	A11	A11	CELSIOR		Body No. 5			✓	✓	✓	✓	

LEXUS	A11	A11	CELSIOR		Driver Door			√	√	√	√	
LEXUS	A11	A11	CELSIOR		Passenger Door			√	√	√	√	
LEXUS	A11	A11	CELSIOR		Rear Left Door			√	√	√	√	
LEXUS	A11	A11	CELSIOR		Rear Right Door			√	√	√	√	
LEXUS	A11	A11	CELSIOR		Driver Seat					√	√	
LEXUS	A11	A11	CELSIOR		Rear Left Seat			√	√	√	√	
LEXUS	A11	A11	CELSIOR		Rear Right Seat					√	√	
LEXUS	A11	A11	CELSIOR		Rear Seat Switch					√		
LEXUS	A11	A11	CELSIOR		Sliding Roof					√	√	
LEXUS	A11	A11	CELSIOR		Tilt&Telescopic			√	√	√	√	
LEXUS	A11	A11	CELSIOR		Combination Meter					√	√	
LEXUS	A11	A11	CELSIOR		Combination Switch					√		
LEXUS	A11	A11	CELSIOR		Steering Pad Switch					√		
LEXUS	A11	A11	CELSIOR		Clearance Sonar			√	√			
LEXUS	A11	A11	CELSIOR		Rain Sensor					√		
LEXUS	A11	A11	CELSIOR		AFS			√	√	√	√	
LEXUS	A11	A11	LS430		Engine			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	A11	A11	LS430		ECT			√	√	√	√	1. Check Mode 2. Reset Memory 3. A/T Code Reset

LEXUS	A11	A11	LS430			Radar Cruise			✓	✓	✓		1. Beam Axis Adjustment
LEXUS	A11	A11	LS430			Air suspension			✓	✓	✓	✓	
LEXUS	A11	A11	LS430			ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	A11	LS430			Air Conditioner			✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	A11	LS430			Steering Lock			✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure
LEXUS	A11	A11	LS430			Theft Deterrent			✓	✓	✓	✓	
LEXUS	A11	A11	LS430			SRS Airbag			✓	✓			
LEXUS	A11	A11	LS430			Pre-Crash			✓	✓	✓	✓	
LEXUS	A11	A11	LS430			Gateway			✓	✓	✓	✓	
LEXUS	A11	A11	LS430			Body No. 2			✓	✓	✓	✓	
LEXUS	A11	A11	LS430			Body No. 3					✓	✓	
LEXUS	A11	A11	LS430			Body No. 4			✓	✓	✓	✓	
LEXUS	A11	A11	LS430			Body No. 5			✓	✓	✓	✓	
LEXUS	A11	A11	LS430			Driver Door			✓	✓	✓	✓	
LEXUS	A11	A11	LS430			Passenger Door			✓	✓	✓	✓	
LEXUS	A11	A11	LS430			Rear Left Door			✓	✓	✓	✓	
LEXUS	A11	A11	LS430			Rear Right Door			✓	✓	✓	✓	
LEXUS	A11	A11	LS430			Driver Seat					✓	✓	
LEXUS	A11	A11	LS430			Rear Left Seat			✓	✓	✓	✓	
LEXUS	A11	A11	LS430			Rear Right Seat					✓	✓	
LEXUS	A11	A11	LS430			Rear Seat Switch					✓		
LEXUS	A11	A11	LS430			Sliding Roof					✓	✓	
LEXUS	A11	A11	LS430			Tilt&Telescopic			✓	✓	✓	✓	

LEXUS	A11	A11	LS430		Combination Meter					✓	✓	
LEXUS	A11	A11	LS430		Combination Switch					✓		
LEXUS	A11	A11	LS430		Steering Pad Switch					✓		
LEXUS	A11	A11	LS430		Clearance Sonar			✓	✓			
LEXUS	A11	A11	LS430		Rain Sensor					✓		
LEXUS	A11	A11	LS430		AFS			✓	✓	✓	✓	
												1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	A11	A11	LX470		Engine and ECT			✓	✓	✓	✓	
LEXUS	A11	A11	LX470		Cruise Control			✓	✓			
LEXUS	A11	A11	LX470		AHC			✓	✓	✓	✓	
												1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	A11	LX470		ABS/VSC/TRC			✓	✓	✓	✓	
LEXUS	A11	A11	LX470		VGRS			✓	✓	✓		
LEXUS	A11	A11	LX470		Immobiliser			✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure
LEXUS	A11	A11	LX470		Theft Deterrent			✓	✓	✓	✓	
LEXUS	A11	A11	LX470		SRS Airbag			✓	✓			
LEXUS	A11	A11	LX470		Body			✓	✓	✓	✓	

LEXUS	A11	A11	LX470		Body No. 2			√	√	√	√	
LEXUS	A11	A11	LX470		Driver Door			√	√	√	√	
LEXUS	A11	A11	LX470		Driver Seat					√	√	
LEXUS	A11	A11	LX470		Sliding Roof					√	√	
LEXUS	A11	A11	LX470		Tilt&Telescopic			√	√	√	√	
LEXUS	A11	A11	LX470		Mirror					√	√	
LEXUS	A11	A11	LX470		Rain Sensor					√		
LEXUS	A11	A11	LX470		Wiper					√	√	
LEXUS	A11	-0608	SC430		Engine			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	A11	-0608	SC430		ECT			√	√	√	√	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	A11	-0608	SC430		Cruise Control			√	√			
LEXUS	A11	-0608	SC430		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down、Linear Valve Offset)
LEXUS	A11	-0608	SC430		Tire Pressure Monitor			√	√	√		
LEXUS	A11	-0608	SC430		Air Conditioner			√	√	√	√	1. Compass calibration 2. Servomotor Initialization

LEXUS	A11	-0608	SC430		Immobiliser			✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure
LEXUS	A11	-0608	SC430		Theft Deterrent			✓	✓	✓	✓	
LEXUS	A11	-0608	SC430		SRS Airbag			✓	✓			
LEXUS	A11	-0608	SC430		Gateway			✓	✓	✓	✓	
LEXUS	A11	-0608	SC430		Body No. 2			✓	✓	✓	✓	
LEXUS	A11	-0608	SC430		Body No. 3					✓	✓	
LEXUS	A11	-0608	SC430		Body No. 4			✓	✓	✓	✓	
LEXUS	A11	-0608	SC430		Body No. 5			✓	✓	✓	✓	
LEXUS	A11	-0608	SC430		Driver Door			✓	✓	✓	✓	
LEXUS	A11	-0608	SC430		Passenger Door			✓	✓	✓	✓	
LEXUS	A11	-0608	SC430		Driver Seat					✓	✓	
LEXUS	A11	-0608	SC430		Passenger Seat					✓	✓	
LEXUS	A11	-0608	SC430		Retractable Hardtop			✓	✓	✓		
LEXUS	A11	-0608	SC430		Tilt&Telescopic			✓	✓	✓	✓	
LEXUS	A11	-0608	SC430		Combination Meter					✓	✓	
LEXUS	A11	-0608	SC430		Combination Switch					✓		
LEXUS	A11	-0608	SC430		Steering Pad Switch					✓		
LEXUS	A11	-0608	SC430		AFS			✓	✓	✓	✓	
LEXUS	A11	0608-	SC430		Engine			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode

LEXUS	A11	0608-	SC430		ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	A11	0608-	SC430		Cruise Control			✓	✓			
LEXUS	A11	0608-	SC430		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down、Linear Valve Offset)
LEXUS	A11	0608-	SC430		Tire Pressure Monitor			✓	✓	✓		
LEXUS	A11	0608-	SC430		Air Conditioner			✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	0608-	SC430		Immobiliser			✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure
LEXUS	A11	0608-	SC430		Theft Deterrent			✓	✓	✓	✓	
LEXUS	A11	0608-	SC430		SRS Airbag			✓	✓			
LEXUS	A11	0608-	SC430		Gateway			✓	✓	✓	✓	
LEXUS	A11	0608-	SC430		Body No. 2			✓	✓	✓	✓	
LEXUS	A11	0608-	SC430		Body No. 3					✓	✓	
LEXUS	A11	0608-	SC430		Body No. 4			✓	✓	✓	✓	
LEXUS	A11	0608-	SC430		Body No. 5			✓	✓	✓	✓	
LEXUS	A11	0608-	SC430		Driver Door			✓	✓	✓	✓	
LEXUS	A11	0608-	SC430		Passenger Door			✓	✓	✓	✓	
LEXUS	A11	0608-	SC430		Driver Seat					✓	✓	
LEXUS	A11	0608-	SC430		Passenger Seat					✓	✓	
LEXUS	A11	0608-	SC430		Retractable Hardtop			✓	✓	✓		
LEXUS	A11	0608-	SC430		Tilt&Telescopic			✓	✓	✓	✓	

LEXUS	A11	0608-	SC430		Combination Meter					✓	✓	
LEXUS	A11	0608-	SC430		Combination Switch					✓		
LEXUS	A11	0608-	SC430		Steering Pad Switch					✓		
LEXUS	A11	0608-	SC430		AFS			✓	✓	✓	✓	
LEXUS	A11	0608-	SC430		Occupant Detection			✓	✓	✓		
LEXUS	A11	A11	IS220D		Engine and ECT			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	A11	A11	IS220D		Cruise Control			✓	✓			
LEXUS	A11	A11	IS220D		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	A11	IS220D		EMPS			✓	✓	✓		1. Torque Sensor Adjustment
LEXUS	A11	A11	IS220D		Air Conditioner			✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	A11	IS220D		SRS Airbag			✓	✓			
LEXUS	A11	A11	IS220D		Body			✓	✓	✓	✓	
LEXUS	A11	A11	IS220D		Gateway			✓	✓			
LEXUS	A11	A11	IS220D		Body No. 3					✓	✓	

LEXUS	A11	A11	IS220D		Body No. 5			√	√	√	√	
LEXUS	A11	A11	IS220D		Driver Seat					√	√	
LEXUS	A11	A11	IS220D		Passenger Seat					√	√	
LEXUS	A11	A11	IS220D		Master Switch					√	√	
LEXUS	A11	A11	IS220D		Sliding Roof					√	√	
LEXUS	A11	A11	IS220D		Tilt&Telescopic			√	√	√	√	
LEXUS	A11	A11	IS220D		Combination Meter					√	√	
LEXUS	A11	A11	IS220D		Combination Switch						√	
LEXUS	A11	A11	IS220D		Clearance Sonar			√	√			
LEXUS	A11	A11	IS220D		Rain Sensor					√		
LEXUS	A11	A11	IS220D		AFS			√	√	√	√	
LEXUS	A11	A11	IS220D		Entry&Start			√	√	√	√	
LEXUS	A11	A11	IS220D		Power Source Control			√	√	√	√	
LEXUS	A11	A11	IS300		Engine			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	A11	A11	IS300		ECT			√	√	√	√	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	A11	A11	IS300		Cruise Control			√	√			

SERVICE SOLUTIONS

LEXUS	A11	A11	IS250		Engine			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	A11	A11	IS250		ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	A11	A11	IS250		Radar Cruise			✓	✓	✓		1. Beam Axis Adjustment
LEXUS	A11	A11	IS250		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	A11	IS250		EMPS			✓	✓	✓		1. Torque Sensor Adjustment
LEXUS	A11	A11	IS250		Air Conditioner			✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	A11	IS250		SRS Airbag			✓	✓			
LEXUS	A11	A11	IS250		Pre-Crash			✓	✓	✓	✓	
LEXUS	A11	A11	IS250		Body			✓	✓	✓	✓	
LEXUS	A11	A11	IS250		Gateway			✓	✓			
LEXUS	A11	A11	IS250		Body No. 3					✓	✓	
LEXUS	A11	A11	IS250		Body No. 5			✓	✓	✓	✓	
LEXUS	A11	A11	IS250		Driver Seat					✓	✓	
LEXUS	A11	A11	IS250		Passenger Seat					✓	✓	
LEXUS	A11	A11	IS250		Master Switch					✓	✓	
LEXUS	A11	A11	IS250		Sliding Roof					✓	✓	

LEXUS	A11	A11	IS250		Tilt&Telescopic			✓	✓	✓	✓	
LEXUS	A11	A11	IS250		Combination Meter					✓	✓	
LEXUS	A11	A11	IS250		Combination Switch					✓		
LEXUS	A11	A11	IS250		Clearance Sonar			✓	✓			
LEXUS	A11	A11	IS250		Rain Sensor					✓		
LEXUS	A11	A11	IS250		AFS			✓	✓	✓	✓	
LEXUS	A11	A11	IS250		Entry&Start			✓	✓	✓	✓	
LEXUS	A11	A11	IS250		Power Source Control			✓	✓	✓	✓	
												1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	A11	-0702	RX350		Engine and ECT			✓	✓	✓	✓	
LEXUS	A11	-0702	RX350		Cruise Control			✓	✓			
LEXUS	A11	-0702	RX350		Air suspension			✓	✓	✓	✓	
												1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	-0702	RX350		ABS/VSC/TRC			✓	✓	✓	✓	
LEXUS	A11	-0702	RX350		Air Conditioner			✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	-0702	RX350		Immobiliser			✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure

LEXUS	A11	-0702	RX350		SRS Airbag			✓	✓			
LEXUS	A11	-0702	RX350		Body			✓	✓	✓	✓	
LEXUS	A11	-0702	RX350		Back Door			✓	✓	✓	✓	
LEXUS	A11	-0702	RX350		Driver Seat					✓	✓	
LEXUS	A11	-0702	RX350		Master Switch					✓	✓	
LEXUS	A11	-0702	RX350		Sliding Roof					✓	✓	
LEXUS	A11	-0702	RX350		Tilt&Telescopic			✓	✓	✓	✓	
LEXUS	A11	-0702	RX350		Combination Meter					✓	✓	
LEXUS	A11	-0702	RX350		Rain Sensor					✓		
LEXUS	A11	-0702	RX350		Wiper					✓	✓	
LEXUS	A11	-0702	RX350		AFS			✓	✓	✓	✓	
LEXUS	A11	0702-	RX350		Engine and ECT			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	A11	0702-	RX350		Cruise Control			✓	✓			
LEXUS	A11	0702-	RX350		Air suspension			✓	✓	✓	✓	
LEXUS	A11	0702-	RX350		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	0702-	RX350		Air Conditioner			✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization

LEXUS	All	0702-	RX350		Immobiliser			✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure
LEXUS	All	0702-	RX350		SRS Airbag			✓	✓			
LEXUS	All	0702-	RX350		Body			✓	✓	✓	✓	
LEXUS	All	0702-	RX350		Back Door			✓	✓	✓	✓	
LEXUS	All	0702-	RX350		Driver Seat					✓	✓	
LEXUS	All	0702-	RX350		Master Switch					✓	✓	
LEXUS	All	0702-	RX350		Sliding Roof					✓	✓	
LEXUS	All	0702-	RX350		Tilt&Telescopic			✓	✓	✓	✓	
LEXUS	All	0702-	RX350		Combination Meter					✓	✓	
LEXUS	All	0702-	RX350		Rain Sensor					✓		
LEXUS	All	0702-	RX350		Wiper					✓	✓	
LEXUS	All	0702-	RX350		AFS			✓	✓	✓	✓	
LEXUS	Taiwan, Korea or Brazil	All	ES350		Engine			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	Taiwan, Korea or Brazil	All	ES350		ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	Taiwan, Korea or Brazil	All	ES350		Radar Cruise			✓	✓	✓		1. Beam Axis Adjustment

LEXUS	Taiwan, Korea or Brazil	All	ES350		E-ACM		*	*	*	*	
LEXUS	Taiwan, Korea or Brazil	All	ES350		ABS/VSC/TRC		√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	Taiwan, Korea or Brazil	All	ES350		Tire Pressure Monitor		√	√	√		
LEXUS	Taiwan, Korea or Brazil	All	ES350		Air Conditioner		√	√	√	√	1. Servomotor Initialization
LEXUS	Taiwan, Korea or Brazil	All	ES350		SRS Airbag		√	√			
LEXUS	Taiwan, Korea or Brazil	All	ES350		Pre-Crash		√	√	√	√	
LEXUS	Taiwan, Korea or Brazil	All	ES350		Main Body		√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration

LEXUS	Taiwan, Korea or Brazil	All	ES350			Gateway			✓	✓			1. Initialization
LEXUS	Taiwan, Korea or Brazil	All	ES350			D-Door Motor			✓	✓	✓	✓	
LEXUS	Taiwan, Korea or Brazil	All	ES350			P-Door Motor			✓	✓	✓	✓	
LEXUS	Taiwan, Korea or Brazil	All	ES350			RL-Door Motor			✓	✓	✓	✓	
LEXUS	Taiwan, Korea or Brazil	All	ES350			RR-Door Motor			✓	✓	✓	✓	
LEXUS	Taiwan, Korea or Brazil	All	ES350			Driver Seat					✓	✓	
LEXUS	Taiwan, Korea or Brazil	All	ES350			Passenger Seat			*	*	*	*	

LEXUS	Taiwan , Korea or Brazil	All	ES350			Master Switch			✓	✓	✓		
LEXUS	Taiwan , Korea or Brazil	All	ES350			Sliding Roof			✓	✓	✓	✓	
LEXUS	Taiwan , Korea or Brazil	All	ES350			Tilt&Telescopic			✓	✓	✓	✓	
LEXUS	Taiwan , Korea or Brazil	All	ES350			Combination Meter			✓	✓	✓	✓	
LEXUS	Taiwan , Korea or Brazil	All	ES350			Mirror					✓	✓	
LEXUS	Taiwan , Korea or Brazil	All	ES350			Clearance Sonar			✓	✓	✓	✓	
LEXUS	Taiwan , Korea or Brazil	All	ES350			AFS			✓	✓	✓	✓	1. ECU Information Synchronize

LEXUS	Taiwan, Korea or Brazil	All	ES350		Entry&Start			√	√	√	√	
LEXUS	Taiwan, Korea or Brazil	All	ES350		Occupant Detection			√	√	√		
LEXUS	Others	All	ES350		Engine			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	Others	All	ES350		ECT			√	√	√	√	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	Others	All	ES350		Cruise Control			√	√			
LEXUS	Others	All	ES350		E-ACM			*	*	*	*	
LEXUS	Others	All	ES350		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	Others	All	ES350		Air Conditioner			√	√	√	√	1. Servomotor Initialization
LEXUS	Others	All	ES350		SRS Airbag			√	√			

													1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
LEXUS	Others	All	ES350		Main Body			√	√	√	√		
LEXUS	Others	All	ES350		Gateway			√	√				1. Initialization
LEXUS	Others	All	ES350		D-Door Motor			√	√	√	√		
LEXUS	Others	All	ES350		P-Door Motor			√	√	√	√		
LEXUS	Others	All	ES350		RL-Door Motor			√	√	√	√		
LEXUS	Others	All	ES350		RR-Door Motor			√	√	√	√		
LEXUS	Others	All	ES350		Driver Seat					√	√		
LEXUS	Others	All	ES350		Passenger Seat			*	*	*	*		
LEXUS	Others	All	ES350		Master Switch			√	√	√			
LEXUS	Others	All	ES350		Sliding Roof			√	√	√	√		
LEXUS	Others	All	ES350		Tilt&Telescopic			√	√	√	√		
					Combination								
LEXUS	Others	All	ES350		Meter			√	√	√	√		
LEXUS	Others	All	ES350		Mirror					√	√		
LEXUS	Others	All	ES350		Clearance Sonar			√	√	√	√		
LEXUS	Others	All	ES350		AFS			√	√	√	√		1. ECU Information Synchronize
LEXUS	Others	All	ES350		Entry&Start			√	√	√	√		
LEXUS	All	-0709	GS450H		Engine and ECT			√	√	√	√		1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	All	-0709	GS450H		Hybrid Control			√	√	√	√		1. VIN Read
LEXUS	All	-0709	GS450H		EMS			√	√	√	√		
LEXUS	All	-0709	GS450H		Stabilizer			√	√	√			

LEXUS	A11	-0709	GS450H		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	-0709	GS450H		Tire Pressure Monitor			✓	✓	✓		
LEXUS	A11	-0709	GS450H		EMPS			✓	✓	✓		1. Torque Sensor Adjustment
LEXUS	A11	-0709	GS450H		VGRS			✓	✓	✓		
LEXUS	A11	-0709	GS450H		Air Conditioner			✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	-0709	GS450H		SRS Airbag			✓	✓			
LEXUS	A11	-0709	GS450H		Pre-Crash			✓	✓	✓	✓	
LEXUS	A11	-0709	GS450H		Body			✓	✓	✓	✓	
LEXUS	A11	-0709	GS450H		Gateway			✓	✓			
LEXUS	A11	-0709	GS450H		Body No. 3					✓	✓	
LEXUS	A11	-0709	GS450H		Body No. 4			✓	✓	✓	✓	
LEXUS	A11	-0709	GS450H		Body No. 5			✓	✓	✓	✓	
LEXUS	A11	-0709	GS450H		Driver Door			✓	✓	✓	✓	
LEXUS	A11	-0709	GS450H		Passenger Door			✓	✓	✓	✓	
LEXUS	A11	-0709	GS450H		Rear Left Door			✓	✓	✓	✓	
LEXUS	A11	-0709	GS450H		Rear Right Door			✓	✓	✓	✓	
LEXUS	A11	-0709	GS450H		Driver Seat					✓	✓	
LEXUS	A11	-0709	GS450H		Passenger Seat					✓	✓	
LEXUS	A11	-0709	GS450H		Master Switch					✓	✓	
LEXUS	A11	-0709	GS450H		D-SEAT SW					✓		
LEXUS	A11	-0709	GS450H		Sliding Roof					✓	✓	
LEXUS	A11	-0709	GS450H		Tilt&Telescopic			✓	✓	✓	✓	
LEXUS	A11	-0709	GS450H		Combination Meter					✓	✓	

LEXUS	A11	-0709	GS450H		Combination Switch					✓		
LEXUS	A11	-0709	GS450H		Clearance Sonar			✓	✓			
LEXUS	A11	-0709	GS450H		Rain Sensor					✓		
LEXUS	A11	-0709	GS450H		AFS			✓	✓	✓	✓	
LEXUS	A11	-0709	GS450H		Entry&Start			✓	✓	✓	✓	
LEXUS	A11	-0709	GS450H		Power Source Control			✓	✓	✓	✓	
												1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	A11	0709-	GS450H		Engine and ECT			✓	✓	✓	✓	
LEXUS	A11	0709-	GS450H		Hybrid Control			✓	✓	✓	✓	1. VIN Read
LEXUS	A11	0709-	GS450H		EMS			✓	✓	✓	✓	
LEXUS	A11	0709-	GS450H		Stabilizer			✓	✓	✓		
												1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	0709-	GS450H		ABS/VSC/TRC			✓	✓	✓	✓	
LEXUS	A11	0709-	GS450H		Tire Pressure Monitor			✓	✓	✓		
LEXUS	A11	0709-	GS450H		EMPS			✓	✓	✓		1. Torque Sensor Adjustment
LEXUS	A11	0709-	GS450H		VGRS			✓	✓	✓		
LEXUS	A11	0709-	GS450H		Air Conditioner			✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization

LEXUS	A11	0709-	GS450H		SRS Airbag			✓	✓			
LEXUS	A11	0709-	GS450H		Pre-Crash			✓	✓	✓	✓	
LEXUS	A11	0709-	GS450H		Body			✓	✓	✓	✓	
LEXUS	A11	0709-	GS450H		Gateway			✓	✓			
LEXUS	A11	0709-	GS450H		Body No. 3					✓	✓	
LEXUS	A11	0709-	GS450H		Body No. 4			✓	✓	✓	✓	
LEXUS	A11	0709-	GS450H		Body No. 5			✓	✓	✓	✓	
LEXUS	A11	0709-	GS450H		Driver Door			✓	✓	✓	✓	
LEXUS	A11	0709-	GS450H		Passenger Door			✓	✓	✓	✓	
LEXUS	A11	0709-	GS450H		Rear Left Door			✓	✓	✓	✓	
LEXUS	A11	0709-	GS450H		Rear Right Door			✓	✓	✓	✓	
LEXUS	A11	0709-	GS450H		Driver Seat					✓	✓	
LEXUS	A11	0709-	GS450H		Passenger Seat					✓	✓	
LEXUS	A11	0709-	GS450H		Master Switch					✓	✓	
LEXUS	A11	0709-	GS450H		D-SEAT SW					✓		
LEXUS	A11	0709-	GS450H		Sliding Roof					✓	✓	
LEXUS	A11	0709-	GS450H		Tilt&Telescopic			✓	✓	✓	✓	
LEXUS	A11	0709-	GS450H		Combination Meter					✓	✓	
LEXUS	A11	0709-	GS450H		Combination Switch					✓		
LEXUS	A11	0709-	GS450H		Clearance Sonar			✓	✓			
LEXUS	A11	0709-	GS450H		Rain Sensor					✓		
LEXUS	A11	0709-	GS450H		AFS			✓	✓	✓	✓	
LEXUS	A11	0709-	GS450H		Entry&Start			✓	✓	✓	✓	
LEXUS	A11	0709-	GS450H		Power Source Control			✓	✓	✓	✓	

LEXUS	A11	A11	RX400H			Rain Sensor					✓		
LEXUS	A11	A11	RX400H			Wiper					✓	✓	
LEXUS	A11	A11	RX400H			AFS			✓	✓	✓	✓	
LEXUS	A11	A11	HARRIER HYBRID			Engine and ECT			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	A11	A11	HARRIER HYBRID			Hybrid Control			✓	✓	✓	✓	1. VIN Read
LEXUS	A11	A11	HARRIER HYBRID			Cruise Control			✓	✓	✓		
LEXUS	A11	A11	HARRIER HYBRID			ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	A11	HARRIER HYBRID			EMPS			✓	✓	✓		1. Torque Sensor Adjustment
LEXUS	A11	A11	HARRIER HYBRID			Air Conditioner			✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	A11	HARRIER HYBRID			Immobiliser			✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure
LEXUS	A11	A11	HARRIER HYBRID			SRS Airbag			✓	✓			
LEXUS	A11	A11	HARRIER HYBRID			Body			✓	✓	✓	✓	

LEXUS	A11	A11	HARRIER HYBRID		Gateway			✓	✓			
LEXUS	A11	A11	HARRIER HYBRID		Back Door			✓	✓	✓	✓	
LEXUS	A11	A11	HARRIER HYBRID		Driver Seat					✓	✓	
LEXUS	A11	A11	HARRIER HYBRID		Master Switch					✓	✓	
LEXUS	A11	A11	HARRIER HYBRID		Sliding Roof					✓	✓	
LEXUS	A11	A11	HARRIER HYBRID		Tilt&Telescopic			✓	✓	✓	✓	
LEXUS	A11	A11	HARRIER HYBRID		Combination Meter					✓	✓	
LEXUS	A11	A11	HARRIER HYBRID		Rain Sensor					✓		
LEXUS	A11	A11	HARRIER HYBRID		Wiper					✓	✓	
LEXUS	A11	A11	HARRIER HYBRID		AFS			✓	✓	✓	✓	
LEXUS	A11	A11	LX570		Engine and ECT			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	A11	A11	LX570		Radar Cruise			✓	✓	✓		1. Beam Axis Adjustment
LEXUS	A11	A11	LX570		AHC			✓	✓	✓	✓	

LEXUS	A11	A11	LX570		Combination Meter			√	√	√	√	
LEXUS	A11	A11	LX570		Mirror					√	√	
LEXUS	A11	A11	LX570		Clearance Sonar			√	√	√	√	
LEXUS	A11	A11	LX570		Rain Sensor			√	√	√	√	
LEXUS	A11	A11	LX570		AFS			√	√	√	√	1. ECU Information Synchronize
LEXUS	A11	A11	LX570		Entry&Start			√	√	√	√	
LEXUS	A11	-0808	GS460		Engine			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	A11	-0808	GS460		ECT			√	√	√	√	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	A11	-0808	GS460		Radar Cruise			√	√	√		1. Beam Axis Adjustment
LEXUS	A11	-0808	GS460		EMS			√	√	√	√	
LEXUS	A11	-0808	GS460		Stabilizer			√	√	√		
LEXUS	A11	-0808	GS460		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	-0808	GS460		Four Wheel Drive			√	√	√	√	

LEXUS	A11	-0808	GS460		Tire Pressure Monitor			✓	✓	✓		
LEXUS	A11	-0808	GS460		EMPS			✓	✓	✓		1. Torque Sensor Adjustment
LEXUS	A11	-0808	GS460		VGRS			✓	✓	✓		
LEXUS	A11	-0808	GS460		Air Conditioner			✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	-0808	GS460		SRS Airbag			✓	✓			
LEXUS	A11	-0808	GS460		Pre-Crash			✓	✓	✓	✓	
LEXUS	A11	-0808	GS460		Body			✓	✓	✓	✓	
LEXUS	A11	-0808	GS460		Gateway BEAN			✓	✓			
LEXUS	A11	-0808	GS460		Gateway CAN			✓	✓			1. Initialization
LEXUS	A11	-0808	GS460		Body No. 3					✓	✓	
LEXUS	A11	-0808	GS460		Body No. 4			✓	✓	✓	✓	
LEXUS	A11	-0808	GS460		Body No. 5			✓	✓	✓	✓	
LEXUS	A11	-0808	GS460		Driver Door			✓	✓	✓	✓	
LEXUS	A11	-0808	GS460		Passenger Door			✓	✓	✓	✓	
LEXUS	A11	-0808	GS460		Rear Left Door			✓	✓	✓	✓	
LEXUS	A11	-0808	GS460		Rear Right Door			✓	✓	✓	✓	
LEXUS	A11	-0808	GS460		Driver Seat					✓	✓	
LEXUS	A11	-0808	GS460		Passenger Seat					✓	✓	
LEXUS	A11	-0808	GS460		Master Switch					✓	✓	
LEXUS	A11	-0808	GS460		D-SEAT SW					✓		
LEXUS	A11	-0808	GS460		Sliding Roof					✓	✓	
LEXUS	A11	-0808	GS460		Tilt&Telescopic			✓	✓	✓	✓	
LEXUS	A11	-0808	GS460		Combination Meter					✓	✓	
LEXUS	A11	-0808	GS460		Combination Switch					✓		
LEXUS	A11	-0808	GS460		Clearance Sonar			✓	✓			
LEXUS	A11	-0808	GS460		Rain Sensor					✓		
LEXUS	A11	-0808	GS460		AFS			✓	✓	✓	✓	

LEXUS	A11	-0808	GS460		Entry&Start			✓	✓	✓	✓	
LEXUS	A11	-0808	GS460		Power Source Control			✓	✓	✓	✓	
LEXUS	A11	-0808	GS460		Occupant Detection			✓	✓	✓		
LEXUS	A11	0808-	GS460		Engine			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	A11	0808-	GS460		ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	A11	0808-	GS460		Radar Cruise			✓	✓	✓		1. Beam Axis Adjustment
LEXUS	A11	0808-	GS460		EMS			✓	✓	✓	✓	
LEXUS	A11	0808-	GS460		Stabilizer			✓	✓	✓		
LEXUS	A11	0808-	GS460		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	0808-	GS460		Four Wheel Drive			✓	✓	✓	✓	
LEXUS	A11	0808-	GS460		Tire Pressure Monitor			✓	✓	✓		
LEXUS	A11	0808-	GS460		EMPS			✓	✓	✓		1. Torque Sensor Adjustment
LEXUS	A11	0808-	GS460		VGRS			✓	✓	✓		

LEXUS	A11	0808-	GS460		Air Conditioner			✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	0808-	GS460		SRS Airbag			✓	✓			
LEXUS	A11	0808-	GS460		Pre-Crash			✓	✓	✓	✓	
LEXUS	A11	0808-	GS460		Body			✓	✓	✓	✓	
LEXUS	A11	0808-	GS460		Gateway BEAN			✓	✓			
LEXUS	A11	0808-	GS460		Gateway CAN			✓	✓			1. Initialization
LEXUS	A11	0808-	GS460		Body No. 3					✓	✓	
LEXUS	A11	0808-	GS460		Body No. 4			✓	✓	✓	✓	
LEXUS	A11	0808-	GS460		Body No. 5			✓	✓	✓	✓	
LEXUS	A11	0808-	GS460		Driver Door			✓	✓	✓	✓	
LEXUS	A11	0808-	GS460		Passenger Door			✓	✓	✓	✓	
LEXUS	A11	0808-	GS460		Rear Left Door			✓	✓	✓	✓	
LEXUS	A11	0808-	GS460		Rear Right Door			✓	✓	✓	✓	
LEXUS	A11	0808-	GS460		Driver Seat					✓	✓	
LEXUS	A11	0808-	GS460		Passenger Seat					✓	✓	
LEXUS	A11	0808-	GS460		Master Switch					✓	✓	
LEXUS	A11	0808-	GS460		D-SEAT SW					✓		
LEXUS	A11	0808-	GS460		Sliding Roof					✓	✓	
LEXUS	A11	0808-	GS460		Tilt&Telescopic			✓	✓	✓	✓	
LEXUS	A11	0808-	GS460		Combination Meter					✓	✓	
LEXUS	A11	0808-	GS460		Combination Switch					✓		
LEXUS	A11	0808-	GS460		Clearance Sonar			✓	✓			
LEXUS	A11	0808-	GS460		Rain Sensor					✓		
LEXUS	A11	0808-	GS460		AFS			✓	✓	✓	✓	
LEXUS	A11	0808-	GS460		Entry&Start			✓	✓	✓	✓	
LEXUS	A11	0808-	GS460		Power Source Control			✓	✓	✓	✓	

LEXUS	A11	0808-	GS460		Occupant Detection			✓	✓	✓		
LEXUS	A11	-0808	IS-F		Engine			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	A11	-0808	IS-F		ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	A11	-0808	IS-F		Radar Cruise			✓	✓	✓		1. Beam Axis Adjustment
LEXUS	A11	-0808	IS-F		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	-0808	IS-F		EMPS			✓	✓	✓		1. Torque Sensor Adjustment
LEXUS	A11	-0808	IS-F		Air Conditioner			✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	-0808	IS-F		SRS Airbag			✓	✓			
LEXUS	A11	-0808	IS-F		Pre-Crash			✓	✓	✓	✓	
LEXUS	A11	-0808	IS-F		Body			✓	✓	✓	✓	
LEXUS	A11	-0808	IS-F		Gateway			✓	✓			
LEXUS	A11	-0808	IS-F		Body No. 3					✓	✓	
LEXUS	A11	-0808	IS-F		Body No. 5			✓	✓	✓	✓	
LEXUS	A11	-0808	IS-F		Driver Seat					✓	✓	
LEXUS	A11	-0808	IS-F		Passenger Seat					✓	✓	

LEXUS	A11	-0808	IS-F		Master Switch					✓	✓	
LEXUS	A11	-0808	IS-F		Sliding Roof					✓	✓	
LEXUS	A11	-0808	IS-F		Tilt&Telescopic			✓	✓	✓	✓	
LEXUS	A11	-0808	IS-F		Combination Meter					✓	✓	
LEXUS	A11	-0808	IS-F		Combination Switch					✓		
LEXUS	A11	-0808	IS-F		Clearance Sonar			✓	✓			
LEXUS	A11	-0808	IS-F		Rain Sensor					✓		
LEXUS	A11	-0808	IS-F		AFS			✓	✓	✓	✓	
LEXUS	A11	-0808	IS-F		Entry&Start			✓	✓	✓	✓	
LEXUS	A11	-0808	IS-F		Power Source Control			✓	✓	✓	✓	
LEXUS	A11	0808-	IS-F		Engine			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	A11	0808-	IS-F		ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	A11	0808-	IS-F		Radar Cruise			✓	✓	✓		1. Beam Axis Adjustment
LEXUS	A11	0808-	IS-F		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)

LEXUS	A11	0808-	IS-F		EMPS			√	√	√		1. Torque Sensor Adjustment
LEXUS	A11	0808-	IS-F		Air Conditioner			√	√	√	√	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	0808-	IS-F		SRS Airbag			√	√			
LEXUS	A11	0808-	IS-F		Pre-Crash			√	√	√	√	
LEXUS	A11	0808-	IS-F		Body			√	√	√	√	
LEXUS	A11	0808-	IS-F		Gateway			√	√			
LEXUS	A11	0808-	IS-F		Body No. 3					√	√	
LEXUS	A11	0808-	IS-F		Body No. 5			√	√	√	√	
LEXUS	A11	0808-	IS-F		Driver Seat					√	√	
LEXUS	A11	0808-	IS-F		Passenger Seat					√	√	
LEXUS	A11	0808-	IS-F		Master Switch					√	√	
LEXUS	A11	0808-	IS-F		Sliding Roof					√	√	
LEXUS	A11	0808-	IS-F		Tilt&Telescopic			√	√	√	√	
LEXUS	A11	0808-	IS-F		Combination Meter					√	√	
LEXUS	A11	0808-	IS-F		Combination Switch					√		
LEXUS	A11	0808-	IS-F		Clearance Sonar			√	√			
LEXUS	A11	0808-	IS-F		Rain Sensor					√		
LEXUS	A11	0808-	IS-F		AFS			√	√	√	√	
LEXUS	A11	0808-	IS-F		Entry&Start			√	√	√	√	
LEXUS	A11	0808-	IS-F		Power Source Control			√	√	√	√	

SERVICE SOLUTIONS

LEXUS	A11	A11	LS460		Engine			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	A11	A11	LS460		ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	A11	A11	LS460		Radar Cruise			✓	✓	✓		1. Beam Axis Adjustment
LEXUS	A11	A11	LS460		Air suspension			✓	✓	✓	✓	
LEXUS	A11	A11	LS460		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	A11	LS460		Tire Pressure Monitor			✓	✓	✓		1. ID Registration(Main Set, 2nd Set)
LEXUS	A11	A11	LS460		EMPS			✓	✓	✓		1. Torque Sensor Adjustment
LEXUS	A11	A11	LS460		VGRS			✓	✓	✓		
LEXUS	A11	A11	LS460		Electric Parking Brake			*	*	*	*	*1. Reset Memory
LEXUS	A11	A11	LS460		Intelligent Parking Assist			✓	✓	✓		
LEXUS	A11	A11	LS460		Air Conditioner			✓	✓	✓	✓	1. Servomotor Initialization
LEXUS	A11	A11	LS460		SRS Airbag			✓	✓	✓		
LEXUS	A11	A11	LS460		Pre-Crash			✓	✓	✓	✓	

LEXUS	A11	A11	LS460		Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
LEXUS	A11	A11	LS460		ECM Gateway			√	√	√		1. Initialization
LEXUS	A11	A11	LS460		ECB Gateway			√	√	√		1. Initialization
LEXUS	A11	A11	LS460		WIL Gateway			√	√	√		1. Initialization
LEXUS	A11	A11	LS460		Accessory Gateway			√	√	√		
LEXUS	A11	A11	LS460		Body No. 4			√	√	√	√	
LEXUS	A11	A11	LS460		Body No. 5			√	√	√	√	
LEXUS	A11	A11	LS460		Driver Door					√	√	
LEXUS	A11	A11	LS460		Passenger Door					√	√	
LEXUS	A11	A11	LS460		Rear Left Door					√	√	
LEXUS	A11	A11	LS460		Rear Right Door					√	√	
LEXUS	A11	A11	LS460		Back Door			√	√	√	√	
LEXUS	A11	A11	LS460		D-Door Motor			√	√	√	√	
LEXUS	A11	A11	LS460		P-Door Motor			√	√	√	√	
LEXUS	A11	A11	LS460		RL-Door Motor			√	√	√	√	
LEXUS	A11	A11	LS460		RR-Door Motor			√	√	√	√	
LEXUS	A11	A11	LS460		Driver Seat			√	√	√	√	
LEXUS	A11	A11	LS460		Passenger Seat			*	*	*	*	
LEXUS	A11	A11	LS460		Rear Left Seat			*	*	*	*	
LEXUS	A11	A11	LS460		Rear Right Seat			*	*	*	*	
LEXUS	A11	A11	LS460		Master Switch			√	√	√		
LEXUS	A11	A11	LS460		D-SEAT SW			√	√	√	√	
LEXUS	A11	A11	LS460		Center Console Switch					√	√	
LEXUS	A11	A11	LS460		Rear Console Switch			√	√	√	√	
LEXUS	A11	A11	LS460		Front Left Seat A/C			√		√	√	

LEXUS	A11	A11	LS460		Front Right Seat A/C			√		√	√	
LEXUS	A11	A11	LS460		Rear Left Seat A/C			√		√	√	
LEXUS	A11	A11	LS460		Rear Right Seat A/C			√		√	√	
LEXUS	A11	A11	LS460		Sliding Roof			√	√	√	√	
LEXUS	A11	A11	LS460		Tilt&Telescopic			√	√	√	√	
LEXUS	A11	A11	LS460		Combination Meter			√	√	√	√	
LEXUS	A11	A11	LS460		Combination Switch					√		
LEXUS	A11	A11	LS460		Steering Pad Switch					√		
LEXUS	A11	A11	LS460		Clearance Sonar			√	√	√	√	
LEXUS	A11	A11	LS460		Rain Sensor			√	√	√		
LEXUS	A11	A11	LS460		AFS			√	√	√	√	1. ECU Information Synchronize
LEXUS	A11	A11	LS460		Entry&Start			√	√	√	√	
LEXUS	A11	A11	LS460		Electric Power Control			√	√	√	√	
LEXUS	A11	A11	LS460		Occupant Detection			√	√	√		
LEXUS	A11	A11	LS460		Active Headrest R			√	√	√	√	
LEXUS	A11	A11	LS460		Active Headrest L			√	√	√	√	
LEXUS	A11	A11	LS460		Navigation System			√	√			

SERVICE SOLUTIONS

													1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	A11	A11	LS600H		Engine and ECT			√	√	√	√		
LEXUS	A11	A11	LS600H		Hybrid Control			√	√	√	√		1. VIN Read
LEXUS	A11	A11	LS600H		Radar Cruise			√	√	√			1. Beam Axis Adjustment
LEXUS	A11	A11	LS600H		Air suspension			√	√	√	√		
LEXUS	A11	A11	LS600H		ABS/VSC/TRC			√	√	√	√		1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	A11	LS600H		Tire Pressure Monitor			√	√	√			1. ID Registration(Main Set, 2nd Set)
LEXUS	A11	A11	LS600H		EMPS			√	√	√			1. Torque Sensor Adjustment
LEXUS	A11	A11	LS600H		VGRS			√	√	√			
LEXUS	A11	A11	LS600H		Electric Parking Brake			*	*	*	*		*1. Reset Memory
LEXUS	A11	A11	LS600H		Intelligent Parking Assist			√	√	√			
LEXUS	A11	A11	LS600H		Air Conditioner			√	√	√	√		1. Servomotor Initialization
LEXUS	A11	A11	LS600H		SRS Airbag			√	√	√			
LEXUS	A11	A11	LS600H		Pre-Crash			√	√	√	√		

LEXUS	A11	A11	LS600H		Pre-Crash 2			√	√	√	√	1. Recognition ECU High Temp History Reset 2. Camera/Target Position Memory 3. Camera Axis Adjust 4. Rear Beam Axis Adjustment
LEXUS	A11	A11	LS600H		Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
LEXUS	A11	A11	LS600H		ECM Gateway			√	√	√		1. Initialization
LEXUS	A11	A11	LS600H		ECB Gateway			√	√	√		1. Initialization
LEXUS	A11	A11	LS600H		WIL Gateway			√	√	√		1. Initialization
LEXUS	A11	A11	LS600H		Body No. 4			√	√	√	√	
LEXUS	A11	A11	LS600H		Body No. 5					√	√	
LEXUS	A11	A11	LS600H		Driver Door					√	√	
LEXUS	A11	A11	LS600H		Passenger Door					√	√	
LEXUS	A11	A11	LS600H		Rear Left Door			√	√	√	√	
LEXUS	A11	A11	LS600H		Rear Right Door			√	√	√	√	
LEXUS	A11	A11	LS600H		Back Door			√	√	√	√	
LEXUS	A11	A11	LS600H		D-Door Motor			√	√	√	√	
LEXUS	A11	A11	LS600H		P-Door Motor			√	√	√	√	
LEXUS	A11	A11	LS600H		RL-Door Motor			√	√	√	√	
LEXUS	A11	A11	LS600H		RR-Door Motor			√	√	√	√	
LEXUS	A11	A11	LS600H		Driver Seat					√	√	
LEXUS	A11	A11	LS600H		Passenger Seat			*	*	*	*	
LEXUS	A11	A11	LS600H		Rear Left Seat			*	*	*	*	
LEXUS	A11	A11	LS600H		Rear Right Seat			*	*	*	*	
LEXUS	A11	A11	LS600H		Master Switch			√	√	√		
LEXUS	A11	A11	LS600H		D-SEAT SW			√	√	√	√	
LEXUS	A11	A11	LS600H		Center Console Switch					√	√	

LEXUS	A11	A11	LS600H		Rear Console Switch			✓	✓	✓	✓	
LEXUS	A11	A11	LS600H		Front Left Seat A/C			✓		✓	✓	
LEXUS	A11	A11	LS600H		Front Right Seat A/C			✓		✓	✓	
LEXUS	A11	A11	LS600H		Rear Left Seat A/C			✓		✓	✓	
LEXUS	A11	A11	LS600H		Rear Right Seat A/C			✓		✓	✓	
LEXUS	A11	A11	LS600H		Sliding Roof			✓	✓	✓	✓	
LEXUS	A11	A11	LS600H		Tilt&Telescopic			✓	✓	✓	✓	
LEXUS	A11	A11	LS600H		Combination Meter			✓	✓	✓	✓	
LEXUS	A11	A11	LS600H		Combination Switch					✓		
LEXUS	A11	A11	LS600H		Steering Pad Switch					✓		
LEXUS	A11	A11	LS600H		Clearance Sonar			✓	✓	✓	✓	
LEXUS	A11	A11	LS600H		Rain Sensor			✓	✓	✓		
LEXUS	A11	A11	LS600H		AFS			✓	✓	✓	✓	1. ECU Information Synchronize
LEXUS	A11	A11	LS600H		Entry&Start			✓	✓	✓	✓	
LEXUS	A11	A11	LS600H		Occupant Detection			✓	✓	✓		
LEXUS	A11	A11	LS600H		Active Headrest R			✓	✓	✓	✓	
LEXUS	A11	A11	LS600H		Active Headrest L			✓	✓	✓	✓	

SERVICE SOLUTIONS

LEXUS	MIDDLE EAST	-0608	GS430		Engine			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	MIDDLE EAST	-0608	GS430		ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	MIDDLE EAST	-0608	GS430		Cruise Control			✓	✓			
LEXUS	MIDDLE EAST	-0608	GS430		EMS			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	-0608	GS430		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	MIDDLE EAST	-0608	GS430		Tire Pressure Monitor			✓	✓	✓		
LEXUS	MIDDLE EAST	-0608	GS430		EMPS			✓	✓	✓		1. Torque Sensor Adjustment
LEXUS	MIDDLE EAST	-0608	GS430		VGRS			✓	✓	✓		
LEXUS	MIDDLE EAST	-0608	GS430		Air Conditioner			✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization
LEXUS	MIDDLE EAST	-0608	GS430		SRS Airbag			✓	✓			

LEXUS	MIDDLE EAST	-0608	GS430			Body			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	-0608	GS430			Gateway			✓	✓			
LEXUS	MIDDLE EAST	-0608	GS430			Body No. 3					✓	✓	
LEXUS	MIDDLE EAST	-0608	GS430			Body No. 4			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	-0608	GS430			Body No. 5			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	-0608	GS430			Driver Door			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	-0608	GS430			Passenger Door			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	-0608	GS430			Rear Left Door			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	-0608	GS430			Rear Right Door			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	-0608	GS430			Driver Seat					✓	✓	
LEXUS	MIDDLE EAST	-0608	GS430			Passenger Seat					✓	✓	
LEXUS	MIDDLE EAST	-0608	GS430			Master Switch					✓	✓	
LEXUS	MIDDLE EAST	-0608	GS430			D-SEAT SW					✓		
LEXUS	MIDDLE EAST	-0608	GS430			Sliding Roof					✓	✓	
LEXUS	MIDDLE EAST	-0608	GS430			Tilt&Telescopic			✓	✓	✓	✓	

LEXUS	MIDDLE EAST	-0608	GS430		Combination Meter					✓	✓	
LEXUS	MIDDLE EAST	-0608	GS430		Combination Switch					✓		
LEXUS	MIDDLE EAST	-0608	GS430		Clearance Sonar			✓	✓			
LEXUS	MIDDLE EAST	-0608	GS430		Rain Sensor					✓		
LEXUS	MIDDLE EAST	-0608	GS430		AFS			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	-0608	GS430		Entry&Start			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	-0608	GS430		Power Source Control			✓	✓	✓	✓	
LEXUS	Others	-0608	GS430		Engine			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	Others	-0608	GS430		ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	Others	-0608	GS430		Radar Cruise			✓	✓	✓		1. Beam Axis Adjustment
LEXUS	Others	-0608	GS430		EMS			✓	✓	✓	✓	

LEXUS	Others	-0608	GS430		Combination Meter					✓	✓	
LEXUS	Others	-0608	GS430		Combination Switch					✓		
LEXUS	Others	-0608	GS430		Clearance Sonar			✓	✓			
LEXUS	Others	-0608	GS430		Rain Sensor					✓		
LEXUS	Others	-0608	GS430		AFS			✓	✓	✓	✓	
LEXUS	Others	-0608	GS430		Entry&Start			✓	✓	✓	✓	
LEXUS	Others	-0608	GS430		Power Source Control			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	0608-0709	GS430		Engine			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	MIDDLE EAST	0608-0709	GS430		ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	MIDDLE EAST	0608-0709	GS430		Cruise Control			✓	✓			
LEXUS	MIDDLE EAST	0608-0709	GS430		EMS			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	0608-0709	GS430		Stabilizer			✓	✓	✓		

LEXUS	MIDDLE EAST	0608- 0709	GS430		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	MIDDLE EAST	0608- 0709	GS430		Tire Pressure Monitor			√	√	√		
LEXUS	MIDDLE EAST	0608- 0709	GS430		EMPS			√	√	√		1. Torque Sensor Adjustment
LEXUS	MIDDLE EAST	0608- 0709	GS430		VGRS			√	√	√		
LEXUS	MIDDLE EAST	0608- 0709	GS430		Air Conditioner			√	√	√	√	1. Compass calibration 2. Servomotor Initialization
LEXUS	MIDDLE EAST	0608- 0709	GS430		SRS Airbag			√	√			
LEXUS	MIDDLE EAST	0608- 0709	GS430		Body			√	√	√	√	
LEXUS	MIDDLE EAST	0608- 0709	GS430		Gateway BEAN			√	√			
LEXUS	MIDDLE EAST	0608- 0709	GS430		Gateway CAN			√	√			1. Initialization
LEXUS	MIDDLE EAST	0608- 0709	GS430		Body No. 3					√	√	
LEXUS	MIDDLE EAST	0608- 0709	GS430		Body No. 4			√	√	√	√	
LEXUS	MIDDLE EAST	0608- 0709	GS430		Body No. 5			√	√	√	√	
LEXUS	MIDDLE EAST	0608- 0709	GS430		Driver Door			√	√	√	√	

LEXUS	MIDDLE EAST	0608- 0709	GS430		Passenger Door			√	√	√	√	
LEXUS	MIDDLE EAST	0608- 0709	GS430		Rear Left Door			√	√	√	√	
LEXUS	MIDDLE EAST	0608- 0709	GS430		Rear Right Door			√	√	√	√	
LEXUS	MIDDLE EAST	0608- 0709	GS430		Driver Seat					√	√	
LEXUS	MIDDLE EAST	0608- 0709	GS430		Passenger Seat					√	√	
LEXUS	MIDDLE EAST	0608- 0709	GS430		Master Switch					√	√	
LEXUS	MIDDLE EAST	0608- 0709	GS430		D-SEAT SW					√		
LEXUS	MIDDLE EAST	0608- 0709	GS430		Sliding Roof					√	√	
LEXUS	MIDDLE EAST	0608- 0709	GS430		Tilt&Telescopic			√	√	√	√	
LEXUS	MIDDLE EAST	0608- 0709	GS430		Combination Meter					√	√	
LEXUS	MIDDLE EAST	0608- 0709	GS430		Combination Switch					√		
LEXUS	MIDDLE EAST	0608- 0709	GS430		Clearance Sonar			√	√			
LEXUS	MIDDLE EAST	0608- 0709	GS430		Rain Sensor					√		
LEXUS	MIDDLE EAST	0608- 0709	GS430		AFS			√	√	√	√	
LEXUS	MIDDLE EAST	0608- 0709	GS430		Entry&Start			√	√	√	√	

LEXUS	MIDDLE EAST	0608-0709	GS430		Power Source Control			√	√	√	√	
LEXUS	Others	0608-0709	GS430		Engine			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	Others	0608-0709	GS430		ECT			√	√	√	√	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	Others	0608-0709	GS430		Radar Cruise			√	√	√		1. Beam Axis Adjustment
LEXUS	Others	0608-0709	GS430		EMS			√	√	√	√	
LEXUS	Others	0608-0709	GS430		Stabilizer			√	√	√		
LEXUS	Others	0608-0709	GS430		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	Others	0608-0709	GS430		Tire Pressure Monitor			√	√	√		
LEXUS	Others	0608-0709	GS430		EMPS			√	√	√		1. Torque Sensor Adjustment
LEXUS	Others	0608-0709	GS430		VGRS			√	√	√		

LEXUS	Others	0608-0709	GS430		Air Conditioner			✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization
LEXUS	Others	0608-0709	GS430		SRS Airbag			✓	✓			
LEXUS	Others	0608-0709	GS430		Pre-Crash			✓	✓	✓	✓	
LEXUS	Others	0608-0709	GS430		Body			✓	✓	✓	✓	
LEXUS	Others	0608-0709	GS430		Gateway BEAN			✓	✓			
LEXUS	Others	0608-0709	GS430		Gateway CAN			✓	✓			1. Initialization
LEXUS	Others	0608-0709	GS430		Body No. 3					✓	✓	
LEXUS	Others	0608-0709	GS430		Body No. 4			✓	✓	✓	✓	
LEXUS	Others	0608-0709	GS430		Body No. 5			✓	✓	✓	✓	
LEXUS	Others	0608-0709	GS430		Driver Door			✓	✓	✓	✓	
LEXUS	Others	0608-0709	GS430		Passenger Door			✓	✓	✓	✓	
LEXUS	Others	0608-0709	GS430		Rear Left Door			✓	✓	✓	✓	
LEXUS	Others	0608-0709	GS430		Rear Right Door			✓	✓	✓	✓	
LEXUS	Others	0608-0709	GS430		Driver Seat					✓	✓	
LEXUS	Others	0608-0709	GS430		Passenger Seat					✓	✓	

LEXUS	Others	0608-0709	GS430		Master Switch					✓	✓	
LEXUS	Others	0608-0709	GS430		D-SEAT SW					✓		
LEXUS	Others	0608-0709	GS430		Sliding Roof					✓	✓	
LEXUS	Others	0608-0709	GS430		Tilt&Telescopic		✓	✓		✓	✓	
LEXUS	Others	0608-0709	GS430		Combination Meter					✓	✓	
LEXUS	Others	0608-0709	GS430		Combination Switch					✓		
LEXUS	Others	0608-0709	GS430		Clearance Sonar		✓	✓				
LEXUS	Others	0608-0709	GS430		Rain Sensor					✓		
LEXUS	Others	0608-0709	GS430		AFS		✓	✓		✓	✓	
LEXUS	Others	0608-0709	GS430		Entry&Start		✓	✓		✓	✓	
LEXUS	Others	0608-0709	GS430		Power Source Control		✓	✓		✓	✓	
LEXUS	Others	0608-0709	GS430		Occupant Detection		✓	✓		✓		

SERVICE SOLUTIONS

LEXUS	MIDDLE EAST	0709-	GS430		Engine			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	MIDDLE EAST	0709-	GS430		ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	MIDDLE EAST	0709-	GS430		Cruise Control			✓	✓			
LEXUS	MIDDLE EAST	0709-	GS430		EMS			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	0709-	GS430		Stabilizer			✓	✓	✓		
LEXUS	MIDDLE EAST	0709-	GS430		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	MIDDLE EAST	0709-	GS430		Tire Pressure Monitor			✓	✓	✓		
LEXUS	MIDDLE EAST	0709-	GS430		EMPS			✓	✓	✓		1. Torque Sensor Adjustment
LEXUS	MIDDLE EAST	0709-	GS430		VGRS			✓	✓	✓		
LEXUS	MIDDLE EAST	0709-	GS430		Air Conditioner			✓	✓	✓	✓	1. Compass calibration 2. Servomotor Initialization

LEXUS	MIDDLE EAST	0709-	GS430			SRS Airbag			✓	✓			
LEXUS	MIDDLE EAST	0709-	GS430			Body			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	0709-	GS430			Gateway BEAN			✓	✓			
LEXUS	MIDDLE EAST	0709-	GS430			Gateway CAN			✓	✓			1. Initialization
LEXUS	MIDDLE EAST	0709-	GS430			Body No. 3					✓	✓	
LEXUS	MIDDLE EAST	0709-	GS430			Body No. 4			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	0709-	GS430			Body No. 5			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	0709-	GS430			Driver Door			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	0709-	GS430			Passenger Door			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	0709-	GS430			Rear Left Door			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	0709-	GS430			Rear Right Door			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	0709-	GS430			Driver Seat					✓	✓	
LEXUS	MIDDLE EAST	0709-	GS430			Passenger Seat					✓	✓	
LEXUS	MIDDLE EAST	0709-	GS430			Master Switch					✓	✓	
LEXUS	MIDDLE EAST	0709-	GS430			D-SEAT SW					✓		

LEXUS	MIDDLE EAST	0709-	GS430		Sliding Roof				✓	✓		
LEXUS	MIDDLE EAST	0709-	GS430		Tilt&Telescopic			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	0709-	GS430		Combination Meter				✓	✓		
LEXUS	MIDDLE EAST	0709-	GS430		Combination Switch				✓			
LEXUS	MIDDLE EAST	0709-	GS430		Clearance Sonar			✓	✓			
LEXUS	MIDDLE EAST	0709-	GS430		Rain Sensor				✓			
LEXUS	MIDDLE EAST	0709-	GS430		AFS			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	0709-	GS430		Entry&Start			✓	✓	✓	✓	
LEXUS	MIDDLE EAST	0709-	GS430		Power Source Control			✓	✓	✓	✓	
LEXUS	Others	0709-	GS430		Engine			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	Others	0709-	GS430		ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	Others	0709-	GS430		Radar Cruise			✓	✓	✓		1. Beam Axis Adjustment
LEXUS	Others	0709-	GS430		EMS			✓	✓	✓	✓	

LEXUS	Others	0709-	GS430		Stabilizer			√	√	√		
												1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	Others	0709-	GS430		ABS/VSC/TRC			√	√	√	√	
LEXUS	Others	0709-	GS430		Four Wheel Drive			√	√	√	√	
LEXUS	Others	0709-	GS430		Tire Pressure Monitor			√	√	√		
LEXUS	Others	0709-	GS430		EMPS			√	√	√		1. Torque Sensor Adjustment
LEXUS	Others	0709-	GS430		VGRS			√	√	√		
LEXUS	Others	0709-	GS430		Air Conditioner			√	√	√	√	1. Compass calibration 2. Servomotor Initialization
LEXUS	Others	0709-	GS430		SRS Airbag			√	√			
LEXUS	Others	0709-	GS430		Pre-Crash			√	√	√	√	
LEXUS	Others	0709-	GS430		Body			√	√	√	√	
LEXUS	Others	0709-	GS430		Gateway BEAN			√	√			
LEXUS	Others	0709-	GS430		Gateway CAN			√	√			1. Initialization
LEXUS	Others	0709-	GS430		Body No. 3					√	√	
LEXUS	Others	0709-	GS430		Body No. 4			√	√	√	√	
LEXUS	Others	0709-	GS430		Body No. 5			√	√	√	√	
LEXUS	Others	0709-	GS430		Driver Door			√	√	√	√	
LEXUS	Others	0709-	GS430		Passenger Door			√	√	√	√	
LEXUS	Others	0709-	GS430		Rear Left Door			√	√	√	√	
LEXUS	Others	0709-	GS430		Rear Right Door			√	√	√	√	
LEXUS	Others	0709-	GS430		Driver Seat					√	√	
LEXUS	Others	0709-	GS430		Passenger Seat					√	√	
LEXUS	Others	0709-	GS430		Master Switch					√	√	

LEXUS	Others	0709-	GS430		D-SEAT SW					✓		
LEXUS	Others	0709-	GS430		Sliding Roof					✓	✓	
LEXUS	Others	0709-	GS430		Tilt&Telescopic			✓	✓	✓	✓	
LEXUS	Others	0709-	GS430		Combination Meter					✓	✓	
LEXUS	Others	0709-	GS430		Combination Switch					✓		
LEXUS	Others	0709-	GS430		Clearance Sonar			✓	✓			
LEXUS	Others	0709-	GS430		Rain Sensor					✓		
LEXUS	Others	0709-	GS430		AFS			✓	✓	✓	✓	
LEXUS	Others	0709-	GS430		Entry&Start			✓	✓	✓	✓	
LEXUS	Others	0709-	GS430		Power Source Control			✓	✓	✓	✓	
LEXUS	Others	All	RX350		Engine			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	Others	All	RX350		ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	Others	All	RX350		Radar Cruise			✓	✓	✓		1. Beam Axis Adjustment
LEXUS	Others	All	RX350		Air suspension			✓	✓	✓	✓	

LEXUS	Others	All	RX350		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	Others	All	RX350		Four Wheel Drive			✓	✓	✓	✓	
LEXUS	Others	All	RX350		Tire Pressure Monitor			✓	✓	✓		
LEXUS	Others	All	RX350		EMPS			✓	✓	✓		1. Torque Sensor Adjustment
LEXUS	Others	All	RX350		Parking Assist Monitor System			✓	✓	✓		
LEXUS	Others	All	RX350		Air Conditioner			✓	✓	✓	✓	1. Servomotor Initialization
LEXUS	Others	All	RX350		SRS Airbag			✓	✓	✓		
LEXUS	Others	All	RX350		Pre-Crash			✓	✓	✓	✓	
LEXUS	Others	All	RX350		Pre-Crash 2			✓	✓	✓	✓	1. Recognition ECU High Temp History Reset 2. Camera/Target Position Memory 3. Camera Axis Adjust 4. Rear Beam Axis Adjustment
LEXUS	Others	All	RX350		Main Body			✓	✓	✓	✓	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
LEXUS	Others	All	RX350		PM1 Gateway			✓	✓	✓		1. Initialization
LEXUS	Others	All	RX350		PM2 Gateway			✓	✓	✓		1. Initialization
LEXUS	Others	All	RX350		Back Door			✓	✓	✓	✓	
LEXUS	Others	All	RX350		D-Door Motor			✓	✓	✓	✓	
LEXUS	Others	All	RX350		P-Door Motor			✓	✓	✓	✓	

LEXUS	Others	All	RX350		RL-Door Motor			√	√	√	√	
LEXUS	Others	All	RX350		RR-Door Motor			√	√	√	√	
LEXUS	Others	All	RX350		Driver Seat					√	√	
LEXUS	Others	All	RX350		Passenger Seat			*	*	*	*	
LEXUS	Others	All	RX350		Master Switch			√	√	√		
LEXUS	Others	All	RX350		Sliding Roof			√	√	√	√	
LEXUS	Others	All	RX350		Tilt&Telescopic			√	√	√	√	
					Combination							
LEXUS	Others	All	RX350		Meter			√	√	√	√	
LEXUS	Others	All	RX350		Clearance Sonar			√	√	√	√	
LEXUS	Others	All	RX350		AFS			√	√	√	√	1. ECU Information Synchronize
LEXUS	Others	All	RX350		Entry&Start			√	√	√	√	
LEXUS	Others	All	RX350		Power Source Control			√	√	√	√	
LEXUS	Others	All	RX350		Occupant Detection			√	√	√		
LEXUS	Others	All	RX350		Charging Control			√	√	√	√	
LEXUS	Others	All	RX350		Remote Engine Starter			√	√	√		1. Trouble Factor Code Clear
LEXUS	Others	All	RX350		Starting Control			√	√	√	√	
LEXUS	Others	All	RX350		Navigation System			√	√			

SERVICE SOLUTIONS

LEXUS	Brazil	All	RX350		Engine		✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	Brazil	All	RX350		ECT		✓	✓	✓	✓	1. Check Mode 2. Reset Memory 3. A/T Code Reset
LEXUS	Brazil	All	RX350		Radar Cruise		✓	✓	✓		1. Beam Axis Adjustment
LEXUS	Brazil	All	RX350		Air suspension		✓	✓	✓	✓	
LEXUS	Brazil	All	RX350		ABS/VSC/TRC		✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down、Linear Valve Offset)
LEXUS	Brazil	All	RX350		Four Wheel Drive		✓	✓	✓	✓	
LEXUS	Brazil	All	RX350		Tire Pressure Monitor		✓	✓	✓		
LEXUS	Brazil	All	RX350		EMPS		✓	✓	✓		1. Torque Sensor Adjustment
LEXUS	Brazil	All	RX350		Parking Assist Monitor System		✓	✓	✓		
LEXUS	Brazil	All	RX350		Air Conditioner		✓	✓	✓	✓	1. Servomotor Initialization
LEXUS	Brazil	All	RX350		SRS Airbag		✓	✓	✓		
LEXUS	Brazil	All	RX350		Pre-Crash		✓	✓	✓	✓	

SERVICE SOLUTIONS

LEXUS	Brazil	All	RX350		Pre-Crash 2			√	√	√	√	1. Recognition ECU High Temp History Reset 2. Camera/Target Position Memory 3. Camera Axis Adjust 4. Rear Beam Axis Adjustment
LEXUS	Brazil	All	RX350		Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
LEXUS	Brazil	All	RX350		PM1 Gateway			√	√	√		1. Initialization
LEXUS	Brazil	All	RX350		PM2 Gateway			√	√	√		1. Initialization
LEXUS	Brazil	All	RX350		Back Door			√	√	√	√	
LEXUS	Brazil	All	RX350		D-Door Motor			√	√	√	√	
LEXUS	Brazil	All	RX350		P-Door Motor			√	√	√	√	
LEXUS	Brazil	All	RX350		RL-Door Motor			√	√	√	√	
LEXUS	Brazil	All	RX350		RR-Door Motor			√	√	√	√	
LEXUS	Brazil	All	RX350		Driver Seat					√	√	
LEXUS	Brazil	All	RX350		Passenger Seat			*	*	*	*	
LEXUS	Brazil	All	RX350		Master Switch			√	√	√		
LEXUS	Brazil	All	RX350		Sliding Roof			√	√	√	√	
LEXUS	Brazil	All	RX350		Tilt&Telescopic			√	√	√	√	
LEXUS	Brazil	All	RX350		Combination Meter			√	√	√	√	
LEXUS	Brazil	All	RX350		Clearance Sonar			√	√	√	√	
LEXUS	Brazil	All	RX350		AFS			√	√	√	√	1. ECU Information Synchronize
LEXUS	Brazil	All	RX350		Entry&Start			√	√	√	√	
LEXUS	Brazil	All	RX350		Power Source Control			√	√	√	√	

LEXUS	Brazil	All	RX350		Occupant Detection			✓	✓	✓		
LEXUS	Brazil	All	RX350		Charging Control			✓	✓	✓	✓	
LEXUS	Brazil	All	RX350		Remote Engine Starter			✓	✓	✓		1. Trouble Factor Code Clear
LEXUS	Brazil	All	RX350		Starting Control			✓	✓	✓	✓	
LEXUS	All	All	RX450h		Engine			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
LEXUS	All	All	RX450h		Hybrid Control			✓	✓	✓	✓	1. VIN Read
LEXUS	All	All	RX450h		Radar Cruise			✓	✓	✓		1. Beam Axis Adjustment
LEXUS	All	All	RX450h		Air suspension			✓	✓	✓	✓	
LEXUS	All	All	RX450h		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	All	All	RX450h		Tire Pressure Monitor			✓	✓	✓		
LEXUS	All	All	RX450h		EMPS			✓	✓	✓		1. Torque Sensor Adjustment
LEXUS	All	All	RX450h		Parking Assist Monitor System			✓	✓	✓		

LEXUS	A11	A11	RX450h		Air Conditioner			✓	✓	✓	✓	1. Servomotor Initialization
LEXUS	A11	A11	RX450h		SRS Airbag			✓	✓	✓		
LEXUS	A11	A11	RX450h		Pre-Crash			✓	✓	✓	✓	
LEXUS	A11	A11	RX450h		Pre-Crash 2			✓	✓	✓	✓	1. Recognition ECU High Temp History Reset 2. Camera/Target Position Memory 3. Camera Axis Adjust 4. Rear Beam Axis Adjustment
LEXUS	A11	A11	RX450h		Main Body			✓	✓	✓	✓	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
LEXUS	A11	A11	RX450h		PM1 Gateway			✓	✓	✓		1. Initialization
LEXUS	A11	A11	RX450h		PM2 Gateway			✓	✓	✓		1. Initialization
LEXUS	A11	A11	RX450h		Back Door			✓	✓	✓	✓	
LEXUS	A11	A11	RX450h		D-Door Motor			✓	✓	✓	✓	
LEXUS	A11	A11	RX450h		P-Door Motor			✓	✓	✓	✓	
LEXUS	A11	A11	RX450h		RL-Door Motor			✓	✓	✓	✓	
LEXUS	A11	A11	RX450h		RR-Door Motor			✓	✓	✓	✓	
LEXUS	A11	A11	RX450h		Driver Seat					✓	✓	
LEXUS	A11	A11	RX450h		Passenger Seat			*	*	*	*	
LEXUS	A11	A11	RX450h		Master Switch			✓	✓	✓		
LEXUS	A11	A11	RX450h		Sliding Roof			✓	✓	✓	✓	
LEXUS	A11	A11	RX450h		Tilt&Telescopic			✓	✓	✓	✓	
LEXUS	A11	A11	RX450h		Combination Meter			✓	✓	✓	✓	
LEXUS	A11	A11	RX450h		Clearance Sonar			✓	✓	✓	✓	
LEXUS	A11	A11	RX450h		AFS			✓	✓	✓	✓	1. ECU Information Synchronize
LEXUS	A11	A11	RX450h		Entry&Start			✓	✓	✓	✓	

LEXUS	A11	A11	RX450h		Power Source Control			✓	✓	✓	✓	
LEXUS	A11	A11	RX450h		Occupant Detection			✓	✓	✓		
LEXUS	A11	A11	RX450h		Remote Engine Starter			✓	✓	✓		1. Trouble Factor Code Clear
LEXUS	A11	A11	RX450h		Navigation System			✓	✓			
LEXUS	A11	A11	SC300		Engine and ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory
LEXUS	A11	A11	SC300		Cruise Control			✓	✓			
LEXUS	A11	A11	SC300		Immobiliser			✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure *3. Auto Registration Closure
LEXUS	A11	-0408	LX470		Engine and ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory
LEXUS	A11	-0408	LX470		Cruise Control			✓	✓			
LEXUS	A11	-0408	LX470		AHC			✓	✓	✓	✓	
LEXUS	A11	-0408	LX470		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	-0408	LX470		VGRS			✓	✓	✓		
LEXUS	A11	-0408	LX470		Immobiliser			✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure
LEXUS	A11	-0408	LX470		Theft Deterrent			✓	✓	✓	✓	
LEXUS	A11	-0408	LX470		SRS Airbag			✓	✓			
LEXUS	A11	-0408	LX470		Body			✓	✓	✓	✓	

LEXUS	A11	-0408	LX470		Body No. 2				✓	✓	
LEXUS	A11	-0408	LX470		Driver Door		✓	✓	✓	✓	
LEXUS	A11	-0408	LX470		Driver Seat				✓	✓	
LEXUS	A11	-0408	LX470		Sliding Roof				✓	✓	
LEXUS	A11	-0408	LX470		Tilt&Telescopic		✓	✓	✓	✓	
LEXUS	A11	-0408	LX470		Mirror				✓	✓	
LEXUS	A11	-0408	LX470		Rain Sensor				✓		
LEXUS	A11	-0408	LX470		Wiper				✓	✓	
LEXUS	A11	0408-	LX470		Engine and ECT		✓	✓	✓	✓	1. Check Mode 2. Reset Memory
LEXUS	A11	0408-	LX470		Cruise Control		✓	✓			
LEXUS	A11	0408-	LX470		AHC		✓	✓	✓	✓	
LEXUS	A11	0408-	LX470		ABS/VSC/TRC		✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down、Linear Valve Offset)
LEXUS	A11	0408-	LX470		VGRS		✓	✓	✓		
LEXUS	A11	0408-	LX470		Immobiliser		✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure
LEXUS	A11	0408-	LX470		Theft Deterrent		✓	✓	✓	✓	
LEXUS	A11	0408-	LX470		SRS Airbag		✓	✓			
LEXUS	A11	0408-	LX470		Body		✓	✓	✓	✓	
LEXUS	A11	0408-	LX470		Body No. 2				✓	✓	
LEXUS	A11	0408-	LX470		Driver Door		✓	✓	✓	✓	
LEXUS	A11	0408-	LX470		Driver Seat				✓	✓	
LEXUS	A11	0408-	LX470		Sliding Roof				✓	✓	
LEXUS	A11	0408-	LX470		Tilt&Telescopic		✓	✓	✓	✓	
LEXUS	A11	0408-	LX470		Mirror				✓	✓	

LEXUS	A11	0408-	LX470			Rain Sensor					✓		
LEXUS	A11	0408-	LX470			Wiper					✓	✓	
LEXUS	A11	A11	CELICA			Engine and ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory
LEXUS	A11	A11	CELICA			ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	A11	CELICA			Immobiliser			✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure
LEXUS	A11	A11	CELICA			SRS Airbag			✓	✓			

OBD2-Shop.eu