

How to read this list:	
Mark	Description
√	Function is supported.
*	Function is added or developed newly

V30/PC-MAX Function List													
Automaker:				TOYOTA									
Software Version:				V4.4									
Automaker	Region	Year	Model	Vehicle Type	ECU Type	System	ECU Supplier	Sys. Info.	Read Code	Clear Code	Data Stream	Actuations	Special Functions
TOYOTA	All	All	17Pin			Engine			√	√	√		
TOYOTA	All	All	17Pin			AT			√	√			
TOYOTA	All	All	17Pin			ABS			√	√			
TOYOTA	All	All	17Pin			SRS			√	√			
TOYOTA	All	All	17Pin			CC			√	√			
TOYOTA	All	All	22Pin			Engine			√	√	√		
TOYOTA	All	All	22Pin			AT			√	√			
TOYOTA	All	All	22Pin			ABS			√	√			
TOYOTA	All	All	22Pin			SRS			√	√			
TOYOTA	All	All	22Pin			CC			√	√			
TOYOTA	All	-0210	COROLLA			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	-0210	COROLLA			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	-0210	COROLLA			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	-0210	COROLLA			SRS Airbag			√	√			
TOYOTA	All	0210-	COROLLA			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

TOYOTA	All	0210-	COROLLA		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0210-	COROLLA		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	0210-	COROLLA		SRS Airbag			√	√			
TOYOTA	All	All	ALLION		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	ALLION		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	ALLION		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	All	ALLION		SRS Airbag			√	√			
TOYOTA	All	All	PREMIO		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	PREMIO		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	PREMIO		SRS Airbag			√	√			
TOYOTA	All	All	AVENSIS VERSO/PICNI C		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	AVENSIS VERSO/PICNI C		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	AVENSIS VERSO/PICNI C		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure

TOYOTA	All	All	AVENSIS VERSO/PICNIC			SRS Airbag			√	√			
TOYOTA	All	All	IPSUM			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	IPSUM			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	IPSUM			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	All	All	IPSUM			SRS Airbag			√	√			
TOYOTA	All	-0102	PREVIA/TAR AGO			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	-0102	PREVIA/TAR AGO			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	-0102	PREVIA/TAR AGO			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	All	-0102	PREVIA/TAR AGO			SRS Airbag			√	√			
TOYOTA	All	0102-	PREVIA/TAR AGO			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0102-	PREVIA/TAR AGO			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0102-	PREVIA/TAR AGO			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	All	0102-	PREVIA/TAR AGO			SRS Airbag			√	√			

TOYOTA	All	-0102	ESTIMA		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	-0102	ESTIMA		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	-0102	ESTIMA		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	All	-0102	ESTIMA		SRS Airbag			√	√			
TOYOTA	All	0102-	ESTIMA		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0102-	ESTIMA		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0102-	ESTIMA		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	All	0102-	ESTIMA		SRS Airbag			√	√			
TOYOTA	All	-0301	AVENSIS		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	-0301	AVENSIS		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	-0301	AVENSIS		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	All	-0301	AVENSIS		Tvss			√	√	√	√	
TOYOTA	All	-0301	AVENSIS		SRS Airbag			√	√			
TOYOTA	All	-0301	AVENSIS		Body			√	√	√	√	
TOYOTA	All	0301-0603	AVENSIS		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory

TOYOTA	All	0301-0603	AVENSIS			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0301-0603	AVENSIS			Immobiliser				√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0301-0603	AVENSIS			Tvss				√	√	√	√	
TOYOTA	All	0301-0603	AVENSIS			SRS Airbag				√	√			
TOYOTA	All	0301-0603	AVENSIS			Body				√	√	√	√	
TOYOTA	All	0604-	AVENSIS			Engine and ECT				√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0604-	AVENSIS			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0604-	AVENSIS			Immobiliser				√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0604-	AVENSIS			Tvss				√	√	√	√	
TOYOTA	All	0604-	AVENSIS			SRS Airbag				√	√			
TOYOTA	All	0604-	AVENSIS			Body				√	√	√	√	
TOYOTA	All	All	CALDINA			Engine and ECT				√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	CALDINA			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	CALDINA			Immobiliser				√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	All	All	CALDINA			SRS Airbag				√	√			
TOYOTA	All	All	VOXY			Engine and ECT				√	√	√	√	*1.Check Mode *2.Reset Memory

TOYOTA	All	All	VOXY			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	VOXY			SRS Airbag			√	√			
TOYOTA	All	All	VOXY			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	All	All	COROLLA VERSO			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	COROLLA VERSO			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	COROLLA VERSO			SRS Airbag			√	√			
TOYOTA	All	-0008	AVENSIS			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	-0008	AVENSIS			SRS Airbag			√	√			
TOYOTA	All	0008-	AVENSIS			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0008-	AVENSIS			SRS Airbag			√	√			
TOYOTA	All	-0310	AVENSIS VERSO/PICNI C			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	-0310	AVENSIS VERSO/PICNI C			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	-0310	AVENSIS VERSO/PICNI C			SRS Airbag			√	√			
TOYOTA	All	0310-	AVENSIS VERSO/PICNI C			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory

SERVICE SOLUTIONS

TOYOTA	All	0310-	AVENSIS VERSO/PICNIC		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0310-	AVENSIS VERSO/PICNIC		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0310-	AVENSIS VERSO/PICNIC		SRS Airbag			√	√			
TOYOTA	All	All	PREVIA/TARGO		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	PREVIA/TARGO		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	PREVIA/TARGO		SRS Airbag			√	√			
TOYOTA	All	All	LITEACE		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	-0208	LAND CR.		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	-0208	LAND CR.		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	-0208	LAND CR.		SRS Airbag			√	√			
TOYOTA	All	-0208	LAND CR.		Body			√	√	√	√	
TOYOTA	All	0208-	LAND CR.		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0208-	LAND CR.		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)

SERVICE SOLUTIONS

TOYOTA	All	0208-	LAND CR.		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0208-	LAND CR.		Theft Deterrent			√	√	√	√	
TOYOTA	All	0208-	LAND CR.		SRS Airbag			√	√			
TOYOTA	All	0208-	LAND CR.		Body			√	√	√	√	
TOYOTA	All	All	LAND CR.		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	LAND CR.		Air suspension			√	√	√	√	
TOYOTA	All	All	LAND CR.		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	All	LAND CR.		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	All	LAND CR.		Theft Deterrent			√	√	√	√	
TOYOTA	All	All	LAND CR.		SRS Airbag			√	√			
TOYOTA	All	All	LAND CR.		Body			√	√	√	√	
TOYOTA	All	All	LAND CR.		Driver Door			√	√	√	√	
TOYOTA	All	-0107	IS200		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	-0107	IS200		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	-0107	IS200		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	-0107	IS200		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	All	-0107	IS200		Theft Deterrent			√	√	√	√	
TOYOTA	All	-0107	IS200		SRS Airbag			√	√			
TOYOTA	All	-0107	IS200		Body			√	√	√	√	
TOYOTA	All	-0107	IS200		Combination Meter					√	√	

TOYOTA	All	0107-	IS200		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0107-	IS200		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0107-	IS200		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	0107-	IS200		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	All	0107-	IS200		Theft Deterrent			√	√	√	√	
TOYOTA	All	0107-	IS200		SRS Airbag			√	√			
TOYOTA	All	0107-	IS200		Body			√	√	√	√	
TOYOTA	All	0107-	IS200		Combination Meter					√	√	
TOYOTA	All	All	CENTURY		Engine(LH Bank)			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	CENTURY		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	CENTURY		SRS Airbag			√	√			
TOYOTA	All	All	CENTURY		Body			√	√	√	√	
TOYOTA	All	-0108	LAND CR.		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	-0108	LAND CR.		AHC			√	√	√	√	
TOYOTA	All	-0108	LAND CR.		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	-0108	LAND CR.		SRS Airbag			√	√			
TOYOTA	All	-0108	LAND CR.		Body			√	√	√	√	
TOYOTA	All	-0108	LAND CR.		Driver Seat					√	√	

TOYOTA	All	-0108	LAND CR.		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	-0108	LAND CR.		Mirror					√	√	
TOYOTA	All	0108-0208	LAND CR.		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0108-0208	LAND CR.		AHC			√	√	√	√	
TOYOTA	All	0108-0208	LAND CR.		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0108-0208	LAND CR.		SRS Airbag			√	√			
TOYOTA	All	0108-0208	LAND CR.		Body			√	√	√	√	
TOYOTA	All	0108-0208	LAND CR.		Driver Seat					√	√	
TOYOTA	All	0108-0208	LAND CR.		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	0108-0208	LAND CR.		Mirror					√	√	
TOYOTA	All	0208-0408	LAND CR.		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0208-0408	LAND CR.		AHC			√	√	√	√	
TOYOTA	All	0208-0408	LAND CR.		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0208-0408	LAND CR.		VGRS			√	√	√		
TOYOTA	All	0208-0408	LAND CR.		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0208-0408	LAND CR.		Theft Deterrent			√	√	√	√	
TOYOTA	All	0208-0408	LAND CR.		SRS Airbag			√	√			
TOYOTA	All	0208-0408	LAND CR.		Body			√	√	√	√	
TOYOTA	All	0208-0408	LAND CR.		Driver Seat					√	√	
TOYOTA	All	0208-0408	LAND CR.		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	0208-0408	LAND CR.		Mirror					√	√	
TOYOTA	All	0208-0408	LAND CR.		Rain Sensor					√		
TOYOTA	All	0208-0408	LAND CR.		Wiper					√	√	

SERVICE SOLUTIONS

TOYOTA	All	0408-	LAND CR.		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0408-	LAND CR.		AHC			√	√	√	√	
TOYOTA	All	0408-	LAND CR.		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0408-	LAND CR.		VGRS			√	√	√		
TOYOTA	All	0408-	LAND CR.		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0408-	LAND CR.		Theft Deterrent			√	√	√	√	
TOYOTA	All	0408-	LAND CR.		SRS Airbag			√	√			
TOYOTA	All	0408-	LAND CR.		Body			√	√	√	√	
TOYOTA	All	0408-	LAND CR.		Driver Seat					√	√	
TOYOTA	All	0408-	LAND CR.		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	0408-	LAND CR.		Mirror					√	√	
TOYOTA	All	0408-	LAND CR.		Rain Sensor					√		
TOYOTA	All	0408-	LAND CR.		Wiper					√	√	
TOYOTA	All	All	LAND CR.		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	LAND CR.		SRS Airbag			√	√			
TOYOTA	All	All	ARISTO		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	ARISTO		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	All	ARISTO		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	All	ARISTO		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	All	All	ARISTO		SRS Airbag			√	√			

TOYOTA	All	All	ARISTO			Body			√	√	√	√	1.Wireless Code Erasure 2.Wireless Code Registration
TOYOTA	All	All	ARISTO			Body No.2					√	√	
TOYOTA	All	All	ARISTO			Driver Door			√	√	√	√	
TOYOTA	All	All	ARISTO			Passenger Door			√	√	√	√	
TOYOTA	All	All	ARISTO			Rear Left Door			√	√	√	√	
TOYOTA	All	All	ARISTO			Rear Right Door			√	√	√	√	
TOYOTA	All	All	ARISTO			Driver Seat					√	√	
TOYOTA	All	All	ARISTO			Sliding Roof					√	√	
TOYOTA	All	All	ARISTO			Tilt&Telescopic			√	√	√	√	
TOYOTA	All	All	ARISTO			Combination Meter					√	√	
TOYOTA	All	-0007	GS300			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	-0007	GS300			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	-0007	GS300			Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	-0007	GS300			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	All	-0007	GS300			SRS Airbag			√	√			
TOYOTA	All	-0007	GS300			Body			√	√	√	√	1.Wireless Code Erasure 2.Wireless Code Registration
TOYOTA	All	-0007	GS300			Body No.2					√	√	
TOYOTA	All	-0007	GS300			Driver Door			√	√	√	√	
TOYOTA	All	-0007	GS300			Passenger Door			√	√	√	√	
TOYOTA	All	-0007	GS300			Rear Left Door			√	√	√	√	
TOYOTA	All	-0007	GS300			Rear Right Door			√	√	√	√	
TOYOTA	All	-0007	GS300			Driver Seat					√	√	
TOYOTA	All	-0007	GS300			Sliding Roof					√	√	
TOYOTA	All	-0007	GS300			Tilt&Telescopic			√	√	√	√	

TOYOTA	All	-0007	GS300		Combination Meter				√	√		
TOYOTA	All	0007-0108	GS300		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0007-0108	GS300		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0007-0108	GS300		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	0007-0108	GS300		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	All	0007-0108	GS300		SRS Airbag			√	√			
TOYOTA	All	0007-0108	GS300		Body			√	√	√	√	1.Wireless Code Erasure 2.Wireless Code Registration
TOYOTA	All	0007-0108	GS300		Body No.2					√	√	
TOYOTA	All	0007-0108	GS300		Driver Door			√	√	√	√	
TOYOTA	All	0007-0108	GS300		Passenger Door			√	√	√	√	
TOYOTA	All	0007-0108	GS300		Rear Left Door			√	√	√	√	
TOYOTA	All	0007-0108	GS300		Rear Right Door			√	√	√	√	
TOYOTA	All	0007-0108	GS300		Driver Seat					√	√	
TOYOTA	All	0007-0108	GS300		Sliding Roof					√	√	
TOYOTA	All	0007-0108	GS300		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	0007-0108	GS300		Combination Meter					√	√	
TOYOTA	All	0108-	GS300		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0108-	GS300		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0108-	GS300		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization

SERVICE SOLUTIONS

TOYOTA	All	0108-	GS300		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	All	0108-	GS300		SRS Airbag			√	√			
TOYOTA	All	0108-	GS300		Body			√	√	√	√	1.Wireless Code Erasure 2.Wireless Code Registration
TOYOTA	All	0108-	GS300		Body No.2					√	√	
TOYOTA	All	0108-	GS300		Driver Door			√	√	√	√	
TOYOTA	All	0108-	GS300		Passenger Door			√	√	√	√	
TOYOTA	All	0108-	GS300		Rear Left Door			√	√	√	√	
TOYOTA	All	0108-	GS300		Rear Right Door			√	√	√	√	
TOYOTA	All	0108-	GS300		Driver Seat					√	√	
TOYOTA	All	0108-	GS300		Sliding Roof					√	√	
TOYOTA	All	0108-	GS300		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	0108-	GS300		Combination Meter					√	√	
TOYOTA	All	-0012	CROWN		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	-0012	CROWN		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	-0012	CROWN		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	-0012	CROWN		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	All	-0012	CROWN		SRS Airbag			√	√			
TOYOTA	All	-0012	CROWN		Body			√	√	√	√	1.Wireless Code Erasure 2.Wireless Code Registration
TOYOTA	All	-0012	CROWN		Body No.2					√	√	
TOYOTA	All	-0012	CROWN		Body No.3			√	√	√	√	
TOYOTA	All	-0012	CROWN		Driver Door			√	√	√	√	
TOYOTA	All	-0012	CROWN		Passenger Door			√	√	√	√	
TOYOTA	All	-0012	CROWN		Sliding Roof					√	√	

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

TOYOTA	All	-0012	CROWN			Tilt&Telescopic			√	√	√	√	
TOYOTA	All	-0012	CROWN			Combination Meter					√	√	
TOYOTA	All	-0012	CROWN			Combination Switch					√		
TOYOTA	All	0012-	CROWN			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0012-	CROWN			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0012-	CROWN			Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	0012-	CROWN			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	All	0012-	CROWN			Theft Deterrent			√	√	√	√	
TOYOTA	All	0012-	CROWN			SRS Airbag			√	√			
TOYOTA	All	0012-	CROWN			Body			√	√	√	√	1.Wireless Code Erasure 2.Wireless Code Registration
TOYOTA	All	0012-	CROWN			Body No.2					√	√	
TOYOTA	All	0012-	CROWN			Body No.3			√	√	√	√	
TOYOTA	All	0012-	CROWN			Driver Door			√	√	√	√	
TOYOTA	All	0012-	CROWN			Passenger Door			√	√	√	√	
TOYOTA	All	0012-	CROWN			Rear Left Door			√	√	√	√	
TOYOTA	All	0012-	CROWN			Rear Right Door			√	√	√	√	
TOYOTA	All	0012-	CROWN			Sliding Roof					√	√	
TOYOTA	All	0012-	CROWN			Tilt&Telescopic			√	√	√	√	
TOYOTA	All	0012-	CROWN			Combination Meter					√	√	
TOYOTA	All	0012-	CROWN			Combination Switch					√		
TOYOTA	All	All	LAND CR.			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory

TOYOTA	All	All	LAND CR.			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	LAND CR.			SRS Airbag				√	√			
TOYOTA	All	All	LAND CR.			Engine and ECT				√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	LAND CR.			Air suspension				√	√	√	√	
TOYOTA	All	All	LAND CR.			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	LAND CR.			Immobiliser				√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	All	LAND CR.			Theft Deterrent				√	√	√	√	
TOYOTA	All	All	LAND CR.			SRS Airbag				√	√			
TOYOTA	All	All	LAND CR.			Body				√	√	√	√	
TOYOTA	All	All	LAND CR.			Driver Door				√	√	√	√	
TOYOTA	All	All	LAND CR.			Engine and ECT				√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	LAND CR.			Air suspension				√	√	√	√	
TOYOTA	All	All	LAND CR.			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	LAND CR.			Immobiliser				√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	All	LAND CR.			Theft Deterrent				√	√	√	√	
TOYOTA	All	All	LAND CR.			SRS Airbag				√	√			
TOYOTA	All	All	LAND CR.			Body				√	√	√	√	
TOYOTA	All	All	LAND CR.			Driver Door				√	√	√	√	
TOYOTA	All	All	LAND CR.			Engine and ECT				√	√	√	√	*1.Check Mode *2.Reset Memory

SERVICE SOLUTIONS

TOYOTA	All	All	LAND CR.		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	-0008	4RUNNER		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	-0008	4RUNNER		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0008-	4RUNNER		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0008-	4RUNNER		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0008-	4RUNNER		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0008-	4RUNNER		Theft Deterrent			√	√	√	√	
TOYOTA	All	0008-	4RUNNER		SRS Airbag			√	√			
TOYOTA	All	0008-	4RUNNER		Body			√	√	√	√	
TOYOTA	All	0008-	4RUNNER		Back Door			√	√	√	√	
TOYOTA	All	All	FORTUNER/ HILUX SW4		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	FORTUNER/ HILUX SW4		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	FORTUNER/ HILUX SW4		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	All	FORTUNER/ HILUX SW4		SRS Airbag			√	√			
TOYOTA	All	All	LAND CR.		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory

TOYOTA	All	All	LAND CR.			Air suspension			√	√	√	√	
TOYOTA	All	All	LAND CR.			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	LAND CR.			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	All	LAND CR.			Theft Deterrent			√	√	√	√	
TOYOTA	All	All	LAND CR.			SRS Airbag			√	√			
TOYOTA	All	All	LAND CR.			Body			√	√	√	√	
TOYOTA	All	-0408	CAMRY			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	-0408	CAMRY			SRS Airbag			√	√			
TOYOTA	All	0408-/TMCA Product	CAMRY			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0408-/TMCA Product	CAMRY			SRS Airbag			√	√			
TOYOTA	All	0408-/Others	CAMRY			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0408-/Others	CAMRY			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0408-/Others	CAMRY			SRS Airbag			√	√			
TOYOTA	All	-9808	CAMRY			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	-9808	CAMRY			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	-9808	CAMRY			SRS Airbag			√	√			
TOYOTA	All	9808-	CAMRY			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory

SERVICE SOLUTIONS

TOYOTA	All	9808-	CAMRY			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	9808-	CAMRY			SRS Airbag				√	√			
TOYOTA	All	All	ES300			Engine and ECT				√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	ES300			EMS				√	√	√	√	
TOYOTA	All	All	ES300			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	ES300			Immobiliser				√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	All	All	ES300			Theft Deterrent				√	√	√	√	
TOYOTA	All	All	ES300			SRS Airbag				√	√			
TOYOTA	All	All	ES300			Body				√	√	√	√	
TOYOTA	All	All	ES300			Driver Door				√	√	√	√	
TOYOTA	All	All	ES300			Passenger Door				√	√	√	√	
TOYOTA	All	-0009	ES300			Engine and ECT				√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	-0009	ES300			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	-0009	ES300			SRS Airbag				√	√			
TOYOTA	All	0009-	ES300			Engine and ECT				√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0009-	ES300			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)

TOYOTA	All	0009-	ES300		SRS Airbag			√	√			
TOYOTA	All	-0008	AVALON		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	-0008	AVALON		SRS Airbag			√	√			
TOYOTA	All	-0008	PRONARD		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	-0008	PRONARD		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	-0008	PRONARD		SRS Airbag			√	√			
TOYOTA	All	-0008	AVALON		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	-0008	AVALON		SRS Airbag			√	√			
TOYOTA	All	0008-	AVALON		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0008-	AVALON		SRS Airbag			√	√			
TOYOTA	All	All	ESTIMA		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	ESTIMA		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	ESTIMA		SRS Airbag			√	√			
TOYOTA	All	All	ESTIMA		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	All	All	IST		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	IST		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	IST		SRS Airbag			√	√			

TOYOTA	All	All	PROBOX			Engine and ECT				√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	PROBOX			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	PROBOX			SRS Airbag				√	√			
TOYOTA	All	All	SIENTA			Engine and ECT				√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	SIENTA			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	SIENTA			SRS Airbag				√	√			
TOYOTA	All	All	Porte			Engine and ECT				√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	Porte			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	Porte			SRS Airbag				√	√			
TOYOTA	All	All	RAUM			Engine and ECT				√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	RAUM			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	RAUM			SRS Airbag				√	√			
TOYOTA	All	All	FunCargo			Engine and ECT				√	√	√	√	*1.Check Mode *2.Reset Memory

TOYOTA	All	All	FunCargo			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	FunCargo			SRS Airbag			√	√			
TOYOTA	All	All	PLATZ			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	PLATZ			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	PLATZ			SRS Airbag			√	√			
TOYOTA	All	-0108	HIACE			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0108-	HIACE			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0108-	HIACE			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0108-	HIACE			SRS Airbag			√	√			
TOYOTA	All	All	LAND CR.			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	LAND CR.			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	LAND CR.			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	All	LAND CR.			Theft Deterrent			√	√	√	√	
TOYOTA	All	All	LAND CR.			SRS Airbag			√	√			
TOYOTA	All	All	LAND CR.			Body			√	√	√	√	
TOYOTA	All	All	LAND CR.			Driver Door			√	√	√	√	

TOYOTA	All	-9805	HILUX		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	9805-0109	HILUX		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	9805-0109	HILUX		SRS Airbag			√	√			
TOYOTA	All	0109-	HILUX		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0109-	HILUX		SRS Airbag			√	√			
TOYOTA	All	All	YARIS/ECHO		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	YARIS/ECHO		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	YARIS/ECHO		SRS Airbag			√	√			
TOYOTA	All	All	CORONA		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	CORONA		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	CORONA		SRS Airbag			√	√			
TOYOTA	All	-0008	AVENSIS		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	-0008	AVENSIS		SRS Airbag			√	√			
TOYOTA	All	0008-	AVENSIS		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0008-	AVENSIS		SRS Airbag			√	√			
TOYOTA	All	-0009	CAMRY		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	-0009	CAMRY		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory

SERVICE SOLUTIONS

TOYOTA	All	-0009	CAMRY			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0009-	CAMRY			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0009-	CAMRY			SRS Airbag			√	√			
TOYOTA	All	-0108	LAND CR.			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	-0108	LAND CR.			AHC			√	√	√	√	
TOYOTA	All	-0108	LAND CR.			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	-0108	LAND CR.			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	All	-0108	LAND CR.			SRS Airbag			√	√			
TOYOTA	All	-0108	LAND CR.			Body			√	√	√	√	
TOYOTA	All	-0108	LAND CR.			Driver Seat					√	√	
TOYOTA	All	-0108	LAND CR.			Tilt&Telescopic			√	√	√	√	
TOYOTA	All	-0108	LAND CR.			Mirror					√	√	
TOYOTA	All	0108-0208	LAND CR.			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0108-0208	LAND CR.			AHC			√	√	√	√	
TOYOTA	All	0108-0208	LAND CR.			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0108-0208	LAND CR.			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	All	0108-0208	LAND CR.			SRS Airbag			√	√			

TOYOTA	All	0108-0208	LAND CR.		Body			√	√	√	√	
TOYOTA	All	0108-0208	LAND CR.		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	0208-0408	LAND CR.		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0208-0408	LAND CR.		AHC			√	√	√	√	
TOYOTA	All	0208-0408	LAND CR.		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0208-0408	LAND CR.		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0208-0408	LAND CR.		Theft Deterrent			√	√	√	√	
TOYOTA	All	0208-0408	LAND CR.		SRS Airbag			√	√			
TOYOTA	All	0208-0408	LAND CR.		Body			√	√	√	√	
TOYOTA	All	0208-0408	LAND CR.		Driver Door			√	√	√	√	
TOYOTA	All	0208-0408	LAND CR.		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	0408-	LAND CR.		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0408-	LAND CR.		AHC			√	√	√	√	
TOYOTA	All	0408-	LAND CR.		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0408-	LAND CR.		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0408-	LAND CR.		Theft Deterrent			√	√	√	√	
TOYOTA	All	0408-	LAND CR.		SRS Airbag			√	√			
TOYOTA	All	0408-	LAND CR.		Body			√	√	√	√	
TOYOTA	All	0408-	LAND CR.		Driver Door			√	√	√	√	
TOYOTA	All	0408-	LAND CR.		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	-0008	LX470		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	-0008	LX470		AHC			√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	All	-0008	LX470			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	-0008	LX470			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	All	-0008	LX470			SRS Airbag			√	√			
TOYOTA	All	-0008	LX470			Body			√	√	√	√	
TOYOTA	All	-0008	LX470			Driver Seat					√	√	
TOYOTA	All	-0008	LX470			Tilt&Telescopic			√	√	√	√	
TOYOTA	All	-0008	LX470			Mirror					√	√	
TOYOTA	All	0008-0208	LX470			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0008-0208	LX470			AHC			√	√	√	√	
TOYOTA	All	0008-0208	LX470			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0008-0208	LX470			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	All	0008-0208	LX470			SRS Airbag			√	√			
TOYOTA	All	0008-0208	LX470			Body			√	√	√	√	
TOYOTA	All	0008-0208	LX470			Driver Seat					√	√	
TOYOTA	All	0008-0208	LX470			Tilt&Telescopic			√	√	√	√	
TOYOTA	All	0008-0208	LX470			Mirror					√	√	
TOYOTA	All	0208-0408	LX470			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0208-0408	LX470			AHC			√	√	√	√	

TOYOTA	All	0208-0408	LX470			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0208-0408	LX470			VGRS				√	√	√		
TOYOTA	All	0208-0408	LX470			Immobiliser				√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0208-0408	LX470			Theft Deterrent				√	√	√	√	
TOYOTA	All	0208-0408	LX470			SRS Airbag				√	√			
TOYOTA	All	0208-0408	LX470			Body				√	√	√	√	
TOYOTA	All	0208-0408	LX470			Body No.2						√	√	
TOYOTA	All	0208-0408	LX470			Driver Door				√	√	√	√	
TOYOTA	All	0208-0408	LX470			Driver Seat						√	√	
TOYOTA	All	0208-0408	LX470			Sliding Roof						√	√	
TOYOTA	All	0208-0408	LX470			Tilt&Telescopic				√	√	√	√	
TOYOTA	All	0208-0408	LX470			Mirror						√	√	
TOYOTA	All	0208-0408	LX470			Rain Sensor						√		
TOYOTA	All	0208-0408	LX470			Wiper						√	√	
TOYOTA	All	0408-	LX470			Engine and ECT				√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0408-	LX470			AHC				√	√	√	√	
TOYOTA	All	0408-	LX470			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0408-	LX470			VGRS				√	√	√		
TOYOTA	All	0408-	LX470			Immobiliser				√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0408-	LX470			Theft Deterrent				√	√	√	√	
TOYOTA	All	0408-	LX470			SRS Airbag				√	√			
TOYOTA	All	0408-	LX470			Body				√	√	√	√	
TOYOTA	All	0408-	LX470			Body No.2						√	√	

TOYOTA	All	0408-	LX470		Driver Door			√	√	√	√	
TOYOTA	All	0408-	LX470		Driver Seat					√	√	
TOYOTA	All	0408-	LX470		Sliding Roof					√	√	
TOYOTA	All	0408-	LX470		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	0408-	LX470		Mirror					√	√	
TOYOTA	All	0408-	LX470		Rain Sensor					√		
TOYOTA	All	0408-	LX470		Wiper					√	√	
TOYOTA	All	All	SC430		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	SC430		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	All	SC430		Tire Pressure Monitor			√	√	√		
TOYOTA	All	All	SC430		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	All	SC430		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	All	SC430		Theft Deterrent			√	√	√	√	
TOYOTA	All	All	SC430		SRS Airbag			√	√			
TOYOTA	All	All	SC430		Gateway			√	√			
TOYOTA	All	All	SC430		Body No.2					√	√	
TOYOTA	All	All	SC430		Body No.3					√	√	
TOYOTA	All	All	SC430		Body No.4			√	√	√	√	
TOYOTA	All	All	SC430		Body No.5			√	√	√	√	
TOYOTA	All	All	SC430		Driver Door			√	√	√	√	
TOYOTA	All	All	SC430		Passenger Door			√	√	√	√	
TOYOTA	All	All	SC430		Driver Seat					√	√	
TOYOTA	All	All	SC430		Passenger Seat					√	√	
TOYOTA	All	All	SC430		Retractable Hardtop			√	√	√		
TOYOTA	All	All	SC430		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	All	SC430		Combination Meter					√	√	

TOYOTA	All	All	SC430		Combination Switch					√		
TOYOTA	All	All	SC430		Steering Pad Switch					√		
TOYOTA	All	-0108	LAND CR.		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	-0108	LAND CR.		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	-0108	LAND CR.		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	All	0108-	LAND CR.		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0108-	LAND CR.		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0108-	LAND CR.		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	All	All	PRADO		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	PRADO		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	PRADO		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	All	PRADO		Theft Deterrent			√	√	√	√	
TOYOTA	All	All	PRADO		SRS Airbag			√	√			
TOYOTA	All	All	PRADO		Gateway			√	√			
TOYOTA	All	All	PRADO		Driver Door			√	√	√	√	
TOYOTA	All	-0312	DYNA		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory

SERVICE SOLUTIONS

TOYOTA	All	-0312	DYNA			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	-0312	DYNA			SRS Airbag			√	√			
TOYOTA	All	0312-	DYNA			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0312-	DYNA			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0312-	DYNA			SRS Airbag			√	√			
TOYOTA	All	All	CELICA			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	CELICA			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	CELICA			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	All	All	CELICA			SRS Airbag			√	√			
TOYOTA	All	All	PREMIO			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	PREMIO			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	PREMIO			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	All	All	PREMIO			SRS Airbag			√	√			
TOYOTA	All	-0208	MR2			Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory

SERVICE SOLUTIONS

TOYOTA	All	-0208	MR2			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	-0208	MR2			EHPS				√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	-0208	MR2			Immobiliser				√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	All	-0208	MR2			SRS Airbag				√	√			
TOYOTA	All	0208-	MR2			Engine and ECT				√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0208-	MR2			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0208-	MR2			EHPS				√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	0208-	MR2			Immobiliser				√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	All	0208-	MR2			SRS Airbag				√	√			
TOYOTA	All	-0708	COASTER			Engine and ECT				√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0708-	COASTER			Engine and ECT				√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0708-	COASTER			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	-0706	CROWN COMFORT			Engine and ECT				√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0706-	CROWN COMFORT			Engine and ECT				√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	0706-	CROWN COMFORT			SRS Airbag				√	√			

TOYOTA	All	All	CLUGER		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	CLUGER		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	All	CLUGER		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	All	CLUGER		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	All	CLUGER		SRS Airbag			√	√			
TOYOTA	All	All	CLUGER		Body			√	√	√	√	
TOYOTA	All	All	CLUGER		Sliding Roof					√	√	
TOYOTA	All	All	CLUGER		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	All	HARRIER		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	HARRIER		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	All	HARRIER		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	All	HARRIER		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	All	HARRIER		SRS Airbag			√	√			
TOYOTA	All	All	HARRIER		Body			√	√	√	√	
TOYOTA	All	All	HARRIER		Sliding Roof					√	√	
TOYOTA	All	All	HARRIER		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	All	HILUX		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory

SERVICE SOLUTIONS

TOYOTA	All	All	HILUX			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	HILUX			SRS Airbag				√	√			
TOYOTA	All	All	HILUX			Immobiliser				√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	All	HILUX			Body				√	√	√	√	
TOYOTA	All	All	ALPHARD HYBRID			Engine and ECT				√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	ALPHARD HYBRID			Hybrid Control				√	√	√		
TOYOTA	All	All	ALPHARD HYBRID			HV Battery				√	√	√	√	
TOYOTA	All	All	ALPHARD HYBRID			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	ALPHARD HYBRID			SRS Airbag				√	√			
TOYOTA	All	All	ALPHARD HYBRID			Immobiliser				√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	All	Verossa			Engine and ECT				√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	Verossa			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	Verossa			Air Conditioner				√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	All	Verossa			SRS Airbag				√	√			
TOYOTA	All	All	Verossa			Body				√	√	√	√	
TOYOTA	All	All	Verossa			Combination Meter						√	√	

SERVICE SOLUTIONS

TOYOTA	All	All	MARK II		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	MARK II		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	MARK II		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	All	MARK II		SRS Airbag			√	√			
TOYOTA	All	All	MARK II		Body			√	√	√	√	
TOYOTA	All	All	MARK II		Combination Meter					√	√	
TOYOTA	All	All	PROGRE		Engine and ECT			√	√	√	√	*1.Check Mode *2.Reset Memory
TOYOTA	All	All	PROGRE		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	PROGRE		SRS Airbag			√	√			
TOYOTA	All	All	REIZ		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	REIZ		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	All	REIZ		Cruise Control			√	√			
TOYOTA	All	All	REIZ		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	REIZ		EMPS			√	√	√		1.Torque Sensor Adjustment

SERVICE SOLUTIONS

TOYOTA	All	All	REIZ			Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	All	REIZ			SRS Airbag			√	√			
TOYOTA	All	All	REIZ			Body			√	√	√	√	
TOYOTA	All	All	REIZ			Gateway			√	√			
TOYOTA	All	All	REIZ			Body No.5			√	√	√	√	
TOYOTA	All	All	REIZ			Master Switch					√	√	
TOYOTA	All	All	REIZ			Sliding Roof					√	√	
TOYOTA	All	All	REIZ			Combination Meter					√	√	
TOYOTA	All	All	REIZ			AFS			√	√	√	√	
TOYOTA	All	All	REIZ			Entry&Start			√	√	√	√	
TOYOTA	All	All	REIZ			Power Source Control			√	√	√	√	
TOYOTA	All	All	MARK X			Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	MARK X			ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	All	MARK X			Cruise Control			√	√			
TOYOTA	All	All	MARK X			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	All	MARK X			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	All	MARK X			Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	All	MARK X			SRS Airbag			√	√			
TOYOTA	All	All	MARK X			Body			√	√	√	√	
TOYOTA	All	All	MARK X			Gateway			√	√			
TOYOTA	All	All	MARK X			Body No.5			√	√	√	√	

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

TOYOTA	All	All	MARK X		Master Switch					√	√	
TOYOTA	All	All	MARK X		Sliding Roof					√	√	
TOYOTA	All	All	MARK X		Combination Meter					√	√	
TOYOTA	All	All	MARK X		AFS			√	√	√	√	
TOYOTA	All	All	MARK X		Entry&Start			√	√	√	√	
TOYOTA	All	All	MARK X		Power Source Control			√	√	√	√	
TOYOTA	All	All	CROWN,0911 -		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	CROWN,0911 -		Radar Cruise			√	√	√		1.Beam Axis Adjustment
TOYOTA	All	All	CROWN,0911 -		Air suspension			√	√	√	√	
TOYOTA	All	All	CROWN,0911 -		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	All	CROWN,0911 -		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	All	CROWN,0911 -		VGRS			√	√	√		
TOYOTA	All	All	CROWN,0911 -		Parking Assist Monitor System			√	√	√		
TOYOTA	All	All	CROWN,0911 -		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	All	CROWN,0911 -		SRS Airbag			√	√	√		
TOYOTA	All	All	CROWN,0911 -		Pre-Crash			√	√	√	√	
TOYOTA	All	All	CROWN,0911 -		Pre-Crash 2			√	√	√	√	1.Recognition ECU High Temp History Reset 2.Camera/Target Position Memory 3.Camera Axis Adjust 4.Door Beam Axis Adjustment

TOYOTA	All	All	CROWN,0911 -		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	All	CROWN,0911 -		PM1 Gateway			√	√	√		1.Initialization
TOYOTA	All	All	CROWN,0911 -		PM2 Gateway			√	√	√		1.Initialization
TOYOTA	All	All	CROWN,0911 -		D-Door Motor			√	√	√	√	
TOYOTA	All	All	CROWN,0911 -		P-Door Motor			√	√	√	√	
TOYOTA	All	All	CROWN,0911 -		RL-Door Motor			√	√	√	√	
TOYOTA	All	All	CROWN,0911 -		RR-Door Motor			√	√	√	√	
TOYOTA	All	All	CROWN,0911 -		Driver Seat			√	√	√	√	
TOYOTA	All	All	CROWN,0911 -		Master Switch			√	√	√		
TOYOTA	All	All	CROWN,0911 -		Rear Left Seat A/C			√		√	√	
TOYOTA	All	All	CROWN,0911 -		Rear Right Seat A/C			√		√	√	
TOYOTA	All	All	CROWN,0911 -		Sliding Roof			√	√	√	√	
TOYOTA	All	All	CROWN,0911 -		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	All	CROWN,0911 -		Combination Meter			√	√	√	√	
TOYOTA	All	All	CROWN,0911 -		Clearance Sonar			√	√	√	√	
TOYOTA	All	All	CROWN,0911 -		AFS			√	√	√	√	1.ECU Information Synchronize
TOYOTA	All	All	CROWN,0911 -		Entry&Start			√	√	√	√	
TOYOTA	All	All	CROWN,0911 -		Power Source Control			√	√	√	√	
TOYOTA	All	All	CROWN,0911 -		Charging Control			√	√	√	√	

TOYOTA	All	All	CROWN,0911 -		Starting Control			√	√	√	√	
TOYOTA	All	All	CROWN,0911 -		Navigation System			√	√			
TOYOTA	All	All	CROWN,- 0911		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	CROWN,- 0911		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	All	CROWN,- 0911		Cruise Control			√	√			
TOYOTA	All	All	CROWN,- 0911		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、 Linear Valve Offset)
TOYOTA	All	All	CROWN,- 0911		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	All	CROWN,- 0911		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	All	CROWN,- 0911		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	All	CROWN,- 0911		SRS Airbag			√	√			
TOYOTA	All	All	CROWN,- 0911		Body			√	√	√	√	
TOYOTA	All	All	CROWN,- 0911		Gateway			√	√			
TOYOTA	All	All	CROWN,- 0911		Body No.3					√	√	
TOYOTA	All	All	CROWN,- 0911		Body No.4			√	√	√	√	
TOYOTA	All	All	CROWN,- 0911		Body No.5			√	√	√	√	

TOYOTA	All	All	CROWN,- 0911		Driver Door			√	√	√	√	
TOYOTA	All	All	CROWN,- 0911		Passenger Door			√	√	√	√	
TOYOTA	All	All	CROWN,- 0911		Rear Left Door			√	√	√	√	
TOYOTA	All	All	CROWN,- 0911		Rear Right Door			√	√	√	√	
TOYOTA	All	All	CROWN,- 0911		Driver Seat					√	√	
TOYOTA	All	All	CROWN,- 0911		Master Switch					√	√	
TOYOTA	All	All	CROWN,- 0911		Sliding Roof					√	√	
TOYOTA	All	All	CROWN,- 0911		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	All	CROWN,- 0911		Combination Meter					√	√	
TOYOTA	All	All	CROWN,- 0911		Combination Switch					√		
TOYOTA	All	All	CROWN,- 0911		Entry&Start			√	√	√	√	
TOYOTA	All	All	CROWN,- 0911		Power Source Control			√	√	√	√	
TOYOTA	All	All	HONGQI		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	HONGQI		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	All	HONGQI		Cruise Control			√	√			
TOYOTA	All	All	HONGQI		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)

TOYOTA	All	All	HONGQI		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	All	HONGQI		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	All	HONGQI		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	All	HONGQI		SRS Airbag			√	√			
TOYOTA	All	All	HONGQI		Body			√	√	√	√	
TOYOTA	All	All	HONGQI		Gateway			√	√			
TOYOTA	All	All	HONGQI		Body No.3			√	√	√	√	
TOYOTA	All	All	HONGQI		Body No.4			√	√	√	√	
TOYOTA	All	All	HONGQI		Body No.5			√	√	√	√	
TOYOTA	All	All	HONGQI		Driver Door			√	√	√	√	
TOYOTA	All	All	HONGQI		Passenger Door			√	√	√	√	
TOYOTA	All	All	HONGQI		Rear Left Door			√	√	√	√	
TOYOTA	All	All	HONGQI		Rear Right Door			√	√	√	√	
TOYOTA	All	All	HONGQI		Back Door			√	√	√	√	
TOYOTA	All	All	HONGQI		Driver Seat					√	√	
TOYOTA	All	All	HONGQI		Master Switch					√	√	
TOYOTA	All	All	HONGQI		Sliding Roof					√	√	
TOYOTA	All	All	HONGQI		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	All	HONGQI		Combination Meter					√	√	
TOYOTA	All	All	HONGQI		Combination Switch					√		
TOYOTA	All	All	HONGQI		Clearance Sonar			√	√			
TOYOTA	All	All	HONGQI		AFS			√	√	√	√	
TOYOTA	All	All	HONGQI		Entry&Start			√	√	√	√	
TOYOTA	All	All	HONGQI		Power Source Control			√	√	√	√	
TOYOTA	All	All	HONGQI		Night View			√	√	√	√	1.Camera Angle Adjustment

SERVICE SOLUTIONS

TOYOTA	Others	All	GS300,-0608		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	Others	All	GS300,-0608		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	Others	All	GS300,-0608		Cruise Control			√	√			
TOYOTA	Others	All	GS300,-0608		EMS			√	√	√	√	
TOYOTA	Others	All	GS300,-0608		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	Others	All	GS300,-0608		Tire Pressure Monitor			√	√	√		
TOYOTA	Others	All	GS300,-0608		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	Others	All	GS300,-0608		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	Others	All	GS300,-0608		SRS Airbag			√	√			
TOYOTA	Others	All	GS300,-0608		Body			√	√	√	√	
TOYOTA	Others	All	GS300,-0608		Gateway			√	√			
TOYOTA	Others	All	GS300,-0608		Body No.3					√	√	
TOYOTA	Others	All	GS300,-0608		Body No.4			√	√	√	√	
TOYOTA	Others	All	GS300,-0608		Body No.5			√	√	√	√	
TOYOTA	Others	All	GS300,-0608		Driver Door			√	√	√	√	
TOYOTA	Others	All	GS300,-0608		Passenger Door			√	√	√	√	
TOYOTA	Others	All	GS300,-0608		Rear Left Door			√	√	√	√	
TOYOTA	Others	All	GS300,-0608		Rear Right Door			√	√	√	√	
TOYOTA	Others	All	GS300,-0608		Driver Seat					√	√	
TOYOTA	Others	All	GS300,-0608		Passenger Seat					√	√	
TOYOTA	Others	All	GS300,-0608		Master Switch					√	√	

TOYOTA	Others	All	GS300,-0608		D-SEAT SW					√		
TOYOTA	Others	All	GS300,-0608		Sliding Roof					√	√	
TOYOTA	Others	All	GS300,-0608		Tilt&Telescopic			√	√	√	√	
TOYOTA	Others	All	GS300,-0608		Combination Meter					√	√	
TOYOTA	Others	All	GS300,-0608		Combination Switch					√		
TOYOTA	Others	All	GS300,-0608		Clearance Sonar			√	√			
TOYOTA	Others	All	GS300,-0608		Rain Sensor					√		
TOYOTA	Others	All	GS300,-0608		AFS			√	√	√	√	
TOYOTA	Others	All	GS300,-0608		Entry&Start			√	√	√	√	
TOYOTA	Others	All	GS300,-0608		Power Source Control			√	√	√	√	
TOYOTA	Others	All	GS300,-0608		Pre-Crash			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,-0608		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	MIDDLE EAST	All	GS300,-0608		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	MIDDLE EAST	All	GS300,-0608		Cruise Control			√	√			
TOYOTA	MIDDLE EAST	All	GS300,-0608		EMS			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,-0608		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	MIDDLE EAST	All	GS300,-0608		Tire Pressure Monitor			√	√	√		
TOYOTA	MIDDLE EAST	All	GS300,-0608		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	MIDDLE EAST	All	GS300,-0608		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization

TOYOTA	MIDDL E EAST	All	GS300,-0608			SRS Airbag			√	√			
TOYOTA	MIDDL E EAST	All	GS300,-0608			Body			√	√	√	√	
TOYOTA	MIDDL E EAST	All	GS300,-0608			Gateway			√	√			
TOYOTA	MIDDL E EAST	All	GS300,-0608			Body No.3					√	√	
TOYOTA	MIDDL E EAST	All	GS300,-0608			Body No.4			√	√	√	√	
TOYOTA	MIDDL E EAST	All	GS300,-0608			Body No.5			√	√	√	√	
TOYOTA	MIDDL E EAST	All	GS300,-0608			Driver Door			√	√	√	√	
TOYOTA	MIDDL E EAST	All	GS300,-0608			Passenger Door			√	√	√	√	
TOYOTA	MIDDL E EAST	All	GS300,-0608			Rear Left Door			√	√	√	√	
TOYOTA	MIDDL E EAST	All	GS300,-0608			Rear Right Door			√	√	√	√	
TOYOTA	MIDDL E EAST	All	GS300,-0608			Driver Seat					√	√	
TOYOTA	MIDDL E EAST	All	GS300,-0608			Passenger Seat					√	√	
TOYOTA	MIDDL E EAST	All	GS300,-0608			Master Switch					√	√	
TOYOTA	MIDDL E EAST	All	GS300,-0608			D-SEAT SW					√		
TOYOTA	MIDDL E EAST	All	GS300,-0608			Sliding Roof					√	√	
TOYOTA	MIDDL E EAST	All	GS300,-0608			Tilt&Telescopic			√	√	√	√	
TOYOTA	MIDDL E EAST	All	GS300,-0608			Combination Meter					√	√	
TOYOTA	MIDDL E EAST	All	GS300,-0608			Combination Switch					√		
TOYOTA	MIDDL E EAST	All	GS300,-0608			Clearance Sonar			√	√			

TOYOTA	MIDDLE EAST	All	GS300,-0608		Rain Sensor					√			
TOYOTA	MIDDLE EAST	All	GS300,-0608		AFS			√	√	√	√		
TOYOTA	MIDDLE EAST	All	GS300,-0608		Entry&Start			√	√	√	√		
TOYOTA	MIDDLE EAST	All	GS300,-0608		Power Source Control			√	√	√	√		
TOYOTA	Others	All	GS300,0608-0709		Engine			√	√	√	√		1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	Others	All	GS300,0608-0709		ECT			√	√	√	√		1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	Others	All	GS300,0608-0709		Cruise Control			√	√				
TOYOTA	Others	All	GS300,0608-0709		EMS			√	√	√	√		
TOYOTA	Others	All	GS300,0608-0709		Stabilizer			√	√	√			
TOYOTA	Others	All	GS300,0608-0709		ABS/VSC/TRC			√	√	√	√		1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	Others	All	GS300,0608-0709		Tire Pressure Monitor			√	√	√			
TOYOTA	Others	All	GS300,0608-0709		EMPS			√	√	√			1.Torque Sensor Adjustment
TOYOTA	Others	All	GS300,0608-0709		Air Conditioner			√	√	√	√		1.Compass calibration 2.Servomotor Initialization
TOYOTA	Others	All	GS300,0608-0709		SRS Airbag			√	√				
TOYOTA	Others	All	GS300,0608-0709		Body			√	√	√	√		

TOYOTA	Others	All	GS300,0608-0709			Gateway BEAN			√	√			
TOYOTA	Others	All	GS300,0608-0709			Gateway CAN			√	√			1.Initialization
TOYOTA	Others	All	GS300,0608-0709			Body No.3					√	√	
TOYOTA	Others	All	GS300,0608-0709			Body No.4			√	√	√	√	
TOYOTA	Others	All	GS300,0608-0709			Body No.5			√	√	√	√	
TOYOTA	Others	All	GS300,0608-0709			Driver Door			√	√	√	√	
TOYOTA	Others	All	GS300,0608-0709			Passenger Door			√	√	√	√	
TOYOTA	Others	All	GS300,0608-0709			Rear Left Door			√	√	√	√	
TOYOTA	Others	All	GS300,0608-0709			Rear Right Door			√	√	√	√	
TOYOTA	Others	All	GS300,0608-0709			Driver Seat					√	√	
TOYOTA	Others	All	GS300,0608-0709			Passenger Seat					√	√	
TOYOTA	Others	All	GS300,0608-0709			Master Switch					√	√	
TOYOTA	Others	All	GS300,0608-0709			D-SEAT SW					√		
TOYOTA	Others	All	GS300,0608-0709			Sliding Roof					√	√	
TOYOTA	Others	All	GS300,0608-0709			Tilt&Telescopic			√	√	√	√	
TOYOTA	Others	All	GS300,0608-0709			Combination Meter					√	√	
TOYOTA	Others	All	GS300,0608-0709			Combination Switch					√		
TOYOTA	Others	All	GS300,0608-0709			Clearance Sonar			√	√			
TOYOTA	Others	All	GS300,0608-0709			Rain Sensor					√		

TOYOTA	Others	All	GS300,0608-0709		AFS			√	√	√	√	
TOYOTA	Others	All	GS300,0608-0709		Entry&Start			√	√	√	√	
TOYOTA	Others	All	GS300,0608-0709		Power Source Control			√	√	√	√	
TOYOTA	Others	All	GS300,0608-0709		Occupant Detection			√	√	√		
TOYOTA	Others	All	GS300,0608-0709		Pre-Crash			√	√	√	√	
TOYOTA	Others	All	GS300,0608-0709		Gateway CAN			√	√			1.Initialization
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		Cruise Control			√	√			
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		EMS			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		Stabilizer			√	√	√		
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		Tire Pressure Monitor			√	√	√		
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization

TOYOTA	MIDDLE EAST	All	GS300,0608-0709		SRS Airbag			√	√			
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		Body			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		Gateway BEAN			√	√			
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		Gateway CAN			√	√			1.Initialization
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		Body No.3					√	√	
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		Body No.4			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		Body No.5			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		Driver Door			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		Passenger Door			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		Rear Left Door			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		Rear Right Door			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		Driver Seat					√	√	
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		Passenger Seat					√	√	
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		Master Switch					√	√	
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		D-SEAT SW					√		
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		Sliding Roof					√	√	
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		Tilt&Telescopic			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		Combination Meter					√	√	
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		Combination Switch					√		

TOYOTA	MIDDLE EAST	All	GS300,0608-0709		Clearance Sonar			√	√			
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		Rain Sensor					√		
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		AFS			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		Entry&Start			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,0608-0709		Power Source Control			√	√	√	√	
TOYOTA	Others	All	GS300,0709-0808		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	Others	All	GS300,0709-0808		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	Others	All	GS300,0709-0808		Cruise Control			√	√			
TOYOTA	Others	All	GS300,0709-0808		EMS			√	√	√	√	
TOYOTA	Others	All	GS300,0709-0808		Stabilizer			√	√	√		
TOYOTA	Others	All	GS300,0709-0808		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	Others	All	GS300,0709-0808		Four Wheel Drive			√	√	√	√	
TOYOTA	Others	All	GS300,0709-0808		Tire Pressure Monitor			√	√	√		
TOYOTA	Others	All	GS300,0709-0808		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	Others	All	GS300,0709-0808		VGRS			√	√	√		

TOYOTA	Others	All	GS300,0709-0808		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	Others	All	GS300,0709-0808		SRS Airbag			√	√			
TOYOTA	Others	All	GS300,0709-0808		Body			√	√	√	√	
TOYOTA	Others	All	GS300,0709-0808		Gateway BEAN			√	√			
TOYOTA	Others	All	GS300,0709-0808		Gateway CAN			√	√			1.Initialization
TOYOTA	Others	All	GS300,0709-0808		Body No.3					√	√	
TOYOTA	Others	All	GS300,0709-0808		Body No.4			√	√	√	√	
TOYOTA	Others	All	GS300,0709-0808		Body No.5			√	√	√	√	
TOYOTA	Others	All	GS300,0709-0808		Driver Door			√	√	√	√	
TOYOTA	Others	All	GS300,0709-0808		Passenger Door			√	√	√	√	
TOYOTA	Others	All	GS300,0709-0808		Rear Left Door			√	√	√	√	
TOYOTA	Others	All	GS300,0709-0808		Rear Right Door			√	√	√	√	
TOYOTA	Others	All	GS300,0709-0808		Driver Seat					√	√	
TOYOTA	Others	All	GS300,0709-0808		Passenger Seat					√	√	
TOYOTA	Others	All	GS300,0709-0808		Master Switch					√	√	
TOYOTA	Others	All	GS300,0709-0808		D-SEAT SW					√		
TOYOTA	Others	All	GS300,0709-0808		Sliding Roof					√	√	
TOYOTA	Others	All	GS300,0709-0808		Tilt&Telescopic			√	√	√	√	
TOYOTA	Others	All	GS300,0709-0808		Combination Meter					√	√	

TOYOTA	Others	All	GS300,0709-0808		Combination Switch					√			
TOYOTA	Others	All	GS300,0709-0808		Clearance Sonar			√	√				
TOYOTA	Others	All	GS300,0709-0808		Rain Sensor					√			
TOYOTA	Others	All	GS300,0709-0808		AFS			√	√	√	√		
TOYOTA	Others	All	GS300,0709-0808		Entry&Start			√	√	√	√		
TOYOTA	Others	All	GS300,0709-0808		Power Source Control			√	√	√	√		
TOYOTA	Others	All	GS300,0709-0808		Occupant Detection			√	√	√			
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode	
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset	
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		Cruise Control			√	√				
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		EMS			√	√	√	√		
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		Stabilizer			√	√	√			
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)	
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		Tire Pressure Monitor			√	√	√			
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		EMPS			√	√	√		1.Torque Sensor Adjustment	

TOYOTA	MIDDLE EAST	All	GS300,0709-0808		VGRS			√	√	√		
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		SRS Airbag			√	√			
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		Body			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		Gateway BEAN			√	√			
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		Gateway CAN			√	√			1.Initialization
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		Body No.3					√	√	
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		Body No.4			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		Body No.5			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		Driver Door			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		Passenger Door			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		Rear Left Door			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		Rear Right Door			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		Driver Seat					√	√	
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		Passenger Seat					√	√	
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		Master Switch					√	√	
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		D-SEAT SW					√		
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		Sliding Roof					√	√	
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		Tilt&Telescopic			√	√	√	√	

TOYOTA	MIDDLE EAST	All	GS300,0709-0808		Combination Meter					√	√	
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		Combination Switch					√		
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		Clearance Sonar			√	√			
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		Rain Sensor					√		
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		AFS			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		Entry&Start			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,0709-0808		Power Source Control			√	√	√	√	
TOYOTA	Others	All	GS300,0808-		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	Others	All	GS300,0808-		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	Others	All	GS300,0808-		Cruise Control			√	√			
TOYOTA	Others	All	GS300,0808-		EMS			√	√	√	√	
TOYOTA	Others	All	GS300,0808-		Stabilizer			√	√	√		
TOYOTA	Others	All	GS300,0808-		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	Others	All	GS300,0808-		Tire Pressure Monitor			√	√	√		
TOYOTA	Others	All	GS300,0808-		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	Others	All	GS300,0808-		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	Others	All	GS300,0808-		SRS Airbag			√	√			
TOYOTA	Others	All	GS300,0808-		Body			√	√	√	√	

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

TOYOTA	Others	All	GS300,0808-		Gateway BEAN			√	√			
TOYOTA	Others	All	GS300,0808-		Gateway CAN			√	√			1.Initialization
TOYOTA	Others	All	GS300,0808-		Body No.3					√	√	
TOYOTA	Others	All	GS300,0808-		Body No.4			√	√	√	√	
TOYOTA	Others	All	GS300,0808-		Body No.5			√	√	√	√	
TOYOTA	Others	All	GS300,0808-		Driver Door			√	√	√	√	
TOYOTA	Others	All	GS300,0808-		Passenger Door			√	√	√	√	
TOYOTA	Others	All	GS300,0808-		Rear Left Door			√	√	√	√	
TOYOTA	Others	All	GS300,0808-		Rear Right Door			√	√	√	√	
TOYOTA	Others	All	GS300,0808-		Driver Seat					√	√	
TOYOTA	Others	All	GS300,0808-		Passenger Seat					√	√	
TOYOTA	Others	All	GS300,0808-		Master Switch					√	√	
TOYOTA	Others	All	GS300,0808-		D-SEAT SW					√		
TOYOTA	Others	All	GS300,0808-		Sliding Roof					√	√	
TOYOTA	Others	All	GS300,0808-		Tilt&Telescopic			√	√	√	√	
TOYOTA	Others	All	GS300,0808-		Combination Meter					√	√	
TOYOTA	Others	All	GS300,0808-		Combination Switch					√		
TOYOTA	Others	All	GS300,0808-		Clearance Sonar			√	√			
TOYOTA	Others	All	GS300,0808-		Rain Sensor					√		
TOYOTA	Others	All	GS300,0808-		AFS			√	√	√	√	
TOYOTA	Others	All	GS300,0808-		Entry&Start			√	√	√	√	
TOYOTA	Others	All	GS300,0808-		Power Source Control			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,0808-		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	MIDDLE EAST	All	GS300,0808-		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset

TOYOTA	MIDDLE EAST	All	GS300,0808-			Cruise Control			√	√			
TOYOTA	MIDDLE EAST	All	GS300,0808-			EMS			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,0808-			Stabilizer			√	√	√		
TOYOTA	MIDDLE EAST	All	GS300,0808-			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	MIDDLE EAST	All	GS300,0808-			Tire Pressure Monitor			√	√	√		
TOYOTA	MIDDLE EAST	All	GS300,0808-			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	MIDDLE EAST	All	GS300,0808-			Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	MIDDLE EAST	All	GS300,0808-			SRS Airbag			√	√			
TOYOTA	MIDDLE EAST	All	GS300,0808-			Body			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,0808-			Gateway BEAN			√	√			
TOYOTA	MIDDLE EAST	All	GS300,0808-			Gateway CAN			√	√			1.Initialization
TOYOTA	MIDDLE EAST	All	GS300,0808-			Body No.3					√	√	
TOYOTA	MIDDLE EAST	All	GS300,0808-			Body No.4			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,0808-			Body No.5			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,0808-			Driver Door			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,0808-			Passenger Door			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,0808-			Rear Left Door			√	√	√	√	
TOYOTA	MIDDLE EAST	All	GS300,0808-			Rear Right Door			√	√	√	√	

TOYOTA	MIDDLE EAST	All	GS300,0808-		Driver Seat						√	√	
TOYOTA	MIDDLE EAST	All	GS300,0808-		Passenger Seat						√	√	
TOYOTA	MIDDLE EAST	All	GS300,0808-		Master Switch						√	√	
TOYOTA	MIDDLE EAST	All	GS300,0808-		D-SEAT SW						√		
TOYOTA	MIDDLE EAST	All	GS300,0808-		Sliding Roof						√	√	
TOYOTA	MIDDLE EAST	All	GS300,0808-		Tilt&Telescopic			√	√		√	√	
TOYOTA	MIDDLE EAST	All	GS300,0808-		Combination Meter						√	√	
TOYOTA	MIDDLE EAST	All	GS300,0808-		Combination Switch						√		
TOYOTA	MIDDLE EAST	All	GS300,0808-		Clearance Sonar			√	√				
TOYOTA	MIDDLE EAST	All	GS300,0808-		Rain Sensor						√		
TOYOTA	MIDDLE EAST	All	GS300,0808-		AFS			√	√		√	√	
TOYOTA	MIDDLE EAST	All	GS300,0808-		Entry&Start			√	√		√	√	
TOYOTA	MIDDLE EAST	All	GS300,0808-		Power Source Control			√	√		√	√	
TOYOTA	All	All	GS350,-0808		Engine			√	√		√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	GS350,-0808		ECT			√	√		√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	All	GS350,-0808		Cruise Control			√	√				
TOYOTA	All	All	GS350,-0808		EMS			√	√		√	√	
TOYOTA	All	All	GS350,-0808		Stabilizer			√	√		√		

SERVICE SOLUTIONS

TOYOTA	All	All	GS350,-0808			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	All	GS350,-0808			Four Wheel Drive			√	√	√	√	
TOYOTA	All	All	GS350,-0808			Tire Pressure Monitor			√	√	√		
TOYOTA	All	All	GS350,-0808			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	All	GS350,-0808			Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	All	GS350,-0808			SRS Airbag			√	√			
TOYOTA	All	All	GS350,-0808			Body			√	√	√	√	
TOYOTA	All	All	GS350,-0808			Gateway BEAN			√	√			
TOYOTA	All	All	GS350,-0808			Gateway CAN			√	√			1.Initialization
TOYOTA	All	All	GS350,-0808			Body No.3					√	√	
TOYOTA	All	All	GS350,-0808			Body No.4			√	√	√	√	
TOYOTA	All	All	GS350,-0808			Body No.5			√	√	√	√	
TOYOTA	All	All	GS350,-0808			Driver Door			√	√	√	√	
TOYOTA	All	All	GS350,-0808			Passenger Door			√	√	√	√	
TOYOTA	All	All	GS350,-0808			Rear Left Door			√	√	√	√	
TOYOTA	All	All	GS350,-0808			Rear Right Door			√	√	√	√	
TOYOTA	All	All	GS350,-0808			Driver Seat					√	√	
TOYOTA	All	All	GS350,-0808			Passenger Seat					√	√	
TOYOTA	All	All	GS350,-0808			Master Switch					√	√	
TOYOTA	All	All	GS350,-0808			D-SEAT SW					√		
TOYOTA	All	All	GS350,-0808			Sliding Roof					√	√	
TOYOTA	All	All	GS350,-0808			Tilt&Telescopic			√	√	√	√	
TOYOTA	All	All	GS350,-0808			Combination Meter					√	√	
TOYOTA	All	All	GS350,-0808			Combination Switch					√		
TOYOTA	All	All	GS350,-0808			Clearance Sonar			√	√			
TOYOTA	All	All	GS350,-0808			Rain Sensor					√		

TOYOTA	All	All	GS350,-0808		AFS			√	√	√	√	
TOYOTA	All	All	GS350,-0808		Entry&Start			√	√	√	√	
TOYOTA	All	All	GS350,-0808		Power Source Control			√	√	√	√	
TOYOTA	All	All	GS350,-0808		Occupant Detection			√	√	√		
TOYOTA	All	-0812	RAV4		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	-0812	RAV4		Cruise Control			√	√			
TOYOTA	All	-0812	RAV4		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	-0812	RAV4		Four Wheel Drive			√	√	√	√	
TOYOTA	All	-0812	RAV4		Tire Pressure Monitor			√	√	√		
TOYOTA	All	-0812	RAV4		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	-0812	RAV4		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	-0812	RAV4		Theft Deterrent			*	*	*	*	
TOYOTA	All	-0812	RAV4		SRS Airbag			√	√			
TOYOTA	All	-0812	RAV4		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	-0812	RAV4		Accessory Gateway			√	√	√		
TOYOTA	All	-0812	RAV4		D-Door Motor			√	√	√	√	
TOYOTA	All	-0812	RAV4		Sliding Roof			√	√	√	√	
TOYOTA	All	-0812	RAV4		Combination Meter			√	√	√	√	
TOYOTA	All	-0812	RAV4		Entry&Start			√	√	√	√	
TOYOTA	All	-0812	RAV4		Occupant Detection			√	√	√		

SERVICE SOLUTIONS

TOYOTA	All	0812-	RAV4			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0812-	RAV4			Cruise Control			√	√			
TOYOTA	All	0812-	RAV4			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0812-	RAV4			Four Wheel Drive			√	√	√	√	
TOYOTA	All	0812-	RAV4			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	0812-	RAV4			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0812-	RAV4			Theft Deterrent			*	*	*	*	
TOYOTA	All	0812-	RAV4			SRS Airbag			√	√			
TOYOTA	All	0812-	RAV4			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0812-	RAV4			Accessory Gateway			√	√	√		
TOYOTA	All	0812-	RAV4			D-Door Motor			√	√	√	√	
TOYOTA	All	0812-	RAV4			Sliding Roof			√	√	√	√	
TOYOTA	All	0812-	RAV4			Combination Meter			√	√	√	√	
TOYOTA	All	0812-	RAV4			Entry&Start			√	√	√	√	
TOYOTA	All	0812-	RAV4			Navigation System			√	√			
TOYOTA	All	-0808	RAV4			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	-0808	RAV4			Cruise Control			√	√			

SERVICE SOLUTIONS

TOYOTA	All	-0808	RAV4			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	-0808	RAV4			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	-0808	RAV4			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	-0808	RAV4			Theft Deterrent			*	*	*	*	
TOYOTA	All	-0808	RAV4			SRS Airbag			√	√			
TOYOTA	All	-0808	RAV4			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	-0808	RAV4			D-Door Motor			√	√	√	√	
TOYOTA	All	-0808	RAV4			Sliding Roof			√	√	√	√	
TOYOTA	All	-0808	RAV4			Combination Meter			√	√	√	√	
TOYOTA	All	-0808	RAV4			Entry&Start			√	√	√	√	
TOYOTA	All	0808-0812	RAV4			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0808-0812	RAV4			Cruise Control			√	√			
TOYOTA	All	0808-0812	RAV4			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0808-0812	RAV4			Tire Pressure Monitor			√	√	√		
TOYOTA	All	0808-0812	RAV4			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	0808-0812	RAV4			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0808-0812	RAV4			Theft Deterrent			*	*	*	*	
TOYOTA	All	0808-0812	RAV4			SRS Airbag			√	√			

TOYOTA	All	0808-0812	RAV4			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0808-0812	RAV4			D-Door Motor			√	√	√	√	
TOYOTA	All	0808-0812	RAV4			Sliding Roof			√	√	√	√	
TOYOTA	All	0808-0812	RAV4			Combination Meter			√	√	√	√	
TOYOTA	All	0808-0812	RAV4			Entry&Start			√	√	√	√	
TOYOTA	All	0812-	RAV4			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0812-	RAV4			Cruise Control			√	√			
TOYOTA	All	0812-	RAV4			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0812-	RAV4			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	0812-	RAV4			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0812-	RAV4			Theft Deterrent			*	*	*	*	
TOYOTA	All	0812-	RAV4			SRS Airbag			√	√			
TOYOTA	All	0812-	RAV4			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0812-	RAV4			D-Door Motor			√	√	√	√	
TOYOTA	All	0812-	RAV4			Sliding Roof			√	√	√	√	
TOYOTA	All	0812-	RAV4			Combination Meter			√	√	√	√	
TOYOTA	All	0812-	RAV4			Entry&Start			√	√	√	√	
TOYOTA	All	0812-	RAV4			Navigation System			√	√			

SERVICE SOLUTIONS

TOYOTA	All	-0706	PREVIA/TAR AGO		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	-0706	PREVIA/TAR AGO		Cruise Control			√	√			
TOYOTA	All	-0706	PREVIA/TAR AGO		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、 Linear Valve Offset)
TOYOTA	All	-0706	PREVIA/TAR AGO		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	-0706	PREVIA/TAR AGO		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	-0706	PREVIA/TAR AGO		SRS Airbag			√	√			
TOYOTA	All	-0706	PREVIA/TAR AGO		Pre-Crash			√	√	√	√	
TOYOTA	All	-0706	PREVIA/TAR AGO		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	-0706	PREVIA/TAR AGO		Gateway			√	√			1.Initialization
TOYOTA	All	-0706	PREVIA/TAR AGO		Rear Left Door			√	√	√	√	
TOYOTA	All	-0706	PREVIA/TAR AGO		Rear Right Door			√	√	√	√	
TOYOTA	All	-0706	PREVIA/TAR AGO		Back Door			√	√	√	√	
TOYOTA	All	-0706	PREVIA/TAR AGO		D-Door Motor			√	√	√	√	
TOYOTA	All	-0706	PREVIA/TAR AGO		P-Door Motor			√	√	√	√	
TOYOTA	All	-0706	PREVIA/TAR AGO		RL-Door Motor			√	√	√	√	

TOYOTA	All	-0706	PREVIA/TAR AGO		RR-Door Motor			√	√	√	√	
TOYOTA	All	-0706	PREVIA/TAR AGO		Master Switch			√	√	√		
TOYOTA	All	-0706	PREVIA/TAR AGO		Sliding Roof			√	√	√	√	
TOYOTA	All	-0706	PREVIA/TAR AGO		Combination Meter			√	√	√	√	
TOYOTA	All	-0706	PREVIA/TAR AGO		AFS			√	√	√	√	1.ECU Information Synchronize
TOYOTA	All	-0706	PREVIA/TAR AGO		Entry&Start			√	√	√	√	
TOYOTA	All	0706-0812	PREVIA/TAR AGO		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0706-0812	PREVIA/TAR AGO		Cruise Control			√	√			
TOYOTA	All	0706-0812	PREVIA/TAR AGO		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0706-0812	PREVIA/TAR AGO		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	0706-0812	PREVIA/TAR AGO		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0706-0812	PREVIA/TAR AGO		SRS Airbag			√	√			
TOYOTA	All	0706-0812	PREVIA/TAR AGO		Pre-Crash			√	√	√	√	
TOYOTA	All	0706-0812	PREVIA/TAR AGO		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0706-0812	PREVIA/TAR AGO		Gateway			√	√			1.Initialization

TOYOTA	All	0706-0812	PREVIA/TAR AGO			Rear Left Door			√	√	√	√	
TOYOTA	All	0706-0812	PREVIA/TAR AGO			Rear Right Door			√	√	√	√	
TOYOTA	All	0706-0812	PREVIA/TAR AGO			Back Door			√	√	√	√	
TOYOTA	All	0706-0812	PREVIA/TAR AGO			D-Door Motor			√	√	√	√	
TOYOTA	All	0706-0812	PREVIA/TAR AGO			P-Door Motor			√	√	√	√	
TOYOTA	All	0706-0812	PREVIA/TAR AGO			RL-Door Motor			√	√	√	√	
TOYOTA	All	0706-0812	PREVIA/TAR AGO			RR-Door Motor			√	√	√	√	
TOYOTA	All	0706-0812	PREVIA/TAR AGO			Master Switch			√	√	√		
TOYOTA	All	0706-0812	PREVIA/TAR AGO			Sliding Roof			√	√	√	√	
TOYOTA	All	0706-0812	PREVIA/TAR AGO			Combination Meter			√	√	√	√	
TOYOTA	All	0706-0812	PREVIA/TAR AGO			AFS			√	√	√	√	1.ECU Information Synchronize
TOYOTA	All	0706-0812	PREVIA/TAR AGO			Entry&Start			√	√	√	√	
TOYOTA	All	0812-	PREVIA/TAR AGO			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0812-	PREVIA/TAR AGO			Cruise Control			√	√			
TOYOTA	All	0812-	PREVIA/TAR AGO			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0812-	PREVIA/TAR AGO			EMPS			√	√	√		1.Torque Sensor Adjustment

TOYOTA	All	0812-	PREVIA/TAR AGO			Parking Assist Monitor System			√	√	√		
TOYOTA	All	0812-	PREVIA/TAR AGO			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0812-	PREVIA/TAR AGO			SRS Airbag			√	√			
TOYOTA	All	0812-	PREVIA/TAR AGO			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0812-	PREVIA/TAR AGO			Gateway			√	√			1.Initialization
TOYOTA	All	0812-	PREVIA/TAR AGO			Rear Left Door			√	√	√	√	
TOYOTA	All	0812-	PREVIA/TAR AGO			Rear Right Door			√	√	√	√	
TOYOTA	All	0812-	PREVIA/TAR AGO			Back Door			√	√	√	√	
TOYOTA	All	0812-	PREVIA/TAR AGO			D-Door Motor			√	√	√	√	
TOYOTA	All	0812-	PREVIA/TAR AGO			P-Door Motor			√	√	√	√	
TOYOTA	All	0812-	PREVIA/TAR AGO			RL-Door Motor			√	√	√	√	
TOYOTA	All	0812-	PREVIA/TAR AGO			RR-Door Motor			√	√	√	√	
TOYOTA	All	0812-	PREVIA/TAR AGO			Master Switch			√	√	√		
TOYOTA	All	0812-	PREVIA/TAR AGO			Sliding Roof			√	√	√	√	
TOYOTA	All	0812-	PREVIA/TAR AGO			Combination Meter			√	√	√	√	
TOYOTA	All	0812-	PREVIA/TAR AGO			AFS			√	√	√	√	1.ECU Information Synchronize
TOYOTA	All	0812-	PREVIA/TAR AGO			Entry&Start			√	√	√	√	
TOYOTA	All	All	PREVIA/TAR AGO			Pre-Crash			√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	All	-0605	CAMRY			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	-0605	CAMRY			Cruise Control			√	√			
TOYOTA	All	-0605	CAMRY			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	-0605	CAMRY			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	-0605	CAMRY			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	-0605	CAMRY			SRS Airbag			√	√			
TOYOTA	All	-0605	CAMRY			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	-0605	CAMRY			D-Door Motor			√	√	√	√	
TOYOTA	All	-0605	CAMRY			Master Switch			√	√	√		
TOYOTA	All	-0605	CAMRY			Sliding Roof			√	√	√	√	
TOYOTA	All	-0605	CAMRY			Combination Meter			√	√	√	√	
TOYOTA	All	-0605	CAMRY			Entry&Start			√	√	√	√	
TOYOTA	All	0605-0801/Others	CAMRY			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0605-0801/Others	CAMRY			Cruise Control			√	√			

SERVICE SOLUTIONS

TOYOTA	All	0605-0801/Others	CAMRY			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0605-0801/Others	CAMRY			Air Conditioner				√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0605-0801/Others	CAMRY			Immobiliser				√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0605-0801/Others	CAMRY			SRS Airbag				√	√			
TOYOTA	All	0605-0801/Others	CAMRY			Main Body				√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0605-0801/Others	CAMRY			Gateway				√	√			1.Initialization
TOYOTA	All	0605-0801/Others	CAMRY			D-Door Motor				√	√	√	√	
TOYOTA	All	0605-0801/Others	CAMRY			Driver Seat						√	√	
TOYOTA	All	0605-0801/Others	CAMRY			Master Switch				√	√	√		
TOYOTA	All	0605-0801/Others	CAMRY			Sliding Roof				√	√	√	√	
TOYOTA	All	0605-0801/Others	CAMRY			Combination Meter				√	√	√	√	
TOYOTA	All	0605-0801/Others	CAMRY			Mirror						√	√	
TOYOTA	All	0605-0801/Others	CAMRY			AFS				√	√	√	√	1.ECU Information Synchronize
TOYOTA	All	0605-0801/Others	CAMRY			Entry&Start				√	√	√	√	
TOYOTA	All	0801-0901/Others	CAMRY			Engine and ECT				√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode

TOYOTA	All	0801-0901/Others	CAMRY			Cruise Control				√	√			
TOYOTA	All	0801-0901/Others	CAMRY			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0801-0901/Others	CAMRY			Air Conditioner				√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0801-0901/Others	CAMRY			Immobiliser				√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0801-0901/Others	CAMRY			SRS Airbag				√	√			
TOYOTA	All	0801-0901/Others	CAMRY			Main Body				√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0801-0901/Others	CAMRY			D-Door Motor				√	√	√	√	
TOYOTA	All	0801-0901/Others	CAMRY			Master Switch				√	√	√		
TOYOTA	All	0801-0901/Others	CAMRY			Sliding Roof				√	√	√	√	
TOYOTA	All	0801-0901/Others	CAMRY			Combination Meter				√	√	√	√	
TOYOTA	All	0801-0901/Others	CAMRY			Clearance Sonar				√	√	√	√	
TOYOTA	All	0801-0901/Others	CAMRY			Entry&Start				√	√	√	√	
TOYOTA	All	0901-/Others	CAMRY			Engine and ECT				√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0901-/Others	CAMRY			Cruise Control				√	√			

SERVICE SOLUTIONS

TOYOTA	All	0901-/Others	CAMRY			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0901-/Others	CAMRY			Air Conditioner				√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0901-/Others	CAMRY			Immobiliser				√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0901-/Others	CAMRY			SRS Airbag				√	√			
TOYOTA	All	0901-/Others	CAMRY			Main Body				√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0901-/Others	CAMRY			D-Door Motor				√	√	√	√	
TOYOTA	All	0901-/Others	CAMRY			P-Door Motor				√	√	√	√	
TOYOTA	All	0901-/Others	CAMRY			RL-Door Motor				√	√	√	√	
TOYOTA	All	0901-/Others	CAMRY			RR-Door Motor				√	√	√	√	
TOYOTA	All	0901-/Others	CAMRY			Master Switch				√	√	√		
TOYOTA	All	0901-/Others	CAMRY			Sliding Roof				√	√	√	√	
TOYOTA	All	0901-/Others	CAMRY			Combination Meter				√	√	√	√	
TOYOTA	All	0901-/Others	CAMRY			Clearance Sonar				√	√	√	√	
TOYOTA	All	0901-/Others	CAMRY			Entry&Start				√	√	√	√	
TOYOTA	All	0901-/Others	CAMRY			Navigation System				√	√			
TOYOTA	All	0903-/GTMC Product	CAMRY			Engine and ECT				√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0903-/GTMC Product	CAMRY			Cruise Control				√	√			
TOYOTA	All	0903-/GTMC Product	CAMRY			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)

SERVICE SOLUTIONS

TOYOTA	All	0903-/GTMC Product	CAMRY			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0903-/GTMC Product	CAMRY			SRS Airbag			√	√			
TOYOTA	All	0903-/GTMC Product	CAMRY			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0903-/GTMC Product	CAMRY			Gateway			√	√			1.Initialization
TOYOTA	All	0903-/GTMC Product	CAMRY			D-Door Motor			√	√	√	√	
TOYOTA	All	0903-/GTMC Product	CAMRY			Driver Seat					√	√	
TOYOTA	All	0903-/GTMC Product	CAMRY			Sliding Roof			√	√	√	√	
TOYOTA	All	0903-/GTMC Product	CAMRY			Combination Meter			√	√	√	√	
TOYOTA	All	0903-/GTMC Product	CAMRY			Mirror					√	√	
TOYOTA	All	0903-/GTMC Product	CAMRY			AFS			√	√	√	√	1.ECU Information Synchronize
TOYOTA	All	0903-/GTMC Product	CAMRY			Entry&Start			√	√	√	√	
TOYOTA	All	0903-/GTMC Product	CAMRY			Navigation System			√	√			
TOYOTA	All	0903-/KM	CAMRY			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0903-/KM	CAMRY			Cruise Control			√	√			
TOYOTA	All	0903-/KM	CAMRY			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0903-/KM	CAMRY			Air Conditioner			√	√	√	√	1.Servomotor Initialization

TOYOTA	All	0903-/KM	CAMRY			Theft Deterrent			*	*	*	*	
TOYOTA	All	0903-/KM	CAMRY			SRS Airbag			√	√			
TOYOTA	All	0903-/KM	CAMRY			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0903-/KM	CAMRY			Gateway			√	√			1.Initialization
TOYOTA	All	0903-/KM	CAMRY			D-Door Motor			√	√	√	√	
TOYOTA	All	0903-/KM	CAMRY			P-Door Motor			√	√	√	√	
TOYOTA	All	0903-/KM	CAMRY			RL-Door Motor			√	√	√	√	
TOYOTA	All	0903-/KM	CAMRY			RR-Door Motor			√	√	√	√	
TOYOTA	All	0903-/KM	CAMRY			Master Switch			√	√	√		
TOYOTA	All	0903-/KM	CAMRY			Sliding Roof			√	√	√	√	
TOYOTA	All	0903-/KM	CAMRY			Tilt&Telescopic			√	√	√	√	
TOYOTA	All	0903-/KM	CAMRY			Combination Meter			√	√	√	√	
TOYOTA	All	0903-/KM	CAMRY			AFS			√	√	√	√	1.ECU Information Synchronize
TOYOTA	All	0903-/KM	CAMRY			Entry&Start			√	√	√	√	
TOYOTA	All	0903-/KM	CAMRY			Navigation System			√	√			
TOYOTA	All	0906-/TMCA Product	CAMRY			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0906-/TMCA Product	CAMRY			Cruise Control			√	√			
TOYOTA	All	0906-/TMCA Product	CAMRY			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0906-/TMCA Product	CAMRY			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0906-/TMCA Product	CAMRY			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure

TOYOTA	All	0906-/TMCA Product	CAMRY			SRS Airbag			√	√			
TOYOTA	All	0906-/TMCA Product	CAMRY			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0906-/TMCA Product	CAMRY			Gateway			√	√			1.Initialization
TOYOTA	All	0906-/TMCA Product	CAMRY			D-Door Motor			√	√	√	√	
TOYOTA	All	0906-/TMCA Product	CAMRY			Sliding Roof			√	√	√	√	
TOYOTA	All	0906-/TMCA Product	CAMRY			Combination Meter			√	√	√	√	
TOYOTA	All	0906-/TMCA Product	CAMRY			AFS			√	√	√	√	1.ECU Information Synchronize
TOYOTA	All	0906-/TMCA Product	CAMRY			Entry&Start			√	√	√	√	
TOYOTA	All	0906-/TMCA Product	CAMRY			Navigation System			√	√			
TOYOTA	All	0907-/TMT, TMV	CAMRY			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0907-/TMT, TMV	CAMRY			Cruise Control			√	√			
TOYOTA	All	0907-/TMT, TMV	CAMRY			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0907-/TMT, TMV	CAMRY			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0907-/TMT, TMV	CAMRY			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0907-/TMT, TMV	CAMRY			Theft Deterrent			*	*	*	*	

TOYOTA	All	0907- /TMT, TMV	CAMRY			SRS Airbag			√	√			
TOYOTA	All	0907- /TMT, TMV	CAMRY			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0907- /TMT, TMV	CAMRY			Gateway			√	√			1.Initialization
TOYOTA	All	0907- /TMT, TMV	CAMRY			D-Door Motor			√	√	√	√	
TOYOTA	All	0907- /TMT, TMV	CAMRY			P-Door Motor			√	√	√	√	
TOYOTA	All	0907- /TMT, TMV	CAMRY			RL-Door Motor			√	√	√	√	
TOYOTA	All	0907- /TMT, TMV	CAMRY			RR-Door Motor			√	√	√	√	
TOYOTA	All	0907- /TMT, TMV	CAMRY			Driver Seat					√	√	
TOYOTA	All	0907- /TMT, TMV	CAMRY			Master Switch			√	√	√		
TOYOTA	All	0907- /TMT, TMV	CAMRY			Sliding Roof			√	√	√	√	
TOYOTA	All	0907- /TMT, TMV	CAMRY			Tilt&Telescopic			√	√	√	√	
TOYOTA	All	0907- /TMT, TMV	CAMRY			Combination Meter			√	√	√	√	
TOYOTA	All	0907- /TMT, TMV	CAMRY			Mirror					√	√	
TOYOTA	All	0907- /TMT, TMV	CAMRY			AFS			√	√	√	√	1.ECU Information Synchronize
TOYOTA	All	0605- 0906/TMCA Product	CAMRY			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0605- 0906/TMCA Product	CAMRY			Cruise Control			√	√			

SERVICE SOLUTIONS

TOYOTA	All	0605-0906/TMCA Product	CAMRY			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0605-0906/TMCA Product	CAMRY			Air Conditioner				√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0605-0906/TMCA Product	CAMRY			Immobiliser				√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0605-0906/TMCA Product	CAMRY			SRS Airbag				√	√			
TOYOTA	All	0605-0906/TMCA Product	CAMRY			Main Body				√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0605-0906/TMCA Product	CAMRY			Gateway				√	√			1.Initialization
TOYOTA	All	0605-0906/TMCA Product	CAMRY			D-Door Motor				√	√	√	√	
TOYOTA	All	0605-0906/TMCA Product	CAMRY			Driver Seat						√	√	
TOYOTA	All	0605-0906/TMCA Product	CAMRY			Master Switch				√	√	√		
TOYOTA	All	0605-0906/TMCA Product	CAMRY			Sliding Roof				√	√	√	√	
TOYOTA	All	0605-0906/TMCA Product	CAMRY			Combination Meter				√	√	√	√	
TOYOTA	All	0605-0906/TMCA Product	CAMRY			Mirror						√	√	

SERVICE SOLUTIONS

TOYOTA	All	0605-0906/TMCA Product	CAMRY			AFS			√	√	√	√	1.ECU Information Synchronize
TOYOTA	All	0605-0906/TMCA Product	CAMRY			Entry&Start			√	√	√	√	
TOYOTA	All	0710-0903/KM	CAMRY			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0710-0903/KM	CAMRY			Cruise Control			√	√			
TOYOTA	All	0710-0903/KM	CAMRY			E-ACM			*	*	*	*	
TOYOTA	All	0710-0903/KM	CAMRY			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0710-0903/KM	CAMRY			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0710-0903/KM	CAMRY			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0710-0903/KM	CAMRY			Theft Deterrent			*	*	*	*	
TOYOTA	All	0710-0903/KM	CAMRY			SRS Airbag			√	√			
TOYOTA	All	0710-0903/KM	CAMRY			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0710-0903/KM	CAMRY			Gateway			√	√			1.Initialization
TOYOTA	All	0710-0903/KM	CAMRY			D-Door Motor			√	√	√	√	
TOYOTA	All	0710-0903/KM	CAMRY			P-Door Motor			√	√	√	√	

TOYOTA	All	0710-0903/KM	CAMRY			RL-Door Motor			√	√	√	√	
TOYOTA	All	0710-0903/KM	CAMRY			RR-Door Motor			√	√	√	√	
TOYOTA	All	0710-0903/KM	CAMRY			Driver Seat					√	√	
TOYOTA	All	0710-0903/KM	CAMRY			Master Switch			√	√	√		
TOYOTA	All	0710-0903/KM	CAMRY			Sliding Roof			√	√	√	√	
TOYOTA	All	0710-0903/KM	CAMRY			Tilt&Telescopic			√	√	√	√	
TOYOTA	All	0710-0903/KM	CAMRY			Combination Meter			√	√	√	√	
TOYOTA	All	0710-0903/KM	CAMRY			Mirror					√	√	
TOYOTA	All	0710-0903/KM	CAMRY			AFS			√	√	√	√	1.ECU Information Synchronize
TOYOTA	All	0710-0907/TMT, TM V	CAMRY			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0710-0907/TMT, TM V	CAMRY			Cruise Control			√	√			
TOYOTA	All	0710-0907/TMT, TM V	CAMRY			E-ACM			*	*	*	*	
TOYOTA	All	0710-0907/TMT, TM V	CAMRY			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0710-0907/TMT, TM V	CAMRY			Air Conditioner			√	√	√	√	1.Servomotor Initialization

SERVICE SOLUTIONS

TOYOTA	All	0710-0907/TMT, TM V	CAMRY			Immobiliser				√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0710-0907/TMT, TM V	CAMRY			Theft Deterrent				*	*	*	*	
TOYOTA	All	0710-0907/TMT, TM V	CAMRY			SRS Airbag				√	√			
TOYOTA	All	0710-0907/TMT, TM V	CAMRY			Main Body				√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0710-0907/TMT, TM V	CAMRY			Gateway				√	√			1.Initialization
TOYOTA	All	0710-0907/TMT, TM V	CAMRY			D-Door Motor				√	√	√	√	
TOYOTA	All	0710-0907/TMT, TM V	CAMRY			P-Door Motor				√	√	√	√	
TOYOTA	All	0710-0907/TMT, TM V	CAMRY			RL-Door Motor				√	√	√	√	
TOYOTA	All	0710-0907/TMT, TM V	CAMRY			RR-Door Motor				√	√	√	√	
TOYOTA	All	0710-0907/TMT, TM V	CAMRY			Driver Seat						√	√	
TOYOTA	All	0710-0907/TMT, TM V	CAMRY			Master Switch				√	√	√		
TOYOTA	All	0710-0907/TMT, TM V	CAMRY			Sliding Roof				√	√	√	√	
TOYOTA	All	0710-0907/TMT, TM V	CAMRY			Tilt&Telescopic				√	√	√	√	

TOYOTA	All	0710-0907/TMT, TM V	CAMRY			Combination Meter				√	√	√	√	
TOYOTA	All	0710-0907/TMT, TM V	CAMRY			Mirror						√	√	
TOYOTA	All	0710-0907/TMT, TM V	CAMRY			AFS				√	√	√	√	1.ECU Information Synchronize
TOYOTA	All	0901-/TMMK,SIA	CAMRY			Engine and ECT				√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0901-/TMMK,SIA	CAMRY			Cruise Control				√	√			
TOYOTA	All	0901-/TMMK,SIA	CAMRY			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0901-/TMMK,SIA	CAMRY			Air Conditioner				√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0901-/TMMK,SIA	CAMRY			SRS Airbag				√	√			
TOYOTA	All	0901-/TMMK,SIA	CAMRY			Main Body				√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0901-/TMMK,SIA	CAMRY			D-Door Motor				√	√	√	√	
TOYOTA	All	0901-/TMMK,SIA	CAMRY			P-Door Motor				√	√	√	√	
TOYOTA	All	0901-/TMMK,SIA	CAMRY			RL-Door Motor				√	√	√	√	
TOYOTA	All	0901-/TMMK,SIA	CAMRY			RR-Door Motor				√	√	√	√	
TOYOTA	All	0901-/TMMK,SIA	CAMRY			Master Switch				√	√	√		

TOYOTA	All	0901- /TMMK,SIA	CAMRY		Sliding Roof			√	√	√	√	
TOYOTA	All	0901- /TMMK,SIA	CAMRY		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	0901- /TMMK,SIA	CAMRY		Combination Meter			√	√	√	√	
TOYOTA	All	0901- /TMMK,SIA	CAMRY		Entry&Start			√	√	√	√	
TOYOTA	All	0901- /TMMK,SIA	CAMRY		Navigation System			√	√			
TOYOTA	All	All	AVENSIS		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	AVENSIS		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	All	AVENSIS		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	All	AVENSIS		Electric Parking Brake			*	*	*	*	*1.Reset Memory
TOYOTA	All	All	AVENSIS		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	All	AVENSIS		SRS Airbag			√	√			
TOYOTA	All	All	AVENSIS		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	All	AVENSIS		PM1 Gateway			√	√	√		1.Initialization
TOYOTA	All	All	AVENSIS		D-Door Motor			√	√	√	√	
TOYOTA	All	All	AVENSIS		P-Door Motor			√	√	√	√	
TOYOTA	All	All	AVENSIS		RL-Door Motor			√	√	√	√	
TOYOTA	All	All	AVENSIS		RR-Door Motor			√	√	√	√	
TOYOTA	All	All	AVENSIS		Driver Seat			√	√	√	√	
TOYOTA	All	All	AVENSIS		Master Switch			√	√	√		

TOYOTA	All	All	AVENSIS			Sliding Roof			√	√	√	√	
TOYOTA	All	All	AVENSIS			Tilt&Telescopic			√	√	√	√	
TOYOTA	All	All	AVENSIS			Combination Meter			√	√	√	√	
TOYOTA	All	All	AVENSIS			AFS			√	√	√	√	1.ECU Information Synchronize
TOYOTA	All	All	AVENSIS			Entry&Start			√	√	√	√	
TOYOTA	All	All	AVENSIS			Power Source Control			√	√	√	√	
TOYOTA	All	All	AVENSIS			Charging Control			√	√	√	√	
TOYOTA	All	All	AVENSIS			Starting Control			√	√	√	√	
TOYOTA	All	-0608	LAND CR.			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	-0608	LAND CR.			Cruise Control			√	√			
TOYOTA	All	-0608	LAND CR.			Air suspension			√	√	√	√	
TOYOTA	All	-0608	LAND CR.			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	-0608	LAND CR.			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	-0608	LAND CR.			Theft Deterrent			√	√	√	√	
TOYOTA	All	-0608	LAND CR.			SRS Airbag			√	√			
TOYOTA	All	-0608	LAND CR.			Body			√	√	√	√	
TOYOTA	All	-0608	LAND CR.			Driver Door			√	√	√	√	
TOYOTA	All	0608-	LAND CR.			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0608-	LAND CR.			Cruise Control			√	√			

TOYOTA	All	0608-	LAND CR.		Air suspension			√	√	√	√	
TOYOTA	All	0608-	LAND CR.		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0608-	LAND CR.		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0608-	LAND CR.		Theft Deterrent			√	√	√	√	
TOYOTA	All	0608-	LAND CR.		SRS Airbag			√	√			
TOYOTA	All	0608-	LAND CR.		Body			√	√	√	√	
TOYOTA	All	0608-	LAND CR.		Driver Door			√	√	√	√	
TOYOTA	China	0712-0808	LAND CR.		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	China	0712-0808	LAND CR.		Cruise Control			√	√			
TOYOTA	China	0712-0808	LAND CR.		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	China	0712-0808	LAND CR.		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	China	0712-0808	LAND CR.		SRS Airbag			√	√	√		
TOYOTA	China	0712-0808	LAND CR.		Pre-Crash			√	√	√	√	
TOYOTA	China	0712-0808	LAND CR.		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	China	0712-0808	LAND CR.		Gateway			√	√			1.Initialization
TOYOTA	China	0712-0808	LAND CR.		Body No.5					√	√	
TOYOTA	China	0712-0808	LAND CR.		D-Door Motor			√	√	√	√	
TOYOTA	China	0712-0808	LAND CR.		P-Door Motor			√	√	√	√	

TOYOTA	China	0712-0808	LAND CR.		RL-Door Motor			√	√	√	√	
TOYOTA	China	0712-0808	LAND CR.		RR-Door Motor			√	√	√	√	
TOYOTA	China	0712-0808	LAND CR.		Driver Seat					√	√	
TOYOTA	China	0712-0808	LAND CR.		Master Switch			√	√	√		
TOYOTA	China	0712-0808	LAND CR.		Sliding Roof			√	√	√	√	
TOYOTA	China	0712-0808	LAND CR.		Tilt&Telescopic			√	√	√	√	
TOYOTA	China	0712-0808	LAND CR.		Combination Meter			√	√	√	√	
TOYOTA	China	0712-0808	LAND CR.		Clearance Sonar			√	√	√	√	
TOYOTA	China	0712-0808	LAND CR.		Rain Sensor			√	√	√		
TOYOTA	China	0712-0808	LAND CR.		Entry&Start			√	√	√	√	
TOYOTA	Others	0712-0808	LAND CR.		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	Others	0712-0808	LAND CR.		Cruise Control			√	√			
TOYOTA	Others	0712-0808	LAND CR.		AHC			√	√	√	√	
TOYOTA	Others	0712-0808	LAND CR.		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	Others	0712-0808	LAND CR.		VGRS			√	√	√		
TOYOTA	Others	0712-0808	LAND CR.		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	Others	0712-0808	LAND CR.		SRS Airbag			√	√	√		
TOYOTA	Others	0712-0808	LAND CR.		Pre-Crash			√	√	√	√	
TOYOTA	Others	0712-0808	LAND CR.		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	Others	0712-0808	LAND CR.		Gateway			√	√			1.Initialization
TOYOTA	Others	0712-0808	LAND CR.		Accessory Gateway			√	√	√		
TOYOTA	Others	0712-0808	LAND CR.		Body No.4			√	√	√	√	

TOYOTA	Others	0712-0808	LAND CR.		Body No.5				√	√		
TOYOTA	Others	0712-0808	LAND CR.		D-Door Motor			√	√	√	√	
TOYOTA	Others	0712-0808	LAND CR.		P-Door Motor			√	√	√	√	
TOYOTA	Others	0712-0808	LAND CR.		RL-Door Motor			√	√	√	√	
TOYOTA	Others	0712-0808	LAND CR.		RR-Door Motor			√	√	√	√	
TOYOTA	Others	0712-0808	LAND CR.		Driver Seat					√	√	
TOYOTA	Others	0712-0808	LAND CR.		Master Switch			√	√	√		
TOYOTA	Others	0712-0808	LAND CR.		Front Left Seat A/C			√		√	√	
TOYOTA	Others	0712-0808	LAND CR.		Front Right Seat A/C			√		√	√	
TOYOTA	Others	0712-0808	LAND CR.		Sliding Roof			√	√	√	√	
TOYOTA	Others	0712-0808	LAND CR.		Tilt&Telescopic			√	√	√	√	
TOYOTA	Others	0712-0808	LAND CR.		Combination Meter			√	√	√	√	
TOYOTA	Others	0712-0808	LAND CR.		Mirror					√	√	
TOYOTA	Others	0712-0808	LAND CR.		Clearance Sonar			√	√	√	√	
TOYOTA	Others	0712-0808	LAND CR.		Rain Sensor			√	√	√		
TOYOTA	Others	0712-0808	LAND CR.		Entry&Start			√	√	√	√	
TOYOTA	All	0708-0712	LAND CR.		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0708-0712	LAND CR.		Cruise Control			√	√			
TOYOTA	All	0708-0712	LAND CR.		AHC			√	√	√	√	
TOYOTA	All	0708-0712	LAND CR.		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0708-0712	LAND CR.		VGRS			√	√	√		
TOYOTA	All	0708-0712	LAND CR.		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0708-0712	LAND CR.		SRS Airbag			√	√	√		

TOYOTA	All	0708-0712	LAND CR.		Pre-Crash			√	√	√	√	
TOYOTA	All	0708-0712	LAND CR.		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0708-0712	LAND CR.		Gateway			√	√			1.Initialization
TOYOTA	All	0708-0712	LAND CR.		Accessory Gateway			√	√	√		
TOYOTA	All	0708-0712	LAND CR.		Body No.4			√	√	√	√	
TOYOTA	All	0708-0712	LAND CR.		Body No.5					√	√	
TOYOTA	All	0708-0712	LAND CR.		D-Door Motor			√	√	√	√	
TOYOTA	All	0708-0712	LAND CR.		P-Door Motor			√	√	√	√	
TOYOTA	All	0708-0712	LAND CR.		RL-Door Motor			√	√	√	√	
TOYOTA	All	0708-0712	LAND CR.		RR-Door Motor			√	√	√	√	
TOYOTA	All	0708-0712	LAND CR.		Driver Seat					√	√	
TOYOTA	All	0708-0712	LAND CR.		Master Switch			√	√	√		
TOYOTA	All	0708-0712	LAND CR.		Front Left Seat A/C			√		√	√	
TOYOTA	All	0708-0712	LAND CR.		Front Right Seat A/C			√		√	√	
TOYOTA	All	0708-0712	LAND CR.		Sliding Roof			√	√	√	√	
TOYOTA	All	0708-0712	LAND CR.		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	0708-0712	LAND CR.		Combination Meter			√	√	√	√	
TOYOTA	All	0708-0712	LAND CR.		Mirror					√	√	
TOYOTA	All	0708-0712	LAND CR.		Clearance Sonar			√	√	√	√	
TOYOTA	All	0708-0712	LAND CR.		Rain Sensor			√	√	√		
TOYOTA	All	0708-0712	LAND CR.		Entry&Start			√	√	√	√	
TOYOTA	China	0808-	LAND CR.		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	China	0808-	LAND CR.		Cruise Control			√	√			
TOYOTA	China	0808-	LAND CR.		AHC			√	√	√	√	

TOYOTA	China	0808-	LAND CR.			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	China	0808-	LAND CR.			VGRS			√	√	√		
TOYOTA	China	0808-	LAND CR.			Parking Assist Monitor System			√	√	√		
TOYOTA	China	0808-	LAND CR.			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	China	0808-	LAND CR.			SRS Airbag			√	√	√		
TOYOTA	China	0808-	LAND CR.			Pre-Crash			√	√	√	√	
TOYOTA	China	0808-	LAND CR.			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	China	0808-	LAND CR.			Gateway			√	√			1.Initialization
TOYOTA	China	0808-	LAND CR.			Accessory Gateway			√	√	√		
TOYOTA	China	0808-	LAND CR.			Body No.5					√	√	
TOYOTA	China	0808-	LAND CR.			D-Door Motor			√	√	√	√	
TOYOTA	China	0808-	LAND CR.			P-Door Motor			√	√	√	√	
TOYOTA	China	0808-	LAND CR.			RL-Door Motor			√	√	√	√	
TOYOTA	China	0808-	LAND CR.			RR-Door Motor			√	√	√	√	
TOYOTA	China	0808-	LAND CR.			Driver Seat					√	√	
TOYOTA	China	0808-	LAND CR.			Master Switch			√	√	√		
TOYOTA	China	0808-	LAND CR.			Front Left Seat A/C			√		√	√	
TOYOTA	China	0808-	LAND CR.			Front Right Seat A/C			√		√	√	
TOYOTA	China	0808-	LAND CR.			Sliding Roof			√	√	√	√	
TOYOTA	China	0808-	LAND CR.			Tilt&Telescopic			√	√	√	√	
TOYOTA	China	0808-	LAND CR.			Combination Meter			√	√	√	√	
TOYOTA	China	0808-	LAND CR.			Mirror					√	√	
TOYOTA	China	0808-	LAND CR.			Clearance Sonar			√	√	√	√	
TOYOTA	China	0808-	LAND CR.			Rain Sensor			√	√	√		
TOYOTA	China	0808-	LAND CR.			Entry&Start			√	√	√	√	

TOYOTA	China	0808-	LAND CR.			Navigation System			√	√			
TOYOTA	Others	0808-	LAND CR.			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	Others	0808-	LAND CR.			Cruise Control			√	√			
TOYOTA	Others	0808-	LAND CR.			AHC			√	√	√	√	
TOYOTA	Others	0808-	LAND CR.			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	Others	0808-	LAND CR.			VGRS			√	√	√		
TOYOTA	Others	0808-	LAND CR.			Parking Assist Monitor System			√	√	√		
TOYOTA	Others	0808-	LAND CR.			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	Others	0808-	LAND CR.			SRS Airbag			√	√	√		
TOYOTA	Others	0808-	LAND CR.			Pre-Crash			√	√	√	√	
TOYOTA	Others	0808-	LAND CR.			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	Others	0808-	LAND CR.			Gateway			√	√			1.Initialization
TOYOTA	Others	0808-	LAND CR.			Accessory Gateway			√	√	√		
TOYOTA	Others	0808-	LAND CR.			D-Door Motor			√	√	√	√	
TOYOTA	Others	0808-	LAND CR.			P-Door Motor			√	√	√	√	
TOYOTA	Others	0808-	LAND CR.			RL-Door Motor			√	√	√	√	
TOYOTA	Others	0808-	LAND CR.			RR-Door Motor			√	√	√	√	
TOYOTA	Others	0808-	LAND CR.			Driver Seat					√	√	
TOYOTA	Others	0808-	LAND CR.			Master Switch			√	√	√		
TOYOTA	Others	0808-	LAND CR.			Front Left Seat A/C			√		√	√	
TOYOTA	Others	0808-	LAND CR.			Front Right Seat A/C			√		√	√	

TOYOTA	Others	0808-	LAND CR.		Sliding Roof			√	√	√	√	
TOYOTA	Others	0808-	LAND CR.		Tilt&Telescopic			√	√	√	√	
TOYOTA	Others	0808-	LAND CR.		Combination Meter			√	√	√	√	
TOYOTA	Others	0808-	LAND CR.		Mirror					√	√	
TOYOTA	Others	0808-	LAND CR.		Clearance Sonar			√	√	√	√	
TOYOTA	Others	0808-	LAND CR.		Rain Sensor			√	√	√		
TOYOTA	Others	0808-	LAND CR.		Entry&Start			√	√	√	√	
TOYOTA	Others	0808-	LAND CR.		Navigation System			√	√			
TOYOTA	All	All	LAND CR. PRADO		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	LAND CR. PRADO		Cruise Control			√	√			
TOYOTA	All	All	LAND CR. PRADO		Air suspension			√	√	√	√	
TOYOTA	All	All	LAND CR. PRADO		KDSS			√	√	√	√	
TOYOTA	All	All	LAND CR. PRADO		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	LAND CR. PRADO		PPS			√	√	√		
TOYOTA	All	All	LAND CR. PRADO		Parking Assist Monitor System			√	√	√		
TOYOTA	All	All	LAND CR. PRADO		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	All	LAND CR. PRADO		SRS Airbag			√	√	√		
TOYOTA	All	All	LAND CR. PRADO		Pre-Crash			√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	All	All	LAND CR. PRADO			Pre-Crash 2			√	√	√	√	1.Recognition ECU High Temp History Reset 2.Camera/Target Position Memory 3.Camera Axis Adjust 4.Door Beam Axis Adjustment
TOYOTA	All	All	LAND CR. PRADO			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	All	LAND CR. PRADO			PM1 Gateway			√	√	√		1.Initialization
TOYOTA	All	All	LAND CR. PRADO			PM2 Gateway			√	√	√		1.Initialization
TOYOTA	All	All	LAND CR. PRADO			D-Door Motor			√	√	√	√	
TOYOTA	All	All	LAND CR. PRADO			P-Door Motor			√	√	√	√	
TOYOTA	All	All	LAND CR. PRADO			RL-Door Motor			√	√	√	√	
TOYOTA	All	All	LAND CR. PRADO			RR-Door Motor			√	√	√	√	
TOYOTA	All	All	LAND CR. PRADO			Master Switch			√	√	√		
TOYOTA	All	All	LAND CR. PRADO			D-SEAT SW			√	√	√	√	
TOYOTA	All	All	LAND CR. PRADO			Sliding Roof			√	√	√	√	
TOYOTA	All	All	LAND CR. PRADO			Tilt&Telescopic			√	√	√	√	
TOYOTA	All	All	LAND CR. PRADO			Combination Meter			√	√	√	√	
TOYOTA	All	All	LAND CR. PRADO			Clearance Sonar			√	√	√	√	
TOYOTA	All	All	LAND CR. PRADO			AFS			√	√	√	√	1.ECU Information Synchronize
TOYOTA	All	All	LAND CR. PRADO			Entry&Start			√	√	√	√	
TOYOTA	All	All	LAND CR. PRADO			Power Source Control			√	√	√	√	
TOYOTA	All	All	LAND CR. PRADO			Charging Control			√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	All	All	LAND CR. PRADO			Remote Engine Starter			√	√	√		1.Trouble Factor Code Clear
TOYOTA	All	All	LAND CR. PRADO			Starting Control			√	√	√	√	
TOYOTA	All	-0908	4RUNNER			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	-0908	4RUNNER			Cruise Control			√	√			
TOYOTA	All	-0908	4RUNNER			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	-0908	4RUNNER			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	-0908	4RUNNER			Theft Deterrent			√	√	√	√	
TOYOTA	All	-0908	4RUNNER			SRS Airbag			√	√			
TOYOTA	All	-0908	4RUNNER			Body			√	√	√	√	
TOYOTA	All	-0908	4RUNNER			Back Door			√	√	√	√	
TOYOTA	All	0908-	4RUNNER			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0908-	4RUNNER			Cruise Control			√	√			
TOYOTA	All	0908-	4RUNNER			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0908-	4RUNNER			PPS			√	√	√		
TOYOTA	All	0908-	4RUNNER			Air Conditioner			√	√	√	√	1.Servomotor Initialization

TOYOTA	All	0908-	4RUNNER		SRS Airbag			√	√	√		
TOYOTA	All	0908-	4RUNNER		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0908-	4RUNNER		Gateway			√	√			1.Initialization
TOYOTA	All	0908-	4RUNNER		PM1 Gateway			√	√	√		1.Initialization
TOYOTA	All	0908-	4RUNNER		PM2 Gateway			√	√	√		1.Initialization
TOYOTA	All	0908-	4RUNNER		D-Door Motor			√	√	√	√	
TOYOTA	All	0908-	4RUNNER		P-Door Motor			√	√	√	√	
TOYOTA	All	0908-	4RUNNER		RL-Door Motor			√	√	√	√	
TOYOTA	All	0908-	4RUNNER		RR-Door Motor			√	√	√	√	
TOYOTA	All	0908-	4RUNNER		D-SEAT SW			√	√	√	√	
TOYOTA	All	0908-	4RUNNER		Sliding Roof			√	√	√	√	
TOYOTA	All	0908-	4RUNNER		Combination Meter			√	√	√	√	
TOYOTA	All	0908-	4RUNNER		Entry&Start			√	√	√	√	
TOYOTA	All	-0608	LAND CR.		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.DPF Deterioration Record Clear 5.A/F Sensor Compensation Reset 6.Check Mode 7.Crank Time Compensation Reset 8.Catalyst Record Clear 9.Supply Pump Initialization 10.Vehicle Mileage Write 11.Injector Compensation 12.Pilot Quantity Learning Values Reset
TOYOTA	All	-0608	LAND CR.		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	-0608	LAND CR.		Cruise Control			√	√			
TOYOTA	All	-0608	LAND CR.		Air suspension			√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	All	-0608	LAND CR.			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	-0608	LAND CR.			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	-0608	LAND CR.			Theft Deterrent			√	√	√	√	
TOYOTA	All	-0608	LAND CR.			SRS Airbag			√	√			
TOYOTA	All	-0608	LAND CR.			Body			√	√	√	√	
TOYOTA	All	-0608	LAND CR.			Driver Door			√	√	√	√	
TOYOTA	All	0608-0908	LAND CR.			Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.DPF Deterioration Record Clear 5.A/F Sensor Compensation Reset 6.Check Mode 7.Crank Time Compensation Reset 8.Catalyst Record Clear 9.Supply Pump Initialization 10.Vehicle Mileage Write 11.Injector Compensation 12.Pilot Quantity Learning Values Reset
TOYOTA	All	0608-0908	LAND CR.			ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	0608-0908	LAND CR.			Cruise Control			√	√			
TOYOTA	All	0608-0908	LAND CR.			Air suspension			√	√	√	√	
TOYOTA	All	0608-0908	LAND CR.			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0608-0908	LAND CR.			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0608-0908	LAND CR.			Theft Deterrent			√	√	√	√	

TOYOTA	All	0608-0908	LAND CR.		SRS Airbag			√	√			
TOYOTA	All	0608-0908	LAND CR.		Body			√	√	√	√	
TOYOTA	All	0608-0908	LAND CR.		Driver Door			√	√	√	√	
TOYOTA	All	0908-	LAND CR. PRADO		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.DPF Deterioration Record Clear 5.A/F Sensor Compensation Reset 6.Check Mode 7.Crank Time Compensation Reset 8.Catalyst Record Clear 9.Supply Pump Initialization 10.Vehicle Mileage Write 11.Injector Compensation 12.Pilot Quantity Learning Values Reset
TOYOTA	All	0908-	LAND CR. PRADO		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	0908-	LAND CR. PRADO		Cruise Control			√	√			
TOYOTA	All	0908-	LAND CR. PRADO		Air suspension			√	√	√	√	
TOYOTA	All	0908-	LAND CR. PRADO		KDSS			√	√	√	√	
TOYOTA	All	0908-	LAND CR. PRADO		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0908-	LAND CR. PRADO		PPS			√	√	√		
TOYOTA	All	0908-	LAND CR. PRADO		Parking Assist Monitor System			√	√	√		
TOYOTA	All	0908-	LAND CR. PRADO		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0908-	LAND CR. PRADO		SRS Airbag			√	√	√		

TOYOTA	All	0908-	LAND CR. PRADO			Pre-Crash			√	√	√	√	
TOYOTA	All	0908-	LAND CR. PRADO			Pre-Crash 2			√	√	√	√	1.Recognition ECU High Temp History Reset 2.Camera/Target Position Memory 3.Camera Axis Adjust 4.Door Beam Axis Adjustment
TOYOTA	All	0908-	LAND CR. PRADO			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0908-	LAND CR. PRADO			PM1 Gateway			√	√	√		1.Initialization
TOYOTA	All	0908-	LAND CR. PRADO			PM2 Gateway			√	√	√		1.Initialization
TOYOTA	All	0908-	LAND CR. PRADO			D-Door Motor			√	√	√	√	
TOYOTA	All	0908-	LAND CR. PRADO			P-Door Motor			√	√	√	√	
TOYOTA	All	0908-	LAND CR. PRADO			RL-Door Motor			√	√	√	√	
TOYOTA	All	0908-	LAND CR. PRADO			RR-Door Motor			√	√	√	√	
TOYOTA	All	0908-	LAND CR. PRADO			Master Switch			√	√	√		
TOYOTA	All	0908-	LAND CR. PRADO			D-SEAT SW			√	√	√	√	
TOYOTA	All	0908-	LAND CR. PRADO			Sliding Roof			√	√	√	√	
TOYOTA	All	0908-	LAND CR. PRADO			Tilt&Telescopic			√	√	√	√	
TOYOTA	All	0908-	LAND CR. PRADO			Combination Meter			√	√	√	√	
TOYOTA	All	0908-	LAND CR. PRADO			Clearance Sonar			√	√	√	√	
TOYOTA	All	0908-	LAND CR. PRADO			AFS			√	√	√	√	1.ECU Information Synchronize
TOYOTA	All	0908-	LAND CR. PRADO			Entry&Start			√	√	√	√	
TOYOTA	All	0908-	LAND CR. PRADO			Power Source Control			√	√	√	√	

TOYOTA	All	0908-	LAND CR. PRADO			Charging Control			√	√	√	√	
TOYOTA	All	0908-	LAND CR. PRADO			Remote Engine Starter			√	√	√		1.Trouble Factor Code Clear
TOYOTA	All	0908-	LAND CR. PRADO			Starting Control			√	√	√	√	
TOYOTA	All	0908-	LAND CR. PRADO			Radar Cruise			√	√	√		1.Beam Axis Adjustment
TOYOTA	All	-0808	DYNA			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.DPF Deterioration Record Clear 5.A/F Sensor Compensation Reset 6.Check Mode 7.Crank Time Compensation Reset 8.Catalyst Record Clear 9.Supply Pump Initialization 10.Vehicle Mileage Write 11.Injector Compensation 12.Pilot Quantity Learning Values Reset
TOYOTA	All	-0808	DYNA			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	-0808	DYNA			SRS Airbag			√	√			
TOYOTA	All	0808-0905	DYNA			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.DPF Deterioration Record Clear 5.A/F Sensor Compensation Reset 6.Check Mode 7.Crank Time Compensation Reset 8.Catalyst Record Clear 9.Supply Pump Initialization 10.Vehicle Mileage Write 11.Injector Compensation 12.Pilot Quantity Learning Values Reset

SERVICE SOLUTIONS

TOYOTA	All	0808-0905	DYNA			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0808-0905	DYNA			SRS Airbag				√	√			
TOYOTA	All	0905-	DYNA			Engine and ECT				√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.DPF Deterioration Record Clear 5.A/F Sensor Compensation Reset 6.Check Mode 7.Crank Time Compensation Reset 8.Catalyst Record Clear 9.Supply Pump Initialization 10.Vehicle Mileage Write 11.Injector Compensation 12.Pilot Quantity Learning Values Reset
TOYOTA	All	0905-	DYNA			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0905-	DYNA			SRS Airbag				√	√			
TOYOTA	All	-0701	YARIS/ECHO, TMT Product			Engine and ECT				√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	-0701	YARIS/ECHO, TMT Product			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	-0701	YARIS/ECHO, TMT Product			EMPS				√	√	√		1.Torque Sensor Adjustment

SERVICE SOLUTIONS

TOYOTA	All	-0701	YARIS/ECHO, TMT Product		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	-0701	YARIS/ECHO, TMT Product		Theft Deterrent			*	*	*	*	
TOYOTA	All	-0701	YARIS/ECHO, TMT Product		SRS Airbag			√	√			
TOYOTA	All	-0701	YARIS/ECHO, TMT Product		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	-0701	YARIS/ECHO, TMT Product		Combination Meter			√	√	√	√	
TOYOTA	All	0701-	YARIS/ECHO, TMT Product		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0701-	YARIS/ECHO, TMT Product		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0701-	YARIS/ECHO, TMT Product		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	0701-	YARIS/ECHO, TMT Product		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0701-	YARIS/ECHO, TMT Product		Theft Deterrent			*	*	*	*	
TOYOTA	All	0701-	YARIS/ECHO, TMT Product		SRS Airbag			√	√			
TOYOTA	All	0701-	YARIS/ECHO, TMT Product		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0701-	YARIS/ECHO, TMT Product		Combination Meter			√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	All	-0808	YARIS/ECHO, Others		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	-0808	YARIS/ECHO, Others		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、 Linear Valve Offset)
TOYOTA	All	-0808	YARIS/ECHO, Others		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	-0808	YARIS/ECHO, Others		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	-0808	YARIS/ECHO, Others		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	-0808	YARIS/ECHO, Others		Theft Deterrent			*	*	*	*	
TOYOTA	All	-0808	YARIS/ECHO, Others		SRS Airbag			√	√			
TOYOTA	All	-0808	YARIS/ECHO, Others		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	-0808	YARIS/ECHO, Others		D-Door Motor			√	√	√	√	
TOYOTA	All	-0808	YARIS/ECHO, Others		Combination Meter			√	√	√	√	
TOYOTA	All	0808-	YARIS/ECHO, Others		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0808-	YARIS/ECHO, Others		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、 Linear Valve Offset)

SERVICE SOLUTIONS

TOYOTA	All	0808-	YARIS/ECHO, Others		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	0808-	YARIS/ECHO, Others		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0808-	YARIS/ECHO, Others		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0808-	YARIS/ECHO, Others		Theft Deterrent			*	*	*	*	
TOYOTA	All	0808-	YARIS/ECHO, Others		SRS Airbag			√	√			
TOYOTA	All	0808-	YARIS/ECHO, Others		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0808-	YARIS/ECHO, Others		D-Door Motor			√	√	√	√	
TOYOTA	All	0808-	YARIS/ECHO, Others		Combination Meter			√	√	√	√	
TOYOTA	All	0808-	YARIS/ECHO, Others		Occupant Detection			√	√	√		
TOYOTA	All	All	YARIS/ECHO, Taiwan		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	YARIS/ECHO, Taiwan		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	YARIS/ECHO, Taiwan		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	All	YARIS/ECHO, Taiwan		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	All	YARIS/ECHO, Taiwan		Theft Deterrent			*	*	*	*	
TOYOTA	All	All	YARIS/ECHO, Taiwan		SRS Airbag			√	√			

SERVICE SOLUTIONS

TOYOTA	All	All	YARIS/ECHO, Taiwan		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	All	YARIS/ECHO, Taiwan		D-Door Motor			√	√	√	√	
TOYOTA	All	All	YARIS/ECHO, Taiwan		Combination Meter			√	√	√	√	
TOYOTA	All	All	YARIS/ECHO, Taiwan		Entry&Start			√	√	√	√	
TOYOTA	All	All	YARIS/ECHO, GTMC Product		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	YARIS/ECHO, GTMC Product		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、 Linear Valve Offset)
TOYOTA	All	All	YARIS/ECHO, GTMC Product		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	All	YARIS/ECHO, GTMC Product		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	All	YARIS/ECHO, GTMC Product		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	All	YARIS/ECHO, GTMC Product		Theft Deterrent			*	*	*	*	
TOYOTA	All	All	YARIS/ECHO, GTMC Product		SRS Airbag			√	√			
TOYOTA	All	All	YARIS/ECHO, GTMC Product		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration

TOYOTA	All	All	YARIS/ECHO, GTMC Product		D-Door Motor			√	√	√	√	
TOYOTA	All	All	YARIS/ECHO, GTMC Product		Combination Meter			√	√	√	√	
TOYOTA	All	All	YARIS/ECHO, GTMC Product		Entry&Start			√	√	√	√	
TOYOTA	All	All	VIOS,TAIWA N Product		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	VIOS,TAIWA N Product		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、 Linear Valve Offset)
TOYOTA	All	All	VIOS,TAIWA N Product		SRS Airbag			√	√			
TOYOTA	All	All	VIOS,Others		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	VIOS,Others		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、 Linear Valve Offset)
TOYOTA	All	All	VIOS,Others		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	All	VIOS,Others		Theft Deterrent			*	*	*	*	
TOYOTA	All	All	VIOS,Others		SRS Airbag			√	√			

TOYOTA	All	All	VIOS,Others		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	All	VIOS,Others		Combination Meter			√	√	√	√	
TOYOTA	All	All	VIOS,Others		Entry&Start			√	√	√	√	
TOYOTA	All	All	VIOS,TMT Product		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	VIOS,TMT Product		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	All	VIOS,TMT Product		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	All	VIOS,TMT Product		SRS Airbag			√	√			
TOYOTA	All	All	VIOS,TMT Product		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	All	VIOS,TMT Product		Combination Meter			√	√	√	√	
TOYOTA	All	All	VIOS,TMT Product		Entry&Start			√	√	√	√	
TOYOTA	All	-0810	VIOS,China		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	-0810	VIOS,China		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)

TOYOTA	All	-0810	VIOS,China		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	-0810	VIOS,China		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	-0810	VIOS,China		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	-0810	VIOS,China		Theft Deterrent			*	*	*	*	
TOYOTA	All	-0810	VIOS,China		SRS Airbag			√	√			
TOYOTA	All	-0810	VIOS,China		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	-0810	VIOS,China		Sliding Roof			√	√	√	√	
TOYOTA	All	-0810	VIOS,China		Combination Meter			√	√	√	√	
TOYOTA	All	0810-	VIOS,China		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0810-	VIOS,China		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0810-	VIOS,China		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	0810-	VIOS,China		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0810-	VIOS,China		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0810-	VIOS,China		Theft Deterrent			*	*	*	*	
TOYOTA	All	0810-	VIOS,China		SRS Airbag			√	√			
TOYOTA	All	0810-	VIOS,China		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0810-	VIOS,China		Sliding Roof			√	√	√	√	
TOYOTA	All	0810-	VIOS,China		Combination Meter			√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	All	All	PRIUS			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	PRIUS			Hybrid Control			√	√	√	√	1.VIN Read
TOYOTA	All	All	PRIUS			HV Battery			√	√	√	√	
TOYOTA	All	All	PRIUS			Cruise Control			√	√	√		
TOYOTA	All	All	PRIUS			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	All	PRIUS			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	All	PRIUS			Transmission Control			√	√	√		
TOYOTA	All	All	PRIUS			Intelligent Parking Assist			√	√			
TOYOTA	All	All	PRIUS			Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	All	PRIUS			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	All	PRIUS			SRS Airbag			√	√			
TOYOTA	All	All	PRIUS			Body			√	√	√	√	
TOYOTA	All	All	PRIUS			Gateway			√	√			
TOYOTA	All	All	PRIUS			Entry&Start			√	√	√	√	
TOYOTA	All	All	PRIUS			Power Source Control			√	√	√	√	
TOYOTA	All	0708-0808,w/ Smart Key	COROLLA			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode

SERVICE SOLUTIONS

TOYOTA	All	0708-0808,w/ Smart Key	COROLLA			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、 Linear Valve Offset)
TOYOTA	All	0708-0808,w/ Smart Key	COROLLA			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	0708-0808,w/ Smart Key	COROLLA			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0708-0808,w/ Smart Key	COROLLA			Theft Deterrent			*	*	*	*	
TOYOTA	All	0708-0808,w/ Smart Key	COROLLA			SRS Airbag			√	√			
TOYOTA	All	0708-0808,w/ Smart Key	COROLLA			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0708-0808,w/ Smart Key	COROLLA			Accessory Gateway			√	√	√		
TOYOTA	All	0708-0808,w/ Smart Key	COROLLA			D-Door Motor			√	√	√	√	
TOYOTA	All	0708-0808,w/ Smart Key	COROLLA			P-Door Motor			√	√	√	√	
TOYOTA	All	0708-0808,w/ Smart Key	COROLLA			RL-Door Motor			√	√	√	√	
TOYOTA	All	0708-0808,w/ Smart Key	COROLLA			RR-Door Motor			√	√	√	√	
TOYOTA	All	0708-0808,w/ Smart Key	COROLLA			Master Switch			√	√	√		
TOYOTA	All	0708-0808,w/ Smart Key	COROLLA			Sliding Roof			√	√	√	√	
TOYOTA	All	0708-0808,w/ Smart Key	COROLLA			Combination Meter			√	√	√	√	
TOYOTA	All	0708-0808,w/ Smart Key	COROLLA			Entry&Start			√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	All	0708-0808,w/o Smart Key	COROLLA		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0708-0808,w/o Smart Key	COROLLA		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0708-0808,w/o Smart Key	COROLLA		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	0708-0808,w/o Smart Key	COROLLA		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0708-0808,w/o Smart Key	COROLLA		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0708-0808,w/o Smart Key	COROLLA		Theft Deterrent			*	*	*	*	
TOYOTA	All	0708-0808,w/o Smart Key	COROLLA		SRS Airbag			√	√			
TOYOTA	All	0708-0808,w/o Smart Key	COROLLA		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0708-0808,w/o Smart Key	COROLLA		Accessory Gateway			√	√	√		
TOYOTA	All	0708-0808,w/o Smart Key	COROLLA		D-Door Motor			√	√	√	√	
TOYOTA	All	0708-0808,w/o Smart Key	COROLLA		P-Door Motor			√	√	√	√	

TOYOTA	All	0708-0808,w/o Smart Key	COROLLA		RL-Door Motor			√	√	√	√	
TOYOTA	All	0708-0808,w/o Smart Key	COROLLA		RR-Door Motor			√	√	√	√	
TOYOTA	All	0708-0808,w/o Smart Key	COROLLA		Master Switch			√	√	√		
TOYOTA	All	0708-0808,w/o Smart Key	COROLLA		Sliding Roof			√	√	√	√	
TOYOTA	All	0708-0808,w/o Smart Key	COROLLA		Combination Meter			√	√	√	√	
TOYOTA	All	0808-0901,NZE140	COROLLA		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0808-0901,NZE140	COROLLA		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0808-0901,NZE140	COROLLA		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	0808-0901,NZE140	COROLLA		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0808-0901,NZE140	COROLLA		SRS Airbag			√	√			
TOYOTA	All	0808-0901,NZE140	COROLLA		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0808-0901,NZE140	COROLLA		D-Door Motor			√	√	√	√	
TOYOTA	All	0808-0901,NZE140	COROLLA		Sliding Roof			√	√	√	√	

TOYOTA	All	0808-0901,NZE140	COROLLA		Combination Meter			√	√	√	√	
TOYOTA	All	0808-0901,NZE140	COROLLA		Entry&Start			√	√	√	√	
TOYOTA	All	0809-,NZE141	COROLLA		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0809-,NZE141	COROLLA		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0809-,NZE141	COROLLA		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	0809-,NZE141	COROLLA		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0809-,NZE141	COROLLA		SRS Airbag			√	√			
TOYOTA	All	0809-,NZE141	COROLLA		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0809-,NZE141	COROLLA		D-Door Motor			√	√	√	√	
TOYOTA	All	0809-,NZE141	COROLLA		Sliding Roof			√	√	√	√	
TOYOTA	All	0809-,NZE141	COROLLA		Combination Meter			√	√	√	√	
TOYOTA	All	0901-,NZE140	COROLLA		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0901-,NZE140	COROLLA		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0901-,NZE140	COROLLA		EMPS			√	√	√		1.Torque Sensor Adjustment

SERVICE SOLUTIONS

TOYOTA	All	0901-,NZE140	COROLLA		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0901-,NZE140	COROLLA		Theft Deterrent			*	*	*	*	
TOYOTA	All	0901-,NZE140	COROLLA		SRS Airbag			√	√			
TOYOTA	All	0901-,NZE140	COROLLA		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0901-,NZE140	COROLLA		D-Door Motor			√	√	√	√	
TOYOTA	All	0901-,NZE140	COROLLA		Sliding Roof			√	√	√	√	
TOYOTA	All	0901-,NZE140	COROLLA		Combination Meter			√	√	√	√	
TOYOTA	All	0901-,NZE140	COROLLA		Entry&Start			√	√	√	√	
TOYOTA	All	All	YARIS/ECHO		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	YARIS/ECHO		Multi-Mode M/T			√	√	√		
TOYOTA	All	All	YARIS/ECHO		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	All	YARIS/ECHO		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	All	YARIS/ECHO		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	All	YARIS/ECHO		Theft Deterrent			*	*	*	*	
TOYOTA	All	All	YARIS/ECHO		SRS Airbag			√	√			
TOYOTA	All	All	YARIS/ECHO		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	All	YARIS/ECHO		Combination Meter			√	√	√	√	
TOYOTA	All	All	YARIS/ECHO		Entry&Start			√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	All	All	CELSIOR		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	CELSIOR		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	All	CELSIOR		Radar Cruise			√	√	√		1.Beam Axis Adjustment
TOYOTA	All	All	CELSIOR		Air suspension			√	√	√	√	
TOYOTA	All	All	CELSIOR		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	All	CELSIOR		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	All	CELSIOR		Steering Lock			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	All	CELSIOR		Theft Deterrent			√	√	√	√	
TOYOTA	All	All	CELSIOR		SRS Airbag			√	√			
TOYOTA	All	All	CELSIOR		Pre-Crash			√	√	√	√	
TOYOTA	All	All	CELSIOR		Gateway			√	√			
TOYOTA	All	All	CELSIOR		Body No.2			√	√	√	√	
TOYOTA	All	All	CELSIOR		Body No.3					√	√	
TOYOTA	All	All	CELSIOR		Body No.4			√	√	√	√	
TOYOTA	All	All	CELSIOR		Body No.5			√	√	√	√	
TOYOTA	All	All	CELSIOR		Driver Door			√	√	√	√	
TOYOTA	All	All	CELSIOR		Passenger Door			√	√	√	√	
TOYOTA	All	All	CELSIOR		Rear Left Door			√	√	√	√	
TOYOTA	All	All	CELSIOR		Rear Right Door			√	√	√	√	
TOYOTA	All	All	CELSIOR		Driver Seat					√	√	
TOYOTA	All	All	CELSIOR		Rear Left Seat			√	√	√	√	

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

TOYOTA	All	All	CELSIOR		Rear Right Seat					√	√	
TOYOTA	All	All	CELSIOR		Rear Seat Switch					√		
TOYOTA	All	All	CELSIOR		Sliding Roof					√	√	
TOYOTA	All	All	CELSIOR		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	All	CELSIOR		Combination Meter					√	√	
TOYOTA	All	All	CELSIOR		Combination Switch					√		
TOYOTA	All	All	CELSIOR		Steering Pad Switch					√		
TOYOTA	All	All	CELSIOR		Clearance Sonar			√	√			
TOYOTA	All	All	CELSIOR		Rain Sensor					√		
TOYOTA	All	All	CELSIOR		AFS			√	√	√	√	
TOYOTA	All	All	LS430		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	LS430		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	All	LS430		Radar Cruise			√	√	√		1.Beam Axis Adjustment
TOYOTA	All	All	LS430		Air suspension			√	√	√	√	
TOYOTA	All	All	LS430		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	All	LS430		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	All	LS430		Steering Lock			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	All	LS430		Theft Deterrent			√	√	√	√	
TOYOTA	All	All	LS430		SRS Airbag			√	√			
TOYOTA	All	All	LS430		Pre-Crash			√	√	√	√	
TOYOTA	All	All	LS430		Gateway			√	√	√	√	

TOYOTA	All	All	LS430		Body No.2			√	√	√	√	
TOYOTA	All	All	LS430		Body No.3					√	√	
TOYOTA	All	All	LS430		Body No.4			√	√	√	√	
TOYOTA	All	All	LS430		Body No.5			√	√	√	√	
TOYOTA	All	All	LS430		Driver Door			√	√	√	√	
TOYOTA	All	All	LS430		Passenger Door			√	√	√	√	
TOYOTA	All	All	LS430		Rear Left Door			√	√	√	√	
TOYOTA	All	All	LS430		Rear Right Door			√	√	√	√	
TOYOTA	All	All	LS430		Driver Seat					√	√	
TOYOTA	All	All	LS430		Rear Left Seat			√	√	√	√	
TOYOTA	All	All	LS430		Rear Right Seat					√	√	
TOYOTA	All	All	LS430		Rear Seat Switch					√		
TOYOTA	All	All	LS430		Sliding Roof					√	√	
TOYOTA	All	All	LS430		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	All	LS430		Combination Meter					√	√	
TOYOTA	All	All	LS430		Combination Switch					√		
TOYOTA	All	All	LS430		Steering Pad Switch					√		
TOYOTA	All	All	LS430		Clearance Sonar			√	√			
TOYOTA	All	All	LS430		Rain Sensor					√		
TOYOTA	All	All	LS430		AFS			√	√	√	√	
TOYOTA	All	All	LX470		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	LX470		Cruise Control			√	√			
TOYOTA	All	All	LX470		AHC			√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	All	All	LX470			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	LX470			VGRS				√	√	√		
TOYOTA	All	All	LX470			Immobiliser				√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	All	LX470			Theft Deterrent				√	√	√	√	
TOYOTA	All	All	LX470			SRS Airbag				√	√			
TOYOTA	All	All	LX470			Body				√	√	√	√	
TOYOTA	All	All	LX470			Body No.2				√	√	√	√	
TOYOTA	All	All	LX470			Driver Door				√	√	√	√	
TOYOTA	All	All	LX470			Driver Seat						√	√	
TOYOTA	All	All	LX470			Sliding Roof						√	√	
TOYOTA	All	All	LX470			Tilt&Telescopic			√	√	√	√		
TOYOTA	All	All	LX470			Mirror						√	√	
TOYOTA	All	All	LX470			Rain Sensor						√		
TOYOTA	All	All	LX470			Wiper						√	√	
TOYOTA	China	-0808	LAND CR.			Engine				√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	China	-0808	LAND CR.			ECT				√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	China	-0808	LAND CR.			Cruise Control				√	√			
TOYOTA	China	-0808	LAND CR.			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)

SERVICE SOLUTIONS

TOYOTA	China	-0808	LAND CR.		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	China	-0808	LAND CR.		SRS Airbag			√	√	√		
TOYOTA	China	-0808	LAND CR.		Pre-Crash			√	√	√	√	
TOYOTA	China	-0808	LAND CR.		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	China	-0808	LAND CR.		Gateway			√	√			1.Initialization
TOYOTA	China	-0808	LAND CR.		Body No.5					√	√	
TOYOTA	China	-0808	LAND CR.		D-Door Motor			√	√	√	√	
TOYOTA	China	-0808	LAND CR.		P-Door Motor			√	√	√	√	
TOYOTA	China	-0808	LAND CR.		RL-Door Motor			√	√	√	√	
TOYOTA	China	-0808	LAND CR.		RR-Door Motor			√	√	√	√	
TOYOTA	China	-0808	LAND CR.		Driver Seat					√	√	
TOYOTA	China	-0808	LAND CR.		Master Switch			√	√	√		
TOYOTA	China	-0808	LAND CR.		Sliding Roof			√	√	√	√	
TOYOTA	China	-0808	LAND CR.		Tilt&Telescopic			√	√	√	√	
TOYOTA	China	-0808	LAND CR.		Combination Meter			√	√	√	√	
TOYOTA	China	-0808	LAND CR.		Clearance Sonar			√	√	√	√	
TOYOTA	China	-0808	LAND CR.		Rain Sensor			√	√	√		
TOYOTA	China	-0808	LAND CR.		Entry&Start			√	√	√	√	
TOYOTA	China	0808-	LAND CR.		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	China	0808-	LAND CR.		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	China	0808-	LAND CR.		Cruise Control			√	√			
TOYOTA	China	0808-	LAND CR.		AHC			√	√	√	√	

TOYOTA	China	0808-	LAND CR.			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	China	0808-	LAND CR.			VGRS			√	√	√		
TOYOTA	China	0808-	LAND CR.			Parking Assist Monitor System			√	√	√		
TOYOTA	China	0808-	LAND CR.			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	China	0808-	LAND CR.			SRS Airbag			√	√	√		
TOYOTA	China	0808-	LAND CR.			Pre-Crash			√	√	√	√	
TOYOTA	China	0808-	LAND CR.			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	China	0808-	LAND CR.			Gateway			√	√			1.Initialization
TOYOTA	China	0808-	LAND CR.			Accessory Gateway			√	√	√		
TOYOTA	China	0808-	LAND CR.			Body No.5					√	√	
TOYOTA	China	0808-	LAND CR.			D-Door Motor			√	√	√	√	
TOYOTA	China	0808-	LAND CR.			P-Door Motor			√	√	√	√	
TOYOTA	China	0808-	LAND CR.			RL-Door Motor			√	√	√	√	
TOYOTA	China	0808-	LAND CR.			RR-Door Motor			√	√	√	√	
TOYOTA	China	0808-	LAND CR.			Driver Seat					√	√	
TOYOTA	China	0808-	LAND CR.			Master Switch			√	√	√		
TOYOTA	China	0808-	LAND CR.			Front Left Seat A/C			√		√	√	
TOYOTA	China	0808-	LAND CR.			Front Right Seat A/C			√		√	√	
TOYOTA	China	0808-	LAND CR.			Sliding Roof			√	√	√	√	
TOYOTA	China	0808-	LAND CR.			Tilt&Telescopic			√	√	√	√	
TOYOTA	China	0808-	LAND CR.			Combination Meter			√	√	√	√	
TOYOTA	China	0808-	LAND CR.			Mirror					√	√	
TOYOTA	China	0808-	LAND CR.			Clearance Sonar			√	√	√	√	
TOYOTA	China	0808-	LAND CR.			Rain Sensor			√	√	√		
TOYOTA	China	0808-	LAND CR.			Entry&Start			√	√	√	√	

TOYOTA	China	0808-	LAND CR.			Navigation System			√	√			
TOYOTA	Others	All	LAND CR.			Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	Others	All	LAND CR.			ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	Others	All	LAND CR.			Cruise Control			√	√			
TOYOTA	Others	All	LAND CR.			AHC			√	√	√	√	
TOYOTA	Others	All	LAND CR.			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	Others	All	LAND CR.			VGRS			√	√	√		
TOYOTA	Others	All	LAND CR.			Parking Assist Monitor System			√	√	√		
TOYOTA	Others	All	LAND CR.			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	Others	All	LAND CR.			SRS Airbag			√	√	√		
TOYOTA	Others	All	LAND CR.			Pre-Crash			√	√	√	√	
TOYOTA	Others	All	LAND CR.			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	Others	All	LAND CR.			Gateway			√	√			1.Initialization
TOYOTA	Others	All	LAND CR.			Accessory Gateway			√	√	√		
TOYOTA	Others	All	LAND CR.			Body No.4			√	√	√	√	
TOYOTA	Others	All	LAND CR.			Body No.5					√	√	
TOYOTA	Others	All	LAND CR.			D-Door Motor			√	√	√	√	
TOYOTA	Others	All	LAND CR.			P-Door Motor			√	√	√	√	
TOYOTA	Others	All	LAND CR.			RL-Door Motor			√	√	√	√	
TOYOTA	Others	All	LAND CR.			RR-Door Motor			√	√	√	√	

TOYOTA	Others	All	LAND CR.		Driver Seat				√	√		
TOYOTA	Others	All	LAND CR.		Master Switch			√	√	√		
TOYOTA	Others	All	LAND CR.		Front Left Seat A/C			√		√	√	
TOYOTA	Others	All	LAND CR.		Front Right Seat A/C			√		√	√	
TOYOTA	Others	All	LAND CR.		Sliding Roof			√	√	√	√	
TOYOTA	Others	All	LAND CR.		Tilt&Telescopic			√	√	√	√	
TOYOTA	Others	All	LAND CR.		Combination Meter			√	√	√	√	
TOYOTA	Others	All	LAND CR.		Mirror					√	√	
TOYOTA	Others	All	LAND CR.		Clearance Sonar			√	√	√	√	
TOYOTA	Others	All	LAND CR.		Rain Sensor			√	√	√		
TOYOTA	Others	All	LAND CR.		Entry&Start			√	√	√	√	
TOYOTA	Others	All	LAND CR.		Navigation System			√	√			
TOYOTA	All	-0608	SC430		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	-0608	SC430		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	-0608	SC430		Cruise Control			√	√			
TOYOTA	All	-0608	SC430		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	-0608	SC430		Tire Pressure Monitor			√	√	√		
TOYOTA	All	-0608	SC430		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	-0608	SC430		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	-0608	SC430		Theft Deterrent			√	√	√	√	
TOYOTA	All	-0608	SC430		SRS Airbag			√	√			

TOYOTA	All	-0608	SC430		Gateway			√	√	√	√	
TOYOTA	All	-0608	SC430		Body No.2			√	√	√	√	
TOYOTA	All	-0608	SC430		Body No.3					√	√	
TOYOTA	All	-0608	SC430		Body No.4			√	√	√	√	
TOYOTA	All	-0608	SC430		Body No.5			√	√	√	√	
TOYOTA	All	-0608	SC430		Driver Door			√	√	√	√	
TOYOTA	All	-0608	SC430		Passenger Door			√	√	√	√	
TOYOTA	All	-0608	SC430		Driver Seat					√	√	
TOYOTA	All	-0608	SC430		Passenger Seat					√	√	
TOYOTA	All	-0608	SC430		Retractable Hardtop			√	√	√		
TOYOTA	All	-0608	SC430		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	-0608	SC430		Combination Meter					√	√	
TOYOTA	All	-0608	SC430		Combination Switch					√		
TOYOTA	All	-0608	SC430		Steering Pad Switch					√		
TOYOTA	All	-0608	SC430		AFS			√	√	√	√	
TOYOTA	All	0608-	SC430		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0608-	SC430		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	0608-	SC430		Cruise Control			√	√			
TOYOTA	All	0608-	SC430		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0608-	SC430		Tire Pressure Monitor			√	√	√		
TOYOTA	All	0608-	SC430		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization

SERVICE SOLUTIONS

TOYOTA	All	0608-	SC430		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0608-	SC430		Theft Deterrent			√	√	√	√	
TOYOTA	All	0608-	SC430		SRS Airbag			√	√			
TOYOTA	All	0608-	SC430		Gateway			√	√	√	√	
TOYOTA	All	0608-	SC430		Body No.2			√	√	√	√	
TOYOTA	All	0608-	SC430		Body No.3					√	√	
TOYOTA	All	0608-	SC430		Body No.4			√	√	√	√	
TOYOTA	All	0608-	SC430		Body No.5			√	√	√	√	
TOYOTA	All	0608-	SC430		Driver Door			√	√	√	√	
TOYOTA	All	0608-	SC430		Passenger Door			√	√	√	√	
TOYOTA	All	0608-	SC430		Driver Seat					√	√	
TOYOTA	All	0608-	SC430		Passenger Seat					√	√	
TOYOTA	All	0608-	SC430		Retractable Hardtop			√	√	√		
TOYOTA	All	0608-	SC430		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	0608-	SC430		Combination Meter					√	√	
TOYOTA	All	0608-	SC430		Combination Switch					√		
TOYOTA	All	0608-	SC430		Steering Pad Switch					√		
TOYOTA	All	0608-	SC430		AFS			√	√	√	√	
TOYOTA	All	0608-	SC430		Occupant Detection			√	√	√		
TOYOTA	All	0808-	DYNA		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.DPF Deterioration Record Clear 5.A/F Sensor Compensation Reset 6.Check Mode 7.Crank Time Compensation Reset 8.Catalyst Record Clear 9.Supply Pump Initialization 10.Vehicle Mileage Write 11.Injector Compensation 12.Pilot Quantity Learning Values Reset

SERVICE SOLUTIONS

TOYOTA	All	0808-	DYNA			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0808-	DYNA			SRS Airbag			√	√			
TOYOTA	TMUK, TMMT Product	-0706	COROLLA/AURIS			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	TMUK, TMMT Product	-0706	COROLLA/AURIS			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	TMUK, TMMT Product	-0706	COROLLA/AURIS			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	TMUK, TMMT Product	-0706	COROLLA/AURIS			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	TMUK, TMMT Product	-0706	COROLLA/AURIS			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	TMUK, TMMT Product	-0706	COROLLA/AURIS			Theft Deterrent			*	*	*	*	
TOYOTA	TMUK, TMMT Product	-0706	COROLLA/AURIS			SRS Airbag			√	√			
TOYOTA	TMUK, TMMT Product	-0706	COROLLA/AURIS			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	TMUK, TMMT Product	-0706	COROLLA/AURIS			D-Door Motor			√	√	√	√	

TOYOTA	TMUK, TMMT Product	-0706	COROLLA/AURIS		P-Door Motor			√	√	√	√	
TOYOTA	TMUK, TMMT Product	-0706	COROLLA/AURIS		RL-Door Motor			√	√	√	√	
TOYOTA	TMUK, TMMT Product	-0706	COROLLA/AURIS		RR-Door Motor			√	√	√	√	
TOYOTA	TMUK, TMMT Product	-0706	COROLLA/AURIS		Master Switch			√	√	√		
TOYOTA	TMUK, TMMT Product	-0706	COROLLA/AURIS		Sliding Roof			√	√	√	√	
TOYOTA	TMUK, TMMT Product	0706-.w/ Smart Key	COROLLA/AURIS		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	TMUK, TMMT Product	0706-.w/ Smart Key	COROLLA/AURIS		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	TMUK, TMMT Product	0706-.w/ Smart Key	COROLLA/AURIS		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	TMUK, TMMT Product	0706-.w/ Smart Key	COROLLA/AURIS		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	TMUK, TMMT Product	0706-.w/ Smart Key	COROLLA/AURIS		Theft Deterrent			*	*	*	*	
TOYOTA	TMUK, TMMT Product	0706-.w/ Smart Key	COROLLA/AURIS		SRS Airbag			√	√			

TOYOTA	TMUK, TMMT Product	0706-,w/ Smart Key	COROLLA/AURIS		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	TMUK, TMMT Product	0706-,w/ Smart Key	COROLLA/AURIS		Accessory Gateway			√	√	√		
TOYOTA	TMUK, TMMT Product	0706-,w/ Smart Key	COROLLA/AURIS		D-Door Motor			√	√	√	√	
TOYOTA	TMUK, TMMT Product	0706-,w/ Smart Key	COROLLA/AURIS		Sliding Roof			√	√	√	√	
TOYOTA	TMUK, TMMT Product	0706-,w/ Smart Key	COROLLA/AURIS		Entry&Start			√	√	√	√	
TOYOTA	TSAM Product	All	COROLLA		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	TSAM Product	All	COROLLA		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	TSAM Product	All	COROLLA		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	TSAM Product	All	COROLLA		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	TSAM Product	All	COROLLA		Theft Deterrent			*	*	*	*	
TOYOTA	TSAM Product	All	COROLLA		SRS Airbag			√	√			
TOYOTA	TSAM Product	All	COROLLA		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	TSAM Product	All	COROLLA		Accessory Gateway			√	√	√		

TOYOTA	TSAM Product	All	COROLLA			D-Door Motor			√	√	√	√	
TOYOTA	TSAM Product	All	COROLLA			Entry&Start			√	√	√	√	
TOYOTA	India	0801-0808,w/ Smart Key	COROLLA			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	India	0801-0808,w/ Smart Key	COROLLA			Cruise Control			√	√			
TOYOTA	India	0801-0808,w/ Smart Key	COROLLA			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	India	0801-0808,w/ Smart Key	COROLLA			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	India	0801-0808,w/ Smart Key	COROLLA			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	India	0801-0808,w/ Smart Key	COROLLA			Theft Deterrent			*	*	*	*	
TOYOTA	India	0801-0808,w/ Smart Key	COROLLA			SRS Airbag			√	√			
TOYOTA	India	0801-0808,w/ Smart Key	COROLLA			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	India	0801-0808,w/ Smart Key	COROLLA			D-Door Motor			√	√	√	√	
TOYOTA	India	0801-0808,w/ Smart Key	COROLLA			Sliding Roof			√	√	√	√	
TOYOTA	India	0801-0808,w/ Smart Key	COROLLA			Combination Meter			√	√	√	√	
TOYOTA	India	0801-0808,w/ Smart Key	COROLLA			Entry&Start			√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	India	0801-0808,w/o Smart Key	COROLLA		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	India	0801-0808,w/o Smart Key	COROLLA		Cruise Control			√	√			
TOYOTA	India	0801-0808,w/o Smart Key	COROLLA		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	India	0801-0808,w/o Smart Key	COROLLA		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	India	0801-0808,w/o Smart Key	COROLLA		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	India	0801-0808,w/o Smart Key	COROLLA		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	India	0801-0808,w/o Smart Key	COROLLA		Theft Deterrent			*	*	*	*	
TOYOTA	India	0801-0808,w/o Smart Key	COROLLA		SRS Airbag			√	√			
TOYOTA	India	0801-0808,w/o Smart Key	COROLLA		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	India	0801-0808,w/o Smart Key	COROLLA		D-Door Motor			√	√	√	√	
TOYOTA	India	0801-0808,w/o Smart Key	COROLLA		Sliding Roof			√	√	√	√	

TOYOTA	India	0801-0808,w/o Smart Key	COROLLA		Combination Meter			√	√	√	√	
TOYOTA	India	0808-0811,w/ Smart Key	COROLLA		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	India	0808-0811,w/ Smart Key	COROLLA		Cruise Control			√	√			
TOYOTA	India	0808-0811,w/ Smart Key	COROLLA		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	India	0808-0811,w/ Smart Key	COROLLA		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	India	0808-0811,w/ Smart Key	COROLLA		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	India	0808-0811,w/ Smart Key	COROLLA		SRS Airbag			√	√			
TOYOTA	India	0808-0811,w/ Smart Key	COROLLA		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	India	0808-0811,w/ Smart Key	COROLLA		D-Door Motor			√	√	√	√	
TOYOTA	India	0808-0811,w/ Smart Key	COROLLA		Sliding Roof			√	√	√	√	
TOYOTA	India	0808-0811,w/ Smart Key	COROLLA		Combination Meter			√	√	√	√	
TOYOTA	India	0808-0811,w/ Smart Key	COROLLA		Entry&Start			√	√	√	√	
TOYOTA	India	0808-0811,w/o Smart Key	COROLLA		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode

TOYOTA	India	0808-0811,w/o Smart Key	COROLLA			Cruise Control				√	√			
TOYOTA	India	0808-0811,w/o Smart Key	COROLLA			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	India	0808-0811,w/o Smart Key	COROLLA			EMPS				√	√	√		1.Torque Sensor Adjustment
TOYOTA	India	0808-0811,w/o Smart Key	COROLLA			Air Conditioner				√	√	√	√	1.Servomotor Initialization
TOYOTA	India	0808-0811,w/o Smart Key	COROLLA			Immobiliser				√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	India	0808-0811,w/o Smart Key	COROLLA			Theft Deterrent				*	*	*	*	
TOYOTA	India	0808-0811,w/o Smart Key	COROLLA			SRS Airbag				√	√			
TOYOTA	India	0808-0811,w/o Smart Key	COROLLA			Main Body				√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	India	0808-0811,w/o Smart Key	COROLLA			D-Door Motor				√	√	√	√	
TOYOTA	India	0808-0811,w/o Smart Key	COROLLA			Sliding Roof				√	√	√	√	
TOYOTA	India	0808-0811,w/o Smart Key	COROLLA			Combination Meter				√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	Latin America	All	COROLLA			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	Latin America	All	COROLLA			Cruise Control			√	√			
TOYOTA	Latin America	All	COROLLA			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	Latin America	All	COROLLA			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	Latin America	All	COROLLA			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	Latin America	All	COROLLA			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	Latin America	All	COROLLA			Theft Deterrent			*	*	*	*	
TOYOTA	Latin America	All	COROLLA			SRS Airbag			√	√			
TOYOTA	Latin America	All	COROLLA			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	Latin America	All	COROLLA			D-Door Motor			√	√	√	√	
TOYOTA	Latin America	All	COROLLA			P-Door Motor			√	√	√	√	

TOYOTA	Latin America	All	COROLLA		RL-Door Motor			√	√	√	√	
TOYOTA	Latin America	All	COROLLA		RR-Door Motor			√	√	√	√	
TOYOTA	Latin America	All	COROLLA		Master Switch			√	√	√		
TOYOTA	TDV Product	All	COROLLA		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	TDV Product	All	COROLLA		Cruise Control			√	√			
TOYOTA	TDV Product	All	COROLLA		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	TDV Product	All	COROLLA		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	TDV Product	All	COROLLA		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	TDV Product	All	COROLLA		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	TDV Product	All	COROLLA		Theft Deterrent			*	*	*	*	
TOYOTA	TDV Product	All	COROLLA		SRS Airbag			√	√			
TOYOTA	TDV Product	All	COROLLA		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	TDV Product	All	COROLLA		D-Door Motor			√	√	√	√	
TOYOTA	TDV Product	All	COROLLA		P-Door Motor			√	√	√	√	

TOYOTA	TDV Product	All	COROLLA		RL-Door Motor			√	√	√	√	
TOYOTA	TDV Product	All	COROLLA		RR-Door Motor			√	√	√	√	
TOYOTA	TDV Product	All	COROLLA		Master Switch			√	√	√		
TOYOTA	Brazil	All	COROLLA		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	Brazil	All	COROLLA		Cruise Control			√	√			
TOYOTA	Brazil	All	COROLLA		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	Brazil	All	COROLLA		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	Brazil	All	COROLLA		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	Brazil	All	COROLLA		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	Brazil	All	COROLLA		Theft Deterrent			*	*	*	*	
TOYOTA	Brazil	All	COROLLA		SRS Airbag			√	√			
TOYOTA	Brazil	All	COROLLA		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	Brazil	All	COROLLA		D-Door Motor			√	√	√	√	
TOYOTA	Brazil	All	COROLLA		P-Door Motor			√	√	√	√	
TOYOTA	Brazil	All	COROLLA		RL-Door Motor			√	√	√	√	
TOYOTA	Brazil	All	COROLLA		RR-Door Motor			√	√	√	√	
TOYOTA	Brazil	All	COROLLA		Master Switch			√	√	√		

SERVICE SOLUTIONS

TOYOTA	TMT Product	All	COROLLA			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	TMT Product	All	COROLLA			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	TMT Product	All	COROLLA			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	TMT Product	All	COROLLA			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	TMT Product	All	COROLLA			Theft Deterrent			*	*	*	*	
TOYOTA	TMT Product	All	COROLLA			SRS Airbag			√	√			
TOYOTA	TMT Product	All	COROLLA			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	TMT Product	All	COROLLA			D-Door Motor			√	√	√	√	
TOYOTA	TMT Product	All	COROLLA			Sliding Roof			√	√	√	√	
TOYOTA	TMT Product	All	COROLLA			Combination Meter			√	√	√	√	
TOYOTA	TMT Product	All	COROLLA			Entry&Start			√	√	√	√	
TOYOTA	Vietnam	All	COROLLA			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode

SERVICE SOLUTIONS

TOYOTA	Vietnam	All	COROLLA		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	Vietnam	All	COROLLA		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	Vietnam	All	COROLLA		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	Vietnam	All	COROLLA		Theft Deterrent			*	*	*	*	
TOYOTA	Vietnam	All	COROLLA		SRS Airbag			√	√			
TOYOTA	Vietnam	All	COROLLA		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	Vietnam	All	COROLLA		D-Door Motor			√	√	√	√	
TOYOTA	Vietnam	All	COROLLA		Sliding Roof			√	√	√	√	
TOYOTA	Vietnam	All	COROLLA		Combination Meter			√	√	√	√	
TOYOTA	Vietnam	All	COROLLA		Entry&Start			√	√	√	√	
TOYOTA	Others	-0708	COROLLA/AURIS		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	Others	-0708	COROLLA/AURIS		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	Others	-0708	COROLLA/AURIS		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	Others	-0708	COROLLA/AURIS		Air Conditioner			√	√	√	√	1.Servomotor Initialization

SERVICE SOLUTIONS

TOYOTA	Others	-0708	COROLLA/AU RIS			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	Others	-0708	COROLLA/AU RIS			SRS Airbag			√	√			
TOYOTA	Others	-0708	COROLLA/AU RIS			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	Others	-0708	COROLLA/AU RIS			D-Door Motor			√	√	√	√	
TOYOTA	Others	-0708	COROLLA/AU RIS			Sliding Roof			√	√	√	√	
TOYOTA	Others	0708-,w/ Smart Key	COROLLA/AU RIS			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	Others	0708-,w/ Smart Key	COROLLA/AU RIS			Cruise Control			√	√			
TOYOTA	Others	0708-,w/ Smart Key	COROLLA/AU RIS			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、 Linear Valve Offset)
TOYOTA	Others	0708-,w/ Smart Key	COROLLA/AU RIS			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	Others	0708-,w/ Smart Key	COROLLA/AU RIS			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	Others	0708-,w/ Smart Key	COROLLA/AU RIS			Theft Deterrent			*	*	*	*	
TOYOTA	Others	0708-,w/ Smart Key	COROLLA/AU RIS			SRS Airbag			√	√			
TOYOTA	Others	0708-,w/ Smart Key	COROLLA/AU RIS			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	Others	0708-,w/ Smart Key	COROLLA/AU RIS			Accessory Gateway			√	√	√		
TOYOTA	Others	0708-,w/ Smart Key	COROLLA/AU RIS			D-Door Motor			√	√	√	√	

TOYOTA	Others	0708-,w/ Smart Key	COROLLA/AU RIS		Sliding Roof			√	√	√	√	
TOYOTA	Others	0708-,w/ Smart Key	COROLLA/AU RIS		Combination Meter			√	√	√	√	
TOYOTA	Others	0708-,w/ Smart Key	COROLLA/AU RIS		Entry&Start			√	√	√	√	
TOYOTA	Others	0708-,w/o Smart Key	COROLLA/AU RIS		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	Others	0708-,w/o Smart Key	COROLLA/AU RIS		Cruise Control			√	√			
TOYOTA	Others	0708-,w/o Smart Key	COROLLA/AU RIS		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、 Linear Valve Offset)
TOYOTA	Others	0708-,w/o Smart Key	COROLLA/AU RIS		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	Others	0708-,w/o Smart Key	COROLLA/AU RIS		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	Others	0708-,w/o Smart Key	COROLLA/AU RIS		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	Others	0708-,w/o Smart Key	COROLLA/AU RIS		Theft Deterrent			*	*	*	*	
TOYOTA	Others	0708-,w/o Smart Key	COROLLA/AU RIS		SRS Airbag			√	√			
TOYOTA	Others	0708-,w/o Smart Key	COROLLA/AU RIS		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	Others	0708-,w/o Smart Key	COROLLA/AU RIS		Accessory Gateway			√	√	√		
TOYOTA	Others	0708-,w/o Smart Key	COROLLA/AU RIS		D-Door Motor			√	√	√	√	
TOYOTA	Others	0708-,w/o Smart Key	COROLLA/AU RIS		Sliding Roof			√	√	√	√	

TOYOTA	Others	0708-,w/o Smart Key	COROLLA/AURIS			Combination Meter			√	√	√	√	
TOYOTA	Others	0708-,S/D	COROLLA			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	Others	0708-,S/D	COROLLA			Cruise Control			√	√			
TOYOTA	Others	0708-,S/D	COROLLA			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	Others	0708-,S/D	COROLLA			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	Others	0708-,S/D	COROLLA			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	Others	0708-,S/D	COROLLA			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	Others	0708-,S/D	COROLLA			SRS Airbag			√	√			
TOYOTA	Others	0708-,S/D	COROLLA			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	Others	0708-,S/D	COROLLA			Accessory Gateway			√	√	√		
TOYOTA	Others	0708-,S/D	COROLLA			D-Door Motor			√	√	√	√	
TOYOTA	Others	0708-,S/D	COROLLA			Sliding Roof			√	√	√	√	
TOYOTA	Others	0708-,S/D	COROLLA			Combination Meter			√	√	√	√	
TOYOTA	Others	0801-0808,w/ Smart Key	COROLLA			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	Others	0801-0808,w/ Smart Key	COROLLA			Cruise Control			√	√			

SERVICE SOLUTIONS

TOYOTA	Others	0801-0808,w/ Smart Key	COROLLA			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	Others	0801-0808,w/ Smart Key	COROLLA			EMPS				√	√	√		1.Torque Sensor Adjustment
TOYOTA	Others	0801-0808,w/ Smart Key	COROLLA			Air Conditioner				√	√	√	√	1.Servomotor Initialization
TOYOTA	Others	0801-0808,w/ Smart Key	COROLLA			Theft Deterrent				*	*	*	*	
TOYOTA	Others	0801-0808,w/ Smart Key	COROLLA			SRS Airbag				√	√			
TOYOTA	Others	0801-0808,w/ Smart Key	COROLLA			Main Body				√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	Others	0801-0808,w/ Smart Key	COROLLA			D-Door Motor				√	√	√	√	
TOYOTA	Others	0801-0808,w/ Smart Key	COROLLA			Sliding Roof				√	√	√	√	
TOYOTA	Others	0801-0808,w/ Smart Key	COROLLA			Combination Meter				√	√	√	√	
TOYOTA	Others	0801-0808,w/ Smart Key	COROLLA			Entry&Start				√	√	√	√	
TOYOTA	Others	0801-0808,w/o Smart Key	COROLLA			Engine and ECT				√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	Others	0801-0808,w/o Smart Key	COROLLA			Cruise Control				√	√			
TOYOTA	Others	0801-0808,w/o Smart Key	COROLLA			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)

SERVICE SOLUTIONS

TOYOTA	Others	0801-0808,w/o Smart Key	COROLLA		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	Others	0801-0808,w/o Smart Key	COROLLA		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	Others	0801-0808,w/o Smart Key	COROLLA		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	Others	0801-0808,w/o Smart Key	COROLLA		Theft Deterrent			*	*	*	*	
TOYOTA	Others	0801-0808,w/o Smart Key	COROLLA		SRS Airbag			√	√			
TOYOTA	Others	0801-0808,w/o Smart Key	COROLLA		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	Others	0801-0808,w/o Smart Key	COROLLA		D-Door Motor			√	√	√	√	
TOYOTA	Others	0801-0808,w/o Smart Key	COROLLA		Sliding Roof			√	√	√	√	
TOYOTA	Others	0801-0808,w/o Smart Key	COROLLA		Combination Meter			√	√	√	√	
TOYOTA	Others	0808-0811,w/ Smart Key	COROLLA		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	Others	0808-0811,w/ Smart Key	COROLLA		Cruise Control			√	√			

SERVICE SOLUTIONS

TOYOTA	Others	0808-0811,w/ Smart Key	COROLLA			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	Others	0808-0811,w/ Smart Key	COROLLA			EMPS				√	√	√		1.Torque Sensor Adjustment
TOYOTA	Others	0808-0811,w/ Smart Key	COROLLA			Air Conditioner				√	√	√	√	1.Servomotor Initialization
TOYOTA	Others	0808-0811,w/ Smart Key	COROLLA			Theft Deterrent				*	*	*	*	
TOYOTA	Others	0808-0811,w/ Smart Key	COROLLA			SRS Airbag				√	√			
TOYOTA	Others	0808-0811,w/ Smart Key	COROLLA			Main Body				√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	Others	0808-0811,w/ Smart Key	COROLLA			D-Door Motor				√	√	√	√	
TOYOTA	Others	0808-0811,w/ Smart Key	COROLLA			Sliding Roof				√	√	√	√	
TOYOTA	Others	0808-0811,w/ Smart Key	COROLLA			Combination Meter				√	√	√	√	
TOYOTA	Others	0808-0811,w/ Smart Key	COROLLA			Entry&Start				√	√	√	√	
TOYOTA	Others	0808-0811,w/o Smart Key	COROLLA			Engine and ECT				√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	Others	0808-0811,w/o Smart Key	COROLLA			Cruise Control				√	√			
TOYOTA	Others	0808-0811,w/o Smart Key	COROLLA			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)

SERVICE SOLUTIONS

TOYOTA	Others	0808-0811,w/o Smart Key	COROLLA		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	Others	0808-0811,w/o Smart Key	COROLLA		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	Others	0808-0811,w/o Smart Key	COROLLA		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	Others	0808-0811,w/o Smart Key	COROLLA		Theft Deterrent			*	*	*	*	
TOYOTA	Others	0808-0811,w/o Smart Key	COROLLA		SRS Airbag			√	√			
TOYOTA	Others	0808-0811,w/o Smart Key	COROLLA		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	Others	0808-0811,w/o Smart Key	COROLLA		D-Door Motor			√	√	√	√	
TOYOTA	Others	0808-0811,w/o Smart Key	COROLLA		Sliding Roof			√	√	√	√	
TOYOTA	Others	0808-0811,w/o Smart Key	COROLLA		Combination Meter			√	√	√	√	
TOYOTA	Others	0811-,w/ Smart Key	COROLLA		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	Others	0811-,w/ Smart Key	COROLLA		Cruise Control			√	√			

SERVICE SOLUTIONS

TOYOTA	Others	0811-,w/ Smart Key	COROLLA			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	Others	0811-,w/ Smart Key	COROLLA			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	Others	0811-,w/ Smart Key	COROLLA			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	Others	0811-,w/ Smart Key	COROLLA			Theft Deterrent			*	*	*	*	
TOYOTA	Others	0811-,w/ Smart Key	COROLLA			SRS Airbag			√	√			
TOYOTA	Others	0811-,w/ Smart Key	COROLLA			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	Others	0811-,w/ Smart Key	COROLLA			D-Door Motor			√	√	√	√	
TOYOTA	Others	0811-,w/ Smart Key	COROLLA			Sliding Roof			√	√	√	√	
TOYOTA	Others	0811-,w/ Smart Key	COROLLA			Combination Meter			√	√	√	√	
TOYOTA	Others	0811-,w/ Smart Key	COROLLA			Entry&Start			√	√	√	√	
TOYOTA	Others	0811-,w/o Smart Key	COROLLA			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	Others	0811-,w/o Smart Key	COROLLA			Cruise Control			√	√			
TOYOTA	Others	0811-,w/o Smart Key	COROLLA			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	Others	0811-,w/o Smart Key	COROLLA			EMPS			√	√	√		1.Torque Sensor Adjustment

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

SERVICE SOLUTIONS

TOYOTA	Others	0811-,w/o Smart Key	COROLLA			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	Others	0811-,w/o Smart Key	COROLLA			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	Others	0811-,w/o Smart Key	COROLLA			Theft Deterrent			*	*	*	*	
TOYOTA	Others	0811-,w/o Smart Key	COROLLA			SRS Airbag			√	√			
TOYOTA	Others	0811-,w/o Smart Key	COROLLA			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	Others	0811-,w/o Smart Key	COROLLA			D-Door Motor			√	√	√	√	
TOYOTA	Others	0811-,w/o Smart Key	COROLLA			Sliding Roof			√	√	√	√	
TOYOTA	Others	0811-,w/o Smart Key	COROLLA			Combination Meter			√	√	√	√	
TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AU RIS			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AU RIS			Cruise Control			√	√			
TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AU RIS			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AU RIS			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AU RIS			Air Conditioner			√	√	√	√	1.Servomotor Initialization

SERVICE SOLUTIONS

TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AURIS		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AURIS		Theft Deterrent			*	*	*	*	
TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AURIS		SRS Airbag			√	√			
TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AURIS		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AURIS		D-Door Motor			√	√	√	√	
TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AURIS		P-Door Motor			√	√	√	√	
TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AURIS		RL-Door Motor			√	√	√	√	
TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AURIS		RR-Door Motor			√	√	√	√	
TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AURIS		Sliding Roof			√	√	√	√	
TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AURIS		Entry&Start			√	√	√	√	
TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AURIS		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AURIS		Cruise Control			√	√			

SERVICE SOLUTIONS

TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AU RIS			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AU RIS			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AU RIS			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AU RIS			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AU RIS			Theft Deterrent			*	*	*	*	
TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AU RIS			SRS Airbag			√	√			
TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AU RIS			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AU RIS			D-Door Motor			√	√	√	√	
TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AU RIS			P-Door Motor			√	√	√	√	
TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AU RIS			RL-Door Motor			√	√	√	√	
TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AU RIS			RR-Door Motor			√	√	√	√	
TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AU RIS			Master Switch			√	√	√		

TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AU RIS			Sliding Roof			√	√	√	√	
TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AU RIS			Entry&Start			√	√	√	√	
TOYOTA	TMUK, TMMT Product	0706-	COROLLA/AU RIS			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	TMUK, TMMT Product	0706-	COROLLA/AU RIS			Cruise Control			√	√			
TOYOTA	TMUK, TMMT Product	0706-	COROLLA/AU RIS			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、 Linear Valve Offset)
TOYOTA	TMUK, TMMT Product	0706-	COROLLA/AU RIS			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	TMUK, TMMT Product	0706-	COROLLA/AU RIS			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	TMUK, TMMT Product	0706-	COROLLA/AU RIS			Theft Deterrent			*	*	*	*	
TOYOTA	TMUK, TMMT Product	0706-	COROLLA/AU RIS			SRS Airbag			√	√			
TOYOTA	TMUK, TMMT Product	0706-	COROLLA/AU RIS			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	TMUK, TMMT Product	0706-	COROLLA/AU RIS			Accessory Gateway			√	√	√		

TOYOTA	TMUK, TMMT Product	0706-	COROLLA/AURIS		D-Door Motor			√	√	√	√	
TOYOTA	TMUK, TMMT Product	0706-	COROLLA/AURIS		Sliding Roof			√	√	√	√	
TOYOTA	TMUK, TMMT Product	0706-	COROLLA/AURIS		Entry&Start			√	√	√	√	
TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AURIS		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AURIS		Cruise Control			√	√			
TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AURIS		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AURIS		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AURIS		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AURIS		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AURIS		Theft Deterrent			*	*	*	*	
TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AURIS		SRS Airbag			√	√			

TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AURIS		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AURIS		D-Door Motor			√	√	√	√	
TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AURIS		P-Door Motor			√	√	√	√	
TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AURIS		RL-Door Motor			√	√	√	√	
TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AURIS		RR-Door Motor			√	√	√	√	
TOYOTA	TMUK, TMMT Product	-0611	COROLLA/AURIS		Sliding Roof			√	√	√	√	
TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AURIS		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AURIS		Cruise Control			√	√			
TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AURIS		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AURIS		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AURIS		Air Conditioner			√	√	√	√	1.Servomotor Initialization

SERVICE SOLUTIONS

TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AURIS		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AURIS		Theft Deterrent			*	*	*	*	
TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AURIS		SRS Airbag			√	√			
TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AURIS		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AURIS		D-Door Motor			√	√	√	√	
TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AURIS		P-Door Motor			√	√	√	√	
TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AURIS		RL-Door Motor			√	√	√	√	
TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AURIS		RR-Door Motor			√	√	√	√	
TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AURIS		Master Switch			√	√	√		
TOYOTA	TMUK, TMMT Product	0611-0706	COROLLA/AURIS		Sliding Roof			√	√	√	√	
TOYOTA	TMUK, TMMT Product	0706-	COROLLA/AURIS		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	TMUK, TMMT Product	0706-	COROLLA/AURIS		Cruise Control			√	√			

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

SERVICE SOLUTIONS

TOYOTA	TMUK, TMMT Product	0706-	COROLLA/AURIS		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	TMUK, TMMT Product	0706-	COROLLA/AURIS		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	TMUK, TMMT Product	0706-	COROLLA/AURIS		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	TMUK, TMMT Product	0706-	COROLLA/AURIS		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	TMUK, TMMT Product	0706-	COROLLA/AURIS		Theft Deterrent			*	*	*	*	
TOYOTA	TMUK, TMMT Product	0706-	COROLLA/AURIS		SRS Airbag			√	√			
TOYOTA	TMUK, TMMT Product	0706-	COROLLA/AURIS		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	TMUK, TMMT Product	0706-	COROLLA/AURIS		Accessory Gateway			√	√	√		
TOYOTA	TMUK, TMMT Product	0706-	COROLLA/AURIS		D-Door Motor			√	√	√	√	
TOYOTA	TMUK, TMMT Product	0706-	COROLLA/AURIS		Sliding Roof			√	√	√	√	
TOYOTA	TSAM Product	All	COROLLA		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode

TOYOTA	TSAM Product	All	COROLLA			Cruise Control			√	√			
TOYOTA	TSAM Product	All	COROLLA			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	TSAM Product	All	COROLLA			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	TSAM Product	All	COROLLA			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	TSAM Product	All	COROLLA			Theft Deterrent			*	*	*	*	
TOYOTA	TSAM Product	All	COROLLA			SRS Airbag			√	√			
TOYOTA	TSAM Product	All	COROLLA			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	TSAM Product	All	COROLLA			Accessory Gateway			√	√	√		
TOYOTA	TSAM Product	All	COROLLA			D-Door Motor			√	√	√	√	
TOYOTA	TSAM Product	All	COROLLA			Entry&Start			√	√	√	√	
TOYOTA	Others	-0611	COROLLA/AU RIS			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	Others	-0611	COROLLA/AU RIS			Cruise Control			√	√			
TOYOTA	Others	-0611	COROLLA/AU RIS			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	Others	-0611	COROLLA/AU RIS			EMPS			√	√	√		1.Torque Sensor Adjustment

TOYOTA	Others	-0611	COROLLA/AU RIS		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	Others	-0611	COROLLA/AU RIS		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	Others	-0611	COROLLA/AU RIS		Theft Deterrent			*	*	*	*	
TOYOTA	Others	-0611	COROLLA/AU RIS		SRS Airbag			√	√			
TOYOTA	Others	-0611	COROLLA/AU RIS		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	Others	-0611	COROLLA/AU RIS		D-Door Motor			√	√	√	√	
TOYOTA	Others	-0611	COROLLA/AU RIS		Sliding Roof			√	√	√	√	
TOYOTA	Others	-0611	COROLLA/AU RIS		Entry&Start			√	√	√	√	
TOYOTA	Others	0611-	COROLLA/AU RIS		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	Others	0611-	COROLLA/AU RIS		Cruise Control			√	√			
TOYOTA	Others	0611-	COROLLA/AU RIS		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	Others	0611-	COROLLA/AU RIS		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	Others	0611-	COROLLA/AU RIS		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	Others	0611-	COROLLA/AU RIS		Theft Deterrent			*	*	*	*	
TOYOTA	Others	0611-	COROLLA/AU RIS		SRS Airbag			√	√			

TOYOTA	Others	0611-	COROLLA/AU RIS		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	Others	0611-	COROLLA/AU RIS		D-Door Motor			√	√	√	√	
TOYOTA	Others	0611-	COROLLA/AU RIS		Sliding Roof			√	√	√	√	
TOYOTA	Others	0611-	COROLLA/AU RIS		Entry&Start			√	√	√	√	
TOYOTA	Others	-0611	COROLLA/AU RIS		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	Others	-0611	COROLLA/AU RIS		Cruise Control			√	√			
TOYOTA	Others	-0611	COROLLA/AU RIS		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、 Linear Valve Offset)
TOYOTA	Others	-0611	COROLLA/AU RIS		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	Others	-0611	COROLLA/AU RIS		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	Others	-0611	COROLLA/AU RIS		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	Others	-0611	COROLLA/AU RIS		Theft Deterrent			*	*	*	*	
TOYOTA	Others	-0611	COROLLA/AU RIS		SRS Airbag			√	√			
TOYOTA	Others	-0611	COROLLA/AU RIS		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	Others	-0611	COROLLA/AU RIS		D-Door Motor			√	√	√	√	
TOYOTA	Others	-0611	COROLLA/AU RIS		Sliding Roof			√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	Others	0611-	COROLLA/AU RIS		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	Others	0611-	COROLLA/AU RIS		Cruise Control			√	√			
TOYOTA	Others	0611-	COROLLA/AU RIS		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、 Linear Valve Offset)
TOYOTA	Others	0611-	COROLLA/AU RIS		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	Others	0611-	COROLLA/AU RIS		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	Others	0611-	COROLLA/AU RIS		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	Others	0611-	COROLLA/AU RIS		Theft Deterrent			*	*	*	*	
TOYOTA	Others	0611-	COROLLA/AU RIS		SRS Airbag			√	√			
TOYOTA	Others	0611-	COROLLA/AU RIS		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	Others	0611-	COROLLA/AU RIS		D-Door Motor			√	√	√	√	
TOYOTA	Others	0611-	COROLLA/AU RIS		Sliding Roof			√	√	√	√	
TOYOTA	TFTM Product	All	COROLLA/AU RIS		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	TFTM Product	All	COROLLA/AU RIS		Cruise Control			√	√			

SERVICE SOLUTIONS

TOYOTA	TFTM Product	All	COROLLA/AURIS			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	TFTM Product	All	COROLLA/AURIS			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	TFTM Product	All	COROLLA/AURIS			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	TFTM Product	All	COROLLA/AURIS			Theft Deterrent			*	*	*	*	
TOYOTA	TFTM Product	All	COROLLA/AURIS			SRS Airbag			√	√			
TOYOTA	TFTM Product	All	COROLLA/AURIS			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	TFTM Product	All	COROLLA/AURIS			D-Door Motor			√	√	√	√	
TOYOTA	TFTM Product	All	COROLLA/AURIS			Sliding Roof			√	√	√	√	
TOYOTA	TFTM Product	All	COROLLA/AURIS			Entry&Start			√	√	√	√	
TOYOTA	All	-0701	RAV4			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	-0701	RAV4			Cruise Control			√	√			
TOYOTA	All	-0701	RAV4			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	-0701	RAV4			Four Wheel Drive			√	√	√	√	
TOYOTA	All	-0701	RAV4			Tire Pressure Monitor			√	√	√		
TOYOTA	All	-0701	RAV4			EMPS			√	√	√		1.Torque Sensor Adjustment

SERVICE SOLUTIONS

TOYOTA	All	-0701	RAV4		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	-0701	RAV4		Theft Deterrent			*	*	*	*	
TOYOTA	All	-0701	RAV4		SRS Airbag			√	√			
TOYOTA	All	-0701	RAV4		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	-0701	RAV4		D-Door Motor			√	√	√	√	
TOYOTA	All	-0701	RAV4		Sliding Roof			√	√	√	√	
TOYOTA	All	-0701	RAV4		Combination Meter			√	√	√	√	
TOYOTA	All	-0701	RAV4		Entry&Start			√	√	√	√	
TOYOTA	All	0701-0808	RAV4		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0701-0808	RAV4		Cruise Control			√	√			
TOYOTA	All	0701-0808	RAV4		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0701-0808	RAV4		Four Wheel Drive			√	√	√	√	
TOYOTA	All	0701-0808	RAV4		Tire Pressure Monitor			√	√	√		
TOYOTA	All	0701-0808	RAV4		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	0701-0808	RAV4		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0701-0808	RAV4		Theft Deterrent			*	*	*	*	
TOYOTA	All	0701-0808	RAV4		SRS Airbag			√	√			
TOYOTA	All	0701-0808	RAV4		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0701-0808	RAV4		Accessory Gateway			√	√	√		
TOYOTA	All	0701-0808	RAV4		D-Door Motor			√	√	√	√	

TOYOTA	All	0701-0808	RAV4		Sliding Roof			√	√	√	√	
TOYOTA	All	0701-0808	RAV4		Combination Meter			√	√	√	√	
TOYOTA	All	0701-0808	RAV4		Entry&Start			√	√	√	√	
TOYOTA	All	0701-0808	RAV4		Occupant Detection			√	√	√		
TOYOTA	All	0808-0812	RAV4		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0808-0812	RAV4		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	0808-0812	RAV4		Cruise Control			√	√			
TOYOTA	All	0808-0812	RAV4		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0808-0812	RAV4		Four Wheel Drive			√	√	√	√	
TOYOTA	All	0808-0812	RAV4		Tire Pressure Monitor			√	√	√		
TOYOTA	All	0808-0812	RAV4		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	0808-0812	RAV4		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0808-0812	RAV4		Theft Deterrent			*	*	*	*	
TOYOTA	All	0808-0812	RAV4		SRS Airbag			√	√			
TOYOTA	All	0808-0812	RAV4		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0808-0812	RAV4		D-Door Motor			√	√	√	√	
TOYOTA	All	0808-0812	RAV4		Sliding Roof			√	√	√	√	
TOYOTA	All	0808-0812	RAV4		Combination Meter			√	√	√	√	
TOYOTA	All	0808-0812	RAV4		Entry&Start			√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	All	0812-,2AD-DPF	RAV4			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0812-,2AD-DPF	RAV4			Cruise Control			√	√			
TOYOTA	All	0812-,2AD-DPF	RAV4			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0812-,2AD-DPF	RAV4			Four Wheel Drive			√	√	√	√	
TOYOTA	All	0812-,2AD-DPF	RAV4			Tire Pressure Monitor			√	√	√		
TOYOTA	All	0812-,2AD-DPF	RAV4			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	0812-,2AD-DPF	RAV4			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0812-,2AD-DPF	RAV4			Theft Deterrent			*	*	*	*	
TOYOTA	All	0812-,2AD-DPF	RAV4			SRS Airbag			√	√			
TOYOTA	All	0812-,2AD-DPF	RAV4			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0812-,2AD-DPF	RAV4			D-Door Motor			√	√	√	√	
TOYOTA	All	0812-,2AD-DPF	RAV4			Sliding Roof			√	√	√	√	
TOYOTA	All	0812-,2AD-DPF	RAV4			Combination Meter			√	√	√	√	
TOYOTA	All	0812-,2AD-DPF	RAV4			Entry&Start			√	√	√	√	
TOYOTA	All	0812-,2AD-DPF	RAV4			Navigation System			√	√			

SERVICE SOLUTIONS

TOYOTA	All	0812-,2AD-FTV	RAV4		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0812-,2AD-FTV	RAV4		Cruise Control			√	√			
TOYOTA	All	0812-,2AD-FTV	RAV4		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0812-,2AD-FTV	RAV4		Four Wheel Drive			√	√	√	√	
TOYOTA	All	0812-,2AD-FTV	RAV4		Tire Pressure Monitor			√	√	√		
TOYOTA	All	0812-,2AD-FTV	RAV4		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	0812-,2AD-FTV	RAV4		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0812-,2AD-FTV	RAV4		Theft Deterrent			*	*	*	*	
TOYOTA	All	0812-,2AD-FTV	RAV4		SRS Airbag			√	√			
TOYOTA	All	0812-,2AD-FTV	RAV4		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0812-,2AD-FTV	RAV4		D-Door Motor			√	√	√	√	
TOYOTA	All	0812-,2AD-FTV	RAV4		Sliding Roof			√	√	√	√	
TOYOTA	All	0812-,2AD-FTV	RAV4		Combination Meter			√	√	√	√	
TOYOTA	All	0812-,2AD-FTV	RAV4		Entry&Start			√	√	√	√	
TOYOTA	All	0812-,2AD-FTV	RAV4		Navigation System			√	√			

SERVICE SOLUTIONS

TOYOTA	All	0812-,2AD-FHV	RAV4			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0812-,2AD-FHV	RAV4			Cruise Control			√	√			
TOYOTA	All	0812-,2AD-FHV	RAV4			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0812-,2AD-FHV	RAV4			Four Wheel Drive			√	√	√	√	
TOYOTA	All	0812-,2AD-FHV	RAV4			Tire Pressure Monitor			√	√	√		
TOYOTA	All	0812-,2AD-FHV	RAV4			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	0812-,2AD-FHV	RAV4			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0812-,2AD-FHV	RAV4			Theft Deterrent			*	*	*	*	
TOYOTA	All	0812-,2AD-FHV	RAV4			SRS Airbag			√	√			
TOYOTA	All	0812-,2AD-FHV	RAV4			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0812-,2AD-FHV	RAV4			D-Door Motor			√	√	√	√	
TOYOTA	All	0812-,2AD-FHV	RAV4			Sliding Roof			√	√	√	√	
TOYOTA	All	0812-,2AD-FHV	RAV4			Combination Meter			√	√	√	√	
TOYOTA	All	0812-,2AD-FHV	RAV4			Entry&Start			√	√	√	√	
TOYOTA	All	0812-,2AD-FHV	RAV4			Navigation System			√	√			

SERVICE SOLUTIONS

TOYOTA	All	All	IS220D		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	IS220D		Cruise Control			√	√			
TOYOTA	All	All	IS220D		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	All	IS220D		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	All	IS220D		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	All	IS220D		SRS Airbag			√	√			
TOYOTA	All	All	IS220D		Body			√	√	√	√	
TOYOTA	All	All	IS220D		Gateway			√	√			
TOYOTA	All	All	IS220D		Body No.3					√	√	
TOYOTA	All	All	IS220D		Body No.5			√	√	√	√	
TOYOTA	All	All	IS220D		Driver Seat					√	√	
TOYOTA	All	All	IS220D		Passenger Seat					√	√	
TOYOTA	All	All	IS220D		Master Switch					√	√	
TOYOTA	All	All	IS220D		Sliding Roof					√	√	
TOYOTA	All	All	IS220D		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	All	IS220D		Combination Meter					√	√	
TOYOTA	All	All	IS220D		Combination Switch					√		
TOYOTA	All	All	IS220D		Clearance Sonar			√	√			
TOYOTA	All	All	IS220D		Rain Sensor					√		
TOYOTA	All	All	IS220D		AFS			√	√	√	√	
TOYOTA	All	All	IS220D		Entry&Start			√	√	√	√	
TOYOTA	All	All	IS220D		Power Source Control			√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	All	All	VELLFIRE		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	VELLFIRE		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	All	VELLFIRE		Cruise Control			√	√			
TOYOTA	All	All	VELLFIRE		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	All	VELLFIRE		Four Wheel Drive			√	√	√	√	
TOYOTA	All	All	VELLFIRE		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	All	VELLFIRE		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	All	VELLFIRE		SRS Airbag			√	√			
TOYOTA	All	All	VELLFIRE		Pre-Crash			√	√	√	√	
TOYOTA	All	All	VELLFIRE		Gateway			√	√			1.Initialization
TOYOTA	All	All	VELLFIRE		Rear Left Door			√	√	√	√	
TOYOTA	All	All	VELLFIRE		Rear Right Door			√	√	√	√	
TOYOTA	All	All	VELLFIRE		Back Door			√	√	√	√	
TOYOTA	All	All	VELLFIRE		D-Door Motor			√	√	√	√	
TOYOTA	All	All	VELLFIRE		P-Door Motor			√	√	√	√	
TOYOTA	All	All	VELLFIRE		RL-Door Motor			√	√	√	√	
TOYOTA	All	All	VELLFIRE		RR-Door Motor			√	√	√	√	
TOYOTA	All	All	VELLFIRE		Driver Seat					√	√	
TOYOTA	All	All	VELLFIRE		Master Switch			√	√	√		
TOYOTA	All	All	VELLFIRE		Sliding Roof			√	√	√	√	
TOYOTA	All	All	VELLFIRE		Combination Meter			√	√	√	√	
TOYOTA	All	All	VELLFIRE		Clearance Sonar			√	√	√	√	

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

SERVICE SOLUTIONS

TOYOTA	All	All	ALPHARD		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	ALPHARD		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	All	ALPHARD		Cruise Control			√	√			
TOYOTA	All	All	ALPHARD		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	All	ALPHARD		Four Wheel Drive			√	√	√	√	
TOYOTA	All	All	ALPHARD		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	All	ALPHARD		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	All	ALPHARD		SRS Airbag			√	√			
TOYOTA	All	All	ALPHARD		Pre-Crash			√	√	√	√	
TOYOTA	All	All	ALPHARD		Gateway			√	√			1.Initialization
TOYOTA	All	All	ALPHARD		Rear Left Door			√	√	√	√	
TOYOTA	All	All	ALPHARD		Rear Right Door			√	√	√	√	
TOYOTA	All	All	ALPHARD		Back Door			√	√	√	√	
TOYOTA	All	All	ALPHARD		D-Door Motor			√	√	√	√	
TOYOTA	All	All	ALPHARD		P-Door Motor			√	√	√	√	
TOYOTA	All	All	ALPHARD		RL-Door Motor			√	√	√	√	
TOYOTA	All	All	ALPHARD		RR-Door Motor			√	√	√	√	
TOYOTA	All	All	ALPHARD		Driver Seat					√	√	
TOYOTA	All	All	ALPHARD		Master Switch			√	√	√		
TOYOTA	All	All	ALPHARD		Sliding Roof			√	√	√	√	
TOYOTA	All	All	ALPHARD		Combination Meter			√	√	√	√	
TOYOTA	All	All	ALPHARD		Clearance Sonar			√	√	√	√	

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

SERVICE SOLUTIONS

TOYOTA	All	0812-	RAV4			Engine and ECT				√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0812-	RAV4			Cruise Control				√	√			
TOYOTA	All	0812-	RAV4			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0812-	RAV4			Four Wheel Drive				√	√	√	√	
TOYOTA	All	0812-	RAV4			EMPS				√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	0812-	RAV4			Air Conditioner				√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0812-	RAV4			Theft Deterrent				*	*	*	*	
TOYOTA	All	0812-	RAV4			SRS Airbag				√	√			
TOYOTA	All	0812-	RAV4			Main Body				√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0812-	RAV4			Accessory Gateway				√	√	√		
TOYOTA	All	0812-	RAV4			D-Door Motor				√	√	√	√	
TOYOTA	All	0812-	RAV4			Sliding Roof				√	√	√	√	
TOYOTA	All	0812-	RAV4			Combination Meter				√	√	√	√	
TOYOTA	All	0812-	RAV4			Entry&Start				√	√	√	√	
TOYOTA	All	0812-	RAV4			Navigation System				√	√			
TOYOTA	All	-0808	RAV4			Engine and ECT				√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	-0808	RAV4			Cruise Control				√	√			

SERVICE SOLUTIONS

TOYOTA	All	-0808	RAV4			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	-0808	RAV4			Tire Pressure Monitor			√	√	√		
TOYOTA	All	-0808	RAV4			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	-0808	RAV4			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	-0808	RAV4			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	-0808	RAV4			SRS Airbag			√	√			
TOYOTA	All	-0808	RAV4			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	-0808	RAV4			D-Door Motor			√	√	√	√	
TOYOTA	All	-0808	RAV4			Sliding Roof			√	√	√	√	
TOYOTA	All	-0808	RAV4			Combination Meter			√	√	√	√	
TOYOTA	All	0808-0812	RAV4			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0808-0812	RAV4			Cruise Control			√	√			
TOYOTA	All	0808-0812	RAV4			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0808-0812	RAV4			Tire Pressure Monitor			√	√	√		
TOYOTA	All	0808-0812	RAV4			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	0808-0812	RAV4			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0808-0812	RAV4			Theft Deterrent			*	*	*	*	
TOYOTA	All	0808-0812	RAV4			SRS Airbag			√	√			

TOYOTA	All	0808-0812	RAV4		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0808-0812	RAV4		D-Door Motor			√	√	√	√	
TOYOTA	All	0808-0812	RAV4		Sliding Roof			√	√	√	√	
TOYOTA	All	0808-0812	RAV4		Combination Meter			√	√	√	√	
TOYOTA	All	0808-0812	RAV4		Entry&Start			√	√	√	√	
TOYOTA	All	0812-	RAV4		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0812-	RAV4		Cruise Control			√	√			
TOYOTA	All	0812-	RAV4		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0812-	RAV4		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	0812-	RAV4		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0812-	RAV4		Theft Deterrent			*	*	*	*	
TOYOTA	All	0812-	RAV4		SRS Airbag			√	√			
TOYOTA	All	0812-	RAV4		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0812-	RAV4		D-Door Motor			√	√	√	√	
TOYOTA	All	0812-	RAV4		Sliding Roof			√	√	√	√	
TOYOTA	All	0812-	RAV4		Combination Meter			√	√	√	√	
TOYOTA	All	0812-	RAV4		Entry&Start			√	√	√	√	
TOYOTA	All	0812-	RAV4		Navigation System			√	√			

SERVICE SOLUTIONS

TOYOTA	All	All	IS300		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	IS300		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	All	IS300		Cruise Control			√	√			
TOYOTA	All	All	IS300		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	All	IS300		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	All	IS300		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	All	IS300		SRS Airbag			√	√			
TOYOTA	All	All	IS300		Body			√	√	√	√	
TOYOTA	All	All	IS300		Gateway			√	√			
TOYOTA	All	All	IS300		Body No.3					√	√	
TOYOTA	All	All	IS300		Body No.5			√	√	√	√	
TOYOTA	All	All	IS300		Driver Seat					√	√	
TOYOTA	All	All	IS300		Passenger Seat					√	√	
TOYOTA	All	All	IS300		Master Switch					√	√	
TOYOTA	All	All	IS300		Sliding Roof					√	√	
TOYOTA	All	All	IS300		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	All	IS300		Combination Meter					√	√	
TOYOTA	All	All	IS300		Combination Switch					√		
TOYOTA	All	All	IS300		Clearance Sonar			√	√			
TOYOTA	All	All	IS300		Rain Sensor					√		
TOYOTA	All	All	IS300		AFS			√	√	√	√	

TOYOTA	All	All	IS300		Entry&Start			√	√	√	√	
TOYOTA	All	All	IS300		Power Source Control			√	√	√	√	
TOYOTA	All	All	IS250		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	IS250		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	All	IS250		Radar Cruise			√	√	√		1.Beam Axis Adjustment
TOYOTA	All	All	IS250		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	All	IS250		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	All	IS250		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	All	IS250		SRS Airbag			√	√			
TOYOTA	All	All	IS250		Pre-Crash			√	√	√	√	
TOYOTA	All	All	IS250		Body			√	√	√	√	
TOYOTA	All	All	IS250		Gateway			√	√			
TOYOTA	All	All	IS250		Body No.3					√	√	
TOYOTA	All	All	IS250		Body No.5			√	√	√	√	
TOYOTA	All	All	IS250		Driver Seat					√	√	
TOYOTA	All	All	IS250		Passenger Seat					√	√	
TOYOTA	All	All	IS250		Master Switch					√	√	
TOYOTA	All	All	IS250		Sliding Roof					√	√	
TOYOTA	All	All	IS250		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	All	IS250		Combination Meter					√	√	
TOYOTA	All	All	IS250		Combination Switch					√		

TOYOTA	All	All	IS250		Clearance Sonar			√	√			
TOYOTA	All	All	IS250		Rain Sensor					√		
TOYOTA	All	All	IS250		AFS			√	√	√	√	
TOYOTA	All	All	IS250		Entry&Start			√	√	√	√	
TOYOTA	All	All	IS250		Power Source Control			√	√	√	√	
TOYOTA	All	-0808	FJ Cruise		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	-0808	FJ Cruise		Cruise Control			√	√			
TOYOTA	All	-0808	FJ Cruise		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	-0808	FJ Cruise		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	-0808	FJ Cruise		SRS Airbag			√	√			
TOYOTA	All	-0808	FJ Cruise		Body			√	√	√	√	
TOYOTA	All	-0808	FJ Cruise		Back Door			√	√	√	√	
TOYOTA	All	-0808	FJ Cruise		Occupant Detection			√	√	√		
TOYOTA	All	0808-	FJ Cruise		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0808-	FJ Cruise		Cruise Control			√	√			
TOYOTA	All	0808-	FJ Cruise		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)

SERVICE SOLUTIONS

TOYOTA	All	0808-	FJ Cruise			Immobiliser				√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0808-	FJ Cruise			SRS Airbag				√	√			
TOYOTA	All	0808-	FJ Cruise			Body				√	√	√	√	
TOYOTA	All	0808-	FJ Cruise			Back Door				√	√	√	√	
TOYOTA	All	All	TUNDRA			Engine and ECT				√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	TUNDRA			Cruise Control				√	√			
TOYOTA	All	All	TUNDRA			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	TUNDRA			Tire Pressure Monitor				√	√	√		
TOYOTA	All	All	TUNDRA			SRS Airbag				√	√			
TOYOTA	All	All	TUNDRA			Body				√	√	√	√	
TOYOTA	All	All	TUNDRA			Driver Door				√	√	√	√	
TOYOTA	All	All	TUNDRA			Passenger Door				√	√	√	√	
TOYOTA	All	All	TUNDRA			Sliding Roof						√	√	
TOYOTA	All	All	TUNDRA			Occupant Detection				√	√	√		
TOYOTA	All	All	SIENNA			Engine and ECT				√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	SIENNA			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)

TOYOTA	All	All	SIENNA			Tire Pressure Monitor			√	√	√		
TOYOTA	All	All	SIENNA			Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	All	SIENNA			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	All	SIENNA			SRS Airbag			√	√			
TOYOTA	All	All	SIENNA			Body			√	√	√	√	
TOYOTA	All	All	SIENNA			Gateway			√	√			
TOYOTA	All	All	SIENNA			Rear Left Door			√	√	√	√	
TOYOTA	All	All	SIENNA			Rear Right Door			√	√	√	√	
TOYOTA	All	All	SIENNA			Back Door			√	√	√	√	
TOYOTA	All	All	SIENNA			Driver Seat					√	√	
TOYOTA	All	All	SIENNA			Combination Meter					√	√	
TOYOTA	All	All	SIENNA			Occupant Detection			√	√	√		
TOYOTA	All	-0706	PREVIA/TAR AGO			Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	-0706	PREVIA/TAR AGO			ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	-0706	PREVIA/TAR AGO			Cruise Control			√	√			
TOYOTA	All	-0706	PREVIA/TAR AGO			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	-0706	PREVIA/TAR AGO			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	-0706	PREVIA/TAR AGO			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	-0706	PREVIA/TAR AGO			SRS Airbag			√	√			

TOYOTA	All	-0706	PREVIA/TAR AGO			Pre-Crash			√	√	√	√	
TOYOTA	All	-0706	PREVIA/TAR AGO			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	-0706	PREVIA/TAR AGO			Gateway			√	√			1.Initialization
TOYOTA	All	-0706	PREVIA/TAR AGO			Rear Left Door			√	√	√	√	
TOYOTA	All	-0706	PREVIA/TAR AGO			Rear Right Door			√	√	√	√	
TOYOTA	All	-0706	PREVIA/TAR AGO			Back Door			√	√	√	√	
TOYOTA	All	-0706	PREVIA/TAR AGO			D-Door Motor			√	√	√	√	
TOYOTA	All	-0706	PREVIA/TAR AGO			P-Door Motor			√	√	√	√	
TOYOTA	All	-0706	PREVIA/TAR AGO			RL-Door Motor			√	√	√	√	
TOYOTA	All	-0706	PREVIA/TAR AGO			RR-Door Motor			√	√	√	√	
TOYOTA	All	-0706	PREVIA/TAR AGO			Master Switch			√	√	√		
TOYOTA	All	-0706	PREVIA/TAR AGO			Sliding Roof			√	√	√	√	
TOYOTA	All	-0706	PREVIA/TAR AGO			Combination Meter			√	√	√	√	
TOYOTA	All	-0706	PREVIA/TAR AGO			AFS			√	√	√	√	1.ECU Information Synchronize
TOYOTA	All	-0706	PREVIA/TAR AGO			Entry&Start			√	√	√	√	
TOYOTA	All	0706-0812	PREVIA/TAR AGO			Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode

TOYOTA	All	0706-0812	PREVIA/TAR AGO			ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	0706-0812	PREVIA/TAR AGO			Cruise Control			√	√			
TOYOTA	All	0706-0812	PREVIA/TAR AGO			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、 Linear Valve Offset)
TOYOTA	All	0706-0812	PREVIA/TAR AGO			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	0706-0812	PREVIA/TAR AGO			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0706-0812	PREVIA/TAR AGO			SRS Airbag			√	√			
TOYOTA	All	0706-0812	PREVIA/TAR AGO			Pre-Crash			√	√	√	√	
TOYOTA	All	0706-0812	PREVIA/TAR AGO			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0706-0812	PREVIA/TAR AGO			Gateway			√	√			1.Initialization
TOYOTA	All	0706-0812	PREVIA/TAR AGO			Rear Left Door			√	√	√	√	
TOYOTA	All	0706-0812	PREVIA/TAR AGO			Rear Right Door			√	√	√	√	
TOYOTA	All	0706-0812	PREVIA/TAR AGO			Back Door			√	√	√	√	
TOYOTA	All	0706-0812	PREVIA/TAR AGO			D-Door Motor			√	√	√	√	
TOYOTA	All	0706-0812	PREVIA/TAR AGO			P-Door Motor			√	√	√	√	
TOYOTA	All	0706-0812	PREVIA/TAR AGO			RL-Door Motor			√	√	√	√	
TOYOTA	All	0706-0812	PREVIA/TAR AGO			RR-Door Motor			√	√	√	√	
TOYOTA	All	0706-0812	PREVIA/TAR AGO			Master Switch			√	√	√		

TOYOTA	All	0706-0812	PREVIA/TAR AGO		Sliding Roof			√	√	√	√	
TOYOTA	All	0706-0812	PREVIA/TAR AGO		Combination Meter			√	√	√	√	
TOYOTA	All	0706-0812	PREVIA/TAR AGO		AFS			√	√	√	√	1.ECU Information Synchronize
TOYOTA	All	0706-0812	PREVIA/TAR AGO		Entry&Start			√	√	√	√	
TOYOTA	All	0812-	PREVIA/TAR AGO		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0812-	PREVIA/TAR AGO		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	0812-	PREVIA/TAR AGO		Cruise Control			√	√			
TOYOTA	All	0812-	PREVIA/TAR AGO		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、 Linear Valve Offset)
TOYOTA	All	0812-	PREVIA/TAR AGO		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	0812-	PREVIA/TAR AGO		Parking Assist Monitor System			√	√	√		
TOYOTA	All	0812-	PREVIA/TAR AGO		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0812-	PREVIA/TAR AGO		SRS Airbag			√	√			
TOYOTA	All	0812-	PREVIA/TAR AGO		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0812-	PREVIA/TAR AGO		Gateway			√	√			1.Initialization
TOYOTA	All	0812-	PREVIA/TAR AGO		Rear Left Door			√	√	√	√	

TOYOTA	All	0812-	PREVIA/TAR AGO			Rear Right Door			√	√	√	√	
TOYOTA	All	0812-	PREVIA/TAR AGO			Back Door			√	√	√	√	
TOYOTA	All	0812-	PREVIA/TAR AGO			D-Door Motor			√	√	√	√	
TOYOTA	All	0812-	PREVIA/TAR AGO			P-Door Motor			√	√	√	√	
TOYOTA	All	0812-	PREVIA/TAR AGO			RL-Door Motor			√	√	√	√	
TOYOTA	All	0812-	PREVIA/TAR AGO			RR-Door Motor			√	√	√	√	
TOYOTA	All	0812-	PREVIA/TAR AGO			Master Switch			√	√	√		
TOYOTA	All	0812-	PREVIA/TAR AGO			Sliding Roof			√	√	√	√	
TOYOTA	All	0812-	PREVIA/TAR AGO			Combination Meter			√	√	√	√	
TOYOTA	All	0812-	PREVIA/TAR AGO			AFS			√	√	√	√	1.ECU Information Synchronize
TOYOTA	All	0812-	PREVIA/TAR AGO			Entry&Start			√	√	√	√	
TOYOTA	All	-0702	RX350			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	-0702	RX350			Cruise Control			√	√			
TOYOTA	All	-0702	RX350			Air suspension			√	√	√	√	
TOYOTA	All	-0702	RX350			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	-0702	RX350			Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization

SERVICE SOLUTIONS

TOYOTA	All	-0702	RX350		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	-0702	RX350		SRS Airbag			√	√			
TOYOTA	All	-0702	RX350		Body			√	√	√	√	
TOYOTA	All	-0702	RX350		Back Door			√	√	√	√	
TOYOTA	All	-0702	RX350		Driver Seat					√	√	
TOYOTA	All	-0702	RX350		Master Switch					√	√	
TOYOTA	All	-0702	RX350		Sliding Roof					√	√	
TOYOTA	All	-0702	RX350		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	-0702	RX350		Combination Meter					√	√	
TOYOTA	All	-0702	RX350		Rain Sensor					√		
TOYOTA	All	-0702	RX350		Wiper					√	√	
TOYOTA	All	-0702	RX350		AFS			√	√	√	√	
TOYOTA	All	0702-	RX350		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0702-	RX350		Cruise Control			√	√			
TOYOTA	All	0702-	RX350		Air suspension			√	√	√	√	
TOYOTA	All	0702-	RX350		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0702-	RX350		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	0702-	RX350		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0702-	RX350		SRS Airbag			√	√			
TOYOTA	All	0702-	RX350		Body			√	√	√	√	
TOYOTA	All	0702-	RX350		Back Door			√	√	√	√	

TOYOTA	All	0702-	RX350		Driver Seat					√	√	
TOYOTA	All	0702-	RX350		Master Switch					√	√	
TOYOTA	All	0702-	RX350		Sliding Roof					√	√	
TOYOTA	All	0702-	RX350		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	0702-	RX350		Combination Meter					√	√	
TOYOTA	All	0702-	RX350		Rain Sensor					√		
TOYOTA	All	0702-	RX350		Wiper					√	√	
TOYOTA	All	0702-	RX350		AFS			√	√	√	√	
TOYOTA	All	All	HIGHLANDER		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	HIGHLANDER		Cruise Control			√	√			
TOYOTA	All	All	HIGHLANDER		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	All	HIGHLANDER		Four Wheel Drive			√	√	√	√	
TOYOTA	All	All	HIGHLANDER		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	All	HIGHLANDER		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	All	HIGHLANDER		SRS Airbag			√	√			
TOYOTA	All	All	HIGHLANDER		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	All	HIGHLANDER		Back Door			√	√	√	√	
TOYOTA	All	All	HIGHLANDER		D-Door Motor			√	√	√	√	
TOYOTA	All	All	HIGHLANDER		P-Door Motor			√	√	√	√	
TOYOTA	All	All	HIGHLANDER		RL-Door Motor			√	√	√	√	
TOYOTA	All	All	HIGHLANDER		RR-Door Motor			√	√	√	√	
TOYOTA	All	All	HIGHLANDER		Sliding Roof			√	√	√	√	

TOYOTA	All	All	HIGHLANDE			Combination Meter			√	√	√	√	
TOYOTA	All	All	HIGHLANDE			Entry&Start			√	√	√	√	
TOYOTA	All	All	HIGHLANDE			Occupant Detection			√	√	√		
TOYOTA	Taiwan, Korea or Brazil	All	ES350			Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	Taiwan, Korea or Brazil	All	ES350			ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	Taiwan, Korea or Brazil	All	ES350			Radar Cruise			√	√	√		1.Beam Axis Adjustment
TOYOTA	Taiwan, Korea or Brazil	All	ES350			E-ACM			*	*	*	*	
TOYOTA	Taiwan, Korea or Brazil	All	ES350			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	Taiwan, Korea or Brazil	All	ES350			Tire Pressure Monitor			√	√	√		
TOYOTA	Taiwan, Korea or Brazil	All	ES350			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	Taiwan, Korea or Brazil	All	ES350			SRS Airbag			√	√			

TOYOTA	Taiwan, Korea or Brazil	All	ES350			Pre-Crash			√	√	√	√	
TOYOTA	Taiwan, Korea or Brazil	All	ES350			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	Taiwan, Korea or Brazil	All	ES350			Gateway			√	√			1.Initialization
TOYOTA	Taiwan, Korea or Brazil	All	ES350			D-Door Motor			√	√	√	√	
TOYOTA	Taiwan, Korea or Brazil	All	ES350			P-Door Motor			√	√	√	√	
TOYOTA	Taiwan, Korea or Brazil	All	ES350			RL-Door Motor			√	√	√	√	
TOYOTA	Taiwan, Korea or Brazil	All	ES350			RR-Door Motor			√	√	√	√	
TOYOTA	Taiwan, Korea or Brazil	All	ES350			Driver Seat					√	√	
TOYOTA	Taiwan, Korea or Brazil	All	ES350			Passenger Seat			*	*	*	*	

TOYOTA	Taiwan, Korea or Brazil	All	ES350			Master Switch			√	√	√		
TOYOTA	Taiwan, Korea or Brazil	All	ES350			Sliding Roof			√	√	√	√	
TOYOTA	Taiwan, Korea or Brazil	All	ES350			Tilt&Telescopic			√	√	√	√	
TOYOTA	Taiwan, Korea or Brazil	All	ES350			Combination Meter			√	√	√	√	
TOYOTA	Taiwan, Korea or Brazil	All	ES350			Mirror					√	√	
TOYOTA	Taiwan, Korea or Brazil	All	ES350			Clearance Sonar			√	√	√	√	
TOYOTA	Taiwan, Korea or Brazil	All	ES350			AFS			√	√	√	√	1.ECU Information Synchronize
TOYOTA	Taiwan, Korea or Brazil	All	ES350			Entry&Start			√	√	√	√	
TOYOTA	Taiwan, Korea or Brazil	All	ES350			Occupant Detection			√	√	√		

SERVICE SOLUTIONS

TOYOTA	Others	All	ES350		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	Others	All	ES350		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	Others	All	ES350		Cruise Control			√	√			
TOYOTA	Others	All	ES350		E-ACM			*	*	*	*	
TOYOTA	Others	All	ES350		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	Others	All	ES350		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	Others	All	ES350		SRS Airbag			√	√			
TOYOTA	Others	All	ES350		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	Others	All	ES350		Gateway			√	√			1.Initialization
TOYOTA	Others	All	ES350		D-Door Motor			√	√	√	√	
TOYOTA	Others	All	ES350		P-Door Motor			√	√	√	√	
TOYOTA	Others	All	ES350		RL-Door Motor			√	√	√	√	
TOYOTA	Others	All	ES350		RR-Door Motor			√	√	√	√	
TOYOTA	Others	All	ES350		Driver Seat					√	√	
TOYOTA	Others	All	ES350		Passenger Seat			*	*	*	*	
TOYOTA	Others	All	ES350		Master Switch			√	√	√		
TOYOTA	Others	All	ES350		Sliding Roof			√	√	√	√	
TOYOTA	Others	All	ES350		Tilt&Telescopic			√	√	√	√	
TOYOTA	Others	All	ES350		Combination Meter			√	√	√	√	
TOYOTA	Others	All	ES350		Mirror					√	√	

TOYOTA	Others	All	ES350		Clearance Sonar			√	√	√	√	
TOYOTA	Others	All	ES350		AFS			√	√	√	√	1.ECU Information Synchronize
TOYOTA	Others	All	ES350		Entry&Start			√	√	√	√	
TOYOTA	All	0605-/Others	CAMRY		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0605-/Others	CAMRY		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	0605-/Others	CAMRY		Radar Cruise			√	√	√		1.Beam Axis Adjustment
TOYOTA	All	0605-/Others	CAMRY		E-ACM			*	*	*	*	
TOYOTA	All	0605-/Others	CAMRY		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0605-/Others	CAMRY		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0605-/Others	CAMRY		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0605-/Others	CAMRY		SRS Airbag			√	√			
TOYOTA	All	0605-/Others	CAMRY		Pre-Crash			√	√	√	√	
TOYOTA	All	0605-/Others	CAMRY		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0605-/Others	CAMRY		Gateway			√	√			1.Initialization
TOYOTA	All	0605-/Others	CAMRY		D-Door Motor			√	√	√	√	
TOYOTA	All	0605-/Others	CAMRY		Driver Seat					√	√	
TOYOTA	All	0605-/Others	CAMRY		Master Switch			√	√	√		
TOYOTA	All	0605-/Others	CAMRY		Sliding Roof			√	√	√	√	
TOYOTA	All	0605-/Others	CAMRY		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	0605-/Others	CAMRY		Combination Meter			√	√	√	√	

TOYOTA	All	0605-/Others	CAMRY		Mirror				√	√		
TOYOTA	All	0605-/Others	CAMRY		AFS			√	√	√	√	1.ECU Information Synchronize
TOYOTA	All	0605-/Others	CAMRY		Entry&Start			√	√	√	√	
TOYOTA	All	-0605	CAMRY		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	-0605	CAMRY		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	-0605	CAMRY		Cruise Control			√	√			
TOYOTA	All	-0605	CAMRY		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	-0605	CAMRY		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	-0605	CAMRY		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	-0605	CAMRY		SRS Airbag			√	√			
TOYOTA	All	-0605	CAMRY		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	-0605	CAMRY		D-Door Motor			√	√	√	√	
TOYOTA	All	-0605	CAMRY		Master Switch			√	√	√		
TOYOTA	All	-0605	CAMRY		Sliding Roof			√	√	√	√	
TOYOTA	All	-0605	CAMRY		Combination Meter			√	√	√	√	
TOYOTA	All	-0605	CAMRY		Entry&Start			√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	All	0605-/TMCA Product	CAMRY		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0605-/TMCA Product	CAMRY		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	0605-/TMCA Product	CAMRY		Radar Cruise			√	√	√		1.Beam Axis Adjustment
TOYOTA	All	0605-/TMCA Product	CAMRY		E-ACM			*	*	*	*	
TOYOTA	All	0605-/TMCA Product	CAMRY		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0605-/TMCA Product	CAMRY		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0605-/TMCA Product	CAMRY		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0605-/TMCA Product	CAMRY		SRS Airbag			√	√			
TOYOTA	All	0605-/TMCA Product	CAMRY		Pre-Crash			√	√	√	√	
TOYOTA	All	0605-/TMCA Product	CAMRY		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0605-/TMCA Product	CAMRY		Gateway			√	√			1.Initialization
TOYOTA	All	0605-/TMCA Product	CAMRY		D-Door Motor			√	√	√	√	
TOYOTA	All	0605-/TMCA Product	CAMRY		Driver Seat					√	√	
TOYOTA	All	0605-/TMCA Product	CAMRY		Master Switch			√	√	√		
TOYOTA	All	0605-/TMCA Product	CAMRY		Sliding Roof			√	√	√	√	

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

TOYOTA	All	0605-/TMCA Product	CAMRY			Tilt&Telescopic			√	√	√	√	
TOYOTA	All	0605-/TMCA Product	CAMRY			Combination Meter			√	√	√	√	
TOYOTA	All	0605-/TMCA Product	CAMRY			Mirror					√	√	
TOYOTA	All	0605-/TMCA Product	CAMRY			AFS			√	√	√	√	1.ECU Information Synchronize
TOYOTA	All	0605-/TMCA Product	CAMRY			Entry&Start			√	√	√	√	
TOYOTA	All	0605-/TMCA Product	CAMRY			Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0605-/TMCA Product	CAMRY			ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	0605-/TMCA Product	CAMRY			Cruise Control			√	√			
TOYOTA	All	0605-/TMCA Product	CAMRY			E-ACM			*	*	*	*	
TOYOTA	All	0605-/TMCA Product	CAMRY			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0605-/TMCA Product	CAMRY			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	0605-/TMCA Product	CAMRY			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0605-/TMCA Product	CAMRY			SRS Airbag			√	√			
TOYOTA	All	0605-/TMCA Product	CAMRY			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0605-/TMCA Product	CAMRY			Gateway			√	√			1.Initialization

TOYOTA	All	0605-/TMCA Product	CAMRY			D-Door Motor			√	√	√	√	
TOYOTA	All	0605-/TMCA Product	CAMRY			Driver Seat					√	√	
TOYOTA	All	0605-/TMCA Product	CAMRY			Master Switch			√	√	√		
TOYOTA	All	0605-/TMCA Product	CAMRY			Sliding Roof			√	√	√	√	
TOYOTA	All	0605-/TMCA Product	CAMRY			Tilt&Telescopic			√	√	√	√	
TOYOTA	All	0605-/TMCA Product	CAMRY			Combination Meter			√	√	√	√	
TOYOTA	All	0605-/TMCA Product	CAMRY			Mirror					√	√	
TOYOTA	All	0605-/TMCA Product	CAMRY			AFS			√	√	√	√	1.ECU Information Synchronize
TOYOTA	All	0605-/TMCA Product	CAMRY			Entry&Start			√	√	√	√	
TOYOTA	All	0710-/TMT, TMV, KM	CAMRY			Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0710-/TMT, TMV, KM	CAMRY			ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	0710-/TMT, TMV, KM	CAMRY			Radar Cruise			√	√	√		1.Beam Axis Adjustment
TOYOTA	All	0710-/TMT, TMV, KM	CAMRY			E-ACM			*	*	*	*	
TOYOTA	All	0710-/TMT, TMV, KM	CAMRY			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0710-/TMT, TMV, KM	CAMRY			Air Conditioner			√	√	√	√	1.Servomotor Initialization

SERVICE SOLUTIONS

TOYOTA	All	0710- /TMT, TMV, KM	CAMRY			Immobiliser				√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0710- /TMT, TMV, KM	CAMRY			SRS Airbag				√	√			
TOYOTA	All	0710- /TMT, TMV, KM	CAMRY			Pre-Crash				√	√	√	√	
TOYOTA	All	0710- /TMT, TMV, KM	CAMRY			Main Body				√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	0710- /TMT, TMV, KM	CAMRY			Gateway				√	√			1.Initialization
TOYOTA	All	0710- /TMT, TMV, KM	CAMRY			D-Door Motor				√	√	√	√	
TOYOTA	All	0710- /TMT, TMV, KM	CAMRY			P-Door Motor				√	√	√	√	
TOYOTA	All	0710- /TMT, TMV, KM	CAMRY			RL-Door Motor				√	√	√	√	
TOYOTA	All	0710- /TMT, TMV, KM	CAMRY			RR-Door Motor				√	√	√	√	
TOYOTA	All	0710- /TMT, TMV, KM	CAMRY			Driver Seat						√	√	
TOYOTA	All	0710- /TMT, TMV, KM	CAMRY			Master Switch				√	√	√		
TOYOTA	All	0710- /TMT, TMV, KM	CAMRY			Sliding Roof				√	√	√	√	
TOYOTA	All	0710- /TMT, TMV, KM	CAMRY			Tilt&Telescopic				√	√	√	√	
TOYOTA	All	0710- /TMT, TMV, KM	CAMRY			Combination Meter				√	√	√	√	
TOYOTA	All	0710- /TMT, TMV, KM	CAMRY			Mirror						√	√	
TOYOTA	All	0710- /TMT, TMV, KM	CAMRY			AFS				√	√	√	√	1.ECU Information Synchronize
TOYOTA	All	0710- /TMT, TMV, KM	CAMRY			Entry&Start				√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	All	-0708	AVALON			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	-0708	AVALON			Cruise Control			√	√			
TOYOTA	All	-0708	AVALON			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	-0708	AVALON			Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	-0708	AVALON			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	-0708	AVALON			SRS Airbag			√	√			
TOYOTA	All	-0708	AVALON			Body			√	√	√	√	
TOYOTA	All	-0708	AVALON			Gateway			√	√			
TOYOTA	All	-0708	AVALON			Body No.5			√	√	√	√	
TOYOTA	All	-0708	AVALON			Driver Seat					√	√	
TOYOTA	All	-0708	AVALON			Combination Meter					√	√	
TOYOTA	All	-0708	AVALON			Combination Switch					√		
TOYOTA	All	-0708	AVALON			Rain Sensor					√		
TOYOTA	All	-0708	AVALON			Power Source Control			√	√	√	√	
TOYOTA	All	-0708	AVALON			Occupant Detection			√	√	√		
TOYOTA	All	0708-	AVALON			Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0708-	AVALON			ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset

TOYOTA	All	0708-	AVALON			Cruise Control			√	√			
TOYOTA	All	0708-	AVALON			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0708-	AVALON			Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	0708-	AVALON			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0708-	AVALON			SRS Airbag			√	√			
TOYOTA	All	0708-	AVALON			Body			√	√	√	√	
TOYOTA	All	0708-	AVALON			Gateway			√	√			
TOYOTA	All	0708-	AVALON			Body No.5			√	√	√	√	
TOYOTA	All	0708-	AVALON			Driver Seat					√	√	
TOYOTA	All	0708-	AVALON			Combination Meter					√	√	
TOYOTA	All	0708-	AVALON			Combination Switch					√		
TOYOTA	All	0708-	AVALON			Rain Sensor					√		
TOYOTA	All	0708-	AVALON			Power Source Control			√	√	√	√	
TOYOTA	All	0708-	AVALON			Occupant Detection			√	√	√		
TOYOTA	All	-0709	GS450H			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	-0709	GS450H			Hybrid Control			√	√	√	√	1.VIN Read
TOYOTA	All	-0709	GS450H			EMS			√	√	√	√	
TOYOTA	All	-0709	GS450H			Stabilizer			√	√	√		
TOYOTA	All	-0709	GS450H			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)

TOYOTA	All	-0709	GS450H			Tire Pressure Monitor			√	√	√		
TOYOTA	All	-0709	GS450H			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	-0709	GS450H			VGRS			√	√	√		
TOYOTA	All	-0709	GS450H			Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	-0709	GS450H			SRS Airbag			√	√			
TOYOTA	All	-0709	GS450H			Pre-Crash			√	√	√	√	
TOYOTA	All	-0709	GS450H			Body			√	√	√	√	
TOYOTA	All	-0709	GS450H			Gateway			√	√			
TOYOTA	All	-0709	GS450H			Body No.3					√	√	
TOYOTA	All	-0709	GS450H			Body No.4			√	√	√	√	
TOYOTA	All	-0709	GS450H			Body No.5			√	√	√	√	
TOYOTA	All	-0709	GS450H			Driver Door			√	√	√	√	
TOYOTA	All	-0709	GS450H			Passenger Door			√	√	√	√	
TOYOTA	All	-0709	GS450H			Rear Left Door			√	√	√	√	
TOYOTA	All	-0709	GS450H			Rear Right Door			√	√	√	√	
TOYOTA	All	-0709	GS450H			Driver Seat					√	√	
TOYOTA	All	-0709	GS450H			Passenger Seat					√	√	
TOYOTA	All	-0709	GS450H			Master Switch					√	√	
TOYOTA	All	-0709	GS450H			D-SEAT SW					√		
TOYOTA	All	-0709	GS450H			Sliding Roof					√	√	
TOYOTA	All	-0709	GS450H			Tilt&Telescopic			√	√	√	√	
TOYOTA	All	-0709	GS450H			Combination Meter					√	√	
TOYOTA	All	-0709	GS450H			Combination Switch					√		
TOYOTA	All	-0709	GS450H			Clearance Sonar			√	√			
TOYOTA	All	-0709	GS450H			Rain Sensor					√		
TOYOTA	All	-0709	GS450H			AFS			√	√	√	√	
TOYOTA	All	-0709	GS450H			Entry&Start			√	√	√	√	
TOYOTA	All	-0709	GS450H			Power Source Control			√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	All	0709-	GS450H		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0709-	GS450H		Hybrid Control			√	√	√	√	1.VIN Read
TOYOTA	All	0709-	GS450H		EMS			√	√	√	√	
TOYOTA	All	0709-	GS450H		Stabilizer			√	√	√		
TOYOTA	All	0709-	GS450H		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0709-	GS450H		Tire Pressure Monitor			√	√	√		
TOYOTA	All	0709-	GS450H		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	0709-	GS450H		VGRS			√	√	√		
TOYOTA	All	0709-	GS450H		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	0709-	GS450H		SRS Airbag			√	√			
TOYOTA	All	0709-	GS450H		Pre-Crash			√	√	√	√	
TOYOTA	All	0709-	GS450H		Body			√	√	√	√	
TOYOTA	All	0709-	GS450H		Gateway			√	√			
TOYOTA	All	0709-	GS450H		Body No.3					√	√	
TOYOTA	All	0709-	GS450H		Body No.4			√	√	√	√	
TOYOTA	All	0709-	GS450H		Body No.5			√	√	√	√	
TOYOTA	All	0709-	GS450H		Driver Door			√	√	√	√	
TOYOTA	All	0709-	GS450H		Passenger Door			√	√	√	√	
TOYOTA	All	0709-	GS450H		Rear Left Door			√	√	√	√	
TOYOTA	All	0709-	GS450H		Rear Right Door			√	√	√	√	
TOYOTA	All	0709-	GS450H		Driver Seat					√	√	
TOYOTA	All	0709-	GS450H		Passenger Seat					√	√	

TOYOTA	All	0709-	GS450H		Master Switch					√	√	
TOYOTA	All	0709-	GS450H		D-SEAT SW					√		
TOYOTA	All	0709-	GS450H		Sliding Roof					√	√	
TOYOTA	All	0709-	GS450H		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	0709-	GS450H		Combination Meter					√	√	
TOYOTA	All	0709-	GS450H		Combination Switch					√		
TOYOTA	All	0709-	GS450H		Clearance Sonar			√	√			
TOYOTA	All	0709-	GS450H		Rain Sensor					√		
TOYOTA	All	0709-	GS450H		AFS			√	√	√	√	
TOYOTA	All	0709-	GS450H		Entry&Start			√	√	√	√	
TOYOTA	All	0709-	GS450H		Power Source Control			√	√	√	√	
TOYOTA	All	-0610	HIACE		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.DPF Deterioration Record Clear 5.A/F Sensor Compensation Reset 6.Check Mode 7.Crank Time Compensation Reset 8.Catalyst Record Clear 9.Supply Pump Initialization 10.Vehicle Mileage Write 11.Injector Compensation 12.Pilot Quantity Learning Values Reset
TOYOTA	All	-0610	HIACE		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	-0610	HIACE		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	-0610	HIACE		SRS Airbag			√	√			

SERVICE SOLUTIONS

TOYOTA	All	0610-	HIACE		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.DPF Deterioration Record Clear 5.A/F Sensor Compensation Reset 6.Check Mode 7.Crank Time Compensation Reset 8.Catalyst Record Clear 9.Supply Pump Initialization 10.Vehicle Mileage Write 11.Injector Compensation 12.Pilot Quantity Learning Values Reset
TOYOTA	All	0610-	HIACE		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	0610-	HIACE		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0610-	HIACE		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0610-	HIACE		SRS Airbag			√	√			
TOYOTA	All	All	YARIS/ECHO		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	YARIS/ECHO		Multi-Mode M/T			√	√	√		
TOYOTA	All	All	YARIS/ECHO		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	All	YARIS/ECHO		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	All	YARIS/ECHO		Air Conditioner			√	√	√	√	1.Servomotor Initialization

TOYOTA	All	All	YARIS/ECHO			Theft Deterrent			*	*	*	*	
TOYOTA	All	All	YARIS/ECHO			SRS Airbag			√	√			
TOYOTA	All	All	YARIS/ECHO			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	All	YARIS/ECHO			Combination Meter			√	√	√	√	
TOYOTA	All	All	YARIS/ECHO			Entry&Start			√	√	√	√	
TOYOTA	All	All	VITZ			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	VITZ			Multi-Mode M/T			√	√	√		
TOYOTA	All	All	VITZ			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	All	VITZ			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	All	VITZ			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	All	VITZ			Theft Deterrent			*	*	*	*	
TOYOTA	All	All	VITZ			SRS Airbag			√	√			
TOYOTA	All	All	VITZ			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	All	VITZ			Combination Meter			√	√	√	√	
TOYOTA	All	All	VITZ			Entry&Start			√	√	√	√	
TOYOTA	All	All	BELTA			Entry&Start			√	√	√	√	
TOYOTA	All	All	BELTA			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode

SERVICE SOLUTIONS

TOYOTA	All	All	BELTA			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	BELTA			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	All	BELTA			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	All	BELTA			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	All	BELTA			SRS Airbag			√	√			
TOYOTA	All	All	BELTA			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	All	BELTA			Combination Meter			√	√	√	√	
TOYOTA	All	All	RX400H			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	RX400H			Hybrid Control			√	√	√	√	1.VIN Read
TOYOTA	All	All	RX400H			Cruise Control			√	√	√		
TOYOTA	All	All	RX400H			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	RX400H			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	All	RX400H			Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	All	RX400H			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	All	RX400H			SRS Airbag			√	√			
TOYOTA	All	All	RX400H			Body			√	√	√	√	
TOYOTA	All	All	RX400H			Gateway			√	√			

TOYOTA	All	All	RX400H		Back Door			√	√	√	√	
TOYOTA	All	All	RX400H		Driver Seat					√	√	
TOYOTA	All	All	RX400H		Master Switch					√	√	
TOYOTA	All	All	RX400H		Sliding Roof					√	√	
TOYOTA	All	All	RX400H		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	All	RX400H		Combination Meter					√	√	
TOYOTA	All	All	RX400H		Rain Sensor					√		
TOYOTA	All	All	RX400H		Wiper					√	√	
TOYOTA	All	All	RX400H		AFS			√	√	√	√	
TOYOTA	All	All	HARIER HYBRID		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	HARIER HYBRID		Hybrid Control			√	√	√	√	1.VIN Read
TOYOTA	All	All	HARIER HYBRID		Cruise Control			√	√	√		
TOYOTA	All	All	HARIER HYBRID		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	All	HARIER HYBRID		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	All	HARIER HYBRID		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	All	HARIER HYBRID		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	All	HARIER HYBRID		SRS Airbag			√	√			
TOYOTA	All	All	HARIER HYBRID		Body			√	√	√	√	
TOYOTA	All	All	HARIER HYBRID		Gateway			√	√			

TOYOTA	All	All	HARRIER HYBRID		Back Door			√	√	√	√	
TOYOTA	All	All	HARRIER HYBRID		Driver Seat					√	√	
TOYOTA	All	All	HARRIER HYBRID		Master Switch					√	√	
TOYOTA	All	All	HARRIER HYBRID		Sliding Roof					√	√	
TOYOTA	All	All	HARRIER HYBRID		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	All	HARRIER HYBRID		Combination Meter					√	√	
TOYOTA	All	All	HARRIER HYBRID		Rain Sensor					√		
TOYOTA	All	All	HARRIER HYBRID		Wiper					√	√	
TOYOTA	All	All	HARRIER HYBRID		AFS			√	√	√	√	
TOYOTA	All	-0610	HIACE		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	-0610	HIACE		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	-0610	HIACE		SRS Airbag			√	√			
TOYOTA	All	0610-	HIACE		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode

SERVICE SOLUTIONS

TOYOTA	All	0610-	HIACE			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	0610-	HIACE			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	0610-	HIACE			SRS Airbag			√	√			
TOYOTA	All	All	TUNDRA			Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	TUNDRA			ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	All	TUNDRA			Cruise Control			√	√			
TOYOTA	All	All	TUNDRA			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	TUNDRA			Tire Pressure Monitor			√	√	√		
TOYOTA	All	All	TUNDRA			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	All	TUNDRA			Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	All	TUNDRA			SRS Airbag			√	√			
TOYOTA	All	All	TUNDRA			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	All	TUNDRA			Driver Seat					√	√	
TOYOTA	All	All	TUNDRA			Sliding Roof			√	√	√	√	
TOYOTA	All	All	TUNDRA			Tilt&Telescopic			√	√	√	√	
TOYOTA	All	All	TUNDRA			Combination Meter			√	√	√	√	
TOYOTA	All	All	TUNDRA			Mirror					√	√	

TOYOTA	All	All	TUNDRA		Occupant Detection			√	√	√		
TOYOTA	All	All	LX570		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	LX570		Radar Cruise			√	√	√		1.Beam Axis Adjustment
TOYOTA	All	All	LX570		AHC			√	√	√	√	
TOYOTA	All	All	LX570		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	All	LX570		VGRS			√	√	√		
TOYOTA	All	All	LX570		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	All	LX570		SRS Airbag			√	√	√		
TOYOTA	All	All	LX570		Pre-Crash			√	√	√	√	
TOYOTA	All	All	LX570		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	All	LX570		Gateway			√	√			1.Initialization
TOYOTA	All	All	LX570		Accessory Gateway			√	√	√		
TOYOTA	All	All	LX570		Body No.4			√	√	√	√	
TOYOTA	All	All	LX570		Body No.5					√	√	
TOYOTA	All	All	LX570		Back Door			√	√	√	√	
TOYOTA	All	All	LX570		D-Door Motor			√	√	√	√	
TOYOTA	All	All	LX570		P-Door Motor			√	√	√	√	
TOYOTA	All	All	LX570		RL-Door Motor			√	√	√	√	
TOYOTA	All	All	LX570		RR-Door Motor			√	√	√	√	
TOYOTA	All	All	LX570		Driver Seat					√	√	
TOYOTA	All	All	LX570		Master Switch			√	√	√		
TOYOTA	All	All	LX570		Front Left Seat A/C			√		√	√	

TOYOTA	All	All	LX570		Front Right Seat A/C			√		√	√	
TOYOTA	All	All	LX570		Sliding Roof			√	√	√	√	
TOYOTA	All	All	LX570		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	All	LX570		Combination Meter			√	√	√	√	
TOYOTA	All	All	LX570		Mirror					√	√	
TOYOTA	All	All	LX570		Clearance Sonar			√	√	√	√	
TOYOTA	All	All	LX570		Rain Sensor			√	√	√		
TOYOTA	All	All	LX570		AFS			√	√	√	√	1.ECU Information Synchronize
TOYOTA	All	All	LX570		Entry&Start			√	√	√	√	
TOYOTA	All	-0808	GS460		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	-0808	GS460		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	-0808	GS460		Radar Cruise			√	√	√		1.Beam Axis Adjustment
TOYOTA	All	-0808	GS460		EMS			√	√	√	√	
TOYOTA	All	-0808	GS460		Stabilizer			√	√	√		
TOYOTA	All	-0808	GS460		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	-0808	GS460		Four Wheel Drive			√	√	√	√	
TOYOTA	All	-0808	GS460		Tire Pressure Monitor			√	√	√		
TOYOTA	All	-0808	GS460		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	-0808	GS460		VGRS			√	√	√		
TOYOTA	All	-0808	GS460		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	-0808	GS460		SRS Airbag			√	√			

TOYOTA	All	-0808	GS460			Pre-Crash			√	√	√	√	
TOYOTA	All	-0808	GS460			Body			√	√	√	√	
TOYOTA	All	-0808	GS460			Gateway BEAN			√	√			
TOYOTA	All	-0808	GS460			Gateway CAN			√	√			1.Initialization
TOYOTA	All	-0808	GS460			Body No.3					√	√	
TOYOTA	All	-0808	GS460			Body No.4			√	√	√	√	
TOYOTA	All	-0808	GS460			Body No.5			√	√	√	√	
TOYOTA	All	-0808	GS460			Driver Door			√	√	√	√	
TOYOTA	All	-0808	GS460			Passenger Door			√	√	√	√	
TOYOTA	All	-0808	GS460			Rear Left Door			√	√	√	√	
TOYOTA	All	-0808	GS460			Rear Right Door			√	√	√	√	
TOYOTA	All	-0808	GS460			Driver Seat					√	√	
TOYOTA	All	-0808	GS460			Passenger Seat					√	√	
TOYOTA	All	-0808	GS460			Master Switch					√	√	
TOYOTA	All	-0808	GS460			D-SEAT SW					√		
TOYOTA	All	-0808	GS460			Sliding Roof					√	√	
TOYOTA	All	-0808	GS460			Tilt&Telescopic			√	√	√	√	
TOYOTA	All	-0808	GS460			Combination Meter					√	√	
TOYOTA	All	-0808	GS460			Combination Switch					√		
TOYOTA	All	-0808	GS460			Clearance Sonar			√	√			
TOYOTA	All	-0808	GS460			Rain Sensor					√		
TOYOTA	All	-0808	GS460			AFS			√	√	√	√	
TOYOTA	All	-0808	GS460			Entry&Start			√	√	√	√	
TOYOTA	All	-0808	GS460			Power Source Control			√	√	√	√	
TOYOTA	All	-0808	GS460			Occupant Detection			√	√	√		
TOYOTA	All	0808-	GS460			Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode

TOYOTA	All	0808-	GS460			ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	0808-	GS460			Radar Cruise			√	√	√		1.Beam Axis Adjustment
TOYOTA	All	0808-	GS460			EMS			√	√	√	√	
TOYOTA	All	0808-	GS460			Stabilizer			√	√	√		
TOYOTA	All	0808-	GS460			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0808-	GS460			Four Wheel Drive			√	√	√	√	
TOYOTA	All	0808-	GS460			Tire Pressure Monitor			√	√	√		
TOYOTA	All	0808-	GS460			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	0808-	GS460			VGRS			√	√	√		
TOYOTA	All	0808-	GS460			Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	0808-	GS460			SRS Airbag			√	√			
TOYOTA	All	0808-	GS460			Pre-Crash			√	√	√	√	
TOYOTA	All	0808-	GS460			Body			√	√	√	√	
TOYOTA	All	0808-	GS460			Gateway BEAN			√	√			
TOYOTA	All	0808-	GS460			Gateway CAN			√	√			1.Initialization
TOYOTA	All	0808-	GS460			Body No.3					√	√	
TOYOTA	All	0808-	GS460			Body No.4			√	√	√	√	
TOYOTA	All	0808-	GS460			Body No.5			√	√	√	√	
TOYOTA	All	0808-	GS460			Driver Door			√	√	√	√	
TOYOTA	All	0808-	GS460			Passenger Door			√	√	√	√	
TOYOTA	All	0808-	GS460			Rear Left Door			√	√	√	√	
TOYOTA	All	0808-	GS460			Rear Right Door			√	√	√	√	
TOYOTA	All	0808-	GS460			Driver Seat					√	√	
TOYOTA	All	0808-	GS460			Passenger Seat					√	√	
TOYOTA	All	0808-	GS460			Master Switch					√	√	

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

TOYOTA	All	0808-	GS460		D-SEAT SW					√		
TOYOTA	All	0808-	GS460		Sliding Roof					√	√	
TOYOTA	All	0808-	GS460		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	0808-	GS460		Combination Meter					√	√	
TOYOTA	All	0808-	GS460		Combination Switch					√		
TOYOTA	All	0808-	GS460		Clearance Sonar			√	√			
TOYOTA	All	0808-	GS460		Rain Sensor					√		
TOYOTA	All	0808-	GS460		AFS			√	√	√	√	
TOYOTA	All	0808-	GS460		Entry&Start			√	√	√	√	
TOYOTA	All	0808-	GS460		Power Source Control			√	√	√	√	
TOYOTA	All	0808-	GS460		Occupant Detection			√	√	√		
TOYOTA	All	-0808	IS-F		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	-0808	IS-F		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	-0808	IS-F		Radar Cruise			√	√	√		1.Beam Axis Adjustment
TOYOTA	All	-0808	IS-F		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	-0808	IS-F		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	-0808	IS-F		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	-0808	IS-F		SRS Airbag			√	√			
TOYOTA	All	-0808	IS-F		Pre-Crash			√	√	√	√	
TOYOTA	All	-0808	IS-F		Body			√	√	√	√	
TOYOTA	All	-0808	IS-F		Gateway			√	√			

TOYOTA	All	-0808	IS-F		Body No.3				√	√		
TOYOTA	All	-0808	IS-F		Body No.5			√	√	√	√	
TOYOTA	All	-0808	IS-F		Driver Seat					√	√	
TOYOTA	All	-0808	IS-F		Passenger Seat					√	√	
TOYOTA	All	-0808	IS-F		Master Switch					√	√	
TOYOTA	All	-0808	IS-F		Sliding Roof					√	√	
TOYOTA	All	-0808	IS-F		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	-0808	IS-F		Combination Meter					√	√	
TOYOTA	All	-0808	IS-F		Combination Switch					√		
TOYOTA	All	-0808	IS-F		Clearance Sonar			√	√			
TOYOTA	All	-0808	IS-F		Rain Sensor					√		
TOYOTA	All	-0808	IS-F		AFS			√	√	√	√	
TOYOTA	All	-0808	IS-F		Entry&Start			√	√	√	√	
TOYOTA	All	-0808	IS-F		Power Source Control			√	√	√	√	
TOYOTA	All	0808-	IS-F		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	0808-	IS-F		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	0808-	IS-F		Radar Cruise			√	√	√		1.Beam Axis Adjustment
TOYOTA	All	0808-	IS-F		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	0808-	IS-F		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	0808-	IS-F		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	All	0808-	IS-F		SRS Airbag			√	√			

TOYOTA	All	0808-	IS-F		Pre-Crash			√	√	√	√	
TOYOTA	All	0808-	IS-F		Body			√	√	√	√	
TOYOTA	All	0808-	IS-F		Gateway			√	√			
TOYOTA	All	0808-	IS-F		Body No.3					√	√	
TOYOTA	All	0808-	IS-F		Body No.5			√	√	√	√	
TOYOTA	All	0808-	IS-F		Driver Seat					√	√	
TOYOTA	All	0808-	IS-F		Passenger Seat					√	√	
TOYOTA	All	0808-	IS-F		Master Switch					√	√	
TOYOTA	All	0808-	IS-F		Sliding Roof					√	√	
TOYOTA	All	0808-	IS-F		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	0808-	IS-F		Combination Meter					√	√	
TOYOTA	All	0808-	IS-F		Combination Switch					√		
TOYOTA	All	0808-	IS-F		Clearance Sonar			√	√			
TOYOTA	All	0808-	IS-F		Rain Sensor					√		
TOYOTA	All	0808-	IS-F		AFS			√	√	√	√	
TOYOTA	All	0808-	IS-F		Entry&Start			√	√	√	√	
TOYOTA	All	0808-	IS-F		Power Source Control			√	√	√	√	
TOYOTA	All	All	LS460		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	LS460		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	All	LS460		Radar Cruise			√	√	√		1.Beam Axis Adjustment
TOYOTA	All	All	LS460		Air suspension			√	√	√	√	
TOYOTA	All	All	LS460		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)

SERVICE SOLUTIONS

TOYOTA	All	All	LS460			Tire Pressure Monitor			√	√	√		1.ID Registration(Main Set,2nd Set)
TOYOTA	All	All	LS460			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	All	LS460			VGRS			√	√	√		
TOYOTA	All	All	LS460			Electric Parking Brake			*	*	*	*	*1.Reset Memory
TOYOTA	All	All	LS460			Intelligent Parking Assist			√	√	√		
TOYOTA	All	All	LS460			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	All	LS460			SRS Airbag			√	√	√		
TOYOTA	All	All	LS460			Pre-Crash			√	√	√	√	
TOYOTA	All	All	LS460			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	All	LS460			ECM Gateway			√	√	√		1.Initialization
TOYOTA	All	All	LS460			ECB Gateway			√	√	√		1.Initialization
TOYOTA	All	All	LS460			WIL Gateway			√	√	√		1.Initialization
TOYOTA	All	All	LS460			Accessory Gateway			√	√	√		
TOYOTA	All	All	LS460			Body No.4			√	√	√	√	
TOYOTA	All	All	LS460			Body No.5			√	√	√	√	
TOYOTA	All	All	LS460			Driver Door					√	√	
TOYOTA	All	All	LS460			Passenger Door					√	√	
TOYOTA	All	All	LS460			Rear Left Door					√	√	
TOYOTA	All	All	LS460			Rear Right Door					√	√	
TOYOTA	All	All	LS460			Back Door			√	√	√	√	
TOYOTA	All	All	LS460			D-Door Motor			√	√	√	√	
TOYOTA	All	All	LS460			P-Door Motor			√	√	√	√	
TOYOTA	All	All	LS460			RL-Door Motor			√	√	√	√	
TOYOTA	All	All	LS460			RR-Door Motor			√	√	√	√	
TOYOTA	All	All	LS460			Driver Seat			√	√	√	√	
TOYOTA	All	All	LS460			Passenger Seat			*	*	*	*	
TOYOTA	All	All	LS460			Rear Left Seat			*	*	*	*	
TOYOTA	All	All	LS460			Rear Right Seat			*	*	*	*	

TOYOTA	All	All	LS460		Master Switch			√	√	√		
TOYOTA	All	All	LS460		D-SEAT SW			√	√	√	√	
TOYOTA	All	All	LS460		Center Console Switch					√	√	
TOYOTA	All	All	LS460		Rear Console Switch			√	√	√	√	
TOYOTA	All	All	LS460		Front Left Seat A/C			√		√	√	
TOYOTA	All	All	LS460		Front Right Seat A/C			√		√	√	
TOYOTA	All	All	LS460		Rear Left Seat A/C			√		√	√	
TOYOTA	All	All	LS460		Rear Right Seat A/C			√		√	√	
TOYOTA	All	All	LS460		Sliding Roof			√	√	√	√	
TOYOTA	All	All	LS460		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	All	LS460		Combination Meter			√	√	√	√	
TOYOTA	All	All	LS460		Combination Switch					√		
TOYOTA	All	All	LS460		Steering Pad Switch					√		
TOYOTA	All	All	LS460		Clearance Sonar			√	√	√	√	
TOYOTA	All	All	LS460		Rain Sensor			√	√	√		
TOYOTA	All	All	LS460		AFS			√	√	√	√	1.ECU Information Synchronize
TOYOTA	All	All	LS460		Entry&Start			√	√	√	√	
TOYOTA	All	All	LS460		Electric Power Control			√	√	√	√	
TOYOTA	All	All	LS460		Occupant Detection			√	√	√		
TOYOTA	All	All	LS460		Active Headrest R			√	√	√	√	
TOYOTA	All	All	LS460		Active Headrest L			√	√	√	√	
TOYOTA	All	All	LS460		Navigation System			√	√			
TOYOTA	All	All	TUNDRA		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	TUNDRA		Cruise Control			√	√			

SERVICE SOLUTIONS

TOYOTA	All	All	TUNDRA			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	TUNDRA			Tire Pressure Monitor				√	√	√		
TOYOTA	All	All	TUNDRA			Air Conditioner				√	√	√	√	1.Servomotor Initialization
TOYOTA	All	All	TUNDRA			Immobiliser				√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	All	All	TUNDRA			SRS Airbag				√	√			
TOYOTA	All	All	TUNDRA			Main Body				√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	All	TUNDRA			Driver Seat						√	√	
TOYOTA	All	All	TUNDRA			Sliding Roof				√	√	√	√	
TOYOTA	All	All	TUNDRA			Tilt&Telescopic				√	√	√	√	
TOYOTA	All	All	TUNDRA			Combination Meter				√	√	√	√	
TOYOTA	All	All	TUNDRA			Mirror						√	√	
TOYOTA	All	All	TUNDRA			Occupant Detection				√	√	√		
TOYOTA	All	All	SEQUOIA			Engine and ECT				√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	SEQUOIA			Cruise Control				√	√			
TOYOTA	All	All	SEQUOIA			Air suspension				√	√	√	√	
TOYOTA	All	All	SEQUOIA			ABS/VSC/TRC				√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、 Zero Down、 Linear Valve Offset)
TOYOTA	All	All	SEQUOIA			Air Conditioner				√	√	√	√	1.Servomotor Initialization
TOYOTA	All	All	SEQUOIA			Immobiliser				√	√	√	√	1.Key Code Registration 2.Key Code Erasure

TOYOTA	All	All	SEQUOIA		SRS Airbag			√	√				
TOYOTA	All	All	SEQUOIA		Main Body			√	√	√	√		1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	All	SEQUOIA		Back Door			√	√	√	√		
TOYOTA	All	All	SEQUOIA		D-Door Motor			√	√	√	√		
TOYOTA	All	All	SEQUOIA		P-Door Motor			√	√	√	√		
TOYOTA	All	All	SEQUOIA		RL-Door Motor			√	√	√	√		
TOYOTA	All	All	SEQUOIA		RR-Door Motor			√	√	√	√		
TOYOTA	All	All	SEQUOIA		Driver Seat					√	√		
TOYOTA	All	All	SEQUOIA		Sliding Roof			√	√	√	√		
TOYOTA	All	All	SEQUOIA		Tilt&Telescopic			√	√	√	√		
TOYOTA	All	All	SEQUOIA		Combination Meter			√	√	√	√		
TOYOTA	All	All	SEQUOIA		Mirror					√	√		
TOYOTA	All	All	LS600H		Engine and ECT			√	√	√	√		1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	LS600H		Hybrid Control			√	√	√	√		1.VIN Read
TOYOTA	All	All	LS600H		Radar Cruise			√	√	√			1.Beam Axis Adjustment
TOYOTA	All	All	LS600H		Air suspension			√	√	√	√		
TOYOTA	All	All	LS600H		ABS/VSC/TRC			√	√	√	√		1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	All	LS600H		Tire Pressure Monitor			√	√	√			1.ID Registration(Main Set,2nd Set)
TOYOTA	All	All	LS600H		EMPS			√	√	√			1.Torque Sensor Adjustment
TOYOTA	All	All	LS600H		VGRS			√	√	√			
TOYOTA	All	All	LS600H		Electric Parking Brake			*	*	*	*		*1.Reset Memory
TOYOTA	All	All	LS600H		Intelligent Parking Assist			√	√	√			

TOYOTA	All	All	LS600H		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	All	LS600H		SRS Airbag			√	√	√		
TOYOTA	All	All	LS600H		Pre-Crash			√	√	√	√	
TOYOTA	All	All	LS600H		Pre-Crash 2			√	√	√	√	1.Recognition ECU High Temp History Reset 2.Camera/Target Position Memory 3.Camera Axis Adjust 4.Door Boom Axis Adjustment
TOYOTA	All	All	LS600H		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	All	LS600H		ECM Gateway			√	√	√		1.Initialization
TOYOTA	All	All	LS600H		ECB Gateway			√	√	√		1.Initialization
TOYOTA	All	All	LS600H		WIL Gateway			√	√	√		1.Initialization
TOYOTA	All	All	LS600H		Body No.4			√	√	√	√	
TOYOTA	All	All	LS600H		Body No.5					√	√	
TOYOTA	All	All	LS600H		Driver Door					√	√	
TOYOTA	All	All	LS600H		Passenger Door					√	√	
TOYOTA	All	All	LS600H		Rear Left Door			√	√	√	√	
TOYOTA	All	All	LS600H		Rear Right Door			√	√	√	√	
TOYOTA	All	All	LS600H		Back Door			√	√	√	√	
TOYOTA	All	All	LS600H		D-Door Motor			√	√	√	√	
TOYOTA	All	All	LS600H		P-Door Motor			√	√	√	√	
TOYOTA	All	All	LS600H		RL-Door Motor			√	√	√	√	
TOYOTA	All	All	LS600H		RR-Door Motor			√	√	√	√	
TOYOTA	All	All	LS600H		Driver Seat					√	√	
TOYOTA	All	All	LS600H		Passenger Seat			*	*	*	*	
TOYOTA	All	All	LS600H		Rear Left Seat			*	*	*	*	
TOYOTA	All	All	LS600H		Rear Right Seat			*	*	*	*	
TOYOTA	All	All	LS600H		Master Switch			√	√	√		
TOYOTA	All	All	LS600H		D-SEAT SW			√	√	√	√	
TOYOTA	All	All	LS600H		Center Console Switch					√	√	

TOYOTA	All	All	LS600H		Rear Console Switch			√	√	√	√	
TOYOTA	All	All	LS600H		Front Left Seat A/C			√		√	√	
TOYOTA	All	All	LS600H		Front Right Seat A/C			√		√	√	
TOYOTA	All	All	LS600H		Rear Left Seat A/C			√		√	√	
TOYOTA	All	All	LS600H		Rear Right Seat A/C			√		√	√	
TOYOTA	All	All	LS600H		Sliding Roof			√	√	√	√	
TOYOTA	All	All	LS600H		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	All	LS600H		Combination Meter			√	√	√	√	
TOYOTA	All	All	LS600H		Combination Switch					√		
TOYOTA	All	All	LS600H		Steering Pad Switch					√		
TOYOTA	All	All	LS600H		Clearance Sonar			√	√	√	√	
TOYOTA	All	All	LS600H		Rain Sensor			√	√	√		
TOYOTA	All	All	LS600H		AFS			√	√	√	√	1.ECU Information Synchronize
TOYOTA	All	All	LS600H		Entry&Start			√	√	√	√	
TOYOTA	All	All	LS600H		Occupant Detection			√	√	√		
TOYOTA	All	All	LS600H		Active Headrest R			√	√	√	√	
TOYOTA	All	All	LS600H		Active Headrest L			√	√	√	√	
TOYOTA	MIDDLE EAST	-0608	GS430		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	MIDDLE EAST	-0608	GS430		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	MIDDLE EAST	-0608	GS430		Cruise Control			√	√			
TOYOTA	MIDDLE EAST	-0608	GS430		EMS			√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	MIDDLE EAST	-0608	GS430		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	MIDDLE EAST	-0608	GS430		Tire Pressure Monitor			√	√	√		
TOYOTA	MIDDLE EAST	-0608	GS430		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	MIDDLE EAST	-0608	GS430		VGRS			√	√	√		
TOYOTA	MIDDLE EAST	-0608	GS430		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	MIDDLE EAST	-0608	GS430		SRS Airbag			√	√			
TOYOTA	MIDDLE EAST	-0608	GS430		Body			√	√	√	√	
TOYOTA	MIDDLE EAST	-0608	GS430		Gateway			√	√			
TOYOTA	MIDDLE EAST	-0608	GS430		Body No.3					√	√	
TOYOTA	MIDDLE EAST	-0608	GS430		Body No.4			√	√	√	√	
TOYOTA	MIDDLE EAST	-0608	GS430		Body No.5			√	√	√	√	
TOYOTA	MIDDLE EAST	-0608	GS430		Driver Door			√	√	√	√	
TOYOTA	MIDDLE EAST	-0608	GS430		Passenger Door			√	√	√	√	
TOYOTA	MIDDLE EAST	-0608	GS430		Rear Left Door			√	√	√	√	
TOYOTA	MIDDLE EAST	-0608	GS430		Rear Right Door			√	√	√	√	
TOYOTA	MIDDLE EAST	-0608	GS430		Driver Seat					√	√	
TOYOTA	MIDDLE EAST	-0608	GS430		Passenger Seat					√	√	
TOYOTA	MIDDLE EAST	-0608	GS430		Master Switch					√	√	

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

TOYOTA	MIDDLE EAST	-0608	GS430		D-SEAT SW						√		
TOYOTA	MIDDLE EAST	-0608	GS430		Sliding Roof						√	√	
TOYOTA	MIDDLE EAST	-0608	GS430		Tilt&Telescopic			√	√	√	√		
TOYOTA	MIDDLE EAST	-0608	GS430		Combination Meter					√	√		
TOYOTA	MIDDLE EAST	-0608	GS430		Combination Switch					√			
TOYOTA	MIDDLE EAST	-0608	GS430		Clearance Sonar			√	√				
TOYOTA	MIDDLE EAST	-0608	GS430		Rain Sensor					√			
TOYOTA	MIDDLE EAST	-0608	GS430		AFS			√	√	√	√		
TOYOTA	MIDDLE EAST	-0608	GS430		Entry&Start			√	√	√	√		
TOYOTA	MIDDLE EAST	-0608	GS430		Power Source Control			√	√	√	√		
TOYOTA	Others	-0608	GS430		Engine			√	√	√	√		1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	Others	-0608	GS430		ECT			√	√	√	√		1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	Others	-0608	GS430		Radar Cruise			√	√	√			1.Beam Axis Adjustment
TOYOTA	Others	-0608	GS430		EMS			√	√	√	√		
TOYOTA	Others	-0608	GS430		ABS/VSC/TRC			√	√	√	√		1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	Others	-0608	GS430		Tire Pressure Monitor			√	√	√			
TOYOTA	Others	-0608	GS430		EMPS			√	√	√			1.Torque Sensor Adjustment

TOYOTA	Others	-0608	GS430		VGRS			√	√	√		
TOYOTA	Others	-0608	GS430		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	Others	-0608	GS430		SRS Airbag			√	√			
TOYOTA	Others	-0608	GS430		Pre-Crash			√	√	√	√	
TOYOTA	Others	-0608	GS430		Body			√	√	√	√	
TOYOTA	Others	-0608	GS430		Gateway			√	√			
TOYOTA	Others	-0608	GS430		Body No.3					√	√	
TOYOTA	Others	-0608	GS430		Body No.4			√	√	√	√	
TOYOTA	Others	-0608	GS430		Body No.5			√	√	√	√	
TOYOTA	Others	-0608	GS430		Driver Door			√	√	√	√	
TOYOTA	Others	-0608	GS430		Passenger Door			√	√	√	√	
TOYOTA	Others	-0608	GS430		Rear Left Door			√	√	√	√	
TOYOTA	Others	-0608	GS430		Rear Right Door			√	√	√	√	
TOYOTA	Others	-0608	GS430		Driver Seat					√	√	
TOYOTA	Others	-0608	GS430		Passenger Seat					√	√	
TOYOTA	Others	-0608	GS430		Master Switch					√	√	
TOYOTA	Others	-0608	GS430		D-SEAT SW					√		
TOYOTA	Others	-0608	GS430		Sliding Roof					√	√	
TOYOTA	Others	-0608	GS430		Tilt&Telescopic			√	√	√	√	
TOYOTA	Others	-0608	GS430		Combination Meter					√	√	
TOYOTA	Others	-0608	GS430		Combination Switch					√		
TOYOTA	Others	-0608	GS430		Clearance Sonar			√	√			
TOYOTA	Others	-0608	GS430		Rain Sensor					√		
TOYOTA	Others	-0608	GS430		AFS			√	√	√	√	
TOYOTA	Others	-0608	GS430		Entry&Start			√	√	√	√	
TOYOTA	Others	-0608	GS430		Power Source Control			√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	MIDDLE EAST	0608-0709	GS430		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	MIDDLE EAST	0608-0709	GS430		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	MIDDLE EAST	0608-0709	GS430		Cruise Control			√	√			
TOYOTA	MIDDLE EAST	0608-0709	GS430		EMS			√	√	√	√	
TOYOTA	MIDDLE EAST	0608-0709	GS430		Stabilizer			√	√	√		
TOYOTA	MIDDLE EAST	0608-0709	GS430		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	MIDDLE EAST	0608-0709	GS430		Tire Pressure Monitor			√	√	√		
TOYOTA	MIDDLE EAST	0608-0709	GS430		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	MIDDLE EAST	0608-0709	GS430		VGRS			√	√	√		
TOYOTA	MIDDLE EAST	0608-0709	GS430		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	MIDDLE EAST	0608-0709	GS430		SRS Airbag			√	√			
TOYOTA	MIDDLE EAST	0608-0709	GS430		Body			√	√	√	√	
TOYOTA	MIDDLE EAST	0608-0709	GS430		Gateway BEAN			√	√			
TOYOTA	MIDDLE EAST	0608-0709	GS430		Gateway CAN			√	√			1.Initialization
TOYOTA	MIDDLE EAST	0608-0709	GS430		Body No.3					√	√	

TOYOTA	MIDDLE EAST	0608-0709	GS430			Body No.4			√	√	√	√	
TOYOTA	MIDDLE EAST	0608-0709	GS430			Body No.5			√	√	√	√	
TOYOTA	MIDDLE EAST	0608-0709	GS430			Driver Door			√	√	√	√	
TOYOTA	MIDDLE EAST	0608-0709	GS430			Passenger Door			√	√	√	√	
TOYOTA	MIDDLE EAST	0608-0709	GS430			Rear Left Door			√	√	√	√	
TOYOTA	MIDDLE EAST	0608-0709	GS430			Rear Right Door			√	√	√	√	
TOYOTA	MIDDLE EAST	0608-0709	GS430			Driver Seat					√	√	
TOYOTA	MIDDLE EAST	0608-0709	GS430			Passenger Seat					√	√	
TOYOTA	MIDDLE EAST	0608-0709	GS430			Master Switch					√	√	
TOYOTA	MIDDLE EAST	0608-0709	GS430			D-SEAT SW					√		
TOYOTA	MIDDLE EAST	0608-0709	GS430			Sliding Roof					√	√	
TOYOTA	MIDDLE EAST	0608-0709	GS430			Tilt&Telescopic			√	√	√	√	
TOYOTA	MIDDLE EAST	0608-0709	GS430			Combination Meter					√	√	
TOYOTA	MIDDLE EAST	0608-0709	GS430			Combination Switch					√		
TOYOTA	MIDDLE EAST	0608-0709	GS430			Clearance Sonar			√	√			
TOYOTA	MIDDLE EAST	0608-0709	GS430			Rain Sensor					√		
TOYOTA	MIDDLE EAST	0608-0709	GS430			AFS			√	√	√	√	
TOYOTA	MIDDLE EAST	0608-0709	GS430			Entry&Start			√	√	√	√	
TOYOTA	MIDDLE EAST	0608-0709	GS430			Power Source Control			√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	Others	0608-0709	GS430		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	Others	0608-0709	GS430		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	Others	0608-0709	GS430		Radar Cruise			√	√	√		1.Beam Axis Adjustment
TOYOTA	Others	0608-0709	GS430		EMS			√	√	√	√	
TOYOTA	Others	0608-0709	GS430		Stabilizer			√	√	√		
TOYOTA	Others	0608-0709	GS430		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	Others	0608-0709	GS430		Tire Pressure Monitor			√	√	√		
TOYOTA	Others	0608-0709	GS430		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	Others	0608-0709	GS430		VGRS			√	√	√		
TOYOTA	Others	0608-0709	GS430		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	Others	0608-0709	GS430		SRS Airbag			√	√			
TOYOTA	Others	0608-0709	GS430		Pre-Crash			√	√	√	√	
TOYOTA	Others	0608-0709	GS430		Body			√	√	√	√	
TOYOTA	Others	0608-0709	GS430		Gateway BEAN			√	√			
TOYOTA	Others	0608-0709	GS430		Gateway CAN			√	√			1.Initialization
TOYOTA	Others	0608-0709	GS430		Body No.3					√	√	
TOYOTA	Others	0608-0709	GS430		Body No.4			√	√	√	√	
TOYOTA	Others	0608-0709	GS430		Body No.5			√	√	√	√	
TOYOTA	Others	0608-0709	GS430		Driver Door			√	√	√	√	
TOYOTA	Others	0608-0709	GS430		Passenger Door			√	√	√	√	
TOYOTA	Others	0608-0709	GS430		Rear Left Door			√	√	√	√	

TOYOTA	Others	0608-0709	GS430		Rear Right Door			√	√	√	√	
TOYOTA	Others	0608-0709	GS430		Driver Seat					√	√	
TOYOTA	Others	0608-0709	GS430		Passenger Seat					√	√	
TOYOTA	Others	0608-0709	GS430		Master Switch					√	√	
TOYOTA	Others	0608-0709	GS430		D-SEAT SW					√		
TOYOTA	Others	0608-0709	GS430		Sliding Roof					√	√	
TOYOTA	Others	0608-0709	GS430		Tilt&Telescopic		√	√	√	√		
TOYOTA	Others	0608-0709	GS430		Combination Meter					√	√	
TOYOTA	Others	0608-0709	GS430		Combination Switch					√		
TOYOTA	Others	0608-0709	GS430		Clearance Sonar		√	√				
TOYOTA	Others	0608-0709	GS430		Rain Sensor					√		
TOYOTA	Others	0608-0709	GS430		AFS		√	√	√	√		
TOYOTA	Others	0608-0709	GS430		Entry&Start		√	√	√	√		
TOYOTA	Others	0608-0709	GS430		Power Source Control		√	√	√	√		
TOYOTA	Others	0608-0709	GS430		Occupant Detection		√	√	√			
TOYOTA	MIDDLE EAST	0709-	GS430		Engine		√	√	√	√		1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	MIDDLE EAST	0709-	GS430		ECT		√	√	√	√		1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	MIDDLE EAST	0709-	GS430		Cruise Control		√	√				
TOYOTA	MIDDLE EAST	0709-	GS430		EMS		√	√	√	√		
TOYOTA	MIDDLE EAST	0709-	GS430		Stabilizer		√	√	√			

TOYOTA	MIDDLE EAST	0709-	GS430		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	MIDDLE EAST	0709-	GS430		Tire Pressure Monitor			√	√	√		
TOYOTA	MIDDLE EAST	0709-	GS430		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	MIDDLE EAST	0709-	GS430		VGRS			√	√	√		
TOYOTA	MIDDLE EAST	0709-	GS430		Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	MIDDLE EAST	0709-	GS430		SRS Airbag			√	√			
TOYOTA	MIDDLE EAST	0709-	GS430		Body			√	√	√	√	
TOYOTA	MIDDLE EAST	0709-	GS430		Gateway BEAN			√	√			
TOYOTA	MIDDLE EAST	0709-	GS430		Gateway CAN			√	√			1.Initialization
TOYOTA	MIDDLE EAST	0709-	GS430		Body No.3					√	√	
TOYOTA	MIDDLE EAST	0709-	GS430		Body No.4			√	√	√	√	
TOYOTA	MIDDLE EAST	0709-	GS430		Body No.5			√	√	√	√	
TOYOTA	MIDDLE EAST	0709-	GS430		Driver Door			√	√	√	√	
TOYOTA	MIDDLE EAST	0709-	GS430		Passenger Door			√	√	√	√	
TOYOTA	MIDDLE EAST	0709-	GS430		Rear Left Door			√	√	√	√	
TOYOTA	MIDDLE EAST	0709-	GS430		Rear Right Door			√	√	√	√	
TOYOTA	MIDDLE EAST	0709-	GS430		Driver Seat					√	√	
TOYOTA	MIDDLE EAST	0709-	GS430		Passenger Seat					√	√	

TOYOTA	MIDDLE EAST	0709-	GS430		Master Switch					√	√	
TOYOTA	MIDDLE EAST	0709-	GS430		D-SEAT SW					√		
TOYOTA	MIDDLE EAST	0709-	GS430		Sliding Roof					√	√	
TOYOTA	MIDDLE EAST	0709-	GS430		Tilt&Telescopic			√	√	√	√	
TOYOTA	MIDDLE EAST	0709-	GS430		Combination Meter					√	√	
TOYOTA	MIDDLE EAST	0709-	GS430		Combination Switch					√		
TOYOTA	MIDDLE EAST	0709-	GS430		Clearance Sonar			√	√			
TOYOTA	MIDDLE EAST	0709-	GS430		Rain Sensor					√		
TOYOTA	MIDDLE EAST	0709-	GS430		AFS			√	√	√	√	
TOYOTA	MIDDLE EAST	0709-	GS430		Entry&Start			√	√	√	√	
TOYOTA	MIDDLE EAST	0709-	GS430		Power Source Control			√	√	√	√	
TOYOTA	Others	0709-	GS430		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	Others	0709-	GS430		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	Others	0709-	GS430		Radar Cruise			√	√	√		1.Beam Axis Adjustment
TOYOTA	Others	0709-	GS430		EMS			√	√	√	√	
TOYOTA	Others	0709-	GS430		Stabilizer			√	√	√		

TOYOTA	Others	0709-	GS430			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	Others	0709-	GS430			Four Wheel Drive			√	√	√	√	
TOYOTA	Others	0709-	GS430			Tire Pressure Monitor			√	√	√		
TOYOTA	Others	0709-	GS430			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	Others	0709-	GS430			VGRS			√	√	√		
TOYOTA	Others	0709-	GS430			Air Conditioner			√	√	√	√	1.Compass calibration 2.Servomotor Initialization
TOYOTA	Others	0709-	GS430			SRS Airbag			√	√			
TOYOTA	Others	0709-	GS430			Pre-Crash			√	√	√	√	
TOYOTA	Others	0709-	GS430			Body			√	√	√	√	
TOYOTA	Others	0709-	GS430			Gateway BEAN			√	√			
TOYOTA	Others	0709-	GS430			Gateway CAN			√	√			1.Initialization
TOYOTA	Others	0709-	GS430			Body No.3					√	√	
TOYOTA	Others	0709-	GS430			Body No.4			√	√	√	√	
TOYOTA	Others	0709-	GS430			Body No.5			√	√	√	√	
TOYOTA	Others	0709-	GS430			Driver Door			√	√	√	√	
TOYOTA	Others	0709-	GS430			Passenger Door			√	√	√	√	
TOYOTA	Others	0709-	GS430			Rear Left Door			√	√	√	√	
TOYOTA	Others	0709-	GS430			Rear Right Door			√	√	√	√	
TOYOTA	Others	0709-	GS430			Driver Seat					√	√	
TOYOTA	Others	0709-	GS430			Passenger Seat					√	√	
TOYOTA	Others	0709-	GS430			Master Switch					√	√	
TOYOTA	Others	0709-	GS430			D-SEAT SW					√		
TOYOTA	Others	0709-	GS430			Sliding Roof					√	√	
TOYOTA	Others	0709-	GS430			Tilt&Telescopic			√	√	√	√	
TOYOTA	Others	0709-	GS430			Combination Meter					√	√	
TOYOTA	Others	0709-	GS430			Combination Switch					√		

TOYOTA	Others	0709-	GS430		Clearance Sonar			√	√			
TOYOTA	Others	0709-	GS430		Rain Sensor					√		
TOYOTA	Others	0709-	GS430		AFS			√	√	√	√	
TOYOTA	Others	0709-	GS430		Entry&Start			√	√	√	√	
TOYOTA	Others	0709-	GS430		Power Source Control			√	√	√	√	
TOYOTA	All	All	LAND CR.		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	LAND CR.		ECT			√	√	√	√	1.Check Mode 2.Reset Memory 3.A/T Code Reset
TOYOTA	All	All	LAND CR.		Cruise Control			√	√			
TOYOTA	All	All	LAND CR.		AHC			√	√	√	√	
TOYOTA	All	All	LAND CR.		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	All	LAND CR.		VGRS			√	√	√		
TOYOTA	All	All	LAND CR.		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	All	LAND CR.		SRS Airbag			√	√	√		
TOYOTA	All	All	LAND CR.		Pre-Crash			√	√	√	√	
TOYOTA	All	All	LAND CR.		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	All	All	LAND CR.		Gateway			√	√			1.Initialization
TOYOTA	All	All	LAND CR.		Body No.4			√	√	√	√	
TOYOTA	All	All	LAND CR.		Body No.5					√	√	
TOYOTA	All	All	LAND CR.		D-Door Motor			√	√	√	√	
TOYOTA	All	All	LAND CR.		P-Door Motor			√	√	√	√	

TOYOTA	All	All	LAND CR.		RL-Door Motor			√	√	√	√	
TOYOTA	All	All	LAND CR.		RR-Door Motor			√	√	√	√	
TOYOTA	All	All	LAND CR.		Driver Seat					√	√	
TOYOTA	All	All	LAND CR.		Master Switch			√	√	√		
TOYOTA	All	All	LAND CR.		Front Left Seat A/C			√		√	√	
TOYOTA	All	All	LAND CR.		Front Right Seat A/C			√		√	√	
TOYOTA	All	All	LAND CR.		Sliding Roof			√	√	√	√	
TOYOTA	All	All	LAND CR.		Tilt&Telescopic			√	√	√	√	
TOYOTA	All	All	LAND CR.		Combination Meter			√	√	√	√	
TOYOTA	All	All	LAND CR.		Mirror					√	√	
TOYOTA	All	All	LAND CR.		Clearance Sonar			√	√	√	√	
TOYOTA	All	All	LAND CR.		Rain Sensor			√	√	√		
TOYOTA	All	All	LAND CR.		Entry&Start			√	√	√	√	
TOYOTA	All	All	COASTER		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	All	COASTER		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	TFTM Product/-0811	COROLLA		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	TFTM Product/-0811	COROLLA		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)

SERVICE SOLUTIONS

TOYOTA	All	TFTM Product/-0811	COROLLA		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	TFTM Product/-0811	COROLLA		SRS Airbag			√	√			
TOYOTA	All	TFTM Product/0811-	COROLLA		Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	All	TFTM Product/0811-	COROLLA		Multi-Mode M/T			√	√	√		
TOYOTA	All	TFTM Product/0811-	COROLLA		Cruise Control			√	√			
TOYOTA	All	TFTM Product/0811-	COROLLA		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	TFTM Product/0811-	COROLLA		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	All	TFTM Product/0811-	COROLLA		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	All	TFTM Product/0811-	COROLLA		Theft Deterrent			*	*	*	*	
TOYOTA	All	TFTM Product/0811-	COROLLA		SRS Airbag			√	√			
TOYOTA	A11	TFTM Product/0811-	COROLLA		Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	A11	TFTM Product/0811-	COROLLA		D-Door Motor			√	√	√	√	

TOYOTA	A11	TFTM Product/0811-	COROLLA		Sliding Roof		√	√	√	√	
TOYOTA	A11	TFTM Product/0811-	COROLLA		Entry&Start		√	√	√	√	
TOYOTA	A11	TMT Product	COROLLA		Engine and ECT		√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	A11	TMT Product	COROLLA		Cruise Control		√	√			
TOYOTA	A11	TMT Product	COROLLA		ABS/VSC/TRC		√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	TMT Product	COROLLA		EMPS		√	√	√		1. Torque Sensor Adjustment
TOYOTA	A11	TMT Product	COROLLA		Air Conditioner		√	√	√	√	1. Servomotor Initialization
TOYOTA	A11	TMT Product	COROLLA		Theft Deterrent		*	*	*	*	
TOYOTA	A11	TMT Product	COROLLA		SRS Airbag		√	√			

TOYOTA	A11	TMT Product	COROLLA			Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	A11	TMT Product	COROLLA			D-Door Motor			√	√	√	√	
TOYOTA	A11	TMT Product	COROLLA			Sliding Roof			√	√	√	√	
TOYOTA	A11	TMT Product	COROLLA			Combination Meter			√	√	√	√	
TOYOTA	A11	TMT Product	COROLLA			Entry&Start			√	√	√	√	
TOYOTA	A11	TMUK, TMM T Product/-0706	COROLLA/AURIS			Engine and ECT			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	A11	TMUK, TMM T Product/-0706	COROLLA/AURIS			Multi-Mode M/T			√	√	√		
TOYOTA	A11	TMUK, TMM T Product/-0706	COROLLA/AURIS			Cruise Control			√	√			

TOYOTA	A11	TMUK, TMM T Product/ -0706	COROLLA/ AURIS			ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid 、 Zero Down、 Linear Valve Offset)
TOYOTA	A11	TMUK, TMM T Product/ -0706	COROLLA/ AURIS			EMPS			√	√	√		1. Torque Sensor Adjustment
TOYOTA	A11	TMUK, TMM T Product/ -0706	COROLLA/ AURIS			Air Conditioner			√	√	√	√	1. Servomotor Initialization
TOYOTA	A11	TMUK, TMM T Product/ -0706	COROLLA/ AURIS			Theft Deterrent			*	*	*	*	
TOYOTA	A11	TMUK, TMM T Product/ -0706	COROLLA/ AURIS			SRS Airbag			√	√			
TOYOTA	A11	TMUK, TMM T Product/ -0706	COROLLA/ AURIS			Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	A11	TMUK, TMM T Product/ -0706	COROLLA/ AURIS			D-Door Motor			√	√	√	√	

TOYOTA	A11	TMUK, TMM T Product/ -0706	COROLLA/ AURIS			P-Door Motor			√	√	√	√	
TOYOTA	A11	TMUK, TMM T Product/ -0706	COROLLA/ AURIS			RL-Door Motor			√	√	√	√	
TOYOTA	A11	TMUK, TMM T Product/ -0706	COROLLA/ AURIS			RR-Door Motor			√	√	√	√	
TOYOTA	A11	TMUK, TMM T Product/ -0706	COROLLA/ AURIS			Master Switch			√	√	√		
TOYOTA	A11	TMUK, TMM T Product/ -0706	COROLLA/ AURIS			Sliding Roof			√	√	√	√	
TOYOTA	A11	TMUK, TMM T Product/ -0706	COROLLA/ AURIS			Entry&Start			√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	A11	TMUK, TMM T Product/ 0706- 0809	COROLLA/ AURIS		Engine and ECT			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	A11	TMUK, TMM T Product/ 0706- 0809	COROLLA/ AURIS		Multi-Mode M/T			√	√	√		
TOYOTA	A11	TMUK, TMM T Product/ 0706- 0809	COROLLA/ AURIS		Cruise Control			√	√			
TOYOTA	A11	TMUK, TMM T Product/ 0706- 0809	COROLLA/ AURIS		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	TMUK, TMM T Product/ 0706- 0809	COROLLA/ AURIS		EMPS			√	√	√		1. Torque Sensor Adjustment

TOYOTA	A11	TMUK, TMM T Product/ 0706- 0809	COROLLA/ AURIS			Air Conditioner			√	√	√	√	1. Servomotor Initialization
TOYOTA	A11	TMUK, TMM T Product/ 0706- 0809	COROLLA/ AURIS			Theft Deterrent			*	*	*	*	
TOYOTA	A11	TMUK, TMM T Product/ 0706- 0809	COROLLA/ AURIS			SRS Airbag			√	√			
TOYOTA	A11	TMUK, TMM T Product/ 0706- 0809	COROLLA/ AURIS			Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	A11	TMUK, TMM T Product/ 0706- 0809	COROLLA/ AURIS			Accessory Gateway			√	√	√		
TOYOTA	A11	TMUK, TMM T Product/ 0706- 0809	COROLLA/ AURIS			D-Door Motor			√	√	√	√	

TOYOTA	A11	TMUK, TMM T Product/ 0706- 0809	COROLLA/ AURIS			Sliding Roof			√	√	√	√	
TOYOTA	A11	TMUK, TMM T Product/ 0706- 0809	COROLLA/ AURIS			Entry&Start			√	√	√	√	
TOYOTA	A11	TMUK, TMM T Product/ 0809-	COROLLA/ AURIS			Engine and ECT			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	A11	TMUK, TMM T Product/ 0809-	COROLLA/ AURIS			Multi-Mode M/T			√	√	√		
TOYOTA	A11	TMUK, TMM T Product/ 0809-	COROLLA/ AURIS			Cruise Control			√	√			

SERVICE SOLUTIONS

TOYOTA	A11	TMUK, TMM T Product/ 0809-	COROLLA/ AURIS			ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid 、 Zero Down、 Linear Valve Offset)
TOYOTA	A11	TMUK, TMM T Product/ 0809-	COROLLA/ AURIS			EMPS			√	√	√		1. Torque Sensor Adjustment
TOYOTA	A11	TMUK, TMM T Product/ 0809-	COROLLA/ AURIS			Air Conditioner			√	√	√	√	1. Servomotor Initialization
TOYOTA	A11	TMUK, TMM T Product/ 0809-	COROLLA/ AURIS			Theft Deterrent			*	*	*	*	
TOYOTA	A11	TMUK, TMM T Product/ 0809-	COROLLA/ AURIS			SRS Airbag			√	√			
TOYOTA	A11	TMUK, TMM T Product/ 0809-	COROLLA/ AURIS			Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	A11	TMUK, TMM T Product/ 0809-	COROLLA/ AURIS			D-Door Motor			√	√	√	√	

TOYOTA	A11	TMUK, TMM T Product/ 0809-	COROLLA/ AURIS			Sliding Roof			√	√	√	√	
TOYOTA	A11	TMUK, TMM T Product/ 0809-	COROLLA/ AURIS			Entry&Start			√	√	√	√	
TOYOTA	A11	0904- /Others	COROLLA/ AURIS			Engine and ECT			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	A11	0904- /Others	COROLLA/ AURIS			Multi-Mode M/T			√	√	√		
TOYOTA	A11	0904- /Others	COROLLA/ AURIS			Cruise Control			√	√			
TOYOTA	A11	0904- /Others	COROLLA/ AURIS			ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	0904- /Others	COROLLA/ AURIS			EMPS			√	√	√		1. Torque Sensor Adjustment
TOYOTA	A11	0904- /Others	COROLLA/ AURIS			Air Conditioner			√	√	√	√	1. Servomotor Initialization

TOYOTA	A11	0904- /Others	COROLLA/ AURIS			Theft Deterrent			*	*	*	*	
TOYOTA	A11	0904- /Others	COROLLA/ AURIS			SRS Airbag			√	√			
TOYOTA	A11	0904- /Others	COROLLA/ AURIS			Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	A11	0904- /Others	COROLLA/ AURIS			D-Door Motor			√	√	√	√	
TOYOTA	A11	0904- /Others	COROLLA/ AURIS			Sliding Roof			√	√	√	√	
TOYOTA	A11	0904- /Others	COROLLA/ AURIS			Entry&Start			√	√	√	√	
TOYOTA	A11	0703- 0904/Oth ers	COROLLA/ AURIS			Engine and ECT			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	A11	0703- 0904/Oth ers	COROLLA/ AURIS			Multi-Mode M/T			√	√	√		
TOYOTA	A11	0703- 0904/Oth ers	COROLLA/ AURIS			Cruise Control			√	√			

TOYOTA	A11	0703-0904/0thers	COROLLA/AURIS			ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	0703-0904/0thers	COROLLA/AURIS			EMPS			√	√	√		1. Torque Sensor Adjustment
TOYOTA	A11	0703-0904/0thers	COROLLA/AURIS			Air Conditioner			√	√	√	√	1. Servomotor Initialization
TOYOTA	A11	0703-0904/0thers	COROLLA/AURIS			Theft Deterrent			*	*	*	*	
TOYOTA	A11	0703-0904/0thers	COROLLA/AURIS			SRS Airbag			√	√			
TOYOTA	A11	0703-0904/0thers	COROLLA/AURIS			Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	A11	0703-0904/0thers	COROLLA/AURIS			D-Door Motor			√	√	√	√	
TOYOTA	A11	0703-0904/0thers	COROLLA/AURIS			P-Door Motor			√	√	√	√	
TOYOTA	A11	0703-0904/0thers	COROLLA/AURIS			RL-Door Motor			√	√	√	√	

TOYOTA	A11	0703-0904/0thers	COROLLA/AURIS			RR-Door Motor			√	√	√	√	
TOYOTA	A11	0703-0904/0thers	COROLLA/AURIS			Master Switch			√	√	√		
TOYOTA	A11	0703-0904/0thers	COROLLA/AURIS			Sliding Roof			√	√	√	√	
TOYOTA	A11	0703-0904/0thers	COROLLA/AURIS			Entry&Start			√	√	√	√	
TOYOTA	A11	KM, TMT, T MV Product	COROLLA/AURIS			Engine and ECT			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	A11	KM, TMT, T MV Product	COROLLA/AURIS			Cruise Control			√	√			
TOYOTA	A11	KM, TMT, T MV Product	COROLLA/AURIS			ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)

TOYOTA	A11	KM, TMT, T MV Product	COROLLA/ AURIS			EMPS			√	√	√		1. Torque Sensor Adjustment
TOYOTA	A11	KM, TMT, T MV Product	COROLLA/ AURIS			Air Conditioner			√	√	√	√	1. Servomotor Initialization
TOYOTA	A11	KM, TMT, T MV Product	COROLLA/ AURIS			Theft Deterrent			*	*	*	*	
TOYOTA	A11	KM, TMT, T MV Product	COROLLA/ AURIS			SRS Airbag			√	√			
TOYOTA	A11	KM, TMT, T MV Product	COROLLA/ AURIS			Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	A11	KM, TMT, T MV Product	COROLLA/ AURIS			D-Door Motor			√	√	√	√	
TOYOTA	A11	KM, TMT, T MV Product	COROLLA/ AURIS			Sliding Roof			√	√	√	√	
TOYOTA	A11	KM, TMT, T MV Product	COROLLA/ AURIS			Combination Meter			√	√	√	√	
TOYOTA	A11	KM, TMT, T MV Product	COROLLA/ AURIS			Entry&Start			√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	A11	TSAM Product	COROLLA		Engine and ECT			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	A11	TSAM Product	COROLLA		Multi-Mode M/T			√	√	√		
TOYOTA	A11	TSAM Product	COROLLA		Cruise Control			√	√			
TOYOTA	A11	TSAM Product	COROLLA		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	TSAM Product	COROLLA		EMPS			√	√	√		1. Torque Sensor Adjustment
TOYOTA	A11	TSAM Product	COROLLA		Air Conditioner			√	√	√	√	1. Servomotor Initialization
TOYOTA	A11	TSAM Product	COROLLA		Theft Deterrent			*	*	*	*	
TOYOTA	A11	TSAM Product	COROLLA		SRS Airbag			√	√			
TOYOTA	A11	TSAM Product	COROLLA		Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration

TOYOTA	All	TSAM Product	COROLLA		Accessory Gateway		✓	✓	✓		
TOYOTA	All	TSAM Product	COROLLA		D-Door Motor		✓	✓	✓	✓	
TOYOTA	All	TSAM Product	COROLLA		Entry&Start		✓	✓	✓	✓	
TOYOTA	All	Others	COROLLA/AURIS		Engine and ECT		✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	All	Others	COROLLA/AURIS		Multi-Mode M/T		✓	✓	✓		
TOYOTA	All	Others	COROLLA/AURIS		Cruise Control		✓	✓			
TOYOTA	All	Others	COROLLA/AURIS		ABS/VSC/TRC		✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	Others	COROLLA/AURIS		EMPS		✓	✓	✓		1. Torque Sensor Adjustment
TOYOTA	All	Others	COROLLA/AURIS		Air Conditioner		✓	✓	✓	✓	1. Servomotor Initialization
TOYOTA	All	Others	COROLLA/AURIS		Theft Deterrent		*	*	*	*	

TOYOTA	A11	Others	COROLLA/ AURIS		SRS Airbag			√	√			
TOYOTA	A11	Others	COROLLA/ AURIS		Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	A11	Others	COROLLA/ AURIS		Accessory Gateway			√	√	√		
TOYOTA	A11	Others	COROLLA/ AURIS		D-Door Motor			√	√	√	√	
TOYOTA	A11	Others	COROLLA/ AURIS		Sliding Roof			√	√	√	√	
TOYOTA	A11	Others	COROLLA/ AURIS		Entry&Start			√	√	√	√	
TOYOTA	A11	A11	YARIS/EC HO, w/ Smart Key		Engine and ECT			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	A11	A11	YARIS/EC HO, w/ Smart Key		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid 、 Zero Down、 Linear Valve Offset)

TOYOTA	A11	A11	YARIS/EC HO, w/ Smart Key			EMPS			√	√	√		1. Torque Sensor Adjustment
TOYOTA	A11	A11	YARIS/EC HO, w/ Smart Key			Air Conditioner			√	√	√	√	1. Servomotor Initialization
TOYOTA	A11	A11	YARIS/EC HO, w/ Smart Key			Theft Deterrent			*	*	*	*	
TOYOTA	A11	A11	YARIS/EC HO, w/ Smart Key			SRS Airbag			√	√			
TOYOTA	A11	A11	YARIS/EC HO, w/ Smart Key			Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	A11	A11	YARIS/EC HO, w/ Smart Key			D-Door Motor			√	√	√	√	
TOYOTA	A11	A11	YARIS/EC HO, w/ Smart Key			Combination Meter			√	√	√	√	

TOYOTA	A11	A11	YARIS/EC HO, w/ Smart Key			Entry&Start			√	√	√	√	
TOYOTA	A11	A11	YARIS/EC HO, w/o Smart Key			Engine and ECT			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	A11	A11	YARIS/EC HO, w/o Smart Key			ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid 、 Zero Down、 Linear Valve Offset)
TOYOTA	A11	A11	YARIS/EC HO, w/o Smart Key			EMPS			√	√	√		1. Torque Sensor Adjustment
TOYOTA	A11	A11	YARIS/EC HO, w/o Smart Key			Air Conditioner			√	√	√	√	1. Servomotor Initialization
TOYOTA	A11	A11	YARIS/EC HO, w/o Smart Key			Immobiliser			√	√	√	√	1. Key Code Registration 2. Key Code Erasure

TOYOTA	A11	A11	YARIS/EC HO, w/o Smart Key			Theft Deterrent			*	*	*	*	
TOYOTA	A11	A11	YARIS/EC HO, w/o Smart Key			SRS Airbag			√	√			
TOYOTA	A11	A11	YARIS/EC HO, w/o Smart Key			Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	A11	A11	YARIS/EC HO, w/o Smart Key			D-Door Motor			√	√	√	√	
TOYOTA	A11	A11	YARIS/EC HO, w/o Smart Key			Combination Meter			√	√	√	√	
TOYOTA	A11	A11	YARIS/EC HO			Engine and ECT			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode

TOYOTA	A11	A11	YARIS/EC HO			ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid 、 Zero Down、 Linear Valve Offset)
TOYOTA	A11	A11	YARIS/EC HO			EMPS			√	√	√		1. Torque Sensor Adjustment
TOYOTA	A11	A11	YARIS/EC HO			Air Conditioner			√	√	√	√	1. Servomotor Initialization
TOYOTA	A11	A11	YARIS/EC HO			Immobiliser			√	√	√	√	1. Key Code Registration 2. Key Code Erasure
TOYOTA	A11	A11	YARIS/EC HO			Theft Deterrent			*	*	*	*	
TOYOTA	A11	A11	YARIS/EC HO			SRS Airbag			√	√			
TOYOTA	A11	A11	YARIS/EC HO			Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	A11	A11	YARIS/EC HO			D-Door Motor			√	√	√	√	
TOYOTA	A11	A11	YARIS/EC HO			Combination Meter			√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	A11	A11	VIOS		Engine and ECT			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	A11	A11	VIOS		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	A11	VIOS		EMPS			√	√	√		1. Torque Sensor Adjustment
TOYOTA	A11	A11	VIOS		Air Conditioner			√	√	√	√	1. Servomotor Initialization
TOYOTA	A11	A11	VIOS		Immobiliser			√	√	√	√	1. Key Code Registration 2. Key Code Erasure
TOYOTA	A11	A11	VIOS		Theft Deterrent			*	*	*	*	
TOYOTA	A11	A11	VIOS		SRS Airbag			√	√			
TOYOTA	A11	A11	VIOS		Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	A11	A11	VIOS		Sliding Roof			√	√	√	√	
TOYOTA	A11	A11	VIOS		Combination Meter			√	√	√	√	

TOYOTA	A11	-0608	LAND CR.		Engine and ECT			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	A11	-0608	LAND CR.		Cruise Control			✓	✓			
TOYOTA	A11	-0608	LAND CR.		Air suspension			✓	✓	✓	✓	
TOYOTA	A11	-0608	LAND CR.		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	-0608	LAND CR.		Immobiliser			✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure
TOYOTA	A11	-0608	LAND CR.		Theft Deterrent			✓	✓	✓	✓	
TOYOTA	A11	-0608	LAND CR.		SRS Airbag			✓	✓			
TOYOTA	A11	-0608	LAND CR.		Body			✓	✓	✓	✓	
TOYOTA	A11	-0608	LAND CR.		Driver Door			✓	✓	✓	✓	

TOYOTA	A11	0608-	LAND CR.		Engine and ECT			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	A11	0608-	LAND CR.		Cruise Control			√	√			
TOYOTA	A11	0608-	LAND CR.		Air suspension			√	√	√	√	
TOYOTA	A11	0608-	LAND CR.		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	0608-	LAND CR.		Immobiliser			√	√	√	√	1. Key Code Registration 2. Key Code Erasure
TOYOTA	A11	0608-	LAND CR.		Theft Deterrent			√	√	√	√	
TOYOTA	A11	0608-	LAND CR.		SRS Airbag			√	√			
TOYOTA	A11	0608-	LAND CR.		Body			√	√	√	√	
TOYOTA	A11	0608-	LAND CR.		Driver Door			√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	A11	-0810	VIOS		Engine and ECT		√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	A11	-0810	VIOS		ABS/VSC/TRC		√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	-0810	VIOS		EMPS		√	√	√		1. Torque Sensor Adjustment
TOYOTA	A11	-0810	VIOS		Air Conditioner		√	√	√	√	1. Servomotor Initialization
TOYOTA	A11	-0810	VIOS		Immobiliser		√	√	√	√	1. Key Code Registration 2. Key Code Erasure
TOYOTA	A11	-0810	VIOS		Theft Deterrent		*	*	*	*	
TOYOTA	A11	-0810	VIOS		SRS Airbag		√	√			
TOYOTA	A11	-0810	VIOS		Main Body		√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	A11	-0810	VIOS		Sliding Roof		√	√	√	√	
TOYOTA	A11	-0810	VIOS		Combination Meter		√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	A11	0810-	VIOS		Engine and ECT			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	A11	0810-	VIOS		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	0810-	VIOS		EMPS			√	√	√		1. Torque Sensor Adjustment
TOYOTA	A11	0810-	VIOS		Air Conditioner			√	√	√	√	1. Servomotor Initialization
TOYOTA	A11	0810-	VIOS		Immobiliser			√	√	√	√	1. Key Code Registration 2. Key Code Erasure
TOYOTA	A11	0810-	VIOS		Theft Deterrent			*	*	*	*	
TOYOTA	A11	0810-	VIOS		SRS Airbag			√	√			
TOYOTA	A11	0810-	VIOS		Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	A11	0810-	VIOS		D-Door Motor			√	√	√	√	
TOYOTA	A11	0810-	VIOS		Sliding Roof			√	√	√	√	

TOYOTA	A11	0810-	VIOS			Combination Meter			√	√	√	√	
TOYOTA	A11	A11	NOAH			Engine and ECT			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	A11	A11	NOAH			ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	A11	NOAH			EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	A11	A11	NOAH			Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	A11	A11	NOAH			SRS Airbag			√	√			
TOYOTA	A11	A11	NOAH			Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	A11	A11	NOAH			Rear Left Door			√	√	√	√	
TOYOTA	A11	A11	NOAH			Rear Right Door			√	√	√	√	
TOYOTA	A11	A11	NOAH			D-Door Motor			√	√	√	√	
TOYOTA	A11	A11	NOAH			P-Door Motor			√	√	√	√	

TOYOTA	A11	A11	NOAH			RL-Door Motor			✓	✓	✓	✓	
TOYOTA	A11	A11	NOAH			RR-Door Motor			✓	✓	✓	✓	
TOYOTA	A11	A11	NOAH			Master Switch			✓	✓	✓		
TOYOTA	A11	A11	NOAH			Sliding Roof			✓	✓	✓	✓	
TOYOTA	A11	A11	NOAH			Combination Meter			✓	✓	✓	✓	
TOYOTA	A11	A11	NOAH			Entry&Start			✓	✓	✓	✓	
TOYOTA	A11	A11	VOXY			Engine and ECT			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	A11	A11	VOXY			ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	A11	VOXY			EMPS			✓	✓	✓		1. Torque Sensor Adjustment
TOYOTA	A11	A11	VOXY			Air Conditioner			✓	✓	✓	✓	1. Servomotor Initialization
TOYOTA	A11	A11	VOXY			SRS Airbag			✓	✓			
TOYOTA	A11	A11	VOXY			Main Body			✓	✓	✓	✓	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration

TOYOTA	A11	A11	VOXY			Rear Left Door			✓	✓	✓	✓	
TOYOTA	A11	A11	VOXY			Rear Right Door			✓	✓	✓	✓	
TOYOTA	A11	A11	VOXY			D-Door Motor			✓	✓	✓	✓	
TOYOTA	A11	A11	VOXY			P-Door Motor			✓	✓	✓	✓	
TOYOTA	A11	A11	VOXY			RL-Door Motor			✓	✓	✓	✓	
TOYOTA	A11	A11	VOXY			RR-Door Motor			✓	✓	✓	✓	
TOYOTA	A11	A11	VOXY			Master Switch			✓	✓	✓		
TOYOTA	A11	A11	VOXY			Sliding Roof			✓	✓	✓	✓	
TOYOTA	A11	A11	VOXY			Combination Meter			✓	✓	✓	✓	
TOYOTA	A11	A11	VOXY			Entry&Start			✓	✓	✓	✓	
TOYOTA	A11	A11	bB			Engine			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	A11	A11	bB			ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	A11	bB			EMPS			✓	✓	✓		1. Torque Sensor Adjustment
TOYOTA	A11	A11	bB			SRS Airbag			✓	✓			

TOYOTA	A11	A11	PRIUS		Engine and ECT		✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	A11	A11	PRIUS		Hybrid Control		✓	✓	✓	✓	1. VIN Read
TOYOTA	A11	A11	PRIUS		Radar Cruise		✓	✓	✓	✓	
TOYOTA	A11	A11	PRIUS		ABS/VSC/TRC		✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	A11	PRIUS		EMPS		✓	✓	✓		1. Torque Sensor Adjustment
TOYOTA	A11	A11	PRIUS		Transmission Control		✓	✓	✓		
TOYOTA	A11	A11	PRIUS		Intelligent Parking Assist		✓	✓	✓		
TOYOTA	A11	A11	PRIUS		Air Conditioner		✓	✓	✓	✓	1. Servomotor Initialization
TOYOTA	A11	A11	PRIUS		SRS Airbag		✓	✓	✓		
TOYOTA	A11	A11	PRIUS		Pre-Crash		✓	✓	✓	✓	

TOYOTA	A11	A11	PRIUS			Pre-Crash 2			√	√	√	√	1. Recognition ECU High Temp History Reset 2. Camera/Target Position Memory 3. Camera Axis Adjust 4. Rear Beam Axis Adjustment
TOYOTA	A11	A11	PRIUS			Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	A11	A11	PRIUS			PM1 Gateway			√	√	√		1. Initialization
TOYOTA	A11	A11	PRIUS			PM2 Gateway			√	√	√		1. Initialization
TOYOTA	A11	A11	PRIUS			D-Door Motor			√	√	√	√	
TOYOTA	A11	A11	PRIUS			P-Door Motor			√	√	√	√	
TOYOTA	A11	A11	PRIUS			RL-Door Motor			√	√	√	√	
TOYOTA	A11	A11	PRIUS			RR-Door Motor			√	√	√	√	
TOYOTA	A11	A11	PRIUS			Master Switch			√	√	√		
TOYOTA	A11	A11	PRIUS			Sliding Roof			√	√	√	√	
TOYOTA	A11	A11	PRIUS			Combination Meter			√	√	√	√	
TOYOTA	A11	A11	PRIUS			Entry&Start			√	√	√	√	
TOYOTA	A11	A11	PRIUS			Power Source Control			√	√	√	√	
TOYOTA	A11	A11	PRIUS			Navigation System			√	√			

SERVICE SOLUTIONS

TOYOTA	A11	A11	ESTIMA HYBRID		Engine and ECT			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	A11	A11	ESTIMA HYBRID		Hybrid Control			√	√	√	√	1. VIN Read
TOYOTA	A11	A11	ESTIMA HYBRID		HV Battery			√	√	√	√	
TOYOTA	A11	A11	ESTIMA HYBRID		Cruise Control			√	√	√		1. Beam Axis Adjustment
TOYOTA	A11	A11	ESTIMA HYBRID		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	A11	ESTIMA HYBRID		EMPS			√	√	√		1. Torque Sensor Adjustment
TOYOTA	A11	A11	ESTIMA HYBRID		Transmission Control			√	√	√		
TOYOTA	A11	A11	ESTIMA HYBRID		Intelligent Parking Assist			√	√	√		
TOYOTA	A11	A11	ESTIMA HYBRID		Air Conditioner			√	√	√	√	1. Servomotor Initialization
TOYOTA	A11	A11	ESTIMA HYBRID		SRS Airbag			√	√			

TOYOTA	A11	A11	ESTIMA HYBRID		Gateway		✓	✓			1. Initialization
TOYOTA	A11	A11	ESTIMA HYBRID		Combination Meter		✓	✓	✓	✓	
TOYOTA	A11	A11	iQ		Engine and ECT		✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	A11	A11	iQ		ABS/VSC/TRC		✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid 、 Zero Down、 Linear Valve Offset)
TOYOTA	A11	A11	iQ		EMPS		✓	✓	✓		1. Torque Sensor Adjustment
TOYOTA	A11	A11	iQ		Air Conditioner		✓	✓	✓	✓	1. Servomotor Initialization
TOYOTA	A11	A11	iQ		SRS Airbag		✓	✓			
TOYOTA	A11	A11	iQ		Main Body		✓	✓	✓	✓	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	A11	A11	iQ		PM2 Gateway		✓	✓	✓		1. Initialization
TOYOTA	A11	A11	iQ		D-Door Motor		✓	✓	✓	✓	
TOYOTA	A11	A11	iQ		P-Door Motor		✓	✓	✓	✓	

TOYOTA	A11	A11	iQ		Master Switch		✓	✓	✓		
TOYOTA	A11	A11	iQ		Combination Meter		✓	✓	✓	✓	
TOYOTA	A11	A11	iQ		Entry&Start		✓	✓	✓	✓	
TOYOTA	A11	A11	iQ		Power Source Control		✓	✓	✓	✓	
TOYOTA	A11	A11	iQ		Charging Control		✓	✓	✓	✓	
TOYOTA	A11	A11	iQ		Starting Control		✓	✓	✓	✓	
TOYOTA	A11	A11	iQ		Immobiliser		*	*			
TOYOTA	A11	A11	WISH		Engine and ECT		✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	A11	A11	WISH		ABS/VSC/TRC		✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	A11	WISH		EMPS		✓	✓	✓		1. Torque Sensor Adjustment
TOYOTA	A11	A11	WISH		Air Conditioner		✓	✓	✓	✓	1. Servomotor Initialization
TOYOTA	A11	A11	WISH		SRS Airbag		✓	✓	✓		

TOYOTA	All	All	WISH			Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	All	All	WISH			Combination Meter			√	√	√	√	
TOYOTA	Others	All	RX350			Engine			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	Others	All	RX350			ECT			√	√	√	√	1. Check Mode 2. Reset Memory 3. A/T Code Reset
TOYOTA	Others	All	RX350			Radar Cruise			√	√	√		1. Beam Axis Adjustment
TOYOTA	Others	All	RX350			Air suspension			√	√	√	√	
TOYOTA	Others	All	RX350			ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	Others	All	RX350			Four Wheel Drive			√	√	√	√	

TOYOTA	Others	All	RX350			Tire Pressure Monitor			✓	✓	✓		
TOYOTA	Others	All	RX350			EMPS			✓	✓	✓		1. Torque Sensor Adjustment
TOYOTA	Others	All	RX350			Parking Assist Monitor System			✓	✓	✓		
TOYOTA	Others	All	RX350			Air Conditioner			✓	✓	✓	✓	1. Servomotor Initialization
TOYOTA	Others	All	RX350			SRS Airbag			✓	✓	✓		
TOYOTA	Others	All	RX350			Pre-Crash			✓	✓	✓	✓	
TOYOTA	Others	All	RX350			Pre-Crash 2			✓	✓	✓	✓	1. Recognition ECU High Temp History Reset 2. Camera/Target Position Memory 3. Camera Axis Adjust 4. Rear Beam Axis Adjustment
TOYOTA	Others	All	RX350			Main Body			✓	✓	✓	✓	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	Others	All	RX350			PM1 Gateway			✓	✓	✓		1. Initialization
TOYOTA	Others	All	RX350			PM2 Gateway			✓	✓	✓		1. Initialization
TOYOTA	Others	All	RX350			Back Door			✓	✓	✓	✓	
TOYOTA	Others	All	RX350			D-Door Motor			✓	✓	✓	✓	

TOYOTA	Others	All	RX350			P-Door Motor			√	√	√	√	
TOYOTA	Others	All	RX350			RL-Door Motor			√	√	√	√	
TOYOTA	Others	All	RX350			RR-Door Motor			√	√	√	√	
TOYOTA	Others	All	RX350			Driver Seat					√	√	
TOYOTA	Others	All	RX350			Passenger Seat			*	*	*	*	
TOYOTA	Others	All	RX350			Master Switch			√	√	√		
TOYOTA	Others	All	RX350			Sliding Roof			√	√	√	√	
TOYOTA	Others	All	RX350			Tilt&Telescopic			√	√	√	√	
TOYOTA	Others	All	RX350			Combination Meter			√	√	√	√	
TOYOTA	Others	All	RX350			Clearance Sonar			√	√	√	√	
TOYOTA	Others	All	RX350			AFS			√	√	√	√	1. ECU Information Synchronize
TOYOTA	Others	All	RX350			Entry&Start			√	√	√	√	
TOYOTA	Others	All	RX350			Power Source Control			√	√	√	√	
TOYOTA	Others	All	RX350			Occupant Detection			√	√	√		
TOYOTA	Others	All	RX350			Charging Control			√	√	√	√	

TOYOTA	Others	All	RX350			Remote Engine Starter			√	√	√		1. Trouble Factor Code Clear
TOYOTA	Others	All	RX350			Starting Control			√	√	√	√	
TOYOTA	Others	All	RX350			Navigation System			√	√			
TOYOTA	Brazil	All	RX350			Engine			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	Brazil	All	RX350			ECT			√	√	√	√	1. Check Mode 2. Reset Memory 3. A/T Code Reset
TOYOTA	Brazil	All	RX350			Radar Cruise			√	√	√		1. Beam Axis Adjustment
TOYOTA	Brazil	All	RX350			Air suspension			√	√	√	√	
TOYOTA	Brazil	All	RX350			ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	Brazil	All	RX350			Four Wheel Drive			√	√	√	√	

TOYOTA	Brazil	All	RX350			Tire Pressure Monitor			✓	✓	✓		
TOYOTA	Brazil	All	RX350			EMPS			✓	✓	✓		1. Torque Sensor Adjustment
TOYOTA	Brazil	All	RX350			Parking Assist Monitor System			✓	✓	✓		
TOYOTA	Brazil	All	RX350			Air Conditioner			✓	✓	✓	✓	1. Servomotor Initialization
TOYOTA	Brazil	All	RX350			SRS Airbag			✓	✓	✓		
TOYOTA	Brazil	All	RX350			Pre-Crash			✓	✓	✓	✓	
TOYOTA	Brazil	All	RX350			Pre-Crash 2			✓	✓	✓	✓	1. Recognition ECU High Temp History Reset 2. Camera/Target Position Memory 3. Camera Axis Adjust 4. Rear Beam Axis Adjustment
TOYOTA	Brazil	All	RX350			Main Body			✓	✓	✓	✓	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	Brazil	All	RX350			PM1 Gateway			✓	✓	✓		1. Initialization
TOYOTA	Brazil	All	RX350			PM2 Gateway			✓	✓	✓		1. Initialization
TOYOTA	Brazil	All	RX350			Back Door			✓	✓	✓	✓	
TOYOTA	Brazil	All	RX350			D-Door Motor			✓	✓	✓	✓	

TOYOTA	Brazil	All	RX350			P-Door Motor			✓	✓	✓	✓	
TOYOTA	Brazil	All	RX350			RL-Door Motor			✓	✓	✓	✓	
TOYOTA	Brazil	All	RX350			RR-Door Motor			✓	✓	✓	✓	
TOYOTA	Brazil	All	RX350			Driver Seat					✓	✓	
TOYOTA	Brazil	All	RX350			Passenger Seat			*	*	*	*	
TOYOTA	Brazil	All	RX350			Master Switch			✓	✓	✓		
TOYOTA	Brazil	All	RX350			Sliding Roof			✓	✓	✓	✓	
TOYOTA	Brazil	All	RX350			Tilt&Telescopic			✓	✓	✓	✓	
TOYOTA	Brazil	All	RX350			Combination Meter			✓	✓	✓	✓	
TOYOTA	Brazil	All	RX350			Clearance Sonar			✓	✓	✓	✓	
TOYOTA	Brazil	All	RX350			AFS			✓	✓	✓	✓	1. ECU Information Synchronize
TOYOTA	Brazil	All	RX350			Entry&Start			✓	✓	✓	✓	
TOYOTA	Brazil	All	RX350			Power Source Control			✓	✓	✓	✓	
TOYOTA	Brazil	All	RX350			Occupant Detection			✓	✓	✓		
TOYOTA	Brazil	All	RX350			Charging Control			✓	✓	✓	✓	

TOYOTA	Brazil	All	RX350			Remote Engine Starter			√	√	√		1. Trouble Factor Code Clear
TOYOTA	Brazil	All	RX350			Starting Control			√	√	√	√	
TOYOTA	All	All	COROLLA/AURIS			Engine and ECT			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. DPF Deterioration Record Clear 5. A/F Sensor Compensation Reset 6. Check Mode 7. Crank Time Compensation Reset 8. Catalyst Record Clear 9. Supply Pump Initialization 10. Vehicle Mileage Write 11. Injector Compensation 12. Pilot Quantity Learning Values Reset
TOYOTA	All	All	COROLLA/AURIS			Multi-Mode M/T			√	√	√		
TOYOTA	All	All	COROLLA/AURIS			ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)

TOYOTA	A11	A11	COROLLA/ AURIS		EMPS			√	√	√		1. Torque Sensor Adjustment
TOYOTA	A11	A11	COROLLA/ AURIS		Air Conditioner			√	√	√	√	1. Servomotor Initialization
TOYOTA	A11	A11	COROLLA/ AURIS		Immobiliser			√	√	√	√	1. Key Code Registration 2. Key Code Erasure
TOYOTA	A11	A11	COROLLA/ AURIS		Theft Deterrent			*	*	*	*	
TOYOTA	A11	A11	COROLLA/ AURIS		SRS Airbag			√	√			
TOYOTA	A11	A11	COROLLA/ AURIS		Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	A11	A11	COROLLA/ AURIS		D-Door Motor			√	√	√	√	
TOYOTA	A11	A11	COROLLA/ AURIS		Sliding Roof			√	√	√	√	
TOYOTA	A11	A11	COROLLA/ AURIS		Entry&Start			√	√	√	√	
TOYOTA	A11	A11	COROLLA/ AURIS		Charging Control			√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	A11	A11	COROLLA/ AURIS		Engine and ECT			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. DPF Deterioration Record Clear 5. A/F Sensor Compensation Reset 6. Check Mode 7. Crank Time Compensation Reset 8. Catalyst Record Clear 9. Supply Pump Initialization 10. Vehicle Mileage Write 11. Injector Compensation 12. Pilot Quantity Learning Values Reset
TOYOTA	A11	A11	COROLLA/ AURIS		Multi-Mode M/T			√	√	√		
TOYOTA	A11	A11	COROLLA/ AURIS		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	A11	COROLLA/ AURIS		EMPS			√	√	√		1. Torque Sensor Adjustment
TOYOTA	A11	A11	COROLLA/ AURIS		Air Conditioner			√	√	√	√	1. Servomotor Initialization

TOYOTA	A11	A11	COROLLA/ AURIS		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	A11	A11	COROLLA/ AURIS		Theft Deterrent			*	*	*	*	
TOYOTA	A11	A11	COROLLA/ AURIS		SRS Airbag			√	√			
TOYOTA	A11	A11	COROLLA/ AURIS		Main Body			√	√	√	√	1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	A11	A11	COROLLA/ AURIS		D-Door Motor			√	√	√	√	
TOYOTA	A11	A11	COROLLA/ AURIS		Sliding Roof			√	√	√	√	
TOYOTA	A11	A11	COROLLA/ AURIS		Charging Control			√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	All	All	Yaris X-OVER		Engine and ECT			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. DPF Deterioration Record Clear 5. A/F Sensor Compensation Reset 6. Check Mode 7. Crank Time Compensation Reset 8. Catalyst Record Clear 9. Supply Pump Initialization 10. Vehicle Mileage Write 11. Injector Compensation 12. Pilot Quantity Learning Values Reset
TOYOTA	All	All	Yaris X-OVER		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	All	All	Yaris X-OVER		Four Wheel Drive			√	√	√	√	
TOYOTA	All	All	Yaris X-OVER		EMPS			√	√	√		1. Torque Sensor Adjustment
TOYOTA	All	All	Yaris X-OVER		Air Conditioner			√	√	√	√	1. Servomotor Initialization

TOYOTA	A11	A11	Yaris X-OVER			Theft Deterrent			*	*	*	*	
TOYOTA	A11	A11	Yaris X-OVER			SRS Airbag			√	√			
TOYOTA	A11	A11	Yaris X-OVER			Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	A11	A11	Yaris X-OVER			D-Door Motor			√	√	√	√	
TOYOTA	A11	A11	Yaris X-OVER			Combination Meter			√	√	√	√	
TOYOTA	A11	A11	Yaris X-OVER			Entry&Start			√	√	√	√	
TOYOTA	A11	A11	Yaris X-OVER			Charging Control			√	√	√	√	

SERVICE SOLUTIONS

TOYOTA	A11	A11	iQ		Engine and ECT			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. DPF Deterioration Record Clear 5. A/F Sensor Compensation Reset 6. Check Mode 7. Crank Time Compensation Reset 8. Catalyst Record Clear 9. Supply Pump Initialization 10. Vehicle Mileage Write 11. Injector Compensation 12. Pilot Quantity Learning Values Reset
TOYOTA	A11	A11	iQ		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	A11	iQ		EMPS			√	√	√		1. Torque Sensor Adjustment
TOYOTA	A11	A11	iQ		Air Conditioner			√	√	√	√	1. Servomotor Initialization
TOYOTA	A11	A11	iQ		SRS Airbag			√	√			

TOYOTA	A11	A11	iQ			Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	A11	A11	iQ			D-Door Motor			√	√	√	√	
TOYOTA	A11	A11	iQ			P-Door Motor			√	√	√	√	
TOYOTA	A11	A11	iQ			Master Switch			√	√	√		
TOYOTA	A11	A11	iQ			Combination Meter			√	√	√	√	
TOYOTA	A11	A11	iQ			Entry&Start			√	√	√	√	
TOYOTA	A11	A11	iQ			Power Source Control			√	√	√	√	
TOYOTA	A11	A11	iQ			Charging Control			√	√	√	√	
TOYOTA	A11	A11	iQ			Starting Control			√	√	√	√	
TOYOTA	GTMC Product	A11	CAMRY HV			Engine and ECT			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	GTMC Product	A11	CAMRY HV			Hybrid Control			√	√	√	√	1. VIN Read

TOYOTA	GTMC Product	A11	CAMRY HV			Cruise Control			√	√	√		
TOYOTA	GTMC Product	A11	CAMRY HV			ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	GTMC Product	A11	CAMRY HV			EMPS			√	√	√		1. Torque Sensor Adjustment
TOYOTA	GTMC Product	A11	CAMRY HV			Air Conditioner			√	√	√	√	1. Servomotor Initialization
TOYOTA	GTMC Product	A11	CAMRY HV			SRS Airbag			√	√			
TOYOTA	GTMC Product	A11	CAMRY HV			Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	GTMC Product	A11	CAMRY HV			Gateway			√	√			1. Initialization
TOYOTA	GTMC Product	A11	CAMRY HV			D-Door Motor			√	√	√	√	
TOYOTA	GTMC Product	A11	CAMRY HV			Driver Seat			√	√	√	√	

TOYOTA	GTMC Product	A11	CAMRY HV			Sliding Roof			√	√	√	√	
TOYOTA	GTMC Product	A11	CAMRY HV			Combination Meter			√	√	√	√	
TOYOTA	GTMC Product	A11	CAMRY HV			Mirror					√	√	
TOYOTA	GTMC Product	A11	CAMRY HV			AFS			√	√	√	√	1. ECU Information Synchronize
TOYOTA	GTMC Product	A11	CAMRY HV			Entry&Start			√	√	√	√	
TOYOTA	GTMC Product	A11	CAMRY HV			Navigation System			√	√			
TOYOTA	Others	A11	CAMRY HV			Engine and ECT			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	Others	A11	CAMRY HV			Hybrid Control			√	√	√	√	1. VIN Read
TOYOTA	Others	A11	CAMRY HV			Cruise Control			√	√	√		

TOYOTA	Others	All	CAMRY HV			ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	Others	All	CAMRY HV			EMPS			√	√	√		1. Torque Sensor Adjustment
TOYOTA	Others	All	CAMRY HV			Air Conditioner			√	√	√	√	1. Servomotor Initialization
TOYOTA	Others	All	CAMRY HV			Theft Deterrent			*	*	*	*	
TOYOTA	Others	All	CAMRY HV			SRS Airbag			√	√			
TOYOTA	Others	All	CAMRY HV			Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	Others	All	CAMRY HV			Gateway			√	√			1. Initialization
TOYOTA	Others	All	CAMRY HV			D-Door Motor			√	√	√	√	
TOYOTA	Others	All	CAMRY HV			P-Door Motor			√	√	√	√	
TOYOTA	Others	All	CAMRY HV			RL-Door Motor			√	√	√	√	
TOYOTA	Others	All	CAMRY HV			RR-Door Motor			√	√	√	√	
TOYOTA	Others	All	CAMRY HV			Driver Seat					√	√	

TOYOTA	Others	All	CAMRY HV			Master Switch			√	√	√		
TOYOTA	Others	All	CAMRY HV			Sliding Roof			√	√	√	√	
TOYOTA	Others	All	CAMRY HV			Tilt&Telescopic			√	√	√	√	
TOYOTA	Others	All	CAMRY HV			Combination Meter			√	√	√	√	
TOYOTA	Others	All	CAMRY HV			Mirror					√	√	
TOYOTA	Others	All	CAMRY HV			AFS			√	√	√	√	1.ECU Information Synchronize
TOYOTA	Others	All	CAMRY HV			Entry&Start			√	√	√	√	
TOYOTA	Others	All	CAMRY HV			Navigation System			√	√			
TOYOTA	All	All	HIGHLANDER			Engine			√	√	√	√	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	All	All	HIGHLANDER			ECT			√	√	√	√	1. Check Mode 2. Reset Memory 3. A/T Code Reset
TOYOTA	All	All	HIGHLANDER			Cruise Control			√	√			

TOYOTA	A11	A11	HIGHLANDER			ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	A11	HIGHLANDER			EMPS			√	√	√		1. Torque Sensor Adjustment
TOYOTA	A11	A11	HIGHLANDER			Air Conditioner			√	√	√	√	1. Servomotor Initialization
TOYOTA	A11	A11	HIGHLANDER			SRS Airbag			√	√			
TOYOTA	A11	A11	HIGHLANDER			Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	A11	A11	HIGHLANDER			Back Door			√	√	√	√	
TOYOTA	A11	A11	HIGHLANDER			D-Door Motor			√	√	√	√	
TOYOTA	A11	A11	HIGHLANDER			P-Door Motor			√	√	√	√	
TOYOTA	A11	A11	HIGHLANDER			RL-Door Motor			√	√	√	√	
TOYOTA	A11	A11	HIGHLANDER			RR-Door Motor			√	√	√	√	
TOYOTA	A11	A11	HIGHLANDER			Sliding Roof			√	√	√	√	
TOYOTA	A11	A11	HIGHLANDER			Combination Meter			√	√	√	√	

TOYOTA	A11	A11	HIGHLANDER		Entry&Start			√	√	√	√	
TOYOTA	A11	A11	HIGHLANDER		Immobiliser			√	√	√	√	1.Key Code Registration 2.Key Code Erasure
TOYOTA	A11	A11	RX450h		Engine			√	√	√	√	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode
TOYOTA	A11	A11	RX450h		Hybrid Control			√	√	√	√	1.VIN Read
TOYOTA	A11	A11	RX450h		Radar Cruise			√	√	√		1.Beam Axis Adjustment
TOYOTA	A11	A11	RX450h		Air suspension			√	√	√	√	
TOYOTA	A11	A11	RX450h		ABS/VSC/TRC			√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	A11	RX450h		Tire Pressure Monitor			√	√	√		
TOYOTA	A11	A11	RX450h		EMPS			√	√	√		1.Torque Sensor Adjustment
TOYOTA	A11	A11	RX450h		Parking Assist Monitor System			√	√	√		
TOYOTA	A11	A11	RX450h		Air Conditioner			√	√	√	√	1.Servomotor Initialization
TOYOTA	A11	A11	RX450h		SRS Airbag			√	√	√		

TOYOTA	A11	A11	RX450h			Pre-Crash			√	√	√	√	
TOYOTA	A11	A11	RX450h			Pre-Crash 2			√	√	√	√	1. Recognition ECU High Temp History Reset 2. Camera/Target Position Memory 3. Camera Axis Adjust 4. Rear Beam Axis Adjustment
TOYOTA	A11	A11	RX450h			Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	A11	A11	RX450h			PM1 Gateway			√	√	√		1. Initialization
TOYOTA	A11	A11	RX450h			PM2 Gateway			√	√	√		1. Initialization
TOYOTA	A11	A11	RX450h			Back Door			√	√	√	√	
TOYOTA	A11	A11	RX450h			D-Door Motor			√	√	√	√	
TOYOTA	A11	A11	RX450h			P-Door Motor			√	√	√	√	
TOYOTA	A11	A11	RX450h			RL-Door Motor			√	√	√	√	
TOYOTA	A11	A11	RX450h			RR-Door Motor			√	√	√	√	
TOYOTA	A11	A11	RX450h			Driver Seat					√	√	
TOYOTA	A11	A11	RX450h			Passenger Seat			*	*	*	*	
TOYOTA	A11	A11	RX450h			Master Switch			√	√	√		
TOYOTA	A11	A11	RX450h			Sliding Roof			√	√	√	√	
TOYOTA	A11	A11	RX450h			Tilt&Telescopic			√	√	√	√	
TOYOTA	A11	A11	RX450h			Combination Meter			√	√	√	√	
TOYOTA	A11	A11	RX450h			Clearance Sonar			√	√	√	√	

TOYOTA	A11	A11	RX450h			AFS			✓	✓	✓	✓	1. ECU Information Synchronize
TOYOTA	A11	A11	RX450h			Entry&Start			✓	✓	✓	✓	
TOYOTA	A11	A11	RX450h			Power Source Control			✓	✓	✓	✓	
TOYOTA	A11	A11	RX450h			Occupant Detection			✓	✓	✓		
TOYOTA	A11	A11	RX450h			Remote Engine Starter			✓	✓	✓		1. Trouble Factor Code Clear
TOYOTA	A11	A11	RX450h			Navigation System			✓	✓			
TOYOTA	A11	A11	TUNDRA			Engine and ECT			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	A11	A11	TUNDRA			Cruise Control			✓	✓			
TOYOTA	A11	A11	TUNDRA			ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	A11	TUNDRA			Tire Pressure Monitor			✓	✓	✓		
TOYOTA	A11	A11	TUNDRA			Air Conditioner			✓	✓	✓	✓	1. Servomotor Initialization

TOYOTA	A11	A11	TUNDRA			Immobiliser			✓	✓	✓	✓	1.Key Code Registration 2.Key Code Erasure
TOYOTA	A11	A11	TUNDRA			SRS Airbag			✓	✓	✓		
TOYOTA	A11	A11	TUNDRA			Main Body			✓	✓	✓	✓	1. Initialization 2.Wireless Code Erasure 3.Wireless Code Registration
TOYOTA	A11	A11	TUNDRA			D-Door Motor			✓	✓	✓	✓	
TOYOTA	A11	A11	TUNDRA			P-Door Motor			✓	✓	✓	✓	
TOYOTA	A11	A11	TUNDRA			Driver Seat					✓	✓	
TOYOTA	A11	A11	TUNDRA			Sliding Roof			✓	✓	✓	✓	
TOYOTA	A11	A11	TUNDRA			Tilt&Telescopic			✓	✓	✓	✓	
TOYOTA	A11	A11	TUNDRA			Combination Meter			✓	✓	✓	✓	
TOYOTA	A11	A11	TUNDRA			Occupant Detection			✓	✓	✓		
TOYOTA	A11	A11	COROLLA VERSO			Engine and ECT			✓	✓	✓	✓	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode
TOYOTA	A11	A11	COROLLA VERSO			Cruise Control			✓	✓			

TOYOTA	A11	A11	COROLLA VERSO			ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid 、 Zero Down、 Linear Valve Offset)
TOYOTA	A11	A11	COROLLA VERSO			EMPS			√	√	√		1. Torque Sensor Adjustment
TOYOTA	A11	A11	COROLLA VERSO			Air Conditioner			√	√	√	√	1. Servomotor Initialization
TOYOTA	A11	A11	COROLLA VERSO			SRS Airbag			√	√	√		
TOYOTA	A11	A11	COROLLA VERSO			Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	A11	A11	COROLLA VERSO			PM1 Gateway			√	√	√		1. Initialization
TOYOTA	A11	A11	COROLLA VERSO			D-Door Motor			√	√	√	√	
TOYOTA	A11	A11	COROLLA VERSO			P-Door Motor			√	√	√	√	
TOYOTA	A11	A11	COROLLA VERSO			RL-Door Motor			√	√	√	√	
TOYOTA	A11	A11	COROLLA VERSO			RR-Door Motor			√	√	√	√	
TOYOTA	A11	A11	COROLLA VERSO			Master Switch			√	√	√		
TOYOTA	A11	A11	COROLLA VERSO			Sliding Roof			√	√	√	√	

TOYOTA	A11	A11	COROLLA VERSO			Combination Meter			✓	✓	✓	✓	
TOYOTA	A11	A11	COROLLA VERSO			Entry&Start			✓	✓	✓	✓	
TOYOTA	A11	A11	COROLLA VERSO			Power Source Control			✓	✓	✓	✓	
TOYOTA	A11	A11	COROLLA VERSO			Charging Control			✓	✓	✓	✓	
TOYOTA	A11	A11	COROLLA VERSO			Starting Control			✓	✓	✓	✓	
TOYOTA	A11	A11	COROLLA VERSO			Navigation System			✓	✓			
TOYOTA	A11	A11	COROLLA VERSO			Immobiliser			✓	✓	✓	✓	1.Key Code Registration 2.Key Code Erasure
TOYOTA	A11	-0108	CROWN			Engine and ECT			✓	✓	✓	✓	1.Check Mode 2.Reset Memory
TOYOTA	A11	-0108	CROWN			Cruise Control			✓	✓			
TOYOTA	A11	-0108	CROWN			ABS/VSC/TRC			✓	✓	✓	✓	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid 、Zero Down、Linear Valve Offset)
TOYOTA	A11	-0108	CROWN			Air Conditioner			✓	✓	✓	✓	1.Compass calibration 2.Servomotor Initialization
TOYOTA	A11	-0108	CROWN			Immobiliser			✓	✓	✓	✓	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	A11	-0108	CROWN			SRS Airbag			✓	✓			

TOYOTA	A11	-0108	CROWN		Body			√	√	√	√	
TOYOTA	A11	-0108	CROWN		Body No. 2					√	√	
TOYOTA	A11	-0108	CROWN		Body No. 3					√	√	
TOYOTA	A11	-0108	CROWN		Driver Door			√	√	√	√	
TOYOTA	A11	-0108	CROWN		Passenger Door			√	√	√	√	
TOYOTA	A11	-0108	CROWN		Sliding Roof					√	√	
TOYOTA	A11	-0108	CROWN		Tilt&Telescopic			√	√	√	√	
TOYOTA	A11	-0108	CROWN		Combination Meter					√	√	
TOYOTA	A11	-0108	CROWN		Combination Switch					√		
TOYOTA	A11	0108-	CROWN		Engine and ECT			√	√	√	√	1. Check Mode 2. Reset Memory
TOYOTA	A11	0108-	CROWN		Cruise Control			√	√			
TOYOTA	A11	0108-	CROWN		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	0108-	CROWN		Air Conditioner			√	√	√	√	1. Compass calibration 2. Servomotor Initialization
TOYOTA	A11	0108-	CROWN		Immobiliser			√	√	√	√	1. Key Code Registration 2. Key Code Erasure *3. Auto Registration Closure
TOYOTA	A11	0108-	CROWN		Theft Deterrent			√	√	√	√	

TOYOTA	A11	0108-	CROWN		SRS Airbag			✓	✓			
TOYOTA	A11	0108-	CROWN		Body			✓	✓	✓	✓	
TOYOTA	A11	0108-	CROWN		Body No.2					✓	✓	
TOYOTA	A11	0108-	CROWN		Body No.3					✓	✓	
TOYOTA	A11	0108-	CROWN		Driver Door			✓	✓	✓	✓	
TOYOTA	A11	0108-	CROWN		Passenger Door			✓	✓	✓	✓	
TOYOTA	A11	0108-	CROWN		Rear Left Door			✓	✓	✓	✓	
TOYOTA	A11	0108-	CROWN		Rear Right Door			✓	✓	✓	✓	
TOYOTA	A11	0108-	CROWN		Sliding Roof					✓	✓	
TOYOTA	A11	0108-	CROWN		Tilt&Telescopic			✓	✓	✓	✓	
TOYOTA	A11	0108-	CROWN		Combination Meter					✓	✓	
TOYOTA	A11	0108-	CROWN		Combination Switch					✓		
TOYOTA	A11	A11	SC300		Engine and ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory
TOYOTA	A11	A11	SC300		Cruise Control			✓	✓			
TOYOTA	A11	A11	SC300		Immobiliser			✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure *3. Auto Registration Closure
TOYOTA	A11	A11	AYGO		Engine and ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory
TOYOTA	A11	A11	AYGO		Multi-Mode M/T			✓	✓			

TOYOTA	A11	A11	AYGO		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	A11	AYGO		EMPS			✓	✓	✓		1. Torque Sensor Adjustment
TOYOTA	A11	A11	AYGO		Immobiliser			✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure
TOYOTA	A11	A11	AYGO		SRS Airbag			✓	✓			
TOYOTA	A11	-0611	COROLLA/ AURIS		Engine and ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory
TOYOTA	A11	-0611	COROLLA/ AURIS		Cruise Control			✓	✓			
TOYOTA	A11	-0611	COROLLA/ AURIS		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	-0611	COROLLA/ AURIS		EMPS			✓	✓	✓		1. Torque Sensor Adjustment
TOYOTA	A11	-0611	COROLLA/ AURIS		SRS Airbag			✓	✓			
TOYOTA	A11	0611- 0706	COROLLA/ AURIS		Engine and ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory
TOYOTA	A11	0611- 0706	COROLLA/ AURIS		Cruise Control			✓	✓			

TOYOTA	A11	0611-0706	COROLLA/AURIS		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	0611-0706	COROLLA/AURIS		EMPS			√	√	√		1. Torque Sensor Adjustment
TOYOTA	A11	0611-0706	COROLLA/AURIS		Air Conditioner			√	√	√	√	1. Servomotor Initialization
TOYOTA	A11	0611-0706	COROLLA/AURIS		Immobiliser			√	√	√	√	1. Key Code Registration 2. Key Code Erasure
TOYOTA	A11	0611-0706	COROLLA/AURIS		SRS Airbag			√	√			
TOYOTA	A11	0611-0706	COROLLA/AURIS		Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	A11	0611-0706	COROLLA/AURIS		D-Door Motor			√	√	√	√	
TOYOTA	A11	0611-0706	COROLLA/AURIS		P-Door Motor			√	√	√	√	
TOYOTA	A11	0611-0706	COROLLA/AURIS		RL-Door Motor			√	√	√	√	
TOYOTA	A11	0611-0706	COROLLA/AURIS		RR-Door Motor			√	√	√	√	
TOYOTA	A11	0706-	COROLLA/AURIS		Engine and ECT			√	√	√	√	1. Check Mode 2. Reset Memory

TOYOTA	A11	0706-	COROLLA/ AURIS			ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid 、 Zero Down、 Linear Valve Offset)
TOYOTA	A11	0706-	COROLLA/ AURIS			EMPS			√	√	√		1. Torque Sensor Adjustment
TOYOTA	A11	0706-	COROLLA/ AURIS			Air Conditioner			√	√	√	√	1. Servomotor Initialization
TOYOTA	A11	0706-	COROLLA/ AURIS			Immobiliser			√	√	√	√	1. Key Code Registration 2. Key Code Erasure
TOYOTA	A11	0706-	COROLLA/ AURIS			SRS Airbag			√	√			
TOYOTA	A11	0706-	COROLLA/ AURIS			Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	A11	0706-	COROLLA/ AURIS			Accessory Gateway			√	√	√		
TOYOTA	A11	0706-	COROLLA/ AURIS			D-Door Motor			√	√	√	√	
TOYOTA	A11	0706-	COROLLA/ AURIS			Sliding Roof			√	√	√	√	
TOYOTA	A11	0706-	COROLLA/ AURIS			Entry&Start			√	√	√	√	
TOYOTA	A11	-0611	COROLLA/ AURIS			Engine and ECT			√	√	√	√	1. Check Mode 2. Reset Memory
TOYOTA	A11	-0611	COROLLA/ AURIS			Cruise Control			√	√			

TOYOTA	A11	-0611	COROLLA/ AURIS		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid 、 Zero Down、 Linear Valve Offset)
TOYOTA	A11	-0611	COROLLA/ AURIS		EMPS			√	√	√		1. Torque Sensor Adjustment
TOYOTA	A11	-0611	COROLLA/ AURIS		SRS Airbag			√	√			
TOYOTA	A11	0611- 0706	COROLLA/ AURIS		Engine and ECT			√	√	√	√	1. Check Mode 2. Reset Memory
TOYOTA	A11	0611- 0706	COROLLA/ AURIS		Cruise Control			√	√			
TOYOTA	A11	0611- 0706	COROLLA/ AURIS		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid 、 Zero Down、 Linear Valve Offset)
TOYOTA	A11	0611- 0706	COROLLA/ AURIS		EMPS			√	√	√		1. Torque Sensor Adjustment
TOYOTA	A11	0611- 0706	COROLLA/ AURIS		Air Conditioner			√	√	√	√	1. Servomotor Initialization
TOYOTA	A11	0611- 0706	COROLLA/ AURIS		Immobiliser			√	√	√	√	1. Key Code Registration 2. Key Code Erasure
TOYOTA	A11	0611- 0706	COROLLA/ AURIS		SRS Airbag			√	√			

TOYOTA	A11	0611-0706	COROLLA/AURIS		Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	A11	0611-0706	COROLLA/AURIS		D-Door Motor			√	√	√	√	
TOYOTA	A11	0706-	COROLLA/AURIS		Engine and ECT			√	√	√	√	1. Check Mode 2. Reset Memory
TOYOTA	A11	0706-	COROLLA/AURIS		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	0706-	COROLLA/AURIS		EMPS			√	√	√		1. Torque Sensor Adjustment
TOYOTA	A11	0706-	COROLLA/AURIS		Air Conditioner			√	√	√	√	1. Servomotor Initialization
TOYOTA	A11	0706-	COROLLA/AURIS		Immobiliser			√	√	√	√	1. Key Code Registration 2. Key Code Erasure
TOYOTA	A11	0706-	COROLLA/AURIS		SRS Airbag			√	√			
TOYOTA	A11	0706-	COROLLA/AURIS		Main Body			√	√	√	√	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
TOYOTA	A11	0706-	COROLLA/AURIS		Accessory Gateway			√	√	√		
TOYOTA	A11	0706-	COROLLA/AURIS		D-Door Motor			√	√	√	√	

TOYOTA	A11	0706-	COROLLA/ AURIS		Sliding Roof		✓	✓	✓	✓	
TOYOTA	A11	0706-	COROLLA/ AURIS		Entry&Start		✓	✓	✓	✓	
TOYOTA	A11	-0406	COROLLA		Engine and ECT		✓	✓	✓	✓	1. Check Mode 2. Reset Memory
TOYOTA	A11	-0406	COROLLA		ABS/VSC/TRC		✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid 、 Zero Down、 Linear Valve Offset)
TOYOTA	A11	-0406	COROLLA		Immobiliser		✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure *3. Auto Registration Closure
TOYOTA	A11	-0406	COROLLA		SRS Airbag		✓	✓			
TOYOTA	A11	0406-	COROLLA		Engine and ECT		✓	✓	✓	✓	1. Check Mode 2. Reset Memory
TOYOTA	A11	0406-	COROLLA		ABS/VSC/TRC		✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid 、 Zero Down、 Linear Valve Offset)
TOYOTA	A11	0406-	COROLLA		Immobiliser		✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure *3. Auto Registration Closure
TOYOTA	A11	0406-	COROLLA		SRS Airbag		✓	✓			

TOYOTA	A11	A11	T100		Engine and ECT			√	√	√	√	1. Check Mode 2. Reset Memory
TOYOTA	A11	-0301	YARIS/EC HO		Engine and ECT			√	√	√	√	1. Check Mode 2. Reset Memory
TOYOTA	A11	-0301	YARIS/EC HO		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid 、 Zero Down、 Linear Valve Offset)
TOYOTA	A11	-0301	YARIS/EC HO		EMPS			√	√	√		1. Torque Sensor Adjustment
TOYOTA	A11	-0301	YARIS/EC HO		Immobiliser			√	√	√	√	1. Key Code Registration 2. Key Code Erasure *3. Auto Registration Closure
TOYOTA	A11	-0301	YARIS/EC HO		SRS Airbag			√	√			
TOYOTA	A11	0301-	YARIS/EC HO		Engine and ECT			√	√	√	√	1. Check Mode 2. Reset Memory
TOYOTA	A11	0301-	YARIS/EC HO		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid 、 Zero Down、 Linear Valve Offset)
TOYOTA	A11	0301-	YARIS/EC HO		EMPS			√	√	√		1. Torque Sensor Adjustment

TOYOTA	A11	0301-	YARIS/EC HO		Immobiliser		√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	A11	0301-	YARIS/EC HO		SRS Airbag		√	√			
TOYOTA	A11	A11	VIOS		Engine and ECT		√	√	√	√	1.Check Mode 2.Reset Memory
TOYOTA	A11	A11	VIOS		ABS/VSC/TRC		√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid 、Zero Down、Linear Valve Offset)
TOYOTA	A11	A11	VIOS		Immobiliser		√	√	√	√	1.Key Code Registration 2.Key Code Erasure *3.Auto Registration Closure
TOYOTA	A11	A11	VIOS		SRS Airbag		√	√			
TOYOTA	A11	A11	SEQUOIA		Engine and ECT		√	√	√	√	1.Check Mode 2.Reset Memory
TOYOTA	A11	A11	SEQUOIA		Cruise Control		√	√			
TOYOTA	A11	A11	SEQUOIA		ABS/VSC/TRC		√	√	√	√	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid 、Zero Down、Linear Valve Offset)
TOYOTA	A11	A11	SEQUOIA		SRS Airbag		√	√			
TOYOTA	A11	A11	SEQUOIA		Body		√	√	√	√	

TOYOTA	A11	A11	SEQUOIA			Driver Door			✓	✓	✓	✓	
TOYOTA	A11	A11	SEQUOIA			Passenger Door			✓	✓	✓	✓	
TOYOTA	A11	A11	SEQUOIA			Back Door			✓	✓	✓	✓	
TOYOTA	A11	A11	SEQUOIA			Sliding Roof					✓	✓	
TOYOTA	A11	-0208	LAND CR.			Engine and ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory
TOYOTA	A11	-0208	LAND CR.			Cruise Control			✓	✓			
TOYOTA	A11	-0208	LAND CR.			AHC			✓	✓	✓	✓	
TOYOTA	A11	-0208	LAND CR.			ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid 、 Zero Down、 Linear Valve Offset)
TOYOTA	A11	-0208	LAND CR.			Immobiliser			✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure *3. Auto Registration Closure
TOYOTA	A11	-0208	LAND CR.			SRS Airbag			✓	✓			
TOYOTA	A11	-0208	LAND CR.			Body			✓	✓	✓	✓	
TOYOTA	A11	-0208	LAND CR.			Driver Seat					✓	✓	
TOYOTA	A11	-0208	LAND CR.			Tilt&Telescopic			✓	✓	✓	✓	
TOYOTA	A11	-0208	LAND CR.			Mirror					✓	✓	
TOYOTA	A11	0208-0408	LAND CR.			Engine and ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory
TOYOTA	A11	0208-0408	LAND CR.			Cruise Control			✓	✓			
TOYOTA	A11	0208-0408	LAND CR.			AHC			✓	✓	✓	✓	

TOYOTA	A11	0208-0408	LAND CR.		ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	0208-0408	LAND CR.		VGRS			✓	✓	✓		
TOYOTA	A11	0208-0408	LAND CR.		Immobiliser			✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure
TOYOTA	A11	0208-0408	LAND CR.		Theft Deterrent			✓	✓	✓	✓	
TOYOTA	A11	0208-0408	LAND CR.		SRS Airbag			✓	✓			
TOYOTA	A11	0208-0408	LAND CR.		Body			✓	✓	✓	✓	
TOYOTA	A11	0208-0408	LAND CR.		Driver Door			✓	✓	✓	✓	
TOYOTA	A11	0208-0408	LAND CR.		Driver Seat					✓	✓	
TOYOTA	A11	0208-0408	LAND CR.		Tilt&Telescopic			✓	✓	✓	✓	
TOYOTA	A11	0208-0408	LAND CR.		Mirror					✓	✓	
TOYOTA	A11	0208-0408	LAND CR.		Rain Sensor					✓		
TOYOTA	A11	0208-0408	LAND CR.		Wiper					✓	✓	
TOYOTA	A11	0408-	LAND CR.		Engine and ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory
TOYOTA	A11	0408-	LAND CR.		Cruise Control			✓	✓			

TOYOTA	A11	0408-	LAND CR.			AHC			✓	✓	✓	✓	
TOYOTA	A11	0408-	LAND CR.			ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	0408-	LAND CR.			VGRS			✓	✓	✓		
TOYOTA	A11	0408-	LAND CR.			Immobiliser			✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure
TOYOTA	A11	0408-	LAND CR.			Theft Deterrent			✓	✓	✓	✓	
TOYOTA	A11	0408-	LAND CR.			SRS Airbag			✓	✓			
TOYOTA	A11	0408-	LAND CR.			Body			✓	✓	✓	✓	
TOYOTA	A11	0408-	LAND CR.			Driver Door			✓	✓	✓	✓	
TOYOTA	A11	0408-	LAND CR.			Driver Seat					✓	✓	
TOYOTA	A11	0408-	LAND CR.			Tilt&Telescopic			✓	✓	✓	✓	
TOYOTA	A11	0408-	LAND CR.			Mirror					✓	✓	
TOYOTA	A11	0408-	LAND CR.			Rain Sensor					✓		
TOYOTA	A11	0408-	LAND CR.			Wiper					✓	✓	
TOYOTA	A11	-0408	LX470			Engine and ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory
TOYOTA	A11	-0408	LX470			Cruise Control			✓	✓			
TOYOTA	A11	-0408	LX470			AHC			✓	✓	✓	✓	

TOYOTA	A11	-0408	LX470			ABS/VSC/TRC			✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	-0408	LX470			VGRS			✓	✓	✓		
TOYOTA	A11	-0408	LX470			Immobiliser			✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure
TOYOTA	A11	-0408	LX470			Theft Deterrent			✓	✓	✓	✓	
TOYOTA	A11	-0408	LX470			SRS Airbag			✓	✓			
TOYOTA	A11	-0408	LX470			Body			✓	✓	✓	✓	
TOYOTA	A11	-0408	LX470			Body No. 2					✓	✓	
TOYOTA	A11	-0408	LX470			Driver Door			✓	✓	✓	✓	
TOYOTA	A11	-0408	LX470			Driver Seat					✓	✓	
TOYOTA	A11	-0408	LX470			Sliding Roof					✓	✓	
TOYOTA	A11	-0408	LX470			Tilt&Telescopic			✓	✓	✓	✓	
TOYOTA	A11	-0408	LX470			Mirror					✓	✓	
TOYOTA	A11	-0408	LX470			Rain Sensor					✓		
TOYOTA	A11	-0408	LX470			Wiper					✓	✓	
TOYOTA	A11	0408-	LX470			Engine and ECT			✓	✓	✓	✓	1. Check Mode 2. Reset Memory
TOYOTA	A11	0408-	LX470			Cruise Control			✓	✓			
TOYOTA	A11	0408-	LX470			AHC			✓	✓	✓	✓	

TOYOTA	A11	0408-	LX470			ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	0408-	LX470			VGRS			√	√	√		
TOYOTA	A11	0408-	LX470			Immobiliser			√	√	√	√	1. Key Code Registration 2. Key Code Erasure
TOYOTA	A11	0408-	LX470			Theft Deterrent			√	√	√	√	
TOYOTA	A11	0408-	LX470			SRS Airbag			√	√			
TOYOTA	A11	0408-	LX470			Body			√	√	√	√	
TOYOTA	A11	0408-	LX470			Body No. 2					√	√	
TOYOTA	A11	0408-	LX470			Driver Door			√	√	√	√	
TOYOTA	A11	0408-	LX470			Driver Seat					√	√	
TOYOTA	A11	0408-	LX470			Sliding Roof					√	√	
TOYOTA	A11	0408-	LX470			Tilt&Telescopic			√	√	√	√	
TOYOTA	A11	0408-	LX470			Mirror					√	√	
TOYOTA	A11	0408-	LX470			Rain Sensor					√		
TOYOTA	A11	0408-	LX470			Wiper					√	√	
TOYOTA	A11	-0008	4RUNNER			Engine and ECT			√	√	√	√	1. Check Mode 2. Reset Memory
TOYOTA	A11	-0008	4RUNNER			SRS Airbag			√	√			
TOYOTA	A11	0008-	4RUNNER			Engine and ECT			√	√	√	√	1. Check Mode 2. Reset Memory

TOYOTA	A11	0008-	4RUNNER		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	0008-	4RUNNER		Immobiliser			√	√	√	√	1. Key Code Registration 2. Key Code Erasure *3. Auto Registration Closure
TOYOTA	A11	0008-	4RUNNER		SRS Airbag			√	√			
TOYOTA	A11	-0308	RAV4		Engine and ECT			√	√	√	√	1. Check Mode 2. Reset Memory
TOYOTA	A11	-0308	RAV4		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	-0308	RAV4		Immobiliser			√	√	√	√	1. Key Code Registration 2. Key Code Erasure *3. Auto Registration Closure
TOYOTA	A11	-0308	RAV4		SRS Airbag			√	√			
TOYOTA	A11	0308-	RAV4		Engine and ECT			√	√	√	√	1. Check Mode 2. Reset Memory

TOYOTA	A11	0308-	RAV4		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	0308-	RAV4		Immobiliser			√	√	√	√	1. Key Code Registration 2. Key Code Erasure *3. Auto Registration Closure
TOYOTA	A11	0308-	RAV4		SRS Airbag			√	√			
TOYOTA	A11	-0705	COROLLA VERSO		Engine and ECT			√	√	√	√	1. Check Mode 2. Reset Memory
TOYOTA	A11	-0705	COROLLA VERSO		Cruise Control			√	√			
TOYOTA	A11	-0705	COROLLA VERSO		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	-0705	COROLLA VERSO		Immobiliser			√	√	√	√	1. Key Code Registration 2. Key Code Erasure
TOYOTA	A11	-0705	COROLLA VERSO		SRS Airbag			√	√			
TOYOTA	A11	-0705	COROLLA VERSO		Body			√	√	√	√	
TOYOTA	A11	-0705	COROLLA VERSO		Power Source Control			√	√	√	√	
TOYOTA	A11	0705-	COROLLA VERSO		Engine and ECT			√	√	√	√	1. Check Mode 2. Reset Memory

TOYOTA	A11	0705-	COROLLA VERSO			Cruise Control			√	√			
TOYOTA	A11	0705-	COROLLA VERSO			ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid 、 Zero Down、 Linear Valve Offset)
TOYOTA	A11	0705-	COROLLA VERSO			Immobiliser			√	√	√	√	1. Key Code Registration 2. Key Code Erasure
TOYOTA	A11	0705-	COROLLA VERSO			SRS Airbag			√	√			
TOYOTA	A11	0705-	COROLLA VERSO			Body			√	√	√	√	
TOYOTA	A11	0705-	COROLLA VERSO			Power Source Control			√	√	√	√	
TOYOTA	A11	A11	CELICA			Engine and ECT			√	√	√	√	1. Check Mode 2. Reset Memory
TOYOTA	A11	A11	CELICA			ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid 、 Zero Down、 Linear Valve Offset)
TOYOTA	A11	A11	CELICA			Immobiliser			√	√	√	√	1. Key Code Registration 2. Key Code Erasure
TOYOTA	A11	A11	CELICA			SRS Airbag			√	√			
TOYOTA	A11	0402- 0604	AVENSIS			Engine and ECT			√	√	√	√	1. Check Mode 2. Reset Memory

TOYOTA	A11	0402-0604	AVENSIS		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	0402-0604	AVENSIS		Tire Pressure Monitor			√	√	√		
TOYOTA	A11	0402-0604	AVENSIS		EMPS			√	√	√		1. Torque Sensor Adjustment
TOYOTA	A11	0402-0604	AVENSIS		Immobiliser			√	√	√	√	1. Key Code Registration 2. Key Code Erasure
TOYOTA	A11	0402-0604	AVENSIS		Tvss			√	√	√	√	
TOYOTA	A11	0402-0604	AVENSIS		SRS Airbag			√	√			
TOYOTA	A11	0402-0604	AVENSIS		Body			√	√	√	√	
TOYOTA	A11	0604-	AVENSIS		Engine and ECT			√	√	√	√	1. Check Mode 2. Reset Memory
TOYOTA	A11	0604-	AVENSIS		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	0604-	AVENSIS		EMPS			√	√	√		1. Torque Sensor Adjustment
TOYOTA	A11	0604-	AVENSIS		Immobiliser			√	√	√	√	1. Key Code Registration 2. Key Code Erasure
TOYOTA	A11	0604-	AVENSIS		Tvss			√	√	√	√	

TOYOTA	A11	0604-	AVENSIS		SRS Airbag		✓	✓			
TOYOTA	A11	0604-	AVENSIS		Body		✓	✓	✓	✓	
TOYOTA	A11	-0208	MR2		Engine and ECT		✓	✓	✓		
TOYOTA	A11	-0208	MR2		Sequential M/T		✓	✓	✓	✓	
TOYOTA	A11	-0208	MR2		ABS/VSC/TRC		✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid 、 Zero Down、 Linear Valve Offset)
TOYOTA	A11	-0208	MR2		EHPS		✓	✓	✓		1. Torque Sensor Adjustment
TOYOTA	A11	-0208	MR2		Immobiliser		✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure *3. Auto Registration Closure
TOYOTA	A11	-0208	MR2		SRS Airbag		✓	✓			
TOYOTA	A11	0208-	MR2		Engine and ECT		✓	✓	✓		
TOYOTA	A11	0208-	MR2		Sequential M/T		✓	✓	✓	✓	
TOYOTA	A11	0208-	MR2		ABS/VSC/TRC		✓	✓	✓	✓	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid 、 Zero Down、 Linear Valve Offset)
TOYOTA	A11	0208-	MR2		EHPS		✓	✓	✓		1. Torque Sensor Adjustment
TOYOTA	A11	0208-	MR2		Immobiliser		✓	✓	✓	✓	1. Key Code Registration 2. Key Code Erasure *3. Auto Registration Closure
TOYOTA	A11	0208-	MR2		SRS Airbag		✓	✓			

TOYOTA	A11	-0505	AVANZA		Engine		*	*	*	*	
TOYOTA	A11	-0505	AVANZA		ECT		*	*			
TOYOTA	A11	-0505	AVANZA		ABS/VSC/TRC		√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid 、 Zero Down、 Linear Valve Offset)
TOYOTA	A11	-0505	AVANZA		Immobiliser		*	*			
TOYOTA	A11	0608-0808	AVANZA		Engine		*	*	*	*	
TOYOTA	A11	0608-0808	AVANZA		ECT		*	*			
TOYOTA	A11	0608-0808	AVANZA		ABS/VSC/TRC		√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid 、 Zero Down、 Linear Valve Offset)
TOYOTA	A11	0608-0808	AVANZA		Immobiliser		*	*			
TOYOTA	A11	0608-0808	AVANZA		SRS Airbag		√	√			
TOYOTA	A11	0505-0608	AVANZA		Engine		*	*	*	*	
TOYOTA	A11	0505-0608	AVANZA		ECT		*	*			

TOYOTA	A11	0505-0608	AVANZA		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	0505-0608	AVANZA		Immobiliser			*	*			
TOYOTA	A11	0505-0608	AVANZA		SRS Airbag			√	√			
TOYOTA	A11	0808-	AVANZA		Engine			*	*	*	*	
TOYOTA	A11	0808-	AVANZA		ECT			*	*			
TOYOTA	A11	0808-	AVANZA		ABS/VSC/TRC			√	√	√	√	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid、Zero Down、Linear Valve Offset)
TOYOTA	A11	0808-	AVANZA		Immobiliser			*	*			
TOYOTA	A11	0808-	AVANZA		SRS Airbag			√	√			