

SPX. AUTOBOSS TECH. INC.
Autoboss Scanner Function List

Basic Function List

CHERY

Autoboss Scanner: **V30**
 Version: **V3.7**
 Date: **2010-01-23**

Vehicle	System	Sub system	Read DTC	Clear DTC	Data stream	Actuation	Control unit version	System status	Remark
		LIUJI 465	√	√	√	√		√	Immobilizer Status
		SIEMENS 372	√	√	√			√	
		SIEMENS 2	√	√	√	√			Anti-theft information CAN(CVT status)
		MM AT	√	√	√	√	√	√	
		MM MT	√	√	√	√	√	√	
	AT		√	√	√	√	√	√	Offline detect function

SPX. AUTOBOSS TECH. INC.
Autoboss Scanner Function List

	ABS		✓	✓	✓	✓	✓		Adaptation Login procedure
	SRS		✓	✓	✓				
Eastar									
	ENG	MIT	✓	✓	✓	✓	✓		
		Delphi	✓	✓	✓	✓		✓	
		UAES (EOBD)	✓	✓				✓	Main parameter
	AT		✓	✓	✓	✓	✓		
	SRS	HAE2	✓	✓	✓				
		HAE3	✓	✓	✓				
	ABS		✓	✓	✓	✓	✓		Automatic exhaust
	ICM								Read ICM data Write ICM data
	CONTROL SWITCH SYSTEM		✓	✓	✓	✓	✓		
	IMM		✓	✓			✓	✓	Input code LED diagnosis Immobilizer adaptation
WindCloud									
	ENG	SIGLE	✓	✓	✓	✓			
		MOTO	✓	✓	✓		✓		
		MM MUT	✓	✓	✓	✓	✓		

SPX. AUTOBOSS TECH. INC.
Autoboss Scanner Function List

		UAES M7	✓	✓	✓	✓			Distributor Adjustment
		MM AAA、A98	✓	✓	✓	✓			
		MM AA9	✓	✓	✓	✓			
		MM A99	✓	✓	✓	✓	✓		Self-adaption
		MT 20	✓	✓	✓	✓		✓	
		MM AAA	✓	✓	✓	✓			
	SRS		✓	✓	✓				
	ABS	SABS	✓	✓	✓	✓	✓		Adaptation Login procedure
		Delphi	✓	✓	✓	✓	✓		Automatic exhaust
Cowin									
	ENG	UAES M7	✓	✓	✓	✓			Distributor Adjustment
		Delphi	✓	✓	✓	✓		✓	Immobilizer Status
		SIEMENS	✓	✓	✓	✓			Anti-theft information CAN(CVT status)
	SRS		✓	✓	✓				
	ABS		✓	✓	✓	✓	✓		Adaptation Login procedure

SPX. AUTOBOSS TECH. INC.
Autoboss Scanner Function List

	IMM		✓	✓			✓	✓	Input code LED diagnosis Immobilizer adaptation
Tiggo									
	ENG		✓	✓	✓	✓		✓	
	ABS		✓	✓	✓	✓	✓		Exhuast mode
	SRS		✓	✓			✓		
	CONTROL SWITCH SYSTEM		✓	✓	✓	✓	✓		
	ICM								Read ICM data Write ICM data
A5									
	ENG	A516-UAES (EOBD)	✓	✓				✓	Main parameter
		A520-UAES (EOBD)	✓	✓				✓	Main parameter
	ABS		✓	✓	✓				Automatic exhaust
	SRS		✓	✓			✓	✓	Unlock/lock Read/Write VIN Data setting
	ICM	ICM[1]	✓	✓			✓		
		ICM[2]			✓	✓	✓		

SPX. AUTOBOSS TECH. INC.
Autoboss Scanner Function List

	IMM		✓	✓			✓	✓	Input code LED diagnosis Immobilizer adaptation
	BODY		✓	✓	✓				ISU reset Remote control adaptation
V5									
	ENG	UAES (EOBD)	✓	✓				✓	Main parameter
		MIT	✓	✓	✓	✓	✓		
	AT		✓	✓	✓	✓	✓		
	ABS		✓	✓	✓	✓	✓		
	SRS	East joylong SRS	✓	✓	✓				
		East joylong(4SRS)	✓	✓	✓		✓		
	IMM		✓	✓			✓	✓	Input code LED diagnosis Immobilizer adaptation
QQ6									
	ENG	UAES (EOBD)	✓	✓				✓	Main parameter
		MM 472	✓	✓	✓	✓	✓	✓	
	ABS		✓	✓	✓	✓	✓		Exhuast mode
	SRS		✓	✓	✓		✓		
	BODY		✓	✓	✓				
	ICM				✓	✓	✓		

SPX. AUTOBOSS TECH. INC.
Autoboss Scanner Function List

	IMM		✓	✓			✓	✓	Input code LED diagnosis Immobilizer adaptation
Karry									
	ENG		✓	✓				✓	Main parameter
	ABS		✓	✓	✓	✓	✓		Adaptation Login procedure
	SRS		✓	✓	✓		✓		
A1									
	ENG		✓	✓				✓	Main parameter
	ABS		✓	✓	✓	✓	✓		Exhuast mode
	SRS		✓	✓			✓		
	BODY		✓	✓	✓				
	ICM				✓	✓	✓		
	IMM		✓	✓			✓	✓	Input code LED diagnosis Immobilizer adaptation