

GWM_Function list_V2.15

vehicle	system	Control unit version	Read fault code	Erase fault code	Actual values	System status	Actuation	Anti-theft status
GWM	Bosch-edc 16 diesel motor		√	√	√		√	
	Gasolene motor	√	√	√	√	√	√	
	Engine system(Mmsig)		√	√	√		√	
	Engine system(BOSCH 1)	√	√	√	√	√	√	Idle Initialization Distributor Adjustment
	Engine system(Delphi 1)	√	√	√	√	√	√	Immobilizer Status
	Engine system(491ME)	√	√	√	√	√	√	Immobilizer Status
	Engine system(Delphi 2)		√	√	√	√	√	
	Engine system(Delphi 2.5)		√	√	√	√		
	ABS system	√	√	√	√		√	Deflate mode
	SRS system	√	√	√	√			