

How to read this list:	
Mark	Description
√	Function is supported.
*	Function is added or developed newly

V30/PC-MAX Function List										
Automaker:			VOLVO							
Software Version:			V6.0							
Brand	Year	Model	ECU Type	System	Sys. Info.	Read Code	Clear Code	Data Stream	Actuations	Special Functions
VOLVO	1996	850	B5202FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1996	850	B5204FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1996	850	B5204FT	Fuel System/ Combined System	√	√	√	√		
VOLVO	1996	850	B5204T2	Fuel System/ Combined System	√	√	√	√		
VOLVO	1996	850	B5234FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1996	850	B5234FT	Fuel System/ Combined System	√	√	√	√		
VOLVO	1996	850	B5234T2	Fuel System/ Combined System	√	√	√	√		
VOLVO	1996	850	B5234T4	Fuel System/ Combined System	√	√	√	√		
VOLVO	1996	850	B5234T5	Fuel System/ Combined System	√	√	√	√		
VOLVO	1996	850	B5252FS	Fuel System/ Combined System	√	√	√	√		

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

VOLVO	1996	850	B5252FS LH 3.2	Fuel System/ Combined System	√	√	√	√		
VOLVO	1996	850	B5252FS M4.4	Fuel System/ Combined System	√	√	√	√		
VOLVO	1996	850	D525T MSA 15.7	Fuel System/ Combined System	√	√	√	√		
VOLVO	1996	850	AW50-42	Transmission Control Module(TCM)	√	√	√	√	√	
VOLVO	1996	850		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	
VOLVO	1996	850		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	1996	850		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	1996	850		Climate Control	√	√	√	√		
VOLVO	1996	850		Immobilizer	√	√	√	√	√	
VOLVO	1997	850	B5202FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	850	B5204FT	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	850	B5204T2	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	850	B5234FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	850	B5234FT	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	850	B5234T4	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	850	B5234T5	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	850	B5252FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	850	B5252FS M4.4	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	850	B5254T	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	850	D525T MSA 15.7	Fuel System/ Combined System	√	√	√	√		

VOLVO	1997	850	AW50-42	Transmission Control Module(TCM)	√	√	√	√	√	
VOLVO	1997	850		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	
VOLVO	1997	850		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	1997	850		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	1997	850		Climate Control	√	√	√	√		
VOLVO	1997	850		Immobilizer	√	√	√	√	√	
VOLVO	1996	940	B6244FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1996	940	B6254FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1996	940	B6254GS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1996	940	B6304FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1996	940	B6304GS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1996	940	AW30-43	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	1996	940		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	1996	940		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	1996	940		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	1996	940		Immobilizer	√	√	√	√	√	
VOLVO	1997	940	B6244FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	940	B6254FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	940	B6254GS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	940	B6304FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	940	B6304GS	Fuel System/ Combined System	√	√	√	√		

VOLVO	1997	940	AW30-43	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	1997	940		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	1997	940		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	1997	940		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	1997	940		Immobilizer	√	√	√	√	√	
VOLVO	1996	960	B6244FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1996	960	B6254FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1996	960	B6254GS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1996	960	B6304FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1996	960	B6304GS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1996	960	AW30-43	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	1996	960		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	1996	960		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	1996	960		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	1996	960		Immobilizer	√	√	√	√	√	
VOLVO	1997	960	B6244FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	960	B6254FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	960	B6254GS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	960	B6304FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	960	B6304GS	Fuel System/ Combined System	√	√	√	√		

VOLVO	1997	960	AW30-43	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	1997	960		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	1997	960		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	1997	960		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	1997	960		Immobilizer	√	√	√	√	√	
VOLVO	1999	S40(-04)		Resetting the service reminder indicator(SRI)						√
VOLVO	1999	S40(-04)	B4164S	Anti-Spin System	√	√	√	√	√	
VOLVO	1999	S40(-04)	B4184S	Anti-Spin System	√	√	√	√	√	
VOLVO	1999	S40(-04)	B4184SM	Anti-Spin System	√	√	√	√	√	
VOLVO	1999	S40(-04)	B4194T	Anti-Spin System	√	√	√	√	√	
VOLVO	1999	S40(-04)	B4204S	Anti-Spin System	√	√	√	√	√	
VOLVO	1999	S40(-04)	B4204T	Anti-Spin System	√	√	√	√	√	
VOLVO	1999	S40(-04)	D4192T	Anti-Spin System	√	√	√	√	√	
VOLVO	1999	S40(-04)	D4192T2	Anti-Spin System	√	√	√	√	√	
VOLVO	1999	S40(-04)	B4164S	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1999	S40(-04)	B4184S	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1999	S40(-04)	B4184SM	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1999	S40(-04)	B4194T	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1999	S40(-04)	B4204S	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1999	S40(-04)	B4204T	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1999	S40(-04)	D4192T	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1999	S40(-04)	D4192T2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1999	S40(-04)	AW50-42	Transmission Control Module(TCM)	√	√	√	√	√	
VOLVO	1999	S40(-04)		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	

VOLVO	1999	S40(-04)		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	1999	S40(-04)		Climate Control Module(CCM)	√	√	√	√	√	
VOLVO	1999	S40(-04)		Central Electronic Module(CEM)	√	√	√	√	√	
VOLVO	1999	S40(-04)		Driver Information Module(DIM)	√	√	√	√	√	
VOLVO	1999	S40(-04)		Immobilizer	√	√	√	√	√	
VOLVO	1999	S40(-04)		Lock and alarm	√	√	√	√	√	
VOLVO	2000	S40(-04)		Resetting the service reminder indicator(SRI)						√
VOLVO	2000	S40(-04)	B4164S2	Anti-Spin System	√	√	√	√	√	
VOLVO	2000	S40(-04)	B4184S2	Anti-Spin System	√	√	√	√	√	
VOLVO	2000	S40(-04)	B4184S3	Anti-Spin System	√	√	√	√	√	
VOLVO	2000	S40(-04)	B4184SM	Anti-Spin System	√	√	√	√	√	
VOLVO	2000	S40(-04)	B4194T2	Anti-Spin System	√	√	√	√	√	
VOLVO	2000	S40(-04)	B4204S2	Anti-Spin System	√	√	√	√	√	
VOLVO	2000	S40(-04)	D4192T2	Anti-Spin System	√	√	√	√	√	
VOLVO	2000	S40(-04)	B4164S2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2000	S40(-04)	B4184S2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2000	S40(-04)	B4184S3	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2000	S40(-04)	B4184SM	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2000	S40(-04)	B4194T2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2000	S40(-04)	B4204S2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2000	S40(-04)	D4192T2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2000	S40(-04)	B4204T2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2000	S40(-04)	B4204T2 CV	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2000	S40(-04)	AW50-42	Transmission Control Module(TCM)	√	√	√	√	√	

VOLVO	2000	S40(-04)		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	
VOLVO	2000	S40(-04)		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	2000	S40(-04)		Climate Control Module(CCM)	√	√	√	√	√	
VOLVO	2000	S40(-04)		Central Electronic Module(CEM)	√	√	√	√	√	
VOLVO	2000	S40(-04)		Driver Information Module(DIM)	√	√	√	√	√	
VOLVO	2000	S40(-04)		Immobilizer	√	√	√	√	√	
VOLVO	2000	S40(-04)		Lock and alarm	√	√	√	√	√	
VOLVO	2001	S40(-04)		Resetting the service reminder indicator(SRI)						√
VOLVO	2001	S40(-04)	B4164S2	Anti-Spin System	√	√	√	√	√	
VOLVO	2001	S40(-04)	B4184S2	Anti-Spin System	√	√	√	√	√	
VOLVO	2001	S40(-04)	B4184S3	Anti-Spin System	√	√	√	√	√	
VOLVO	2001	S40(-04)	B4184S9	Anti-Spin System	√	√	√	√	√	
VOLVO	2001	S40(-04)	B4184S10	Anti-Spin System	√	√	√	√	√	
VOLVO	2001	S40(-04)	B4184SM	Anti-Spin System	√	√	√	√	√	
VOLVO	2001	S40(-04)	B4184SJ	Anti-Spin System	√	√	√	√	√	
VOLVO	2001	S40(-04)	B4204S2	Anti-Spin System	√	√	√	√	√	
VOLVO	2001	S40(-04)	B4204T3	Anti-Spin System	√	√	√	√	√	
VOLVO	2001	S40(-04)	B4204T5	Anti-Spin System	√	√	√	√	√	
VOLVO	2001	S40(-04)	D4192T3	Anti-Spin System	√	√	√	√	√	
VOLVO	2001	S40(-04)	D4192T4	Anti-Spin System	√	√	√	√	√	
VOLVO	2001	S40(-04)	B4164S2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2001	S40(-04)	B4184S2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2001	S40(-04)	B4184S3	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2001	S40(-04)	B4184S9	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2001	S40(-04)	B4184S10	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2001	S40(-04)	B4184SM	Fuel System/ Combined System	√	√	√	√	√	

VOLVO	2001	S40(-04)	B4184SJ	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2001	S40(-04)	B4204S2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2001	S40(-04)	B4204T3	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2001	S40(-04)	B4204T5	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2001	S40(-04)	D4192T3	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2001	S40(-04)	D4192T4	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2001	S40(-04)	AW55-50/51SN	Transmission Control Module(TCM)	√	√	√	√	√	
VOLVO	2001	S40(-04)		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	
VOLVO	2001	S40(-04)		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	2001	S40(-04)		Climate Control Module(CCM)	√	√	√	√	√	
VOLVO	2001	S40(-04)		Central Electronic Module(CEM)	√	√	√	√	√	
VOLVO	2001	S40(-04)		Driver Information Module(DIM)	√	√	√	√	√	
VOLVO	2001	S40(-04)		Immobilizer	√	√	√	√	√	
VOLVO	2001	S40(-04)		Lock and alarm	√	√	√	√	√	
VOLVO	2002	S40(-04)		Resetting the service reminder indicator(SRI)						√
VOLVO	2002	S40(-04)	B4164S2	Anti-Spin System	√	√	√	√	√	
VOLVO	2002	S40(-04)	B4184S2	Anti-Spin System	√	√	√	√	√	
VOLVO	2002	S40(-04)	B4184S3	Anti-Spin System	√	√	√	√	√	
VOLVO	2002	S40(-04)	B4184S9	Anti-Spin System	√	√	√	√	√	
VOLVO	2002	S40(-04)	B4184S10	Anti-Spin System	√	√	√	√	√	
VOLVO	2002	S40(-04)	B4184SJ	Anti-Spin System	√	√	√	√	√	
VOLVO	2002	S40(-04)	B4204S2	Anti-Spin System	√	√	√	√	√	
VOLVO	2002	S40(-04)	B4204T3	Anti-Spin System	√	√	√	√	√	
VOLVO	2002	S40(-04)	B4204T5	Anti-Spin System	√	√	√	√	√	
VOLVO	2002	S40(-04)	D4192T3	Anti-Spin System	√	√	√	√	√	
VOLVO	2002	S40(-04)	D4192T4	Anti-Spin System	√	√	√	√	√	

VOLVO	2002	S40(-04)	B4164S2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2002	S40(-04)	B4184S2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2002	S40(-04)	B4184S3	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2002	S40(-04)	B4184S9	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2002	S40(-04)	B4184S10	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2002	S40(-04)	B4184SJ	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2002	S40(-04)	B4204S2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2002	S40(-04)	B4204T3	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2002	S40(-04)	B4204T5	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2002	S40(-04)	D4192T3	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2002	S40(-04)	D4192T4	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2002	S40(-04)	AW55-50/51SN	Transmission Control Module(TCM)	√	√	√	√	√	
VOLVO	2002	S40(-04)		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	
VOLVO	2002	S40(-04)		Supplemental Restraint System Module(SRS)	√	√	√	√	√	
VOLVO	2002	S40(-04)		Climate Control Module(CCM)	√	√	√	√	√	
VOLVO	2002	S40(-04)		Central Electronic Module(CEM)	√	√	√	√	√	
VOLVO	2002	S40(-04)		Driver Information Module(DIM)	√	√	√	√	√	
VOLVO	2002	S40(-04)		Immobilizer	√	√	√	√	√	
VOLVO	2002	S40(-04)		Lock and alarm	√	√	√	√	√	
VOLVO	2003	S40(-04)		Resetting the service reminder indicator(SRI)						√
VOLVO	2003	S40(-04)	B4164S2	Anti-Spin System	√	√	√	√	√	

VOLVO	2003	S40(-04)	B4184S2	Anti-Spin System	√	√	√	√	√	
VOLVO	2003	S40(-04)	B4184S3	Anti-Spin System	√	√	√	√	√	
VOLVO	2003	S40(-04)	B4184S9	Anti-Spin System	√	√	√	√	√	
VOLVO	2003	S40(-04)	B4184S10	Anti-Spin System	√	√	√	√	√	
VOLVO	2003	S40(-04)	B4184SJ	Anti-Spin System	√	√	√	√	√	
VOLVO	2003	S40(-04)	B4204S2	Anti-Spin System	√	√	√	√	√	
VOLVO	2003	S40(-04)	B4204T3	Anti-Spin System	√	√	√	√	√	
VOLVO	2003	S40(-04)	B4204T5	Anti-Spin System	√	√	√	√	√	
VOLVO	2003	S40(-04)	D4192T3	Anti-Spin System	√	√	√	√	√	
VOLVO	2003	S40(-04)	D4192T4	Anti-Spin System	√	√	√	√	√	
VOLVO	2003	S40(-04)	B4164S2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2003	S40(-04)	B4184S2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2003	S40(-04)	B4184S3	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2003	S40(-04)	B4184S9	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2003	S40(-04)	B4184S10	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2003	S40(-04)	B4184SJ	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2003	S40(-04)	B4204S2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2003	S40(-04)	B4204T3	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2003	S40(-04)	B4204T5	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2003	S40(-04)	D4192T3	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2003	S40(-04)	D4192T4	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2003	S40(-04)	AW55-50/51SN	Transmission Control Module(TCM)	√	√	√	√	√	
VOLVO	2003	S40(-04)		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	
VOLVO	2003	S40(-04)		Supplemental Restraint System Module(SRS)	√	√	√	√	√	

VOLVO	2003	S40(-04)		Climate Control Module(CCM)	√	√	√	√	√	
VOLVO	2003	S40(-04)		Central Electronic Module(CEM)	√	√	√	√	√	
VOLVO	2003	S40(-04)		Driver Information Module(DIM)	√	√	√	√	√	
VOLVO	2003	S40(-04)		Immobilizer	√	√	√	√	√	
VOLVO	2003	S40(-04)		Lock and alarm	√	√	√	√	√	
VOLVO	2004	S40(-04)		Resetting the service reminder indicator(SRI)						√
VOLVO	2004	S40(-04)	B4164S2	Anti-Spin System	√	√	√	√	√	
VOLVO	2004	S40(-04)	B4184S2	Anti-Spin System	√	√	√	√	√	
VOLVO	2004	S40(-04)	B4184S3	Anti-Spin System	√	√	√	√	√	
VOLVO	2004	S40(-04)	B4184S9	Anti-Spin System	√	√	√	√	√	
VOLVO	2004	S40(-04)	B4184S10	Anti-Spin System	√	√	√	√	√	
VOLVO	2004	S40(-04)	B4184SJ	Anti-Spin System	√	√	√	√	√	
VOLVO	2004	S40(-04)	B4204S2	Anti-Spin System	√	√	√	√	√	
VOLVO	2004	S40(-04)	B4204T3	Anti-Spin System	√	√	√	√	√	
VOLVO	2004	S40(-04)	D4192T3	Anti-Spin System	√	√	√	√	√	
VOLVO	2004	S40(-04)	D4192T4	Anti-Spin System	√	√	√	√	√	
VOLVO	2004	S40(-04)	B4164S2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2004	S40(-04)	B4184S2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2004	S40(-04)	B4184S3	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2004	S40(-04)	B4184S9	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2004	S40(-04)	B4184S10	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2004	S40(-04)	B4184SJ	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2004	S40(-04)	B4204S2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2004	S40(-04)	B4204T3	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2004	S40(-04)	D4192T3	Fuel System/ Combined System	√	√	√	√	√	

VOLVO	2004	S40(-04)	D4192T4	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2004	S40(-04)	AW55-50/51SN	Transmission Control Module(TCM)	√	√	√	√	√	
VOLVO	2004	S40(-04)		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	
VOLVO	2004	S40(-04)		Supplemental Restraint System Module(SRS)	√	√	√	√	√	
VOLVO	2004	S40(-04)		Climate Control Module(CCM)	√	√	√	√	√	
VOLVO	2004	S40(-04)		Central Electronic Module(CEM)	√	√	√	√	√	
VOLVO	2004	S40(-04)		Driver Information Module(DIM)	√	√	√	√	√	
VOLVO	2004	S40(-04)		Immobilizer	√	√	√	√	√	
VOLVO	2004	S40(-04)		Lock and alarm	√	√	√	√	√	
VOLVO	2004	S40(04-)		Resetting the service reminder indicator(SRI)						√
VOLVO	2004	S40(04-)	B5244S4	Engine Control Module(ECM)	√	√	√	√	√	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	2004	S40(04-)	B5244S5	Engine Control Module(ECM)	√	√	√	√	√	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	2004	S40(04-)	B5254T3	Engine Control Module(ECM)	√	√	√	√	√	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)
VOLVO	2004	S40(04-)	D4204T	Engine Control Module(ECM)	√	√	√	√	√	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve
VOLVO	2004	S40(04-)	D4204T2	Engine Control Module(ECM)	√	√	√	√	√	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve

VOLVO	2004	S40(04-)	D4204T	Additive Dosing Module(ADM)	√	√	√	√		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2004	S40(04-)	D4204T2	Additive Dosing Module(ADM)	√	√	√	√		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2004	S40(04-)	AW55-50/51SN	Transmission Control Module(TCM)	√	√	√	√	√	1.Calibration of position sensor 2.Resetting adaptation 3.Resetting counter oil
VOLVO	2004	S40(04-)		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	1.Calibration(Cars with DSTC)
VOLVO	2004	S40(04-)		Driver Door Module(DDM)	√	√	√	√	√	1.Initializing the window position
VOLVO	2004	S40(04-)		Passenger Door Module(PDM)	√	√	√	√	√	1.Initializing the window position
VOLVO	2004	S40(04-)		Power Seat Module(PSM)	√	√	√	√	√	1.Programming the remote control setting
VOLVO	2004	S40(04-)		Supplemental Restraint System Module(SRS)	√	√	√	√		1.Calibration the occupant weight sensor(OWS)
VOLVO	2004	S40(04-)		Accessory Electronic Module(AEM)	√	√	√	√	√	
VOLVO	2004	S40(04-)		Audio Module(AUD)	√	√	√			
VOLVO	2004	S40(04-)		Central Electronic Module(CEM)	√	√	√	√	√	1.Calibration of position sensor,GDL lamps 2.Qick test of alternator function 3.Resetting low voltage counters
VOLVO	2004	S40(04-)		Driver Information Module(DIM)	√	√	√	√	√	1.Resetting the service reminder indicator
VOLVO	2004	S40(04-)		Phone Module(PHM)	√	√	√	√		1.Reinstalling the reserve battery
VOLVO	2004	S40(04-)		Steering Wheel Module(SWM)	√	√	√	√		
VOLVO	2004	S40(04-)		Infotainment Control Module(ICM)	√	√	√	√	√	1.Programming the infotainment control module(ICM)
VOLVO	2004	S40(04-)		Multimedia Module(MMM)	√	√	√	√	√	
VOLVO	2005	S40(04-)		Resetting the service reminder indicator(SRI)						√
VOLVO	2005	S40(04-)	B4164S3	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2005	S40(04-)	B4184S11	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2005	S40(04-)	B5244S4	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2005	S40(04-)	B5244S5	Engine Control Module(ECM)	√	√	√	√	√	1.Quick test of the fuel tank system(USA/CDN)

VOLVO	2005	S40(04-)	B5254T3	Engine Module(ECM)	Control	√	√	√	√	√	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)
VOLVO	2005	S40(04-)	D4164T	Engine Module(ECM)	Control	√	√	√	√	√	1.Programming optimising parameters 2.Resetting the odometer particle trap 3.Adaptation of the exhaust gas recirculation(EGR) valve
VOLVO	2005	S40(04-)	D4204T	Engine Module(ECM)	Control	√	√	√	√	√	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve
VOLVO	2005	S40(04-)	D4204T2	Engine Module(ECM)	Control	√	√	√	√	√	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve
VOLVO	2005	S40(04-)	D4164T	Additive Module(ADM)	Dosing	√	√	√	√		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2005	S40(04-)	D4204T	Additive Module(ADM)	Dosing	√	√	√	√		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2005	S40(04-)	D4204T2	Additive Module(ADM)	Dosing	√	√	√	√		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2005	S40(04-)	AW50/51AW D	Transmission Module(TCM)	Control	√	√	√	√	√	1.Calibration of position sensor 2.Resetting adaptation 3.Resetting counter oil
VOLVO	2005	S40(04-)	AW55-50/51SN	Transmission Module(TCM)	Control	√	√	√	√	√	1.Calibration of position sensor 2.Resetting adaptation 3.Resetting counter oil
VOLVO	2005	S40(04-)	AW50/51AW D	Differential Module (DEM)	Electronic	√	√	√	√		
VOLVO	2005	S40(04-)	M6AWD	Differential Module (DEM)	Electronic	√	√	√	√		
VOLVO	2005	S40(04-)		Anti-brake Module(ABS/BCM)	System	√	√	√	√	√	1.Calibration(Cars with DSTC)

VOLVO	2005	S40(04-)		Climate Control Module(CCM)	√	√	√	√		
VOLVO	2005	S40(04-)		Combustion preheater Module(CPM)	√	√	√	√	√	
VOLVO	2005	S40(04-)		Driver Door Module(DDM)	√	√	√	√	√	1.Initializing the window position
VOLVO	2005	S40(04-)		Passenger Door Module(PDM)	√	√	√	√	√	1.Initializing the window position
VOLVO	2005	S40(04-)		Power Seat Module(PSM)	√	√	√	√	√	1.Programming the remote control setting
VOLVO	2005	S40(04-)		Supplemental Restraint System Module(SRS)	√	√	√	√		1.Calibration the occupant weight sensor(OWS)
VOLVO	2005	S40(04-)		Accessory Electronic Module(AEM)	√	√	√	√	√	
VOLVO	2005	S40(04-)		Audio Module(AUD)	√	√	√			
VOLVO	2005	S40(04-)		Central Electronic Module(CEM)	√	√	√	√	√	1.Calibration of position sensor,GDL lamps 2.Qick test of alternator function 3.Resetting low voltage counters
VOLVO	2005	S40(04-)		Driver Information Module(DIM)	√	√	√	√	√	1.Resetting the service reminder indicator
VOLVO	2005	S40(04-)		Phone Module(PHM)	√	√	√	√		1.Reinstalling the reserve battery
VOLVO	2005	S40(04-)		Steering Wheel Module(SWM)	√	√	√	√		
VOLVO	2005	S40(04-)		Infotainment Control Module(ICM)	√	√	√	√	√	1.Programming the infotainment control module(ICM)
VOLVO	2005	S40(04-)		Multimedia Module(MMM)	√	√	√	√	√	
VOLVO	2006	S40(04-)		Resetting the service reminder indicator(SRI)						√
VOLVO	2006	S40(04-)	B4164S3	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2006	S40(04-)	B4184S11	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2006	S40(04-)	B5244S4	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2006	S40(04-)	B5244S5	Engine Control Module(ECM)	√	√	√	√	√	1.Quick test of the fuel tank system(USA/CDN)

VOLVO	2006	S40(04-)	B5254T3	Engine Module(ECM)	Control	√	√	√	√	√	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)
VOLVO	2006	S40(04-)	D4164T	Engine Module(ECM)	Control	√	√	√	√	√	1.Programming optimising parameters 2.Resetting the odometer particle trap 3.Adaptation of the exhaust gas recirculation(EGR) valve
VOLVO	2006	S40(04-)	D4204T	Engine Module(ECM)	Control	√	√	√	√	√	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve
VOLVO	2006	S40(04-)	D4204T2	Engine Module(ECM)	Control	√	√	√	√	√	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve
VOLVO	2006	S40(04-)	D4164T	Additive Module(ADM)	Dosing	√	√	√	√		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2006	S40(04-)	D4204T	Additive Module(ADM)	Dosing	√	√	√	√		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2006	S40(04-)	D4204T2	Additive Module(ADM)	Dosing	√	√	√	√		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2006	S40(04-)	AW50/51AW D	Transmission Module(TCM)	Control	√	√	√	√	√	1.Calibration of position sensor 2.Resetting adaptation 3.Resetting counter oil
VOLVO	2006	S40(04-)	AW55-50/51SN	Transmission Module(TCM)	Control	√	√	√	√	√	1.Calibration of position sensor 2.Resetting adaptation 3.Resetting counter oil
VOLVO	2006	S40(04-)	AW50/51AW D	Differential Module (DEM)	Electronic	√	√	√	√		
VOLVO	2006	S40(04-)	M6AWD	Differential Module (DEM)	Electronic	√	√	√	√		
VOLVO	2006	S40(04-)		Anti-brake Module(ABS/BCM)	System	√	√	√	√	√	1.Calibration(Cars with DSTC)

VOLVO	2006	S40(04-)		Climate Control Module(CCM)	√	√	√	√		
VOLVO	2006	S40(04-)		Combustion preheater Module(CPM)	√	√	√	√	√	
VOLVO	2006	S40(04-)		Driver Door Module(DDM)	√	√	√	√	√	1.Initializing the window position
VOLVO	2006	S40(04-)		Passenger Door Module(PDM)	√	√	√	√	√	1.Initializing the window position
VOLVO	2006	S40(04-)		Power Seat Module(PSM)	√	√	√	√	√	1.Programming the remote control setting
VOLVO	2006	S40(04-)		Supplemental Restraint System Module(SRS)	√	√	√	√		1.Calibration the occupant weight sensor(OWS)
VOLVO	2006	S40(04-)		Accessory Electronic Module(AEM)	√	√	√	√	√	
VOLVO	2006	S40(04-)		Audio Module(AUD)	√	√	√			
VOLVO	2006	S40(04-)		Central Electronic Module(CEM)	√	√	√	√	√	1.Calibration of position sensor,GDL lamps 2.Qick test of alternator function 3.Resetting low voltage counters
VOLVO	2006	S40(04-)		Driver Information Module(DIM)	√	√	√	√	√	1.Resetting the service reminder indicator
VOLVO	2006	S40(04-)		Phone Module(PHM)	√	√	√	√		1.Reinstalling the reserve battery
VOLVO	2006	S40(04-)		Steering Wheel Module(SWM)	√	√	√	√		
VOLVO	2006	S40(04-)		Infotainment Control Module(ICM)	√	√	√	√	√	1.Programming the infotainment control module(ICM)
VOLVO	2006	S40(04-)		Multimedia Module(MMM)	√	√	√	√	√	
VOLVO	2007	S40(04-)		Resetting the service reminder indicator(SRI)						√
VOLVO	2007	S40(04-)	B4164S3	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2007	S40(04-)	B4184S11	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2007	S40(04-)	B5244S4	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2007	S40(04-)	B5244S5	Engine Control Module(ECM)	√	√	√	√	√	1.Quick test of the fuel tank system(USA/CDN)

VOLVO	2007	S40(04-)	B5254T3	Engine Module(ECM)	Control	√	√	√	√	√	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)
VOLVO	2007	S40(04-)	D4164T	Engine Module(ECM)	Control	√	√	√	√	√	1.Programming optimising parameters 2.Resetting the odometer particle trap 3.Adaptation of the exhaust gas recirculation(EGR) valve
VOLVO	2007	S40(04-)	D4204T	Engine Module(ECM)	Control	√	√	√	√	√	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve
VOLVO	2007	S40(04-)	D4204T2	Engine Module(ECM)	Control	√	√	√	√	√	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve
VOLVO	2007	S40(04-)	D4164T	Additive Module(ADM)	Dosing	√	√	√	√		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2007	S40(04-)	D4204T	Additive Module(ADM)	Dosing	√	√	√	√		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2007	S40(04-)	D4204T2	Additive Module(ADM)	Dosing	√	√	√	√		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2007	S40(04-)	AW50/51AW D	Transmission Module(TCM)	Control	√	√	√	√	√	1.Calibration of position sensor 2.Resetting adaptation 3.Resetting counter oil
VOLVO	2007	S40(04-)	AW55-50/51SN	Transmission Module(TCM)	Control	√	√	√	√	√	1.Calibration of position sensor 2.Resetting adaptation 3.Resetting counter oil
VOLVO	2007	S40(04-)	AW50/51AW D	Differential Module (DEM)	Electronic	√	√	√	√		
VOLVO	2007	S40(04-)	M6AWD			√	√	√	√		
VOLVO	2007	S40(04-)		Anti-brake Module(ABS/BCM)	System	√	√	√	√	√	1.Calibration(Cars with DSTC)
VOLVO	2007	S40(04-)		Climate Module(CCM)	Control	√	√	√	√		

VOLVO	2007	S40(04-)		Combustion preheater Module(CPM)	√	√	√	√	√	
VOLVO	2007	S40(04-)		Driver Door Module(DDM)	√	√	√	√	√	1.Initializing the window position
VOLVO	2007	S40(04-)		Passenger Door Module(PDM)	√	√	√	√	√	1.Initializing the window position
VOLVO	2007	S40(04-)		Power Seat Module(PSM)	√	√	√	√	√	1.Programming the remote control setting
VOLVO	2007	S40(04-)		Supplemental Restraint System Module(SRS)	√	√	√	√		1.Calibration the occupant weight sensor(OWS)
VOLVO	2007	S40(04-)		Accessory Electronic Module(AEM)	√	√	√	√	√	
VOLVO	2007	S40(04-)		Audio Module(AUD)	√	√	√			
VOLVO	2007	S40(04-)		Central Electronic Module(CEM)	√	√	√	√	√	1.Calibration of position sensor,GDL lamps 2.Qick test of alternator function 3.Resetting low voltage counters
VOLVO	2007	S40(04-)		Driver Information Module(DIM)	√	√	√	√	√	1.Resetting the service reminder indicator
VOLVO	2007	S40(04-)		Phone Module(PHM)	√	√	√	√		1.Reinstalling the reserve battery
VOLVO	2007	S40(04-)		Steering Wheel Module(SWM)	√	√	√	√		
VOLVO	2007	S40(04-)		Infotainment Control Module(ICM)	√	√	√	√	√	1.Programming the infotainment control module(ICM)
VOLVO	2007	S40(04-)		Multimedia Module(MMM)	√	√	√	√	√	
VOLVO	2008	S40(04-)		Resetting the service reminder indicator(SRI)						√
VOLVO	2008	S40(04-)	B4164S3	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2008	S40(04-)	B4184S11	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2008	S40(04-)	B5244S4	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2008	S40(04-)	B5244S5	Engine Control Module(ECM)	√	√	√	√	√	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	2008	S40(04-)	B5254T3	Engine Control Module(ECM)	√	√	√	√	√	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)

VOLVO	2008	S40(04-)	D4164T	Engine Module(ECM)	Control	√	√	√	√	√	1.Programming optimising parameters 2.Resetting the odometer particle trap 3.Adaptation of the exhaust gas recirculation(EGR) valve
VOLVO	2008	S40(04-)	D4204T	Engine Module(ECM)	Control	√	√	√	√	√	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve
VOLVO	2008	S40(04-)	D4204T2	Engine Module(ECM)	Control	√	√	√	√	√	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve
VOLVO	2008	S40(04-)	D4164T	Additive Module(ADM)	Dosing	√	√	√	√		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2008	S40(04-)	D4204T	Additive Module(ADM)	Dosing	√	√	√	√		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2008	S40(04-)	D4204T2	Additive Module(ADM)	Dosing	√	√	√	√		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2008	S40(04-)	AW50/51AW D	Transmission Module(TCM)	Control	√	√	√	√	√	1.Calibration of position sensor 2.Resetting adaptation 3.Resetting counter oil
VOLVO	2008	S40(04-)	AW55-50/51SN	Transmission Module(TCM)	Control	√	√	√	√	√	1.Calibration of position sensor 2.Resetting adaptation 3.Resetting counter oil
VOLVO	2008	S40(04-)	AW50/51AW D	Differential Module (DEM)	Electronic	√	√	√	√		
VOLVO	2008	S40(04-)	M6AWD	Differential Module (DEM)	Electronic	√	√	√	√		
VOLVO	2008	S40(04-)		Anti-brake Module(ABS/BCM)	System	√	√	√	√	√	1.Calibration(Cars with DSTC)
VOLVO	2008	S40(04-)		Climate Module(CCM)	Control	√	√	√	√		
VOLVO	2008	S40(04-)		Combustion preheater Module(CPM)		√	√	√	√	√	
VOLVO	2008	S40(04-)		Driver Door Module(DDM)		√	√	√	√	√	1.Initializing the window position
VOLVO	2008	S40(04-)		Passenger Door Module(PDM)	Door	√	√	√	√	√	1.Initializing the window position

VOLVO	2008	S40(04-)		Power Seat Module(PSM)	√	√	√	√	√	1.Programming the remote control setting
VOLVO	2008	S40(04-)		Supplemental Restraint System Module(SRS)	√	√	√	√		1.Calibration the occupant weight sensor(OWS)
VOLVO	2008	S40(04-)		Accessory Electronic Module(AEM)	√	√	√	√	√	
VOLVO	2008	S40(04-)		Audio Module(AUD)	√	√	√			
VOLVO	2008	S40(04-)		Central Electronic Module(CEM)	√	√	√	√	√	1.Calibration of position sensor,GDL lamps 2.Qick test of alternator function 3.Resetting low voltage counters
VOLVO	2008	S40(04-)		Driver Information Module(DIM)	√	√	√	√	√	1.Resetting the service reminder indicator
VOLVO	2008	S40(04-)		Phone Module(PHM)	√	√	√	√		1.Reinstalling the reserve battery
VOLVO	2008	S40(04-)		Steering Wheel Module(SWM)	√	√	√	√		
VOLVO	2008	S40(04-)		Infotainment Control Module(ICM)	√	√	√	√	√	1.Programming the infotainment control module(ICM)
VOLVO	2008	S40(04-)		Multimedia Module(MMM)	√	√	√	√	√	
VOLVO	2009	S40(04-)	B4164S3	Engine	√	√	√	√	√	1. Resetting adaptation
VOLVO	2009	S40(04-)	B4184S11	Engine	√	√	√	√	√	1.Resetting adaptation values
VOLVO	2009	S40(04-)	B4184S8	Engine	√	√	√	√	√	1.Resetting adaptation values
VOLVO	2009	S40(04-)	B4204S3	Engine	√	√	√	√	√	1.Resetting adaptation values
VOLVO	2009	S40(04-)	B5244S4	Engine	√	√	√	√	√	1.Resetting the adaptation values
VOLVO	2009	S40(04-)	B5244S5	Engine	√	√	√	√	√	1.Resetting the adaptation values
VOLVO	2009	S40(04-)	B5244S7	Engine	√	√	√	√	√	1.Resetting the adaptation values
VOLVO	2009	S40(04-)	B5254T7	Engine	√	√	√	√	√	1. Readiness Code 2. Adaptation of the throttle unit 3. Quick test of exhaust camshaft control 4. Quick test of intake camshaft control 5. Quick test of the fuel pump(FP)
VOLVO	2009	S40(04-)	D4164T	Engine	√	√	√	√	√	1. Adaptation of the exhaust gas recirculation (EGR) valve 2. Combustion of soot particles, particle trap 3. Resetting the odometer particle trap

VOLVO	2009	S40(04-)	D4204T	Engine		√	√	√	√	√	1. Programming the optimizing parameters 2. Resetting the adaptation values 3. Resetting the odometer particle trap 4. Adaptation of the exhaust gas recirculation (EGR) valve 5. Combustion of soot particle, particle trap 6. Quick-test injectors
VOLVO	2009	S40(04-)	D5244T13	Engine		√	√	√	√	√	
VOLVO	2009	S40(04-)	D5244T8	Engine		√	√	√	√	√	
VOLVO	2009	S40(04-)	D5244T9	Engine		√	√	√	√	√	
VOLVO	2009	S40(04-)	AW55-50/51SN	Transmission Module(TCM)	Control	√	√	√	√	√	
VOLVO	2009	S40(04-)	AW50/51 AWD	Transmission Module(TCM)	Control	√	√	√	√	√	
VOLVO	2009	S40(04-)	MPS6	Transmission Module(TCM)	Control	√	√	√	√		
VOLVO	2009	S40(04-)	AW50/51 AWD	Differential Module (DEM)	Electronic	√	√	√			
VOLVO	2009	S40(04-)	M66 AWD	Differential Module (DEM)	Electronic	√	√	√			
VOLVO	2009	S40(04-)		Anti-brake Module(ABS/BCM)	System	√	√	√	√	√	√ 1. Reading off the configuration √ 2. Calibration (cars with DSTC)
VOLVO	2009	S40(04-)		Climate Module(CCM)	Control	√	√	√	√		√ 1. Calibrating the Climate Control Module (CCM) √ 2. Identifying the Damper Motor Module
VOLVO	2009	S40(04-)		Power Seat Module (PSM)		√	√	√	√	√	√ 1.Programming remote control setting
VOLVO	2009	S40(04-)		Accessory module (AEM)	electronic	√	√	√	√	√	√ 1.Reading off the configuration
VOLVO	2009	S40(04-)		Electric Power Steering (EPS)		√	√	√	√		
VOLVO	2009	S40(04-)		Park Assist Module (PAM)		√	√	√	√		
VOLVO	2009	S40(04-)		Audio module (AUD)		√	√	√	√		

VOLVO	2009	S40(04-)		Airbag (SRS)	√	√	√	√		
VOLVO	2009	S40(04-)		Driver door module (DDM)	√	√	√	√	√	
VOLVO	2009	S40(04-)		Passenger door module (PDM)	√	√	√	√	√	
VOLVO	2009	S40(04-)		Accessory USB Unit (AUU)	√	√	√	√		
VOLVO	2009	S40(04-)		Central electronic module (CEM-H)	√	√	√	√	√	√ 1.Resetting low voltage counters √ 2.Ignition switch key position
VOLVO	2009	S40(04-)		Central electronic module (CEM-L)	√	√	√	√	√	√ 1.Resetting low voltage counters √ 2.Ignition switch key position
VOLVO	2009	S40 (04-)		Trailer Module (TRM)	√	√	√	√		
VOLVO	2009	S40 (04-)		Steering wheel module (SWM)	√	√	√	√		
VOLVO	2009	S40 (04-)		Integrated Audio module (IAM)	√	√	√	√	√	
VOLVO	2009	S40 (04-)		Remote Digital Audio Receiver (RDAR)	√	√	√	√		
VOLVO	2009	S40 (04-)		Keyless vehicle module (KVM)	√	√	√	√	√	
VOLVO	2009	S40 (04-)		Bluetooth Phone Module (BPM)	√	√	√	√		
VOLVO	2009	S40 (04-)		Telephone (PHM)	√	√	√	√		
VOLVO	2009	S40 (04-)		Multimedia module (MMM)	√	√	√	√	√	
VOLVO	2009	S40 (04-)		Headlamp Control Module (HCM)	√	√	√	√		

VOLVO	2001	S60		Resetting the service reminder indicator(SRI)	√	√	√	√		√
VOLVO	2001	S60	B5204T5	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2001	S60	B5234T3	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2001	S60	B5234T7	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2001	S60	B5244S	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2001	S60	B5244S2	Engine Control Module(ECM)	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
VOLVO	2001	S60	B5244T3	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2001	S60	D5244T	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2001	S60	AW55-50/51SN	Transmission Control Module(TCM)	√	√	√	√	√	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	2001	S60		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration
VOLVO	2001	S60		Steering Wheel Angle Sensor Module(SAS)	√	√	√	√		
VOLVO	2001	S60		Climate Control Module(CCM)	√	√	√	√		1.Adjusting ECC parameters
VOLVO	2001	S60		Combustion Preheater Module(CPM)	√	√	√	√	√	
VOLVO	2001	S60		Driver Door Module(DDM)	√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting
VOLVO	2001	S60		Passenger Door Module(PDM)	√	√	√	√	√	1.Initializing the window position
VOLVO	2001	S60		Power Seat Module(PSM)	√	√	√	√	√	1.Programming the remote control setting
VOLVO	2001	S60		Supplemental Restraint System Module(SRS)	√	√	√	√		1.Calibrating the occupant weight sensor(OWS)
VOLVO	2001	S60		Accessory Electronic Module(AEM)	√	√	√	√	√	

VOLVO	2001	S60		Audio Module(AUM)	√	√	√			
VOLVO	2001	S60		Central Electronic Module(CEM)	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2001	S60		Driver Information Module(DIM)	√	√	√	√	√	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	2001	S60		Phone Module(PHM)	√	√	√	√		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
VOLVO	2001	S60		Rear Electronic Module(REM)	√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	2001	S60		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2001	S60		Road Traffic Information Module(RTI)	√	√	√			
VOLVO	2001	S60		Steering Wheel Module(SWM)	√	√	√	√		
VOLVO	2002	S60		Resetting the service reminder indicator(SRI)						√
VOLVO	2002	S60	B5204T5	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2002	S60	B5234T3	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2002	S60	B5234T7	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2002	S60	B5244S	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2002	S60	B5244S2	Engine Control Module(ECM)	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
VOLVO	2002	S60	B5244SG	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2002	S60	B5244SG2	Engine Control Module(ECM)	√	√	√	√	√	

VOLVO	2002	S60	B5244T3	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2002	S60	D5244T	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2002	S60	D5244T2	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2002	S60	AW50/51 AWD	Transmission Module(TCM)	Control	√	√	√	√	√	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	2002	S60	AW55-50/51SN	Transmission Module(TCM)	Control	√	√	√	√	√	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	2002	S60	AW50/51 AWD	Differential Module (DEM)	Electronic	√	√	√	√		
VOLVO	2002	S60		Anti-brake Module(ABS/BCM)	System	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration
VOLVO	2002	S60		Steering Wheel Angle Sensor Module(SAS)		√	√	√	√		
VOLVO	2002	S60		Climate Module(CCM)	Control	√	√	√	√		1.Adjusting ECC parameters
VOLVO	2002	S60		Combustion Module(CPM)	Preheater	√	√	√	√	√	
VOLVO	2002	S60		Driver Door Module(DDM)		√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting
VOLVO	2002	S60		Passenger Door Module(PDM)	Door	√	√	√	√	√	1.Initializing the window position
VOLVO	2002	S60		Power Seat Module(PSM)		√	√	√	√	√	1.Programming the remote control setting
VOLVO	2002	S60		Supplemental Restraint System Module(SRS)		√	√	√	√		1.Calibrating the occupant weight sensor(OWS)
VOLVO	2002	S60		Accessory Module(AEM)	Electronic	√	√	√	√	√	
VOLVO	2002	S60		Audio Module(AUM)		√	√	√			
VOLVO	2002	S60		Central Module(CEM)	Electronic	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car

VOLVO	2002	S60		Driver Information Module(DIM)	√	√	√	√	√	1. Testing all needles and lamps in the dashboard 2. Programming the driver information module(DIM)
VOLVO	2002	S60		Phone Module(PHM)	√	√	√	√		1. Volvo On call service check 2. Reinstalling the spare battery 3. Resetting the carphone code
VOLVO	2002	S60		Rear Electronic Module(REM)	√	√	√	√	√	1. Calibrating the position sensor for Bi-Xenon lamps
VOLVO	2002	S60		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2002	S60		Road Traffic Information Module(RTI)	√	√	√			
VOLVO	2002	S60		Steering Wheel Module(SWM)	√	√	√	√		
VOLVO	2003	S60		Resetting the service reminder indicator(SRI)						√
VOLVO	2003	S60	B5204T5	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2003	S60	B5234T3	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2003	S60	B5234T7	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2003	S60	B5244S	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2003	S60	B5244S2	Engine Control Module(ECM)	√	√	√	√	√	1. Adaptation of the throttle unit 2. Quick test of exhaust camshaft control 3. Quick test of intake camshaft control 4. Quick test of the fuel tank system(USA/CDN) 5. Readiness Code
VOLVO	2003	S60	B5244SG	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2003	S60	B5244SG2	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2003	S60	B5244T3	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2003	S60	B5254T2	Engine Control Module(ECM)	√	√	√	√	√	

VOLVO	2003	S60	D5244T	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2003	S60	D5244T2	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2003	S60	AW50/51 AWD	Transmission Module(TCM)	Control	√	√	√	√	√	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	2003	S60	AW55- 50/51SN	Transmission Module(TCM)	Control	√	√	√	√	√	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	2003	S60	AW50/51 AWD	Differential Module (DEM)	Electronic	√	√	√	√		
VOLVO	2003	S60		Anti-brake Module(ABS/BCM)	System	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration
VOLVO	2003	S60		Steering Wheel Sensor Module(SAS)	Angle	√	√	√	√		
VOLVO	2003	S60		Climate Module(CCM)	Control	√	√	√	√		1.Adjusting ECC parameters
VOLVO	2003	S60		Combustion Module(CPM)	Preheater	√	√	√	√	√	
VOLVO	2003	S60		Driver Door Module(DDM)		√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting
VOLVO	2003	S60		Passenger Module(PDM)	Door	√	√	√	√	√	1.Initializing the window position
VOLVO	2003	S60		Power Seat Module(PSM)		√	√	√	√	√	1.Programming the remote control setting
VOLVO	2003	S60		Supplemental System Module(SRS)	Restraint	√	√	√	√		1.Calibrating the occupant weight sensor(OWS)
VOLVO	2003	S60		Accessory Module(AEM)	Electronic	√	√	√	√	√	
VOLVO	2003	S60		Audio Module(AUM)		√	√	√			
VOLVO	2003	S60		Central Module(CEM)	Electronic	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2003	S60		Driver Module(DIM)	Information	√	√	√	√	√	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)

VOLVO	2003	S60		Phone Module(PHM)	✓	✓	✓	✓		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
VOLVO	2003	S60		Rear Electronic Module(REM)	✓	✓	✓	✓	✓	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	2003	S60		Upper Electronic Module(UEM)	✓	✓	✓	✓	✓	
VOLVO	2003	S60		Road Traffic Information Module(RTI)	✓	✓	✓			
VOLVO	2003	S60		Steering Wheel Module(SWM)	✓	✓	✓	✓		
VOLVO	2004	S60		Resetting the service reminder indicator(SRI)						✓
VOLVO	2004	S60	B5204T5	Engine Control Module(ECM)	✓	✓	✓	✓	✓	
VOLVO	2004	S60	B5234T3	Engine Control Module(ECM)	✓	✓	✓	✓	✓	
VOLVO	2004	S60	B5234T7	Engine Control Module(ECM)	✓	✓	✓	✓	✓	
VOLVO	2004	S60	B5244S	Engine Control Module(ECM)	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
VOLVO	2004	S60	B5244S2	Engine Control Module(ECM)	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
VOLVO	2004	S60	B5244SG	Engine Control Module(ECM)	✓	✓	✓	✓	✓	
VOLVO	2004	S60	B5244SG2	Engine Control Module(ECM)	✓	✓	✓	✓	✓	
VOLVO	2004	S60	B5254T2	Engine Control Module(ECM)	✓	✓	✓	✓	✓	
VOLVO	2004	S60	B5254T4	Engine Control Module(ECM)	✓	✓	✓	✓	✓	
VOLVO	2004	S60	D5244T	Engine Control Module(ECM)	✓	✓	✓	✓	✓	

VOLVO	2004	S60	D5244T2	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2004	S60	D5244T3	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2004	S60	AW50/51 AWD	Transmission Module(TCM)	Control	√	√	√	√	√	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	2004	S60	AW55-50/51SN	Transmission Module(TCM)	Control	√	√	√	√	√	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	2004	S60	AW50/51 AWD	Differential Module (DEM)	Electronic	√	√	√	√		
VOLVO	2004	S60		Anti-brake Module(ABS/BCM)	System	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration
VOLVO	2004	S60		Steering Wheel Angle Sensor Module(SAS)		√	√	√	√		
VOLVO	2004	S60		Climate Module(CCM)	Control	√	√	√	√		1.Adjusting ECC parameters
VOLVO	2004	S60		Combustion Module(CPM)	Preheater	√	√	√	√	√	
VOLVO	2004	S60		Driver Door Module(DDM)		√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting
VOLVO	2004	S60		Passenger Module(PDM)	Door	√	√	√	√	√	1.Initializing the window position
VOLVO	2004	S60		Power Seat Module(PSM)		√	√	√	√	√	1.Programming the remote control setting
VOLVO	2004	S60		Supplemental Restraint System Module(SRS)		√	√	√	√		1.Calibrating the occupant weight sensor(OWS)
VOLVO	2004	S60		Accessory Module(AEM)	Electronic	√	√	√	√	√	
VOLVO	2004	S60		Audio Module(AUM)		√	√	√			
VOLVO	2004	S60		Central Module(CEM)	Electronic	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2004	S60		Driver Module(DIM)	Information	√	√	√	√	√	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)

VOLVO	2004	S60		Phone Module(PHM)	√	√	√	√		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
VOLVO	2004	S60		Rear Electronic Module(REM)	√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	2004	S60		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2004	S60		Road Traffic Information Module(RTI)	√	√	√			
VOLVO	2004	S60		Steering Wheel Module(SWM)	√	√	√	√		
VOLVO	2004	S60		Suspension Module(SUM)	√	√	√	√		
VOLVO	2005	S60		Resetting the service reminder indicator(SRI)						√
VOLVO	2005	S60	B5204T5	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2005	S60	B5244S	Engine Control Module(ECM)	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
VOLVO	2005	S60	B5244S2	Engine Control Module(ECM)	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
VOLVO	2005	S60	B5244SG	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2005	S60	B5244SG2	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2005	S60	B5244T4	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2005	S60	B5244T5	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2005	S60	B5254T2	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2005	S60	B5254T4	Engine Control Module(ECM)	√	√	√	√	√	

VOLVO	2005	S60	D5244T	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2005	S60	D5244T2	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2005	S60	D5244T3	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2005	S60	AW50/51 AWD	Transmission Module(TCM)	Control	√	√	√	√	√	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	2005	S60	AW55-50/51SN	Transmission Module(TCM)	Control	√	√	√	√	√	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	2005	S60	AW50/51 AWD	Differential Module (DEM)	Electronic	√	√	√	√		
VOLVO	2005	S60	M66AWD			√	√	√	√		
VOLVO	2005	S60		Anti-brake Module(ABS/BCM)	System	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration
VOLVO	2005	S60		Steering Wheel Angle Sensor Module(SAS)		√	√	√	√		
VOLVO	2005	S60		Climate Module(CCM)	Control	√	√	√	√		1.Adjusting ECC parameters
VOLVO	2005	S60		Combustion Module(CPM)	Preheater	√	√	√	√	√	
VOLVO	2005	S60		Driver Door Module(DDM)		√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting
VOLVO	2005	S60		Passenger Module(PDM)	Door	√	√	√	√	√	1.Initializing the window position
VOLVO	2005	S60		Power Seat Module(PSM)		√	√	√	√	√	1.Programming the remote control setting
VOLVO	2005	S60		Supplemental Restraint System Module(SRS)		√	√	√	√		1.Calibrating the occupant weight sensor(OWS)
VOLVO	2005	S60		Accessory Module(AEM)	Electronic	√	√	√	√	√	
VOLVO	2005	S60		Audio Module(AUM)		√	√	√			
VOLVO	2005	S60		Central Module(CEM)	Electronic	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car

VOLVO	2005	S60		Driver Information Module(DIM)	√	√	√	√	√	1.Testing all needles and lamps in the dashboard 2.Programming the dirver information module(DIM)
VOLVO	2005	S60		Phone Module(PHM)	√	√	√	√		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
VOLVO	2005	S60		Rear Electronic Module(REM)	√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	2005	S60		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2005	S60		Road Traffic Information Module(RTI)	√	√	√			
VOLVO	2005	S60		Suspension Module(SUM)	√	√	√	√		
VOLVO	2006	S60		Resetting the service reminder indicator(SRI)						√
VOLVO	2006	S60	B5204T5	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2006	S60	B5234T3	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2006	S60	B5234T7	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2006	S60	B5244S	Engine Control Module(ECM)	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
VOLVO	2006	S60	B5244S2	Engine Control Module(ECM)	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
VOLVO	2006	S60	B5244SG	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2006	S60	B5244SG2	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2006	S60	B5244T4	Engine Control Module(ECM)	√	√	√	√	√	

VOLVO	2006	S60	B5244T4	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2006	S60	B5254T2	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2006	S60	B5254T4	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2006	S60	D5244T	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2006	S60	D5244T2	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2006	S60	D5244T3	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2006	S60	AW50/51 AWD	Transmission Module(TCM)	Control	√	√	√	√	√	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	2006	S60	AW55-50/51SN	Transmission Module(TCM)	Control	√	√	√	√	√	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	2006	S60	AW50/51 AWD	Differential Module (DEM)	Electronic	√	√	√	√		
VOLVO	2006	S60	M66AWD			√	√	√	√		
VOLVO	2006	S60		Anti-brake Module(ABS/BCM)	System	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration
VOLVO	2006	S60		Steering Wheel Angle Sensor Module(SAS)		√	√	√	√		
VOLVO	2006	S60		Climate Module(CCM)	Control	√	√	√	√		1.Adjusting ECC parameters
VOLVO	2006	S60		Combustion Module(CPM)	Preheater	√	√	√	√	√	
VOLVO	2006	S60		Driver Door Module(DDM)		√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting
VOLVO	2006	S60		Passenger Module(PDM)	Door	√	√	√	√	√	1.Initializing the window position
VOLVO	2006	S60		Power Seat Module(PSM)		√	√	√	√	√	1.Programming the remote control setting
VOLVO	2006	S60		Supplemental Restraint System Module(SRS)		√	√	√	√		1.Calibrating the occupant weight sensor(OWS)
VOLVO	2006	S60		Accessory Module(AEM)	Electronic	√	√	√	√	√	
VOLVO	2006	S60		Audio Module(AUM)		√	√	√			

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

VOLVO	2006	S60		Central Electronic Module(CEM)	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2006	S60		Driver Information Module(DIM)	√	√	√	√	√	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	2006	S60		Phone Module(PHM)	√	√	√	√		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
VOLVO	2006	S60		Rear Electronic Module(REM)	√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	2006	S60		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2006	S60		Road Traffic Information Module(RTI)	√	√	√			
VOLVO	2006	S60		Suspension Module(SUM)	√	√	√	√		
VOLVO	2007	S60		Resetting the service reminder indicator(SRI)						√
VOLVO	2007	S60	B5204T5	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2007	S60	B5234T3	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2007	S60	B5234T7	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2007	S60	B5244S	Engine Control Module(ECM)	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
VOLVO	2007	S60	B5244S2	Engine Control Module(ECM)	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
VOLVO	2007	S60	B5244SG	Engine Control Module(ECM)	√	√	√	√	√	

VOLVO	2007	S60	B5244SG2	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2007	S60	B5244T4	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2007	S60	B5244T4	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2007	S60	B5254T2	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2007	S60	B5254T4	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2007	S60	D5244T	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2007	S60	D5244T2	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2007	S60	D5244T3	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2007	S60	AW50/51 AWD	Transmission Module(TCM)	Control	√	√	√	√	√	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	2007	S60	AW55-50/51SN	Transmission Module(TCM)	Control	√	√	√	√	√	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	2007	S60	AW50/51 AWD	Differential Module (DEM)	Electronic	√	√	√	√		
VOLVO	2007	S60	M66AWD			√	√	√	√		
VOLVO	2007	S60		Anti-brake Module(ABS/BCM)	System	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration
VOLVO	2007	S60		Steering Wheel Angle Sensor Module(SAS)		√	√	√	√		
VOLVO	2007	S60		Climate Module(CCM)	Control	√	√	√	√		1.Adjusting ECC parameters
VOLVO	2007	S60		Combustion Module(CPM)	Preheater	√	√	√	√	√	
VOLVO	2007	S60		Driver Door Module(DDM)		√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting
VOLVO	2007	S60		Passenger Module(PDM)	Door	√	√	√	√	√	1.Initializing the window position
VOLVO	2007	S60		Power Seat Module(PSM)		√	√	√	√	√	1.Programming the remote control setting

VOLVO	2007	S60		Supplemental Restraint System Module(SRS)	√	√	√	√		1.Calibrating the occupant weight sensor(OWS)
VOLVO	2007	S60		Accessory Electronic Module(AEM)	√	√	√	√	√	
VOLVO	2007	S60		Audio Module(AUM)	√	√	√			
VOLVO	2007	S60		Central Electronic Module(CEM)	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2007	S60		Driver Information Module(DIM)	√	√	√	√	√	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	2007	S60		Phone Module(PHM)	√	√	√	√		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
VOLVO	2007	S60		Rear Electronic Module(REM)	√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	2007	S60		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2007	S60		Road Traffic Information Module(RTI)	√	√	√			
VOLVO	2007	S60		Suspension Module(SUM)	√	√	√	√		
VOLVO	2008	S60		Resetting the service reminder indicator(SRI)						√
VOLVO	2008	S60	B5204T5	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2008	S60	B5234T3	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2008	S60	B5234T7	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2008	S60	B5244S	Engine Control Module(ECM)	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code

VOLVO	2008	S60	B5244S2	Engine Module(ECM)	Control	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
VOLVO	2008	S60	B5244SG	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2008	S60	B5244SG2	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2008	S60	B5244T4	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2008	S60	B5244T4	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2008	S60	B5254T2	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2008	S60	B5254T4	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2008	S60	D5244T	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2008	S60	D5244T2	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2008	S60	D5244T3	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2008	S60	AW50/51 AWD	Transmission Module(TCM)	Control	√	√	√	√	√	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	2008	S60	AW55-50/51SN	Transmission Module(TCM)	Control	√	√	√	√	√	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	2008	S60	AW50/51 AWD	Differential Module (DEM)	Electronic	√	√	√	√		
VOLVO	2008	S60	M66AWD			√	√	√	√		
VOLVO	2008	S60		Anti-brake Module(ABS/BCM)	System	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration
VOLVO	2008	S60		Steering Wheel Angle Sensor Module(SAS)		√	√	√	√		
VOLVO	2008	S60		Climate Module(CCM)	Control	√	√	√	√		1.Adjusting ECC parameters

VOLVO	2008	S60		Combustion Preheater Module(CPM)	√	√	√	√	√	
VOLVO	2008	S60		Driver Door Module(DDM)	√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting
VOLVO	2008	S60		Passenger Door Module(PDM)	√	√	√	√	√	1.Initializing the window position
VOLVO	2008	S60		Power Seat Module(PSM)	√	√	√	√	√	1.Programming the remote control setting
VOLVO	2008	S60		Supplemental Restraint System Module(SRS)	√	√	√	√		1.Calibrating the occupant weight sensor(OWS)
VOLVO	2008	S60		Accessory Electronic Module(AEM)	√	√	√	√	√	
VOLVO	2008	S60		Audio Module(AUM)	√	√	√			
VOLVO	2008	S60		Central Electronic Module(CEM)	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2008	S60		Driver Information Module(DIM)	√	√	√	√	√	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	2008	S60		Phone Module(PHM)	√	√	√	√		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
VOLVO	2008	S60		Rear Electronic Module(REM)	√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	2008	S60		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2008	S60		Road Traffic Information Module(RTI)	√	√	√			
VOLVO	2008	S60		Suspension Module(SUM)	√	√	√	√		
VOLVO	1997	S70		Resetting the service reminder indicator(SRI)						√
VOLVO	1997	S70	B5202FS	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1997	S70	B5204T2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1997	S70	B5204T3	Fuel System/ Combined System	√	√	√	√	√	

VOLVO	1997	S70	B5234FS	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1997	S70	B5234T2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1997	S70	B5234T3	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1997	S70	B5252FS	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1997	S70	B5254FS M4.4	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1997	S70	B5254T	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1997	S70	D5252T MSA 15.7	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	S70	AW50-42	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	1997	S70		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	1997	S70		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	1997	S70		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	1997	S70		Road Traffic Information Module(RTI)	√	√	√	√	√	
VOLVO	1997	S70		Immobilizer	√	√	√	√	√	
VOLVO	1998	S70		Resetting the service reminder indicator(SRI)						√
VOLVO	1998	S70	B5202FS	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1998	S70	B5204T2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1998	S70	B5204T3	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1998	S70	B5234FS	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1998	S70	B5234T2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1998	S70	B5234T3	Fuel System/ Combined System	√	√	√	√	√	

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

VOLVO	1998	S70	B5234T4	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1998	S70	B5234T7	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1998	S70	B5252FS	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1998	S70	B5254FS M4.4	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1998	S70	B5254T	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1998	S70	D5252T MSA 15.7	Fuel System/ Combined System	√	√	√	√		
VOLVO	1998	S70	GB5252S	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1998	S70	AW50-42	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	1998	S70		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	1998	S70		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	1998	S70		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	1998	S70		Road Traffic Information Module(RTI)	√	√	√	√	√	
VOLVO	1998	S70		Immobilizer	√	√	√	√	√	
VOLVO	1999	S70		Resetting the service reminder indicator(SRI)						
VOLVO	1999	S70	B5202FS	Central Electronic Module(CEM)	√	√	√	√	√	
VOLVO	1999	S70	B5204T3	Central Electronic Module(CEM)	√	√	√	√	√	
VOLVO	1999	S70	B5204T4	Central Electronic Module(CEM)	√	√	√	√	√	
VOLVO	1999	S70	B5234FS	Central Electronic Module(CEM)	√	√	√	√	√	
VOLVO	1999	S70	B5234T3	Central Electronic Module(CEM)	√	√	√	√	√	
VOLVO	1999	S70	B5234T7	Central Electronic Module(CEM)	√	√	√	√	√	

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

VOLVO	1999	S70	B5252FS DENSO	Central Module(CEM)	Electronic	√	√	√	√	√	
VOLVO	1999	S70	B5254T	Central Module(CEM)	Electronic	√	√	√	√	√	
VOLVO	1999	S70	D5252T MSA 15.7	Central Module(CEM)	Electronic	√	√	√	√		
VOLVO	1999	S70	D5252T MSA 15.8	Central Module(CEM)	Electronic	√	√	√	√		
VOLVO	1999	S70	GB5252S	Central Module(CEM)	Electronic	√	√	√	√	√	
VOLVO	1999	S70	GB5252S2	Central Module(CEM)	Electronic	√	√	√	√	√	
VOLVO	1999	S70	AW42AWD	Transmission Module(TCM)	Control	√	√	√	√		
VOLVO	1999	S70	AW50-42	Transmission Module(TCM)	Control	√	√	√	√		
VOLVO	1999	S70		Anti-brake Module(ABS/BCM)	System	√	√	√	√	√	
VOLVO	1999	S70		Climate Module(CCM)	Control	√	√	√	√		
VOLVO	1999	S70		Combustion Module(CPM)	Preheater	√	√	√	√	√	
VOLVO	1999	S70		Supplemental System Module(SRS)	Restraint	√	√	√	√		
VOLVO	1999	S70		Power Module,Left(PSL)	Seat	√	√	√	√	√	
VOLVO	1999	S70		Power Module,Right(PSR)	Seat	√	√	√	√	√	
VOLVO	1999	S70		Road Traffic Module(RTI)	Information	√	√	√	√	√	
VOLVO	1999	S70		Immobilizer		√	√	√	√	√	
VOLVO	1999	S70		Lock and alarm		√	√	√	√	√	
VOLVO	2000	S70		Resetting the service reminder indicator(SRI)							
VOLVO	2000	S70	B5204T3	Central Module(CEM)	Electronic	√	√	√	√	√	
VOLVO	2000	S70	B5204T4	Central Module(CEM)	Electronic	√	√	√	√	√	

VOLVO	2000	S70	B5234T3	Central Module(CEM)	Electronic	√	√	√	√	√	
VOLVO	2000	S70	B5234T7	Central Module(CEM)	Electronic	√	√	√	√	√	
VOLVO	2000	S70	B5244S	Central Module(CEM)	Electronic	√	√	√	√		
VOLVO	2000	S70	B5244S2	Central Module(CEM)	Electronic	√	√	√	√		
VOLVO	2000	S70	B5244SG	Central Module(CEM)	Electronic	√	√	√	√		
VOLVO	2000	S70	B5244SG2	Central Module(CEM)	Electronic	√	√	√	√		
VOLVO	2000	S70	B5244T	Central Module(CEM)	Electronic	√	√	√	√	√	
VOLVO	2000	S70	D5252T MSA 15.8	Central Module(CEM)	Electronic	√	√	√	√		
VOLVO	2000	S70	AW42AWD	Transmission Module(TCM)	Control	√	√	√	√		
VOLVO	2000	S70	AW50-42	Transmission Module(TCM)	Control	√	√	√	√		
VOLVO	2000	S70		Anti-brake Module(ABS/BCM)	System	√	√	√	√	√	
VOLVO	2000	S70		Climate Module(CCM)	Control	√	√	√	√		
VOLVO	2000	S70		Combustion Module(CPM)	Preheater	√	√	√	√	√	
VOLVO	2000	S70		Supplemental System Module(SRS)	Restraint	√	√	√	√		
VOLVO	2000	S70		Power Module,Left(PSL)	Seat	√	√	√	√	√	
VOLVO	2000	S70		Power Module,Right(PSR)	Seat	√	√	√	√	√	
VOLVO	2000	S70		Road Traffic Information Module(RTI)		√	√	√	√	√	
VOLVO	2000	S70		Immobilizer		√	√	√	√	√	
VOLVO	2000	S70		Lock and alarm		√	√	√	√	√	
VOLVO	1999	S80		Resetting the service reminder indicator(SRI)							√

VOLVO	1999	S80	B5204T3	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	1999	S80	B5204T4	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	1999	S80	B5244S	Engine Module(ECM)	Control	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	1999	S80	B5244S2	Engine Module(ECM)	Control	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	1999	S80	B6284T	Engine Module(ECM)	Control	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	1999	S80	B6304S3	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	1999	S80	D5252T MSA 15.8	Engine Module(ECM)	Control	√	√	√	√		1.Programming optimising parameters
VOLVO	1999	S80	4T65EV	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	1999	S80	4T65EV-GT	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	1999	S80	AW50-42	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	1999	S80	AW55- 50/51SN	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	1999	S80		Anti-brake Module(ABS/BCM)	System	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration

VOLVO	1999	S80		Steering Wheel Angle Sensor Module(SAS)	√	√	√	√		
VOLVO	1999	S80		Climate Control Module(CCM)	√	√	√	√		1.Adjusting ECC parameters
VOLVO	1999	S80		Driver Door Module(DDM)	√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting
VOLVO	1999	S80		Passenger Door Module(PDM)	√	√	√	√	√	1.Initializing the window position
VOLVO	1999	S80		Power Seat Module(PSM)	√	√	√	√	√	1.Programming the remote control setting
VOLVO	1999	S80		Supplemental Restraint System Module(SRS)	√	√	√	√		1.Calibrating the occupant weight sensor(OWS)
VOLVO	1999	S80		Audio Module(AUM)	√	√	√	√		
VOLVO	1999	S80		Central Electronic Module(CEM)	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	1999	S80		Driver Information Module(DIM)	√	√	√	√	√	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	1999	S80		Phone Module(PHM)	√	√	√	√		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
VOLVO	1999	S80		Rear Electronic Module(REM)	√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	1999	S80		Road Traffic Information Module(RTI)	√	√	√			
VOLVO	1999	S80		Steering Wheel Module(SWM)	√	√	√	√		
VOLVO	1999	S80		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2000	S80		Resetting the service reminder indicator(SRI)						√
VOLVO	2000	S80	B5204T3	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2000	S80	B5204T4	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2000	S80	B5204T5	Engine Control Module(ECM)	√	√	√	√	√	

VOLVO	2000	S80	B5234T7	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2000	S80	B5244S	Engine Module(ECM)	Control	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	2000	S80	B5244S2	Engine Module(ECM)	Control	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	2000	S80	B6284T	Engine Module(ECM)	Control	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	2000	S80	B6294S	Engine Module(ECM)	Control	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	2000	S80	D5252T MSA 15.8	Engine Module(ECM)	Control	√	√	√	√		1.Programming optimising parameters
VOLVO	2000	S80	4T65EV	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	2000	S80	4T65EV-GT	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	2000	S80	AW50-42	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	2000	S80	AW55- 50/51SN	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation

VOLVO	2000	S80		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration
VOLVO	2000	S80		Steering Wheel Angle Sensor Module(SAS)	√	√	√	√		
VOLVO	2000	S80		Climate Control Module(CCM)	√	√	√	√		1.Adjusting ECC parameters
VOLVO	2000	S80		Driver Door Module(DDM)	√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting
VOLVO	2000	S80		Passenger Door Module(PDM)	√	√	√	√	√	1.Initializing the window position
VOLVO	2000	S80		Power Seat Module(PSM)	√	√	√	√	√	1.Programming the remote control setting
VOLVO	2000	S80		Supplemental Restraint System Module(SRS)	√	√	√	√		1.Calibrating the occupant weight sensor(OWS)
VOLVO	2000	S80		Audio Module(AUM)	√	√	√	√		
VOLVO	2000	S80		Central Electronic Module(CEM)	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2000	S80		Driver Information Module(DIM)	√	√	√	√	√	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	2000	S80		Phone Module(PHM)	√	√	√	√		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
VOLVO	2000	S80		Rear Electronic Module(REM)	√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	2000	S80		Road Traffic Information Module(RTI)	√	√	√			
VOLVO	2000	S80		Steering Wheel Module(SWM)	√	√	√	√		
VOLVO	2000	S80		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2001	S80		Resetting the service reminder indicator(SRI)						√
VOLVO	2001	S80	B5204T5	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2001	S80	B5234T7	Engine Control Module(ECM)	√	√	√	√	√	

VOLVO	2001	S80	B5244S	Engine Module(ECM)	Control	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	2001	S80	B5244S2	Engine Module(ECM)	Control	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	2001	S80	B5244SG	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2001	S80	B5244SG2	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2001	S80	B5244T3	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2001	S80	B6284T	Engine Module(ECM)	Control	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	2001	S80	B6294S	Engine Module(ECM)	Control	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	2001	S80	D5244T	Engine Module(ECM)	Control	√	√	√	√		1.Programming optimising parameters
VOLVO	2001	S80	D5252T MSA 15.8	Engine Module(ECM)	Control	√	√	√	√		1.Programming optimising parameters
VOLVO	2001	S80	4T65EV	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	2001	S80	4T65EV-GT	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change

VOLVO	2001	S80	AW50-42	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	2001	S80	AW50/51AW D	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	2001	S80	AW55-50/51SN	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	2001	S80		Anti-brake Module(ABS/BCM)	System	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration
VOLVO	2001	S80		Steering Wheel Angle Sensor Module(SAS)		√	√	√	√		
VOLVO	2001	S80		Climate Module(CCM)	Control	√	√	√	√		1.Adjusting ECC parameters
VOLVO	2001	S80		Driver Door Module(DDM)		√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting
VOLVO	2001	S80		Passenger Door Module(PDM)	Door	√	√	√	√	√	1.Initializing the window position
VOLVO	2001	S80		Power Seat Module(PSM)		√	√	√	√	√	1.Programming the remote control setting
VOLVO	2001	S80		Supplemental Restraint System Module(SRS)		√	√	√	√		1.Calibrating the occupant weight sensor(OWS)
VOLVO	2001	S80		Audio Module(AUM)		√	√	√	√		
VOLVO	2001	S80		Central Module(CEM)	Electronic	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2001	S80		Driver Module(DIM)	Information	√	√	√	√	√	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	2001	S80		Phone Module(PHM)		√	√	√	√		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
VOLVO	2001	S80		Rear Module(REM)	Electronic	√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps

VOLVO	2001	S80		Road Traffic Information Module(RTI)	√	√	√			
VOLVO	2001	S80		Steering Wheel Module(SWM)	√	√	√	√		
VOLVO	2001	S80		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2002	S80		Resetting the service reminder indicator(SRI)						√
VOLVO	2002	S80	B5204T5	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2002	S80	B5234T7	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2002	S80	B5244S	Engine Control Module(ECM)	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	2002	S80	B5244S2	Engine Control Module(ECM)	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	2002	S80	B5244SG	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2002	S80	B5244SG2	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2002	S80	B5244T3	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2002	S80	B6294S2	Engine Control Module(ECM)	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	2002	S80	B6294T	Engine Control Module(ECM)	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code

VOLVO	2002	S80	D5244T	Engine Module(ECM)	Control	√	√	√	√		1.Programming optimising parameters
VOLVO	2002	S80	D5244T2	Engine Module(ECM)	Control	√	√	√	√		1.Programming optimising parameters
VOLVO	2002	S80	4T65EV	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	2002	S80	4T65EV-GT	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	2002	S80	AW50/51AW D	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	2002	S80	AW55-50/51SN	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	2002	S80		Anti-brake Module(ABS/BCM)	System	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration
VOLVO	2002	S80		Steering Wheel Angle Sensor Module(SAS)		√	√	√	√		
VOLVO	2002	S80		Climate Module(CCM)	Control	√	√	√	√		1.Adjusting ECC parameters
VOLVO	2002	S80		Driver Door Module(DDM)		√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting
VOLVO	2002	S80		Passenger Door Module(PDM)	Door	√	√	√	√	√	1.Initializing the window position
VOLVO	2002	S80		Power Seat Module(PSM)		√	√	√	√	√	1.Programming the remote control setting
VOLVO	2002	S80		Supplemental Restraint System Module(SRS)		√	√	√	√		1.Calibrating the occupant weight sensor(OWS)
VOLVO	2002	S80		Audio Module(AUM)		√	√	√	√		
VOLVO	2002	S80		Central Module(CEM)	Electronic	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car

VOLVO	2002	S80		Driver Information Module(DIM)	√	√	√	√	√	1.Testing all needles and lamps in the dashboard 2.Programming the dirver information module(DIM)
VOLVO	2002	S80		Phone Module(PHM)	√	√	√	√		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
VOLVO	2002	S80		Rear Electronic Module(REM)	√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	2002	S80		Road Traffic Information Module(RTI)	√	√	√			
VOLVO	2002	S80		Steering Wheel Module(SWM)	√	√	√	√		
VOLVO	2002	S80		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2003	S80		Resetting the service reminder indicator(SRI)						√
VOLVO	2003	S80	B5204T5	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2003	S80	B5234T7	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2003	S80	B5244S	Engine Control Module(ECM)	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	2003	S80	B5244S2	Engine Control Module(ECM)	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	2003	S80	B5244SG	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2003	S80	B5244SG2	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2003	S80	B5244T3	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2003	S80	B5254T2	Engine Control Module(ECM)	√	√	√	√	√	

VOLVO	2003	S80	B6294T	Engine Module(ECM)	Control	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	2003	S80	D5244T	Engine Module(ECM)	Control	√	√	√	√		1.Programming optimising parameters
VOLVO	2003	S80	D5244T2	Engine Module(ECM)	Control	√	√	√	√		1.Programming optimising parameters
VOLVO	2003	S80	4T65EV	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	2003	S80	4T65EV-GT	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	2003	S80	AW50/51AW D	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	2003	S80	AW55-50/51SN	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	2003	S80		Anti-brake Module(ABS/BCM)	System	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration
VOLVO	2003	S80		Steering Wheel Angle Sensor Module(SAS)		√	√	√	√		
VOLVO	2003	S80		Climate Module(CCM)	Control	√	√	√	√		1.Adjusting ECC parameters
VOLVO	2003	S80		Driver Door Module(DDM)		√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting
VOLVO	2003	S80		Passenger Module(PDM)	Door	√	√	√	√	√	1.Initializing the window position
VOLVO	2003	S80		Power Seat Module(PSM)		√	√	√	√	√	1.Programming the remote control setting
VOLVO	2003	S80		Supplemental Restraint System Module(SRS)		√	√	√	√		1.Calibrating the occupant weight sensor(OWS)
VOLVO	2003	S80		Audio Module(AUM)		√	√	√	√		

VOLVO	2003	S80		Central Electronic Module(CEM)	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2003	S80		Driver Information Module(DIM)	√	√	√	√	√	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	2003	S80		Phone Module(PHM)	√	√	√	√		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
VOLVO	2003	S80		Rear Electronic Module(REM)	√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	2003	S80		Road Traffic Information Module(RTI)	√	√	√			
VOLVO	2003	S80		Steering Wheel Module(SWM)	√	√	√	√		
VOLVO	2003	S80		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2004	S80		Resetting the service reminder indicator(SRI)						√
VOLVO	2004	S80	B5204T5	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2004	S80	B5234T7	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2004	S80	B5244S	Engine Control Module(ECM)	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	2004	S80	B5244S2	Engine Control Module(ECM)	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	2004	S80	B5244SG	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2004	S80	B5244SG2	Engine Control Module(ECM)	√	√	√	√	√	

VOLVO	2004	S80	B5254T2	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2004	S80	B6294S2	Engine Module(ECM)	Control	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	2004	S80	B6294T	Engine Module(ECM)	Control	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	2004	S80	D5244T	Engine Module(ECM)	Control	√	√	√	√		1.Programming optimising parameters
VOLVO	2004	S80	D5244T2	Engine Module(ECM)	Control	√	√	√	√		1.Programming optimising parameters
VOLVO	2004	S80	4T65EV	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	2004	S80	4T65EV-GT	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	2004	S80	AW50/51AW D	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	2004	S80	AW55-50/51SN	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	2004	S80		Anti-brake Module(ABS/BCM)	System	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration
VOLVO	2004	S80		Steering Wheel Angle Sensor Module(SAS)		√	√	√	√		
VOLVO	2004	S80		Climate Module(CCM)	Control	√	√	√	√		1.Adjusting ECC parameters
VOLVO	2004	S80		Driver Door Module(DDM)		√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting

VOLVO	2004	S80		Passenger Door Module(PDM)	√	√	√	√	√	1.Initializing the window position
VOLVO	2004	S80		Power Seat Module(PSM)	√	√	√	√	√	1.Programming the remote control setting
VOLVO	2004	S80		Supplemental Restraint System Module(SRS)	√	√	√	√		1.Calibrating the occupant weight sensor(OWS)
VOLVO	2004	S80		Audio Module(AUM)	√	√	√	√		
VOLVO	2004	S80		Central Electronic Module(CEM)	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2004	S80		Driver Information Module(DIM)	√	√	√	√	√	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	2004	S80		Phone Module(PHM)	√	√	√	√		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
VOLVO	2004	S80		Rear Electronic Module(REM)	√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	2004	S80		Road Traffic Information Module(RTI)	√	√	√			
VOLVO	2004	S80		Steering Wheel Module(SWM)	√	√	√	√		
VOLVO	2004	S80		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2005	S80		Resetting the service reminder indicator(SRI)						√
VOLVO	2005	S80	B5204T5	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2005	S80	B5244S	Engine Control Module(ECM)	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	2005	S80	B5244S2	Engine Control Module(ECM)	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code

VOLVO	2005	S80	B5244SG	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2005	S80	B5244SG2	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2005	S80	B5244T4	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2005	S80	B5254T2	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2005	S80	B6294S2	Engine Module(ECM)	Control	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	2005	S80	B6294T	Engine Module(ECM)	Control	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	2005	S80	D5244T	Engine Module(ECM)	Control	√	√	√	√		1.Programming optimising parameters
VOLVO	2005	S80	D5244T2	Engine Module(ECM)	Control	√	√	√	√		1.Programming optimising parameters
VOLVO	2005	S80	4T65EV	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	2005	S80	4T65EV-GT	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	2005	S80	AW50/51AW D	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	2005	S80	AW55-50/51SN	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	2005	S80		Anti-brake Module(ABS/BCM)	System	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration

VOLVO	2005	S80		Steering Wheel Angle Sensor Module(SAS)	√	√	√	√		
VOLVO	2005	S80		Climate Control Module(CCM)	√	√	√	√		1.Adjusting ECC parameters
VOLVO	2005	S80		Driver Door Module(DDM)	√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting
VOLVO	2005	S80		Passenger Door Module(PDM)	√	√	√	√	√	1.Initializing the window position
VOLVO	2005	S80		Power Seat Module(PSM)	√	√	√	√	√	1.Programming the remote control setting
VOLVO	2005	S80		Supplemental Restraint System Module(SRS)	√	√	√	√		1.Calibrating the occupant weight sensor(OWS)
VOLVO	2005	S80		Audio Module(AUM)	√	√	√	√		
VOLVO	2005	S80		Central Electronic Module(CEM)	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2005	S80		Driver Information Module(DIM)	√	√	√	√	√	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	2005	S80		Phone Module(PHM)	√	√	√	√		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
VOLVO	2005	S80		Rear Electronic Module(REM)	√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	2005	S80		Road Traffic Information Module(RTI)	√	√	√			
VOLVO	2005	S80		Steering Wheel Module(SWM)	√	√	√	√		
VOLVO	2005	S80		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2006	S80		Resetting the service reminder indicator(SRI)						√
VOLVO	2006	S80	B5204T5	Engine Control Module(ECM)	√	√	√	√	√	

VOLVO	2006	S80	B5244S	Engine Module(ECM)	Control	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	2006	S80	B5244S2	Engine Module(ECM)	Control	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	2006	S80	B5244SG	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2006	S80	B5244SG2	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2006	S80	B5244T4	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2006	S80	B5254T2	Engine Module(ECM)	Control	√	√	√	√	√	
VOLVO	2006	S80	B6294S2	Engine Module(ECM)	Control	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	2006	S80	B6294T	Engine Module(ECM)	Control	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	2006	S80	D5244T	Engine Module(ECM)	Control	√	√	√	√		1.Programming optimising parameters
VOLVO	2006	S80	D5244T2	Engine Module(ECM)	Control	√	√	√	√		1.Programming optimising parameters
VOLVO	2006	S80	4T65EV	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	2006	S80	4T65EV-GT	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change

VOLVO	2006	S80	AW50/51AW D	Transmission Module(TCM) Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	2006	S80	AW55- 50/51SN	Transmission Module(TCM) Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	2006	S80		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration
VOLVO	2006	S80		Steering Wheel Angle Sensor Module(SAS)	√	√	√	√		
VOLVO	2006	S80		Climate Control Module(CCM)	√	√	√	√		1.Adjusting ECC parameters
VOLVO	2006	S80		Driver Door Module(DDM)	√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting
VOLVO	2006	S80		Passenger Door Module(PDM)	√	√	√	√	√	1.Initializing the window position
VOLVO	2006	S80		Power Seat Module(PSM)	√	√	√	√	√	1.Programming the remote control setting
VOLVO	2006	S80		Supplemental Restraint System Module(SRS)	√	√	√	√		1.Calibrating the occupant weight sensor(OWS)
VOLVO	2006	S80		Audio Module(AUM)	√	√	√	√		
VOLVO	2006	S80		Central Electronic Module(CEM)	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2006	S80		Driver Information Module(DIM)	√	√	√	√	√	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	2006	S80		Phone Module(PHM)	√	√	√	√		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
VOLVO	2006	S80		Rear Electronic Module(REM)	√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	2006	S80		Road Traffic Information Module(RTI)	√	√	√			
VOLVO	2006	S80		Steering Wheel Module(SWM)	√	√	√	√		

VOLVO	2006	S80		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2007	S80		Resetting the service reminder indicator(SRI)						√
VOLVO	2007	S80	B5254T6	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2007	S80	B8444S	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2007	S80	B6324S	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2007	S80	TF-80SC	Transmission Control Module(TCM)	√	√	√	√	√	
VOLVO	2007	S80	TF-80SC AWD	Transmission Control Module(TCM)	√	√	√	√	√	
VOLVO	2007	S80		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	
VOLVO	2007	S80		Steering Wheel Angle Sensor Module(SAS)	√	√	√			
VOLVO	2007	S80		Park Brake Module(PBM)	√	√	√			
VOLVO	2007	S80		Climate Control Module(CCM)	√	√	√	√	√	
VOLVO	2007	S80		Driver Door Module(DDM)	√	√	√			
VOLVO	2007	S80		Passenger Door Module(PDM)	√	√	√			
VOLVO	2007	S80		Power Seat Module(PSM)	√	√	√			
VOLVO	2007	S80		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	2007	S80		Combustion Preheater Module(CPM)	√	√	√			
VOLVO	2007	S80		Trailer Module(TRM)	√	√	√			
VOLVO	2007	S80		Central Electronic Module(CEM)	√	√	√	√	√	
VOLVO	2007	S80		Driver Information Module(DIM)	√	√	√	√		
VOLVO	2007	S80		Phone Module(PHM)	√	√	√			
VOLVO	2007	S80		Forward Sensing Module(FSM)	√	√	√			

VOLVO	2007	S80		Headlamp Control Module(HCM)	√	√	√			
VOLVO	2007	S80		High level Display Front(HLDF)	√	√	√			
VOLVO	2007	S80		Parking Assistance Camera(PAC)	√	√	√			
VOLVO	2007	S80		Suspension Module(SUM)	√	√	√			
VOLVO	2007	S80		Integrated Audio Module(IAM)	√	√	√			
VOLVO	2007	S80		Infotainment Control Module(ICM)	√	√	√			
VOLVO	2007	S80		Keyless Vehicle Module(KVM)	√	√	√	√		
VOLVO	2007	S80		Park Assist Module(PAM)	√	√	√			
VOLVO	2008	S80	B5254T6	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2008	S80	B8444S	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2008	S80	B6324S	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2008	S80	TF-80SC	Transmission Control Module(TCM)	√	√	√	√	√	
VOLVO	2008	S80	TF-80SC AWD	Transmission Control Module(TCM)	√	√	√	√	√	
VOLVO	2008	S80		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	
VOLVO	2008	S80		Steering Wheel Angle Sensor Module(SAS)	√	√	√			
VOLVO	2008	S80		Park Brake Module(PBM)	√	√	√			
VOLVO	2008	S80		Climate Control Module(CCM)	√	√	√	√	√	
VOLVO	2008	S80		Driver Door Module(DDM)	√	√	√			
VOLVO	2008	S80		Passenger Door Module(PDM)	√	√	√			
VOLVO	2008	S80		Power Seat Module(PSM)	√	√	√			
VOLVO	2008	S80		Supplemental Restraint System Module(SRS)	√	√	√	√		

VOLVO	2008	S80		Combustion Preheater Module(CPM)	√	√	√			
VOLVO	2008	S80		Trailer Module(TRM)	√	√	√			
VOLVO	2008	S80		Central Electronic Module(CEM)	√	√	√	√	√	
VOLVO	2008	S80		Driver Information Module(DIM)	√	√	√	√		
VOLVO	2008	S80		Phone Module(PHM)	√	√	√			
VOLVO	2008	S80		Forward Sensing Module(FSM)	√	√	√			
VOLVO	2008	S80		Headlamp Control Module(HCM)	√	√	√			
VOLVO	2008	S80		High level Display Front(HLDF)	√	√	√			
VOLVO	2008	S80		Parking Assistance Camera(PAC)	√	√	√			
VOLVO	2008	S80		Suspension Module(SUM)	√	√	√			
VOLVO	2008	S80		Integrated Audio Module(IAM)	√	√	√			
VOLVO	2008	S80		Infotainment Control Module(ICM)	√	√	√			
VOLVO	2008	S80		Keyless Vehicle Module(KVM)	√	√	√	√		
VOLVO	2008	S80		Park Assist Module(PAM)	√	√	√			
VOLVO	1997	S90	B6244FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	S90	B6254FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	S90	B6304FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	S90	B6304FS2	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	S90	AW30-40	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	1997	S90	AW30-43	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	1997	S90		Anti-brake System Module(ABS/BCM)	√	√	√	√		

VOLVO	1997	S90		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	1997	S90		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	1997	S90		Immobilizer	√	√	√	√	√	
VOLVO	1998	S90	B6244FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1998	S90	B6254FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1998	S90	B6304FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1998	S90	B6304FS2	Fuel System/ Combined System	√	√	√	√		
VOLVO	1998	S90	AW30-40	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	1998	S90	AW30-43		√	√	√	√		
VOLVO	1998	S90		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	1998	S90		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	1998	S90		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	1998	S90		Immobilizer	√	√	√	√	√	
VOLVO	1998	V40		Resetting the service reminder indicator(SRI)						√
VOLVO	1998	V40	B4164S	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1998	V40	B4184S	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1998	V40	B4184SM	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1998	V40	B4194T	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1998	V40	B4204S	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1998	V40	B4204T	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1998	V40	D4192T	Fuel System/ Combined System	√	√	√	√	√	

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

VOLVO	1998	V40	AW50-42	Transmission Control Module(TCM)	√	√	√	√	√	
VOLVO	1998	V40		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	
VOLVO	1998	V40		Climate Control Module(CCM)	√	√	√	√	√	
VOLVO	1998	V40		Supplemental Restraint System Module(SRS)	√	√	√	√	√	
VOLVO	1998	V40		Immobilizer	√	√	√	√	√	
VOLVO	1999	V40		Resetting the service reminder indicator(SRI)						√
VOLVO	1999	V40	B4164S	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1999	V40	B4184S	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1999	V40	B4184SM	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1999	V40	B4194T	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1999	V40	B4204S	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1999	V40	B4204T	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1999	V40	D4192T	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1999	V40	D4192T2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1999	V40	AW50-42	Transmission Control Module(TCM)	√	√	√	√	√	
VOLVO	1999	V40		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	
VOLVO	1999	V40		Climate Control Module(CCM)	√	√	√	√	√	
VOLVO	1999	V40		Supplemental Restraint System Module(SRS)	√	√	√	√	√	
VOLVO	1999	V40		Driver Information Module(DIM)	√	√	√	√	√	
VOLVO	1999	V40		Immobilizer	√	√	√	√	√	
VOLVO	1999	V40		Lock and alarm	√	√	√	√	√	

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

VOLVO	2000	V40		Resetting the service reminder indicator(SRI)							√
VOLVO	2000	V40	B4164S2	Fuel System/ Combined System	√	√	√	√	√		
VOLVO	2000	V40	B4184S2	Fuel System/ Combined System	√	√	√	√	√		
VOLVO	2000	V40	B4184S3	Fuel System/ Combined System	√	√	√	√	√		
VOLVO	2000	V40	B4184SM	Fuel System/ Combined System	√	√	√	√	√		
VOLVO	2000	V40	B4194T2	Fuel System/ Combined System	√	√	√	√	√		
VOLVO	2000	V40	B4204S2	Fuel System/ Combined System	√	√	√	√	√		
VOLVO	2000	V40	B4204T2	Fuel System/ Combined System	√	√	√	√	√		
VOLVO	2000	V40	D4192T2	Fuel System/ Combined System	√	√	√	√	√		
VOLVO	2000	V40	AW50-42	Transmission Control Module(TCM)	√	√	√	√	√		
VOLVO	2000	V40		Anti-brake System Module(ABS/BCM)	√	√	√	√	√		
VOLVO	2000	V40		Climate Control Module(CCM)	√	√	√	√	√		
VOLVO	2000	V40		Supplemental Restraint System Module(SRS)	√	√	√	√	√		
VOLVO	2000	V40		Driver Information Module(DIM)	√	√	√	√	√		
VOLVO	2000	V40		Immobilizer	√	√	√	√	√		
VOLVO	2000	V40		Lock and alarm	√	√	√	√	√		
VOLVO	2001	V40		Resetting the service reminder indicator(SRI)							√
VOLVO	2001	V40	B4164S2	Fuel System/ Combined System	√	√	√	√	√		
VOLVO	2001	V40	B4184S2	Fuel System/ Combined System	√	√	√	√	√		
VOLVO	2001	V40	B4184S3	Fuel System/ Combined System	√	√	√	√	√		

VOLVO	2001	V40	B4184S9	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2001	V40	B4184S10	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2001	V40	B4184SM	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2001	V40	B4184SJ	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2001	V40	B4204S2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2001	V40	B4204T3	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2001	V40	B4204T5	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2001	V40	D4192T3	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2001	V40	D4192T4	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2001	V40	AW55-50/51SN	Transmission Control Module(TCM)	√	√	√	√	√	
VOLVO	2001	V40		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	
VOLVO	2001	V40		Climate Control Module(CCM)	√	√	√	√	√	
VOLVO	2001	V40		Supplemental Restraint System Module(SRS)	√	√	√	√	√	
VOLVO	2001	V40		Driver Information Module(DIM)	√	√	√	√	√	
VOLVO	2001	V40		Immobilizer	√	√	√	√	√	
VOLVO	2001	V40		Lock and alarm	√	√	√	√	√	
VOLVO	2002	V40		Resetting the service reminder indicator(SRI)						√
VOLVO	2002	V40	B4164S2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2002	V40	B4184S2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2002	V40	B4184S3	Fuel System/ Combined System	√	√	√	√	√	

VOLVO	2002	V40	B4184S9	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2002	V40	B4184S10	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2002	V40	B4184SJ	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2002	V40	B4204S2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2002	V40	B4204T3	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2002	V40	B4204T5	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2002	V40	D4192T3	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2002	V40	D4192T4	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2002	V40	AW55-50/51SN	Transmission Control Module(TCM)	√	√	√	√	√	
VOLVO	2002	V40		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	
VOLVO	2002	V40		Climate Control Module(CCM)	√	√	√	√	√	
VOLVO	2002	V40		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	2002	V40		Driver Information Module(DIM)	√	√	√	√	√	
VOLVO	2002	V40		Immobilizer	√	√	√	√	√	
VOLVO	2002	V40		Lock and alarm	√	√	√	√	√	
VOLVO	2003	V40		Resetting the service reminder indicator(SRI)						√
VOLVO	2003	V40	B4164S2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2003	V40	B4184S2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2003	V40	B4184S3	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2003	V40	B4184S9	Fuel System/ Combined System	√	√	√	√	√	

VOLVO	2003	V40	B4184S10	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2003	V40	B4184SJ	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2003	V40	B4204S2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2003	V40	B4204T3	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2003	V40	B4204T5	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2003	V40	D4192T3	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2003	V40	D4192T4	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2003	V40	AW55-50/51SN	Transmission Control Module(TCM)	√	√	√	√	√	
VOLVO	2003	V40		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	
VOLVO	2003	V40		Climate Control Module(CCM)	√	√	√	√	√	
VOLVO	2003	V40		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	2003	V40		Driver Information Module(DIM)	√	√	√	√	√	
VOLVO	2003	V40		Immobilizer	√	√	√	√	√	
VOLVO	2003	V40		Lock and alarm	√	√	√	√	√	
VOLVO	2004	V40		Resetting the service reminder indicator(SRI)						√
VOLVO	2004	V40	B4164S2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2004	V40	B4184S2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2004	V40	B4184S3	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2004	V40	B4184S9	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2004	V40	B4184S10	Fuel System/ Combined System	√	√	√	√	√	

VOLVO	2004	V40	B4184SJ	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2004	V40	B4204S2	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2004	V40	B4204T3	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2004	V40	D4192T3	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2004	V40	D4192T4	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	2004	V40	AW55-50/51SN	Transmission Control Module(TCM)	√	√	√	√	√	
VOLVO	2004	V40		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	
VOLVO	2004	V40		Climate Control Module(CCM)	√	√	√	√	√	
VOLVO	2004	V40		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	2004	V40		Driver Information Module(DIM)	√	√	√	√	√	
VOLVO	2004	V40		Immobilizer	√	√	√	√	√	
VOLVO	2004	V40		Lock and alarm	√	√	√	√	√	
VOLVO	2004	V50		Resetting the service reminder indicator(SRI)						√
VOLVO	2004	V50	B5244S4	Engine Control Module(ECM)	√	√	√	√	√	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	2004	V50	B5244S5	Engine Control Module(ECM)	√	√	√	√	√	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	2004	V50	B5254T3	Engine Control Module(ECM)	√	√	√	√	√	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)
VOLVO	2004	V50	D4204T	Engine Control Module(ECM)	√	√	√	√	√	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap

VOLVO	2004	V50	D4204T2	Engine Control Module(ECM)	Control	√	√	√	√	√	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odmometer particle trap
VOLVO	2004	V50	D4204T	Additive Module(ADM)	Dosing	√	√	√	√		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2004	V50	D4204T2	Additive Module(ADM)	Dosing	√	√	√	√		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2004	V50	AW55-50/51SN	Transmission Module(TCM)	Control	√	√	√	√	√	
VOLVO	2004	V50		Anti-brake Module(ABS/BCM)	System	√	√	√	√	√	1.Calibration(Cars with DSTC)
VOLVO	2004	V50		Climate Module(CCM)	Control	√	√	√	√		
VOLVO	2004	V50		Combustion Module(CPM)	Preheater	√	√	√	√	√	
VOLVO	2004	V50		Driver Door Module(DDM)		√	√	√	√	√	
VOLVO	2004	V50		Passenger Module(PDM)	Door	√	√	√	√	√	
VOLVO	2004	V50		Power Seat Module(PSM)		√	√	√	√	√	
VOLVO	2004	V50		Supplemental System Module(SRS)	Restraint	√	√	√	√		
VOLVO	2004	V50		Trailer Module(TRM)		√	√	√	√		
VOLVO	2004	V50		Accessory Module(AEM)	Electronic	√	√	√	√	√	
VOLVO	2004	V50		Central Module(CEM)	Electronic	√	√	√	√	√	
VOLVO	2004	V50		Driver Module(DIM)	Information	√	√	√	√	√	
VOLVO	2004	V50		Phone Module(PHM)		√	√	√	√		
VOLVO	2004	V50		Steering Module(SWM)	Wheel	√	√	√	√		
VOLVO	2004	V50		AM/FM Module(AFM)	Tuner	√	√	√	√		
VOLVO	2004	V50		Global Positioning System Module(GPS)		√	√	√	√		
VOLVO	2004	V50		Infotainment Module(ICM)	Control	√	√	√	√	√	
VOLVO	2004	V50		Media Module(MPM)	Player	√	√	√	√	√	

VOLVO	2004	V50		Multimedia Module(MMM)		√	√	√	√	√	
VOLVO	2004	V50		Traffic Message Channel Module(TMC)		√	√	√	√		
VOLVO	2004	V50		Audio Module(AUD)		√	√	√			
VOLVO	2005	V50		Resetting the service reminder indicator(SRI)							√
VOLVO	2005	V50	B4164S3	Engine Module(ECM) Control		√	√	√	√	√	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	2005	V50	B4184S11	Engine Module(ECM) Control		√	√	√	√	√	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	2005	V50	B5244S4	Engine Module(ECM) Control		√	√	√	√	√	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	2005	V50	B5244S5	Engine Module(ECM) Control		√	√	√	√	√	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	2005	V50	B5254T3	Engine Module(ECM) Control		√	√	√	√	√	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)
VOLVO	2005	V50	D4164T	Engine Module(ECM) Control		√	√	√	√	√	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odmometer particle trap
VOLVO	2005	V50	D4204T	Engine Module(ECM) Control		√	√	√	√	√	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odmometer particle trap
VOLVO	2005	V50	D4204T2	Engine Module(ECM) Control		√	√	√	√	√	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odmometer particle trap
VOLVO	2005	V50	D4164T	Additive Module(ADM) Dosing		√	√	√	√		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2005	V50	D4204T	Additive Module(ADM) Dosing		√	√	√	√		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2005	V50	D4204T2	Additive Module(ADM) Dosing		√	√	√	√		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2005	V50	AW50/51AW D	Transmission Module(TCM) Control		√	√	√	√	√	
VOLVO	2005	V50	M66AWD	Transmission Module(TCM) Control		√	√	√	√	√	

VOLVO	2005	V50	AW50/51AW D	Differential Electronic Module (DEM)	√	√	√	√		
VOLVO	2005	V50	AW55- 50/51SN	Differential Electronic Module (DEM)	√	√	√	√		
VOLVO	2005	V50		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	1.Calibration(Cars with DSTC)
VOLVO	2005	V50		Climate Control Module(CCM)	√	√	√	√		
VOLVO	2005	V50		Combustion Preheater Module(CPM)	√	√	√	√	√	
VOLVO	2005	V50		Driver Door Module(DDM)	√	√	√	√	√	
VOLVO	2005	V50		Passenger Door Module(PDM)	√	√	√	√	√	
VOLVO	2005	V50		Power Seat Module(PSM)	√	√	√	√	√	
VOLVO	2005	V50		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	2005	V50		Trailer Module(TRM)	√	√	√	√		
VOLVO	2005	V50		Accessory Electronic Module(AEM)	√	√	√	√	√	
VOLVO	2005	V50		Central Electronic Module(CEM)	√	√	√	√	√	
VOLVO	2005	V50		Driver Information Module(DIM)	√	√	√	√	√	
VOLVO	2005	V50		Phone Module(PHM)	√	√	√	√		
VOLVO	2005	V50		AM/FM Tuner Module(AFM)	√	√	√	√		
VOLVO	2005	V50		Global Positioning System Module(GPS)	√	√	√	√		
VOLVO	2005	V50		Infotainment Control Module(ICM)	√	√	√	√	√	
VOLVO	2005	V50		Media Player Module(MPM)	√	√	√	√	√	
VOLVO	2005	V50		Multimedia Module(MMM)	√	√	√	√	√	
VOLVO	2005	V50		Traffic Message Channel Module(TMC)	√	√	√	√		
VOLVO	2005	V50		Audio Module(AUD)	√	√	√			
VOLVO	2006	V50		Resetting the service reminder indicator(SRI)						√

VOLVO	2006	V50	B4164S3	Engine Module(ECM)	Control	√	√	√	√	√	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	2006	V50	B4184S11	Engine Module(ECM)	Control	√	√	√	√	√	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	2006	V50	B5244S4	Engine Module(ECM)	Control	√	√	√	√	√	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	2006	V50	B5244S5	Engine Module(ECM)	Control	√	√	√	√	√	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	2006	V50	B5254T3	Engine Module(ECM)	Control	√	√	√	√	√	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)
VOLVO	2006	V50	D4164T	Engine Module(ECM)	Control	√	√	√	√	√	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
VOLVO	2006	V50	D4204T	Engine Module(ECM)	Control	√	√	√	√	√	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
VOLVO	2006	V50	D4204T2	Engine Module(ECM)	Control	√	√	√	√	√	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
VOLVO	2006	V50	D4164T	Additive Module(ADM)	Dosing	√	√	√	√		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2006	V50	D4204T	Additive Module(ADM)	Dosing	√	√	√	√		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2006	V50	D4204T2	Additive Module(ADM)	Dosing	√	√	√	√		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2006	V50	AW50/51AW D	Transmission Module(TCM)	Control	√	√	√	√	√	
VOLVO	2006	V50	M66AWD	Transmission Module(TCM)	Control	√	√	√	√	√	
VOLVO	2006	V50	AW50/51AW D	Differential Module (DEM)	Electronic	√	√	√	√		
VOLVO	2006	V50	AW55-50/51SN	Differential Module (DEM)	Electronic	√	√	√	√		
VOLVO	2006	V50		Anti-brake Module(ABS/BCM)	System	√	√	√	√	√	1.Calibration(Cars with DSTC)

VOLVO	2006	V50		Climate Control Module(CCM)	√	√	√	√		
VOLVO	2006	V50		Combustion Preheater Module(CPM)	√	√	√	√	√	
VOLVO	2006	V50		Driver Door Module(DDM)	√	√	√	√	√	
VOLVO	2006	V50		Passenger Door Module(PDM)	√	√	√	√	√	
VOLVO	2006	V50		Power Seat Module(PSM)	√	√	√	√	√	
VOLVO	2006	V50		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	2006	V50		Trailer Module(TRM)	√	√	√	√		
VOLVO	2006	V50		Accessory Electronic Module(AEM)	√	√	√	√	√	
VOLVO	2006	V50		Central Electronic Module(CEM)	√	√	√	√	√	
VOLVO	2006	V50		Driver Information Module(DIM)	√	√	√	√	√	
VOLVO	2006	V50		Phone Module(PHM)	√	√	√	√		
VOLVO	2006	V50		AM/FM Tuner Module(AFM)	√	√	√	√		
VOLVO	2006	V50		Global Positioning System Module(GPS)	√	√	√	√		
VOLVO	2006	V50		Infotainment Control Module(ICM)	√	√	√	√	√	
VOLVO	2006	V50		Media Player Module(MPM)	√	√	√	√	√	
VOLVO	2006	V50		Multimedia Module(MMM)	√	√	√	√	√	
VOLVO	2006	V50		Traffic Message Channel Module(TMC)	√	√	√	√		
VOLVO	2006	V50		Audio Module(AUD)	√	√	√			
VOLVO	2007	V50		Resetting the service reminder indicator(SRI)						√
VOLVO	2007	V50	B4164S3	Engine Control Module(ECM)	√	√	√	√	√	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	2007	V50	B4184S11	Engine Control Module(ECM)	√	√	√	√	√	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	2007	V50	B5244S4	Engine Control Module(ECM)	√	√	√	√	√	1.Quick test of the fuel tank system(USA/CDN)

VOLVO	2007	V50	B5244S5	Engine Module(ECM)	Control	√	√	√	√	√	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	2007	V50	B5254T3	Engine Module(ECM)	Control	√	√	√	√	√	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)
VOLVO	2007	V50	D4164T	Engine Module(ECM)	Control	√	√	√	√	√	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odmometer particle trap
VOLVO	2007	V50	D4204T	Engine Module(ECM)	Control	√	√	√	√	√	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odmometer particle trap
VOLVO	2007	V50	D4204T2	Engine Module(ECM)	Control	√	√	√	√	√	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odmometer particle trap
VOLVO	2007	V50	D4164T	Additive Module(ADM)	Dosing	√	√	√	√		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2007	V50	D4204T	Additive Module(ADM)	Dosing	√	√	√	√		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2007	V50	D4204T2	Additive Module(ADM)	Dosing	√	√	√	√		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2007	V50	AW50/51AW D	Transmission Module(TCM)	Control	√	√	√	√	√	
VOLVO	2007	V50	M66AWD	Transmission Module(TCM)	Control	√	√	√	√	√	
VOLVO	2007	V50	AW50/51AW D	Differential Module (DEM)	Electronic	√	√	√	√		
VOLVO	2007	V50	AW55-50/51SN	Differential Module (DEM)	Electronic	√	√	√	√		
VOLVO	2007	V50		Anti-brake Module(ABS/BCM)	System	√	√	√	√	√	1.Calibration(Cars with DSTC)
VOLVO	2007	V50		Climate Module(CCM)	Control	√	√	√	√		
VOLVO	2007	V50		Combustion Preheater Module(CPM)	Preheater	√	√	√	√	√	
VOLVO	2007	V50		Driver Door Module(DDM)		√	√	√	√	√	

VOLVO	2007	V50		Passenger Door Module(PDM)	√	√	√	√	√	
VOLVO	2007	V50		Power Seat Module(PSM)	√	√	√	√	√	
VOLVO	2007	V50		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	2007	V50		Trailer Module(TRM)	√	√	√	√		
VOLVO	2007	V50		Accessory Electronic Module(AEM)	√	√	√	√	√	
VOLVO	2007	V50		Central Electronic Module(CEM)	√	√	√	√	√	
VOLVO	2007	V50		Driver Information Module(DIM)	√	√	√	√	√	
VOLVO	2007	V50		Phone Module(PHM)	√	√	√	√		
VOLVO	2007	V50		AM/FM Tuner Module(AFM)	√	√	√	√		
VOLVO	2007	V50		Global Positioning System Module(GPS)	√	√	√	√		
VOLVO	2007	V50		Infotainment Control Module(ICM)	√	√	√	√	√	
VOLVO	2007	V50		Media Player Module(MPM)	√	√	√	√	√	
VOLVO	2007	V50		Multimedia Module(MMM)	√	√	√	√	√	
VOLVO	2007	V50		Traffic Message Channel Module(TMC)	√	√	√	√		
VOLVO	2007	V50		Audio Module(AUD)	√	√	√			
VOLVO	2008	V50		Resetting the service reminder indicator(SRI)						√
VOLVO	2008	V50	B4164S3	Engine Control Module(ECM)	√	√	√	√	√	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	2008	V50	B4184S11	Engine Control Module(ECM)	√	√	√	√	√	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	2008	V50	B5244S4	Engine Control Module(ECM)	√	√	√	√	√	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	2008	V50	B5244S5	Engine Control Module(ECM)	√	√	√	√	√	1.Quick test of the fuel tank system(USA/CDN)

VOLVO	2008	V50	B5254T3	Engine Module(ECM)	Control	√	√	√	√	√	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)
VOLVO	2008	V50	D4164T	Engine Module(ECM)	Control	√	√	√	√	√	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
VOLVO	2008	V50	D4204T	Engine Module(ECM)	Control	√	√	√	√	√	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
VOLVO	2008	V50	D4204T2	Engine Module(ECM)	Control	√	√	√	√	√	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
VOLVO	2008	V50	D4164T	Additive Module(ADM)	Dosing	√	√	√	√		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2008	V50	D4204T			√	√	√	√		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2008	V50	D4204T2			√	√	√	√		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2008	V50	AW50/51AW D	Transmission Module(TCM)	Control	√	√	√	√	√	
VOLVO	2008	V50	M66AWD	Transmission Module(TCM)	Control	√	√	√	√	√	
VOLVO	2008	V50	AW50/51AW D	Differential Module (DEM)	Electronic	√	√	√	√		
VOLVO	2008	V50	AW55-50/51SN	Differential Module (DEM)	Electronic	√	√	√	√		
VOLVO	2008	V50		Anti-brake Module(ABS/BCM)	System	√	√	√	√	√	1.Calibration(Cars with DSTC)
VOLVO	2008	V50		Climate Module(CCM)	Control	√	√	√	√		
VOLVO	2008	V50		Combustion Preheater Module(CPM)		√	√	√	√	√	
VOLVO	2008	V50		Driver Door Module(DDM)		√	√	√	√	√	
VOLVO	2008	V50		Passenger Door Module(PDM)		√	√	√	√	√	
VOLVO	2008	V50		Power Seat Module(PSM)		√	√	√	√	√	

VOLVO	2008	V50		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	2008	V50		Trailer Module(TRM)	√	√	√	√		
VOLVO	2008	V50		Accessory Electronic Module(AEM)	√	√	√	√	√	
VOLVO	2008	V50		Central Electronic Module(CEM)	√	√	√	√	√	
VOLVO	2008	V50		Driver Information Module(DIM)	√	√	√	√	√	
VOLVO	2008	V50		Phone Module(PHM)	√	√	√	√		
VOLVO	2008	V50		AM/FM Tuner Module(AFM)	√	√	√	√		
VOLVO	2008	V50		Global Positioning System Module(GPS)	√	√	√	√		
VOLVO	2008	V50		Infotainment Control Module(ICM)	√	√	√	√	√	
VOLVO	2008	V50		Media Player Module(MPM)	√	√	√	√	√	
VOLVO	2008	V50		Multimedia Module(MMM)	√	√	√	√	√	
VOLVO	2008	V50		Traffic Message Channel Module(TMC)	√	√	√	√		
VOLVO	2008	V50		Audio Module(AUD)	√	√	√			
VOLVO	1997	V70(-00)		Resetting the service reminder indicator(SRI)						√
VOLVO	1997	V70(-00)	B5202FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	V70(-00)	B5204T2	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	V70(-00)	B5204T3	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	V70(-00)	B5234FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	V70(-00)	B5234T2	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	V70(-00)	B5234T3	Fuel System/ Combined System	√	√	√	√		
VOLVO	1997	V70(-00)	B5252FS	Fuel System/ Combined System	√	√	√	√		

VOLVO	1997	V70(-00)	B5254FS M4.4	Fuel System/ System	Combined	√	√	√	√		
VOLVO	1997	V70(-00)	B5254T	Fuel System/ System	Combined	√	√	√	√		
VOLVO	1997	V70(-00)	D5252T MSA 15.7	Fuel System/ System	Combined	√	√	√	√		
VOLVO	1997	V70(-00)	AW42AWD	Transmission Module(TCM)	Control	√	√	√	√		
VOLVO	1997	V70(-00)	AW50-42	Transmission Module(TCM)	Control	√	√	√	√		
VOLVO	1997	V70(-00)		Anti-brake Module(ABS/BCM)	System	√	√	√	√	√	
VOLVO	1997	V70(-00)		Climate Module(CCM)	Control	√	√	√	√		
VOLVO	1997	V70(-00)		Supplemental System Module(SRS)	Restraint	√	√	√	√		
VOLVO	1997	V70(-00)		Power Module,Left(PSL)	Seat	√	√	√	√	√	
VOLVO	1997	V70(-00)		Road Traffic Module(RTI)	Information	√	√	√	√		
VOLVO	1997	V70(-00)		Immobilizer		√	√	√	√		
VOLVO	1998	V70(-00)		Resetting the reminder indicator(SRI)	service						√
VOLVO	1998	V70(-00)	B5202FS	Fuel System/ System	Combined	√	√	√	√		
VOLVO	1998	V70(-00)	B5204T2	Fuel System/ System	Combined	√	√	√	√		
VOLVO	1998	V70(-00)	B5204T3	Fuel System/ System	Combined	√	√	√	√		
VOLVO	1998	V70(-00)	B5234FS	Fuel System/ System	Combined	√	√	√	√		
VOLVO	1998	V70(-00)	B5234T2	Fuel System/ System	Combined	√	√	√	√		
VOLVO	1998	V70(-00)	B5234T3	Fuel System/ System	Combined	√	√	√	√		
VOLVO	1998	V70(-00)	B5234T4	Fuel System/ System	Combined	√	√	√	√		
VOLVO	1998	V70(-00)	B5234T6	Fuel System/ System	Combined	√	√	√	√		

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

VOLVO	1998	V70(-00)	B5234T7	Fuel System/ Combined System	√	√	√	√		
VOLVO	1998	V70(-00)	B5252FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1998	V70(-00)	B5254FS M4.4	Fuel System/ Combined System	√	√	√	√		
VOLVO	1998	V70(-00)	B5254T	Fuel System/ Combined System	√	√	√	√		
VOLVO	1998	V70(-00)	D5252T MSA 15.7	Fuel System/ Combined System	√	√	√	√		
VOLVO	1998	V70(-00)	GB5252S	Fuel System/ Combined System	√	√	√	√	√	
VOLVO	1998	V70(-00)	AW42AWD	Transmission Control Module(TCM)	√	√	√	√	√	
VOLVO	1998	V70(-00)	AW50-42	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	1998	V70(-00)		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	
VOLVO	1998	V70(-00)		Climate Control Module(CCM)	√	√	√	√		
VOLVO	1998	V70(-00)		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	1998	V70(-00)		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	1998	V70(-00)		Road Traffic Information Module(RTI)	√	√	√	√		
VOLVO	1998	V70(-00)		Immobilizer	√	√	√	√		
VOLVO	1999	V70(-00)		Resetting the service reminder indicator(SRI)						√
VOLVO	1999	V70(-00)	B5202FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1999	V70(-00)	B5204T3	Fuel System/ Combined System	√	√	√	√		
VOLVO	1999	V70(-00)	B5204T4	Fuel System/ Combined System	√	√	√	√		
VOLVO	1999	V70(-00)	B5234FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1999	V70(-00)	B5234T3	Fuel System/ Combined System	√	√	√	√		

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

VOLVO	1999	V70(-00)	B5234T7	Fuel System/ Combined System	√	√	√	√		
VOLVO	1999	V70(-00)	B5234T8	Fuel System/ Combined System	√	√	√	√		
VOLVO	1999	V70(-00)	B5252FS	Fuel System/ Combined System	√	√	√	√		
VOLVO	1999	V70(-00)	B5254S DENSO	Fuel System/ Combined System	√	√	√	√		
VOLVO	1999	V70(-00)	B5254T	Fuel System/ Combined System	√	√	√	√		
VOLVO	1999	V70(-00)	D5252T MSA 15.7	Fuel System/ Combined System	√	√	√	√		
VOLVO	1999	V70(-00)	D5252T MSA 15.8	Fuel System/ Combined System	√	√	√	√		
VOLVO	1999	V70(-00)	GB5252S	Fuel System/ Combined System	√	√	√	√		
VOLVO	1999	V70(-00)	GB5252S2	Fuel System/ Combined System	√	√	√	√		
VOLVO	1999	V70(-00)	AW42AWD	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	1999	V70(-00)	AW50-42	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	1999	V70(-00)		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	1999	V70(-00)		Climate Control Module(CCM)	√	√	√	√		
VOLVO	1999	V70(-00)		Combustion Preheater Module(CPM)	√	√	√	√		
VOLVO	1999	V70(-00)		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	1999	V70(-00)		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	1999	V70(-00)		Power Seat Module,Right(PSR)	√	√	√	√	√	
VOLVO	1999	V70(-00)		Road Traffic Information Module(RTI)	√	√	√	√		
VOLVO	1999	V70(-00)		Immobilizer	√	√	√	√	√	
VOLVO	1999	V70(-00)		Lock and alarm	√	√	√	√	√	

VOLVO	2000	V70(-00)		Resetting the service reminder indicator(SRI)							√
VOLVO	2000	V70(-00)	B5204T3	Fuel System/ Combined System	√	√	√	√			
VOLVO	2000	V70(-00)	B5204T4	Fuel System/ Combined System	√	√	√	√			
VOLVO	2000	V70(-00)	B5234T3	Fuel System/ Combined System	√	√	√	√			
VOLVO	2000	V70(-00)	B5234T7	Fuel System/ Combined System	√	√	√	√			
VOLVO	2000	V70(-00)	B5244S	Fuel System/ Combined System	√	√	√	√			
VOLVO	2000	V70(-00)	B5244S2	Fuel System/ Combined System	√	√	√	√			
VOLVO	2000	V70(-00)	B5244SG	Fuel System/ Combined System	√	√	√	√			
VOLVO	2000	V70(-00)	B5244T	Fuel System/ Combined System	√	√	√	√			
VOLVO	2000	V70(-00)	B5244T2	Fuel System/ Combined System	√	√	√	√			
VOLVO	2000	V70(-00)	D5252T MSA 15.8	Fuel System/ Combined System	√	√	√	√			
VOLVO	2000	V70(-00)	AW42AWD	Transmission Control Module(TCM)	√	√	√	√			
VOLVO	2000	V70(-00)	AW50-42	Transmission Control Module(TCM)	√	√	√	√			
VOLVO	2000	V70(-00)	AW50/51AW D	Transmission Control Module(TCM)	√	√	√	√			
VOLVO	2000	V70(-00)	AW55-50/51SN	Transmission Control Module(TCM)	√	√	√	√			
VOLVO	2000	V70(-00)		Anti-brake System Module(ABS/BCM)	√	√	√	√			
VOLVO	2000	V70(-00)		Climate Control Module(CCM)	√	√	√	√			
VOLVO	2000	V70(-00)		Combustion Preheater Module(CPM)	√	√	√	√			
VOLVO	2000	V70(-00)		Supplemental Restraint System Module(SRS)	√	√	√	√			

VOLVO	2000	V70(-00)		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	2000	V70(-00)		Power Seat Module,Right(PSR)	√	√	√	√	√	
VOLVO	2000	V70(-00)		Road Traffic Information Module(RTI)	√	√	√	√		
VOLVO	2000	V70(-00)		Immobilizer	√	√	√	√	√	
VOLVO	2000	V70(-00)		Lock and alarm	√	√	√	√	√	
VOLVO	2000	V70(00-)		Resetting the service reminder indicator(SRI)						√
VOLVO	2000	V70(00-)	B5204T5	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2000	V70(00-)	B5234T3	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2000	V70(00-)	B5244T3	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2000	V70(00-)	D5252T MSA 15.8	Fuel system/combined system	√	√	√	√		
VOLVO	2000	V70(00-)	AW50/51AW D	Transmission Control Module(TCM)	√	√	√	√	√	
VOLVO	2000	V70(00-)	AW55- 50/51SN	Transmission Control Module(TCM)	√	√	√	√	√	
VOLVO	2000	V70(00-)	AW50/51AW D	Differential Electronic Module(DEM)	√	√	√	√		
VOLVO	2000	V70(00-)		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	
VOLVO	2000	V70(00-)		Steering Wheel Angle Sensor Module(SAS)	√	√	√	√		
VOLVO	2000	V70(00-)		Climate Control Module(CCM)	√	√	√	√		
VOLVO	2000	V70(00-)		Combustion Preheater Module(CPM)	√	√	√	√		
VOLVO	2000	V70(00-)		Driver Door Module(DDM)	√	√	√	√	√	
VOLVO	2000	V70(00-)		Passenger Door Module(PDM)	√	√	√	√	√	
VOLVO	2000	V70(00-)		Power Seat Module(PSM)	√	√	√	√	√	
VOLVO	2000	V70(00-)		Supplemental Restraint System Module(SRS)	√	√	√			1.Calibrating the occupant weight sensor(OWS)

VOLVO	2000	V70(00-)		Accessory Electronic Module(AEM)	√	√	√	√		
VOLVO	2000	V70(00-)		Audio Module(AUM)	√	√	√	√		
VOLVO	2000	V70(00-)		Central Electronic Module(CEM)	√	√	√	√	√	
VOLVO	2000	V70(00-)		Driver Information Module(DIM)	√	√	√	√	√	
VOLVO	2000	V70(00-)		Phone Module(PHM)	√	√	√	√		
VOLVO	2000	V70(00-)		Rear Electronic Module(REM)	√	√	√	√	√	
VOLVO	2000	V70(00-)		Road Traffic Information Module(RTI)	√	√	√			
VOLVO	2000	V70(00-)		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2000	V70(00-)		Steering Wheel Module(SWM)	√	√	√	√		
VOLVO	2001	V70(00-)		Resetting the service reminder indicator(SRI)						√
VOLVO	2001	V70(00-)	B5204T5	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2001	V70(00-)	B5234T3	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2001	V70(00-)	B5234T7	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2001	V70(00-)	B5244S	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2001	V70(00-)	B5244S2	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2001	V70(00-)	B5244SG	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2001	V70(00-)	B5244T3	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2001	V70(00-)	D5244T	Fuel system/combined system	√	√	√	√		
VOLVO	2001	V70(00-)	D5252T MSA 15.8	Fuel system/combined system	√	√	√	√		
VOLVO	2001	V70(00-)	AW50/51AW D	Transmission Control Module(TCM)	√	√	√	√	√	

VOLVO	2001	V70(00-)	AW55-50/51SN	Transmission Control Module(TCM)	√	√	√	√	√	
VOLVO	2001	V70(00-)	AW50/51AW D	Differential Electronic Module(DEM)	√	√	√	√		
VOLVO	2001	V70(00-)		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	
VOLVO	2001	V70(00-)		Steering Wheel Angle Sensor Module(SAS)	√	√	√	√		
VOLVO	2001	V70(00-)		Climate Control Module(CCM)	√	√	√	√		
VOLVO	2001	V70(00-)		Combustion Preheater Module(CPM)	√	√	√	√		
VOLVO	2001	V70(00-)		Driver Door Module(DDM)	√	√	√	√	√	
VOLVO	2001	V70(00-)		Passenger Door Module(PDM)	√	√	√	√	√	
VOLVO	2001	V70(00-)		Power Seat Module(PSM)	√	√	√	√	√	
VOLVO	2001	V70(00-)		Supplemental Restraint System Module(SRS)	√	√	√			1. Calibrating the occupant weight sensor(OWS)
VOLVO	2001	V70(00-)		Accessory Electronic Module(AEM)	√	√	√	√		
VOLVO	2001	V70(00-)		Audio Module(AUM)	√	√	√	√		
VOLVO	2001	V70(00-)		Central Electronic Module(CEM)	√	√	√	√	√	
VOLVO	2001	V70(00-)		Driver Information Module(DIM)	√	√	√	√	√	
VOLVO	2001	V70(00-)		Phone Module(PHM)	√	√	√	√		
VOLVO	2001	V70(00-)		Rear Electronic Module(REM)	√	√	√	√	√	
VOLVO	2001	V70(00-)		Road Traffic Information Module(RTI)	√	√	√			
VOLVO	2001	V70(00-)		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2001	V70(00-)		Steering Wheel Module(SWM)	√	√	√	√		
VOLVO	2002	V70(00-)		Resetting the service reminder indicator(SRI)						√
VOLVO	2002	V70(00-)	B5204T5	Engine Control Module(ECM)	√	√	√	√		

VOLVO	2002	V70(00-)	B5234T3	Engine Module(ECM) Control	√	√	√	√		
VOLVO	2002	V70(00-)	B5234T7	Engine Module(ECM) Control	√	√	√	√		
VOLVO	2002	V70(00-)	B5244S	Engine Module(ECM) Control	√	√	√	√		
VOLVO	2002	V70(00-)	B5244S2	Engine Module(ECM) Control	√	√	√	√		
VOLVO	2002	V70(00-)	B5244SG	Engine Module(ECM) Control	√	√	√	√		
VOLVO	2002	V70(00-)	B5244SG2	Engine Module(ECM) Control	√	√	√	√		
VOLVO	2002	V70(00-)	B5244T3	Engine Module(ECM) Control	√	√	√	√		
VOLVO	2002	V70(00-)	D5244T	Fuel system/combined system	√	√	√	√		
VOLVO	2002	V70(00-)	D5244T2	Fuel system/combined system	√	√	√	√		
VOLVO	2002	V70(00-)	AW50/51AW D	Transmission Module(TCM) Control	√	√	√	√		
VOLVO	2002	V70(00-)	AW55-50/51SN	Transmission Module(TCM) Control	√	√	√	√		
VOLVO	2002	V70(00-)	AW50/51AW D	Differential Module(DEM) Electronic	√	√	√	√		
VOLVO	2002	V70(00-)		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	2002	V70(00-)		Steering Wheel Angle Sensor Module(SAS)	√	√	√	√		
VOLVO	2002	V70(00-)		Climate Control Module(CCM)	√	√	√	√		
VOLVO	2002	V70(00-)		Combustion Preheater Module(CPM)	√	√	√	√		
VOLVO	2002	V70(00-)		Driver Door Module(DDM)	√	√	√	√		
VOLVO	2002	V70(00-)		Passenger Door Module(PDM)	√	√	√	√		
VOLVO	2002	V70(00-)		Power Seat Module(PSM)	√	√	√	√		
VOLVO	2002	V70(00-)		Supplemental Restraint System Module(SRS)	√	√	√			1.Calibrating the occupant weight sensor(OWS)

VOLVO	2002	V70(00-)		Accessory Electronic Module(AEM)	√	√	√	√		
VOLVO	2002	V70(00-)		Audio Module(AUM)	√	√	√	√		
VOLVO	2002	V70(00-)		Central Electronic Module(CEM)	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2002	V70(00-)		Driver Information Module(DIM)	√	√	√	√		
VOLVO	2002	V70(00-)		Phone Module(PHM)	√	√	√	√		
VOLVO	2002	V70(00-)		Rear Electronic Module(REM)	√	√	√	√		
VOLVO	2002	V70(00-)		Road Traffic Information Module(RTI)	√	√	√	√		
VOLVO	2002	V70(00-)		Upper Electronic Module(UEM)	√	√	√	√		
VOLVO	2002	V70(00-)		Steering Wheel Module(SWM)	√	√	√	√		
VOLVO	2003	V70(00-)		Resetting the service reminder indicator(SRI)						√
VOLVO	2003	V70(00-)	B5204T5	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2003	V70(00-)	B5234T3	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2003	V70(00-)	B5234T7	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2003	V70(00-)	B5244S	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2003	V70(00-)	B5244S2	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2003	V70(00-)	B5244SG	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2003	V70(00-)	B5244SG2	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2003	V70(00-)	B5244T3	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2003	V70(00-)	B5254T2	Engine Control Module(ECM)	√	√	√	√		

VOLVO	2003	V70(00-)	D5244T	Fuel system/combined system	√	√	√	√		
VOLVO	2003	V70(00-)	D5244T2	Fuel system/combined system	√	√	√	√		
VOLVO	2003	V70(00-)	AW50/51AW D	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	2003	V70(00-)	AW55-50/51SN	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	2003	V70(00-)	AW50/51AW D	Differential Electronic Module(DEM)	√	√	√	√		
VOLVO	2003	V70(00-)		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	2003	V70(00-)		Steering Wheel Angle Sensor Module(SAS)	√	√	√	√		
VOLVO	2003	V70(00-)		Climate Control Module(CCM)	√	√	√	√		
VOLVO	2003	V70(00-)		Combustion Preheater Module(CPM)	√	√	√	√		
VOLVO	2003	V70(00-)		Driver Door Module(DDM)	√	√	√	√		
VOLVO	2003	V70(00-)		Passenger Door Module(PDM)	√	√	√	√		
VOLVO	2003	V70(00-)		Power Seat Module(PSM)	√	√	√	√		
VOLVO	2003	V70(00-)		Supplemental Restraint System Module(SRS)	√	√	√			1.Calibrating the occupant weight sensor(OWS)
VOLVO	2003	V70(00-)		Accessory Electronic Module(AEM)	√	√	√	√		
VOLVO	2003	V70(00-)		Audio Module(AUM)	√	√	√	√		
VOLVO	2003	V70(00-)		Central Electronic Module(CEM)	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2003	V70(00-)		Driver Information Module(DIM)	√	√	√	√		
VOLVO	2003	V70(00-)		Phone Module(PHM)	√	√	√	√		
VOLVO	2003	V70(00-)		Rear Electronic Module(REM)	√	√	√	√		
VOLVO	2003	V70(00-)		Road Traffic Information Module(RTI)	√	√	√			

VOLVO	2003	V70(00-)		Upper Electronic Module(UEM)	√	√	√	√		
VOLVO	2003	V70(00-)		Steering Wheel Module(SWM)	√	√	√	√		
VOLVO	2004	V70(00-)		Resetting the service reminder indicator(SRI)						√
VOLVO	2004	V70(00-)	B5204T5	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2004	V70(00-)	B5234T3	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2004	V70(00-)	B5234T7	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2004	V70(00-)	B5244S	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2004	V70(00-)	B5244S2	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2004	V70(00-)	B5244SG	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2004	V70(00-)	B5244SG2	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2004	V70(00-)	B5254T2	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2004	V70(00-)	B5254T4	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2004	V70(00-)	D5244T	Fuel system/combined system	√	√	√	√		
VOLVO	2004	V70(00-)	D5244T2	Fuel system/combined system	√	√	√	√		
VOLVO	2004	V70(00-)	D5244T3	Fuel system/combined system	√	√	√	√		
VOLVO	2004	V70(00-)	AW50/51AW D	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	2004	V70(00-)	AW55- 50/51SN	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	2004	V70(00-)	AW50/51AW D	Differential Electronic Module(DEM)	√	√	√	√		
VOLVO	2004	V70(00-)	M66AWD	Differential Electronic Module(DEM)	√	√	√	√		

VOLVO	2004	V70(00-)		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	2004	V70(00-)		Steering Wheel Angle Sensor Module(SAS)	√	√	√	√		
VOLVO	2004	V70(00-)		Climate Control Module(CCM)	√	√	√	√		
VOLVO	2004	V70(00-)		Combustion Preheater Module(CPM)	√	√	√	√		
VOLVO	2004	V70(00-)		Driver Door Module(DDM)	√	√	√	√		
VOLVO	2004	V70(00-)		Passenger Door Module(PDM)	√	√	√	√		
VOLVO	2004	V70(00-)		Power Seat Module(PSM)	√	√	√	√		
VOLVO	2004	V70(00-)		Supplemental Restraint System Module(SRS)	√	√	√	√		1.Calibrating the occupant weight sensor(OWS)
VOLVO	2004	V70(00-)		Accessory Electronic Module(AEM)	√	√	√	√		
VOLVO	2004	V70(00-)		Audio Module(AUM)	√	√	√	√		
VOLVO	2004	V70(00-)		Central Electronic Module(CEM)	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2004	V70(00-)		Driver Information Module(DIM)	√	√	√	√		
VOLVO	2004	V70(00-)		Phone Module(PHM)	√	√	√	√		
VOLVO	2004	V70(00-)		Rear Electronic Module(REM)	√	√	√	√		
VOLVO	2004	V70(00-)		Road Traffic Information Module(RTI)	√	√	√	√		
VOLVO	2004	V70(00-)		Upper Electronic Module(UEM)	√	√	√	√		
VOLVO	2004	V70(00-)		Steering Wheel Module(SWM)	√	√	√	√		
VOLVO	2004	V70(00-)		Suspension Module(SUM)	√	√	√	√		
VOLVO	2005	V70(00-)		Resetting the service reminder indicator(SRI)						√
VOLVO	2005	V70(00-)	B5204T5	Engine Control Module(ECM)	√	√	√	√		

VOLVO	2005	V70(00-)	B5244S	Engine Module(ECM)	Control	√	√	√	√		
VOLVO	2005	V70(00-)	B5244S2	Engine Module(ECM)	Control	√	√	√	√		
VOLVO	2005	V70(00-)	B5244SG	Engine Module(ECM)	Control	√	√	√	√		
VOLVO	2005	V70(00-)	B5244SG2	Engine Module(ECM)	Control	√	√	√	√		
VOLVO	2005	V70(00-)	B5244T4	Engine Module(ECM)	Control	√	√	√	√		
VOLVO	2005	V70(00-)	B5244T5	Engine Module(ECM)	Control	√	√	√	√		
VOLVO	2005	V70(00-)	B5254T2	Engine Module(ECM)	Control	√	√	√	√		
VOLVO	2005	V70(00-)	B5254T4	Engine Module(ECM)	Control	√	√	√	√		
VOLVO	2005	V70(00-)	D5244T	Fuel system/combined system		√	√	√	√		
VOLVO	2005	V70(00-)	D5244T2	Fuel system/combined system		√	√	√	√		
VOLVO	2005	V70(00-)	D5244T3	Fuel system/combined system		√	√	√	√		
VOLVO	2005	V70(00-)	AW50/51AW D	Transmission Module(TCM)	Control	√	√	√	√		
VOLVO	2005	V70(00-)	AW55-50/51SN	Transmission Module(TCM)	Control	√	√	√	√		
VOLVO	2005	V70(00-)	AW50/51AW D	Differential Module(DEM)	Electronic	√	√	√	√		
VOLVO	2005	V70(00-)	M66AWD	Differential Module(DEM)	Electronic	√	√	√	√		
VOLVO	2005	V70(00-)		Anti-brake Module(ABS/BCM)	System	√	√	√	√		
VOLVO	2005	V70(00-)		Steering Wheel Angle Sensor Module(SAS)		√	√	√	√		
VOLVO	2005	V70(00-)		Climate Module(CCM)	Control	√	√	√	√		
VOLVO	2005	V70(00-)		Combustion Preheater Module(CPM)		√	√	√	√		
VOLVO	2005	V70(00-)		Driver Door Module(DDM)		√	√	√	√		

VOLVO	2005	V70(00-)		Passenger Door Module(PDM)	√	√	√	√		
VOLVO	2005	V70(00-)		Power Seat Module(PSM)	√	√	√	√		
VOLVO	2005	V70(00-)		Supplemental Restraint System Module(SRS)	√	√	√			1.Calibrating the occupant weight sensor(OWS)
VOLVO	2005	V70(00-)		Accessory Electronic Module(AEM)	√	√	√	√		
VOLVO	2005	V70(00-)		Audio Module(AUM)	√	√	√	√		
VOLVO	2005	V70(00-)		Central Electronic Module(CEM)	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2005	V70(00-)		Driver Information Module(DIM)	√	√	√	√		
VOLVO	2005	V70(00-)		Phone Module(PHM)	√	√	√	√		
VOLVO	2005	V70(00-)		Rear Electronic Module(REM)	√	√	√	√		
VOLVO	2005	V70(00-)		Road Traffic Information Module(RTI)	√	√	√			
VOLVO	2005	V70(00-)		Upper Electronic Module(UEM)	√	√	√	√		
VOLVO	2005	V70(00-)		Suspension Module(SUM)	√	√	√	√		
VOLVO	2006	V70(00-)		Resetting the service reminder indicator(SRI)						√
VOLVO	2006	V70(00-)	B5204T5	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2006	V70(00-)	B5244S	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2006	V70(00-)	B5244S2	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2006	V70(00-)	B5244SG	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2006	V70(00-)	B5244SG2	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2006	V70(00-)	B5244T4	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2006	V70(00-)	B5244T5	Engine Control Module(ECM)	√	√	√	√		

VOLVO	2006	V70(00-)	B5254T2	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2006	V70(00-)	B5254T4	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2006	V70(00-)	D5244T	Fuel system/combined system	√	√	√	√		
VOLVO	2006	V70(00-)	D5244T2	Fuel system/combined system	√	√	√	√		
VOLVO	2006	V70(00-)	D5244T3	Fuel system/combined system	√	√	√	√		
VOLVO	2006	V70(00-)	D5244T4	Fuel system/combined system	√	√	√	√	√	1.Resetting counter oil
VOLVO	2006	V70(00-)	AW50/51AW D	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	2006	V70(00-)	AW55-50/51SN	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	2006	V70(00-)	AW50/51AW D	Differential Electronic Module(DEM)	√	√	√	√		
VOLVO	2006	V70(00-)	M66AWD	Differential Electronic Module(DEM)	√	√	√	√		
VOLVO	2006	V70(00-)		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	2006	V70(00-)		Steering Wheel Angle Sensor Module(SAS)	√	√	√	√		
VOLVO	2006	V70(00-)		Climate Control Module(CCM)	√	√	√	√		
VOLVO	2006	V70(00-)		Combustion Preheater Module(CPM)	√	√	√	√		
VOLVO	2006	V70(00-)		Driver Door Module(DDM)	√	√	√	√		
VOLVO	2006	V70(00-)		Passenger Door Module(PDM)	√	√	√	√		
VOLVO	2006	V70(00-)		Power Seat Module(PSM)	√	√	√	√		
VOLVO	2006	V70(00-)		Supplemental Restraint System Module(SRS)	√	√	√			1.Calibrating the occupant weight sensor(OWS)
VOLVO	2006	V70(00-)		Accessory Electronic Module(AEM)	√	√	√	√		
VOLVO	2006	V70(00-)		Audio Module(AUM)	√	√	√	√		

VOLVO	2006	V70(00-)		Central Electronic Module(CEM)	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2006	V70(00-)		Driver Information Module(DIM)	√	√	√	√		
VOLVO	2006	V70(00-)		Phone Module(PHM)	√	√	√	√		
VOLVO	2006	V70(00-)		Rear Electronic Module(REM)	√	√	√	√		
VOLVO	2006	V70(00-)		Road Traffic Information Module(RTI)	√	√	√			
VOLVO	2006	V70(00-)		Upper Electronic Module(UEM)	√	√	√	√		
VOLVO	2006	V70(00-)		Suspension Module(SUM)	√	√	√	√		
VOLVO	2007	V70(00-)		Resetting the service reminder indicator(SRI)						√
VOLVO	2007	V70(00-)	B5204T5	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2007	V70(00-)	B5244S	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2007	V70(00-)	B5244S2	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2007	V70(00-)	B5244SG	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2007	V70(00-)	B5244SG2	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2007	V70(00-)	B5244T4	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2007	V70(00-)	B5244T5	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2007	V70(00-)	B5254T2	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2007	V70(00-)	B5254T4	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2007	V70(00-)	D5244T	Fuel system/combined system	√	√	√	√		
VOLVO	2007	V70(00-)	D5244T2	Fuel system/combined system	√	√	√	√		

VOLVO	2007	V70(00-)	D5244T3	Fuel system/combined system	√	√	√	√		
VOLVO	2007	V70(00-)	AW50/51AW D	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	2007	V70(00-)	AW55-50/51SN	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	2007	V70(00-)	AW50/51AW D	Differential Electronic Module(DEM)	√	√	√	√		
VOLVO	2007	V70(00-)	M66AWD	Differential Electronic Module(DEM)	√	√	√	√		
VOLVO	2007	V70(00-)		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	2007	V70(00-)		Steering Wheel Angle Sensor Module(SAS)	√	√	√	√		
VOLVO	2007	V70(00-)		Climate Control Module(CCM)	√	√	√	√		
VOLVO	2007	V70(00-)		Combustion Preheater Module(CPM)	√	√	√	√		
VOLVO	2007	V70(00-)		Driver Door Module(DDM)	√	√	√	√		
VOLVO	2007	V70(00-)		Passenger Door Module(PDM)	√	√	√	√		
VOLVO	2007	V70(00-)		Power Seat Module(PSM)	√	√	√	√		
VOLVO	2007	V70(00-)		Supplemental Restraint System Module(SRS)	√	√	√			1.Calibrating the occupant weight sensor(OWS)
VOLVO	2007	V70(00-)		Accessory Electronic Module(AEM)	√	√	√	√		
VOLVO	2007	V70(00-)		Audio Module(AUM)	√	√	√	√		
VOLVO	2007	V70(00-)		Central Electronic Module(CEM)	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2007	V70(00-)		Driver Information Module(DIM)	√	√	√	√		
VOLVO	2007	V70(00-)		Phone Module(PHM)	√	√	√	√		
VOLVO	2007	V70(00-)		Rear Electronic Module(REM)	√	√	√	√		
VOLVO	2007	V70(00-)		Road Traffic Information Module(RTI)	√	√	√			

VOLVO	2007	V70(00-)		Upper Electronic Module(UEM)	√	√	√	√		
VOLVO	2007	V70(00-)		Suspension Module(SUM)	√	√	√	√		
VOLVO	2008	V70(00-)		Resetting the service reminder indicator(SRI)						√
VOLVO	2008	V70(00-)	B5204T5	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2008	V70(00-)	B5244S	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2008	V70(00-)	B5244S2	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2008	V70(00-)	B5244SG	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2008	V70(00-)	B5244SG2	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2008	V70(00-)	B5244T4	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2008	V70(00-)	B5244T5	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2008	V70(00-)	B5254T2	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2008	V70(00-)	B5254T4	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2008	V70(00-)	D5244T	Fuel system/combined system	√	√	√	√		
VOLVO	2008	V70(00-)	D5244T2	Fuel system/combined system	√	√	√	√		
VOLVO	2008	V70(00-)	D5244T3	Fuel system/combined system	√	√	√	√		
VOLVO	2008	V70(00-)	AW50/51AW D	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	2008	V70(00-)	AW55-50/51SN	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	2008	V70(00-)	AW50/51AW D	Differential Electronic Module(DEM)	√	√	√	√		
VOLVO	2008	V70(00-)	M66AWD	Differential Electronic Module(DEM)	√	√	√	√		
VOLVO	2008	V70(00-)		Anti-brake System Module(ABS/BCM)	√	√	√	√		

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

VOLVO	2008	V70(00-)		Steering Wheel Angle Sensor Module(SAS)	√	√	√	√		
VOLVO	2008	V70(00-)		Climate Control Module(CCM)	√	√	√	√		
VOLVO	2008	V70(00-)		Combustion Preheater Module(CPM)	√	√	√	√		
VOLVO	2008	V70(00-)		Driver Door Module(DDM)	√	√	√	√		
VOLVO	2008	V70(00-)		Passenger Door Module(PDM)	√	√	√	√		
VOLVO	2008	V70(00-)		Power Seat Module(PSM)	√	√	√	√		
VOLVO	2008	V70(00-)		Supplemental Restraint System Module(SRS)	√	√	√			1.Calibrating the occupant weight sensor(OWS)
VOLVO	2008	V70(00-)		Accessory Electronic Module(AEM)	√	√	√	√		
VOLVO	2008	V70(00-)		Audio Module(AUM)	√	√	√	√		
VOLVO	2008	V70(00-)		Central Electronic Module(CEM)	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2008	V70(00-)		Driver Information Module(DIM)	√	√	√	√		
VOLVO	2008	V70(00-)		Phone Module(PHM)	√	√	√	√		
VOLVO	2008	V70(00-)		Rear Electronic Module(REM)	√	√	√	√		
VOLVO	2008	V70(00-)		Road Traffic Information Module(RTI)	√	√	√			
VOLVO	2008	V70(00-)		Upper Electronic Module(UEM)	√	√	√	√		
VOLVO	2008	V70(00-)		Suspension Module(SUM)	√	√	√	√		
VOLVO	1998	V70XC(-00)		Resetting the service reminder indicator(SRI)						√
VOLVO	1998	V70XC(-00)	B5204T3	Fuel System/ Combined System	√	√	√	√		
VOLVO	1998	V70XC(-00)	B5254T	Fuel System/ Combined System	√	√	√	√		
VOLVO	1998	V70XC(-00)	AW42AWD	Transmission Control Module(TCM)	√	√	√	√		

VOLVO	1998	V70XC(-00)		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	1998	V70XC(-00)		Climate Control Module(CCM)	√	√	√	√		
VOLVO	1998	V70XC(-00)		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	1998	V70XC(-00)		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	1998	V70XC(-00)		Road Traffic Information Module(RTI)	√	√	√	√	√	
VOLVO	1998	V70XC(-00)		Immobilizer	√	√	√	√	√	
VOLVO	1999	V70XC(-00)		Resetting the service reminder indicator(SRI)						√
VOLVO	1999	V70XC(-00)	B5204T3	Fuel System/ Combined System	√	√	√	√		
VOLVO	1999	V70XC(-00)	B5254T	Fuel System/ Combined System	√	√	√	√		
VOLVO	1999	V70XC(-00)	AW42AWD	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	1999	V70XC(-00)		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	1999	V70XC(-00)		Climate Control Module(CCM)	√	√	√	√		
VOLVO	1999	V70XC(-00)		Combustion Preheater Module(CPM)	√	√	√	√	√	
VOLVO	1999	V70XC(-00)		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	1999	V70XC(-00)		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	1999	V70XC(-00)		Power Seat Module,Right(PSR)	√	√	√	√	√	
VOLVO	1999	V70XC(-00)		Road Traffic Information Module(RTI)	√	√	√	√	√	
VOLVO	1999	V70XC(-00)		Immobilizer	√	√	√	√	√	
VOLVO	1999	V70XC(-00)		Lock and alarm	√	√	√	√	√	
VOLVO	2000	V70XC(-00)		Resetting the service reminder indicator(SRI)						√
VOLVO	2000	V70XC(-00)	B5244T	Fuel System/ Combined System	√	√	√	√		

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

VOLVO	2000	V70XC(-00)	AW42AWD	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	2000	V70XC(-00)		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	2000	V70XC(-00)		Climate Control Module(CCM)	√	√	√	√		
VOLVO	2000	V70XC(-00)		Combustion Preheater Module(CPM)	√	√	√	√	√	
VOLVO	2000	V70XC(-00)		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	2000	V70XC(-00)		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	2000	V70XC(-00)		Power Seat Module,Right(PSR)	√	√	√	√	√	
VOLVO	2000	V70XC(-00)		Road Traffic Information Module(RTI)	√	√	√	√	√	
VOLVO	2000	V70XC(-00)		Immobilizer	√	√	√	√	√	
VOLVO	2000	V70XC(-00)		Lock and alarm	√	√	√	√	√	
VOLVO	2001	V70XC(01-)/XC70		Resetting the service reminder indicator(SRI)						√
VOLVO	2001	V70XC(01-)/XC70	B5234T7	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2001	V70XC(01-)/XC70	B5244T3	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2001	V70XC(01-)/XC70	AW50/51AW D	Transmission Control Module(TCM)	√	√	√	√	√	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	2001	V70XC(01-)/XC70	AW50/51AW D	Differential Electronic Module(DEM)	√	√	√	√		
VOLVO	2001	V70XC(01-)/XC70		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration
VOLVO	2001	V70XC(01-)/XC70		Steering Wheel Angle Sensor Module(SAS)	√	√	√	√		
VOLVO	2001	V70XC(01-)/XC70		Climate Control Module(CCM)	√	√	√	√		1.Adjusting ECC parameters
VOLVO	2001	V70XC(01-)/XC70		Combustion Preheater Module(CPM)	√	√	√	√	√	
VOLVO	2001	V70XC(01-)/XC70		Driver Door Module(DDM)	√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

VOLVO	2001	V70XC(01-)/XC70		Passenger Door Module(PDM)	√	√	√	√	√	1.Initializing the window position
VOLVO	2001	V70XC(01-)/XC70		Power Seat Module(PSM)	√	√	√	√	√	1.Programming the remote control setting
VOLVO	2001	V70XC(01-)/XC70		Supplemental Restraint System Module(SRS)	√	√	√	√		1.Calibrating the occupant weight sensor(OWS)
VOLVO	2001	V70XC(01-)/XC70		Accessory Electronic Module(AEM)	√	√	√	√		
VOLVO	2001	V70XC(01-)/XC70		Audio Module(AUM)	√	√	√			
VOLVO	2001	V70XC(01-)/XC70		Central Electronic Module(CEM)	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2001	V70XC(01-)/XC70		Driver Information Module(DIM)	√	√	√	√	√	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	2001	V70XC(01-)/XC70		Phone Module(PHM)	√	√	√	√		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
VOLVO	2001	V70XC(01-)/XC70		Rear Electronic Module(REM)	√	√	√	√		
VOLVO	2001	V70XC(01-)/XC70		Road Traffic Information Module(RTI)	√	√	√			
VOLVO	2001	V70XC(01-)/XC70		Steering Wheel Module(SWM)	√	√	√	√		
VOLVO	2001	V70XC(01-)/XC70		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2002	V70XC(01-)/XC70		Resetting the service reminder indicator(SRI)						√
VOLVO	2002	V70XC(01-)/XC70	B5234T7	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2002	V70XC(01-)/XC70	B5244T3	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2002	V70XC(01-)/XC70	AW50/51AW D	Transmission Control Module(TCM)	√	√	√	√	√	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change

VOLVO	2002	V70XC(01-)/XC70	AW50/51AW D	Differential Electronic Module(DEM)	√	√	√	√		
VOLVO	2002	V70XC(01-)/XC70		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration
VOLVO	2002	V70XC(01-)/XC70		Steering Wheel Angle Sensor Module(SAS)	√	√	√	√		
VOLVO	2002	V70XC(01-)/XC70		Climate Control Module(CCM)	√	√	√	√		1.Adjusting ECC parameters
VOLVO	2002	V70XC(01-)/XC70		Combustion Preheater Module(CPM)	√	√	√	√	√	
VOLVO	2002	V70XC(01-)/XC70		Driver Door Module(DDM)	√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting
VOLVO	2002	V70XC(01-)/XC70		Passenger Door Module(PDM)	√	√	√	√	√	1.Initializing the window position
VOLVO	2002	V70XC(01-)/XC70		Power Seat Module(PSM)	√	√	√	√	√	1.Programming the remote control setting
VOLVO	2002	V70XC(01-)/XC70		Supplemental Restraint System Module(SRS)	√	√	√	√		1.Calibrating the occupant weight sensor(OWS)
VOLVO	2002	V70XC(01-)/XC70		Accessory Electronic Module(AEM)	√	√	√	√		
VOLVO	2002	V70XC(01-)/XC70		Audio Module(AUM)	√	√	√			
VOLVO	2002	V70XC(01-)/XC70		Central Electronic Module(CEM)	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2002	V70XC(01-)/XC70		Driver Information Module(DIM)	√	√	√	√	√	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	2002	V70XC(01-)/XC70		Phone Module(PHM)	√	√	√	√		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
VOLVO	2002	V70XC(01-)/XC70		Rear Electronic Module(REM)	√	√	√	√		
VOLVO	2002	V70XC(01-)/XC70		Road Traffic Information Module(RTI)	√	√	√			
VOLVO	2002	V70XC(01-)/XC70		Steering Wheel Module(SWM)	√	√	√	√		

VOLVO	2002	V70XC(01-)/XC70		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2003	V70XC(01-)/XC70		Resetting the service reminder indicator(SRI)						√
VOLVO	2003	V70XC(01-)/XC70	B5234T7	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2003	V70XC(01-)/XC70	B5254T2	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2003	V70XC(01-)/XC70	D5244T	Fuel system/combined system	√	√	√	√		
VOLVO	2003	V70XC(01-)/XC70	AW50/51AW D	Transmission Control Module(TCM)	√	√	√	√	√	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	2003	V70XC(01-)/XC70	AW50/51AW D	Differential Electronic Module(DEM)	√	√	√	√		
VOLVO	2003	V70XC(01-)/XC70		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration
VOLVO	2003	V70XC(01-)/XC70		Steering Wheel Angle Sensor Module(SAS)	√	√	√	√		
VOLVO	2003	V70XC(01-)/XC70		Climate Control Module(CCM)	√	√	√	√		1.Adjusting ECC parameters
VOLVO	2003	V70XC(01-)/XC70		Combustion Preheater Module(CPM)	√	√	√	√	√	
VOLVO	2003	V70XC(01-)/XC70		Driver Door Module(DDM)	√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting
VOLVO	2003	V70XC(01-)/XC70		Passenger Door Module(PDM)	√	√	√	√	√	1.Initializing the window position
VOLVO	2003	V70XC(01-)/XC70		Power Seat Module(PSM)	√	√	√	√	√	1.Programming the remote control setting
VOLVO	2003	V70XC(01-)/XC70		Supplemental Restraint System Module(SRS)	√	√	√	√		1.Calibrating the occupant weight sensor(OWS)
VOLVO	2003	V70XC(01-)/XC70		Accessory Electronic Module(AEM)	√	√	√	√		
VOLVO	2003	V70XC(01-)/XC70		Audio Module(AUM)	√	√	√			
VOLVO	2003	V70XC(01-)/XC70		Central Electronic Module(CEM)	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car

VOLVO	2003	V70XC(01-)/XC70		Driver Information Module(DIM)	√	√	√	√	√	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	2003	V70XC(01-)/XC70		Phone Module(PHM)	√	√	√	√		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
VOLVO	2003	V70XC(01-)/XC70		Rear Electronic Module(REM)	√	√	√	√		
VOLVO	2003	V70XC(01-)/XC70		Road Traffic Information Module(RTI)	√	√	√			
VOLVO	2003	V70XC(01-)/XC70		Steering Wheel Module(SWM)	√	√	√	√		
VOLVO	2003	V70XC(01-)/XC70		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2004	V70XC(01-)/XC70		Resetting the service reminder indicator(SRI)						√
VOLVO	2004	V70XC(01-)/XC70	B5234T7	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2004	V70XC(01-)/XC70	B5254T2	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2004	V70XC(01-)/XC70	D5244T	Fuel system/combined system	√	√	√	√		
VOLVO	2004	V70XC(01-)/XC70	AW50/51AW D	Transmission Control Module(TCM)	√	√	√	√	√	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	2004	V70XC(01-)/XC70	AW50/51AW D	Differential Electronic Module(DEM)	√	√	√	√		
VOLVO	2004	V70XC(01-)/XC70		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration
VOLVO	2004	V70XC(01-)/XC70		Steering Wheel Angle Sensor Module(SAS)	√	√	√	√		
VOLVO	2004	V70XC(01-)/XC70		Climate Control Module(CCM)	√	√	√	√		1.Adjusting ECC parameters
VOLVO	2004	V70XC(01-)/XC70		Combustion Preheater Module(CPM)	√	√	√	√	√	
VOLVO	2004	V70XC(01-)/XC70		Driver Door Module(DDM)	√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting

VOLVO	2004	V70XC(01-)/XC70		Passenger Door Module(PDM)	√	√	√	√	√	1.Initializing the window position
VOLVO	2004	V70XC(01-)/XC70		Power Seat Module(PSM)	√	√	√	√	√	1.Programming the remote control setting
VOLVO	2004	V70XC(01-)/XC70		Supplemental Restraint System Module(SRS)	√	√	√	√		1.Calibrating the occupant weight sensor(OWS)
VOLVO	2004	V70XC(01-)/XC70		Accessory Electronic Module(AEM)	√	√	√	√		
VOLVO	2004	V70XC(01-)/XC70		Audio Module(AUM)	√	√	√			
VOLVO	2004	V70XC(01-)/XC70		Central Electronic Module(CEM)	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2004	V70XC(01-)/XC70		Driver Information Module(DIM)	√	√	√	√	√	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	2004	V70XC(01-)/XC70		Phone Module(PHM)	√	√	√	√		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
VOLVO	2004	V70XC(01-)/XC70		Rear Electronic Module(REM)	√	√	√	√		
VOLVO	2004	V70XC(01-)/XC70		Road Traffic Information Module(RTI)	√	√	√			
VOLVO	2004	V70XC(01-)/XC70		Steering Wheel Module(SWM)	√	√	√	√		
VOLVO	2004	V70XC(01-)/XC70		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2005	V70XC(01-)/XC70		Resetting the service reminder indicator(SRI)						√
VOLVO	2005	V70XC(01-)/XC70	B5244T4	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2005	V70XC(01-)/XC70	B5254T2	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2005	V70XC(01-)/XC70	D5244T	Fuel system/combined system	√	√	√	√		

VOLVO	2005	V70XC(01-)/XC70	AW50/51AW D	Transmission Control Module(TCM)	√	√	√	√	√	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	2005	V70XC(01-)/XC70	AW50/51AW D	Differential Electronic Module(DEM)	√	√	√	√		
VOLVO	2005	V70XC(01-)/XC70	M66AWD	Differential Electronic Module(DEM)	√	√	√	√		
VOLVO	2005	V70XC(01-)/XC70		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration
VOLVO	2005	V70XC(01-)/XC70		Steering Wheel Angle Sensor Module(SAS)	√	√	√	√		
VOLVO	2005	V70XC(01-)/XC70		Climate Control Module(CCM)	√	√	√	√		1.Adjusting ECC parameters
VOLVO	2005	V70XC(01-)/XC70		Combustion Preheater Module(CPM)	√	√	√	√	√	
VOLVO	2005	V70XC(01-)/XC70		Driver Door Module(DDM)	√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting
VOLVO	2005	V70XC(01-)/XC70		Passenger Door Module(PDM)	√	√	√	√	√	1.Initializing the window position
VOLVO	2005	V70XC(01-)/XC70		Power Seat Module(PSM)	√	√	√	√	√	1.Programming the remote control setting
VOLVO	2005	V70XC(01-)/XC70		Supplemental Restraint System Module(SRS)	√	√	√	√		1.Calibrating the occupant weight sensor(OWS)
VOLVO	2005	V70XC(01-)/XC70		Accessory Electronic Module(AEM)	√	√	√	√		
VOLVO	2005	V70XC(01-)/XC70		Audio Module(AUM)	√	√	√			
VOLVO	2005	V70XC(01-)/XC70		Central Electronic Module(CEM)	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2005	V70XC(01-)/XC70		Driver Information Module(DIM)	√	√	√	√	√	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	2005	V70XC(01-)/XC70		Phone Module(PHM)	√	√	√	√		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code

VOLVO	2005	V70XC(01-)/XC70		Rear Electronic Module(REM)	√	√	√	√		
VOLVO	2005	V70XC(01-)/XC70		Road Traffic Information Module(RTI)	√	√	√			
VOLVO	2005	V70XC(01-)/XC70		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2006	V70XC(01-)/XC70		Resetting the service reminder indicator(SRI)						√
VOLVO	2006	V70XC(01-)/XC70	B5244T4	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2006	V70XC(01-)/XC70	B5254T2	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2006	V70XC(01-)/XC70	D5244T	Fuel system/combined system	√	√	√	√		
VOLVO	2006	V70XC(01-)/XC70	AW50/51AW D	Transmission Control Module(TCM)	√	√	√	√	√	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	2006	V70XC(01-)/XC70	AW50/51AW D	Differential Electronic Module(DEM)	√	√	√	√		
VOLVO	2006	V70XC(01-)/XC70	M66AWD	Differential Electronic Module(DEM)	√	√	√	√		
VOLVO	2006	V70XC(01-)/XC70		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration
VOLVO	2006	V70XC(01-)/XC70		Steering Wheel Angle Sensor Module(SAS)	√	√	√	√		
VOLVO	2006	V70XC(01-)/XC70		Climate Control Module(CCM)	√	√	√	√		1.Adjusting ECC parameters
VOLVO	2006	V70XC(01-)/XC70		Combustion Preheater Module(CPM)	√	√	√	√	√	
VOLVO	2006	V70XC(01-)/XC70		Driver Door Module(DDM)	√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting
VOLVO	2006	V70XC(01-)/XC70		Passenger Door Module(PDM)	√	√	√	√	√	1.Initializing the window position
VOLVO	2006	V70XC(01-)/XC70		Power Seat Module(PSM)	√	√	√	√	√	1.Programming the remote control setting
VOLVO	2006	V70XC(01-)/XC70		Supplemental Restraint System Module(SRS)	√	√	√	√		1.Calibrating the occupant weight sensor(OWS)
VOLVO	2006	V70XC(01-)/XC70		Accessory Electronic Module(AEM)	√	√	√	√		

VOLVO	2006	V70XC(01-)/XC70		Audio Module(AUM)	√	√	√			
VOLVO	2006	V70XC(01-)/XC70		Central Electronic Module(CEM)	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2006	V70XC(01-)/XC70		Driver Information Module(DIM)	√	√	√	√	√	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	2006	V70XC(01-)/XC70		Phone Module(PHM)	√	√	√	√		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
VOLVO	2006	V70XC(01-)/XC70		Rear Electronic Module(REM)	√	√	√	√		
VOLVO	2006	V70XC(01-)/XC70		Road Traffic Information Module(RTI)	√	√	√			
VOLVO	2006	V70XC(01-)/XC70		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2007	V70XC(01-)/XC70		Resetting the service reminder indicator(SRI)						√
VOLVO	2007	V70XC(01-)/XC70	B5244T4	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2007	V70XC(01-)/XC70	B5254T2	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2007	V70XC(01-)/XC70	D5244T	Fuel system/combined system	√	√	√	√		
VOLVO	2007	V70XC(01-)/XC70	AW50/51AW D	Transmission Control Module(TCM)	√	√	√	√	√	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	2007	V70XC(01-)/XC70	AW50/51AW D	Differential Electronic Module(DEM)	√	√	√	√		
VOLVO	2007	V70XC(01-)/XC70	M66AWD	Differential Electronic Module(DEM)	√	√	√	√		
VOLVO	2007	V70XC(01-)/XC70		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration
VOLVO	2007	V70XC(01-)/XC70		Steering Wheel Angle Sensor Module(SAS)	√	√	√	√		

VOLVO	2007	V70XC(01-)/XC70		Climate Control Module(CCM)	√	√	√	√		1.Adjusting ECC parameters
VOLVO	2007	V70XC(01-)/XC70		Combustion Preheater Module(CPM)	√	√	√	√	√	
VOLVO	2007	V70XC(01-)/XC70		Driver Door Module(DDM)	√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting
VOLVO	2007	V70XC(01-)/XC70		Passenger Door Module(PDM)	√	√	√	√	√	1.Initializing the window position
VOLVO	2007	V70XC(01-)/XC70		Power Seat Module(PSM)	√	√	√	√	√	1.Programming the remote control setting
VOLVO	2007	V70XC(01-)/XC70		Supplemental Restraint System Module(SRS)	√	√	√	√		1.Calibrating the occupant weight sensor(OWS)
VOLVO	2007	V70XC(01-)/XC70		Accessory Electronic Module(AEM)	√	√	√	√		
VOLVO	2007	V70XC(01-)/XC70		Audio Module(AUM)	√	√	√	√		
VOLVO	2007	V70XC(01-)/XC70		Central Electronic Module(CEM)	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2007	V70XC(01-)/XC70		Driver Information Module(DIM)	√	√	√	√	√	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	2007	V70XC(01-)/XC70		Phone Module(PHM)	√	√	√	√		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
VOLVO	2007	V70XC(01-)/XC70		Rear Electronic Module(REM)	√	√	√	√		
VOLVO	2007	V70XC(01-)/XC70		Road Traffic Information Module(RTI)	√	√	√	√		
VOLVO	2007	V70XC(01-)/XC70		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2008	V70XC(01-)/XC70		Resetting the service reminder indicator(SRI)						√
VOLVO	2008	V70XC(01-)/XC70	B5244T4	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2008	V70XC(01-)/XC70	B5254T2	Engine Control Module(ECM)	√	√	√	√		

VOLVO	2008	V70XC(01-)/XC70	D5244T	Fuel system/combined system	√	√	√	√		
VOLVO	2008	V70XC(01-)/XC70	AW50/51AW D	Transmission Control Module(TCM)	√	√	√	√	√	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	2008	V70XC(01-)/XC70	AW50/51AW D	Differential Electronic Module(DEM)	√	√	√	√		
VOLVO	2008	V70XC(01-)/XC70	M66AWD	Differential Electronic Module(DEM)	√	√	√	√		
VOLVO	2008	V70XC(01-)/XC70		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration
VOLVO	2008	V70XC(01-)/XC70		Steering Wheel Angle Sensor Module(SAS)	√	√	√	√		
VOLVO	2008	V70XC(01-)/XC70		Climate Control Module(CCM)	√	√	√	√		1.Adjusting ECC parameters
VOLVO	2008	V70XC(01-)/XC70		Combustion Preheater Module(CPM)	√	√	√	√	√	
VOLVO	2008	V70XC(01-)/XC70		Driver Door Module(DDM)	√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting
VOLVO	2008	V70XC(01-)/XC70		Passenger Door Module(PDM)	√	√	√	√	√	1.Initializing the window position
VOLVO	2008	V70XC(01-)/XC70		Power Seat Module(PSM)	√	√	√	√	√	1.Programming the remote control setting
VOLVO	2008	V70XC(01-)/XC70		Supplemental Restraint System Module(SRS)	√	√	√	√		1.Calibrating the occupant weight sensor(OWS)
VOLVO	2008	V70XC(01-)/XC70		Accessory Electronic Module(AEM)	√	√	√	√		
VOLVO	2008	V70XC(01-)/XC70		Audio Module(AUM)	√	√	√			
VOLVO	2008	V70XC(01-)/XC70		Central Electronic Module(CEM)	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2008	V70XC(01-)/XC70		Driver Information Module(DIM)	√	√	√	√	√	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)

VOLVO	2008	V70XC(01-)/XC70		Phone Module(PHM)	√	√	√	√		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
VOLVO	2008	V70XC(01-)/XC70		Rear Electronic Module(REM)	√	√	√	√		
VOLVO	2008	V70XC(01-)/XC70		Road Traffic Information Module(RTI)	√	√	√			
VOLVO	2008	V70XC(01-)/XC70		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2007	C30	B4184S8	Engine Control Module(ECM)	√	√	√	√	√	1.Resetting adaptation
VOLVO	2007	C30	B4164S3	Engine Control Module(ECM)	√	√	√	√	√	1.Resetting adaptation
VOLVO	2007	C30	B4184S11	Engine Control Module(ECM)	√	√	√	√	√	1.Resetting adaptation
VOLVO	2007	C30	B5244S4	Engine Control Module(ECM)	√	√	√	√	√	1.Readiness Code 2.Quick test of the fuel pump(FP) 3.Resetting adaptation
VOLVO	2007	C30	B4204S3	Engine Control Module(ECM)	√	√	√	√	√	1.Resetting adaptation
VOLVO	2007	C30	B5254T3	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2007	C30	D4204T	Engine Control Module(ECM)	√	√	√	√	√	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation (EGR) valve
VOLVO	2007	C30	D4164T	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2007	C30	D5244T8	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2007	C30	D5244T9	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2007	C30	D4204T	Additive Dosing Module(ADM)	√	√	√	√	√	1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2007	C30	D4164T	Additive Dosing Module(ADM)	√	√	√	√	√	1.Refilling the feed hose with additive 2.Resetting the tank level gauge

VOLVO	2007	C30	AW55-50/51SN	Transmission Control Module(TCM)	√	√	√	√	√	
VOLVO	2007	C30		Driver information module (DIM)	√	√	√	√	√	1.Resetting the service reminder indicator
VOLVO	2007	C30		Global Positioning System Module (GPS)	√	√	√	√		
VOLVO	2007	C30		Brake Control Module (BCM)	√	√	√	√		
VOLVO	2007	C30		Traffic Message Channel Module (TMC)	√	√	√	√		
VOLVO	2007	C30		Steering wheel module (SWM)	√	√	√	√		
VOLVO	2007	C30		Keyless vehicle module (KVM)	√	√	√	√	√	
VOLVO	2007	C30		Telephone (PHM)	√	√	√	√		
VOLVO	2007	C30		Multimedia module (MMM)	√	√	√	√	√	1.Reinstalling the reserve battery
VOLVO	2007	C30		Electric Power Steering (EPS)	√	√	√	√		
VOLVO	2007	C30		Park Assist Module (PAM)	√	√	√	√		
VOLVO	2007	C30		Audio Module(AUD)	√	√	√			
VOLVO	2007	C30		Airbag (SRS)	√	√	√	√		
VOLVO	2007	C30		Driver door module (DDM)	√	√	√	√	√	
VOLVO	2007	C30		Passenger door module (PDM)	√	√	√	√	√	
VOLVO	2007	C30		Power seat module, left (PSL)	√	√	√	√		
VOLVO	2007	C30		Power seat module, right (PSR)	√	√	√	√		
VOLVO	2007	C30		Remote Digital Audio Receiver (RDAR)	√	√	√	√		
VOLVO	2007	C30		Integrated Audio module (IAM)	√	√	√	√	√	
VOLVO	2007	C30		Trailer Module (TRM)	√	√	√	√		
VOLVO	2007	C30		Infotainment Control Module (ICM)	√	√	√	√	√	
VOLVO	2007	C30		Climate control unit (CCM)	√	√	√	√		
VOLVO	2007	C30		Central Electronic Module(CEM)	√	√	√	√	√	

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

VOLVO	2007	C30		Combustion preheater Module(CPM)	√	√	√	√	√	
VOLVO	2008	C30	B4184S8	Engine Control Module(ECM)	√	√	√	√	√	1.Resetting adaptation
VOLVO	2008	C30	B4164S3	Engine Control Module(ECM)	√	√	√	√	√	1.Resetting adaptation
VOLVO	2008	C30	B4184S11	Engine Control Module(ECM)	√	√	√	√	√	1.Resetting adaptation
VOLVO	2008	C30	B5244S4	Engine Control Module(ECM)	√	√	√	√	√	1.Readiness Code 2.Quick test of the fuel pump(FP) 3.Resetting adaptation
VOLVO	2008	C30	B4204S3	Engine Control Module(ECM)	√	√	√	√	√	1.Resetting adaptation
VOLVO	2008	C30	B5254T7	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2008	C30	D4204T	Engine Control Module(ECM)	√	√	√	√	√	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation (EGR) valve
VOLVO	2008	C30	D4164T	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2008	C30	D5244T8	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2008	C30	D5244T9	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2008	C30	D5244T13	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2008	C30	D4204T	Additive Dosing Module(ADM)	√	√	√	√	√	1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2008	C30	D4164T	Additive Dosing Module(ADM)	√	√	√	√	√	1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	2008	C30	AW55- 50/51SN	Transmission Control Module(TCM)	√	√	√	√	√	1.Resetting the service reminder indicator
VOLVO	2008	C30	MPS6	Transmission Control Module(TCM)	√	√	√	√	√	
VOLVO	2008	C30		Central Electronic Module(CEM)	√	√	√	√	√	

VOLVO	2008	C30		Brake Control Module (BCM)	√	√	√	√	√	
VOLVO	2008	C30		Electric Power Steering (EPS)	√	√	√	√		
VOLVO	2008	C30		Park Assist Module (PAM)	√	√	√	√		
VOLVO	2008	C30		Audio Module(AUD)	√	√	√			
VOLVO	2008	C30		Airbag (SRS)	√	√	√	√		
VOLVO	2008	C30		Driver door module (DDM)	√	√	√	√	√	
VOLVO	2008	C30		Passenger door module (PDM)	√	√	√	√		
VOLVO	2008	C30		Power seat module, left (PSL)	√	√	√	√		
VOLVO	2008	C30		Power seat module, right (PSR)	√	√	√	√		
VOLVO	2008	C30		Accessory USB Unit (AUU)	√	√	√	√		
VOLVO	2008	C30		Trailer Module (TRM)	√	√	√	√		
VOLVO	2008	C30		Steering wheel module (SWM)	√	√	√	√	√	
VOLVO	2008	C30		Integrated Audio module (IAM)	√	√	√	√	√	
VOLVO	2008	C30		Climate control unit (CCM)	√	√	√	√		
VOLVO	2008	C30		Driver information module (DIM)	√	√	√	√	√	1.Resetting the service reminder indicator
VOLVO	2008	C30		Telephone (PHM)	√	√	√	√		
VOLVO	2008	C30		Remote Digital Audio Receiver (RDAR)	√	√	√	√		
VOLVO	2008	C30		Keyless vehicle module (KVM)	√	√	√	√	√	
VOLVO	2008	C30		Infotainment Control Module (ICM)	√	√	√	√		
VOLVO	2008	C30		Multimedia module (MMM)	√	√	√	√	√	
VOLVO	2008	C30		Combustion preheater Module(CPM)	√	√	√	√	√	
VOLVO	2009	C30	B4184S8	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2009	C30	B4164S3	Engine Control Module(ECM)	√	√	√	√		

VOLVO	2009	C30	B4184S11	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2009	C30	B5244S4	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2009	C30	B4204S3	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2009	C30	B5254T7	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2009	C30	D4204T	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2009	C30	D4164T	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2009	C30	D5244T8	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2009	C30	D5244T9	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2009	C30	D5244T13	Engine Control Module(ECM)	√	√	√	√		
VOLVO	2009	C30	D4204T	Additive Module(ADM) Dosing	√	√	√	√		
VOLVO	2009	C30	D4164T	Additive Module(ADM) Dosing	√	√	√	√		
VOLVO	2009	C30	AW55-50/51SN	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	2009	C30	MPS6	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	2009	C30		Central Electronic Module(CEM)	√	√	√	√	√	1.Ignition switch key position 2.Reading off programmed values
VOLVO	2009	C30		Accessory electronic module (AEM)	√	√	√	√	√	1.Reading off the configuration
VOLVO	2009	C30		Electric Power Steering (EPS)	√	√	√	√		
VOLVO	2009	C30		Park Assist Module (PAM)	√	√	√	√		
VOLVO	2009	C30		Audio Module(AUD)	√	√	√			
VOLVO	2009	C30		Airbag (SRS)	√	√	√	√		
VOLVO	2009	C30		Driver door module (DDM)	√	√	√	√	√	
VOLVO	2009	C30		Passenger door module (PDM)	√	√	√	√		

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

VOLVO	2009	C30		Accessory USB Unit (AUU)	√	√	√	√		
VOLVO	2009	C30		Trailer Module (TRM)	√	√	√	√		
VOLVO	2009	C30		Steering wheel module (SWM)	√	√	√	√		
VOLVO	2009	C30		Integrated Audio module (IAM)	√	√	√	√		
VOLVO	2009	C30		Brake Control Module (BCM)	√	√	√	√	√	
VOLVO	2009	C30		Remote Digital Audio Receiver (RDAR)	√	√	√	√		
VOLVO	2009	C30		Keyless vehicle module (KVM)	√	√	√	√	√	
VOLVO	2009	C30		Bluetooth Phone Module (BPM)	√	√	√	√		
VOLVO	2009	C30		Climate control unit (CCM)	√	√	√	√		
VOLVO	2009	C30		Power seat module, left (PSL)	√	√	√	√		
VOLVO	2009	C30		Power seat module, right (PSR)	√	√	√	√		
VOLVO	2009	C30		Combustion preheater Module(CPM)	√	√	√	√		
VOLVO	2009	C30		Telephone (PHM)	√	√	√	√		
VOLVO	2009	C30		Infotainment Control Module (ICM)	√	√	√	√	√	
VOLVO	2009	C30		Driver information module (DIM)	√	√	√	√	√	1.Resetting the service reminder indicator
VOLVO	2009	C30		Multimedia module (MMM)	√	√	√	√	√	
VOLVO	1998	C70 Coupe		Resetting the service reminder indicator(SRI)						√
VOLVO	1998	C70 Coupe	B5204T2	Fuel System/ Combined System	√	√	√	√		
VOLVO	1998	C70 Coupe	B5204T3	Fuel System/ Combined System	√	√	√	√		
VOLVO	1998	C70 Coupe	B5234T3	Fuel System/ Combined System	√	√	√	√		
VOLVO	1998	C70 Coupe	B5254T	Fuel System/ Combined System	√	√	√	√		

VOLVO	1998	C70 Coupe	AW50-42	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	1998	C70 Coupe		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	1998	C70 Coupe		Climate Control Module(CCM)	√	√	√	√		
VOLVO	1998	C70 Coupe		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	1998	C70 Coupe		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	1998	C70 Coupe		Road Traffic Information Module(RTI)	√	√	√	√	√	
VOLVO	1998	C70 Coupe		Immobilizer	√	√	√	√	√	
VOLVO	1999	C70 Coupe		Resetting the service reminder indicator(SRI)						√
VOLVO	1999	C70 Coupe	B5204T3	Fuel System/ Combined System	√	√	√	√		
VOLVO	1999	C70 Coupe	B5204T4	Fuel System/ Combined System	√	√	√	√		
VOLVO	1999	C70 Coupe	B5234T3	Fuel System/ Combined System	√	√	√	√		
VOLVO	1999	C70 Coupe	B5254S DENSO	Fuel System/ Combined System	√	√	√	√		
VOLVO	1999	C70 Coupe	B5254T	Fuel System/ Combined System	√	√	√	√		
VOLVO	1999	C70 Coupe	AW50-42	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	1999	C70 Coupe		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	1999	C70 Coupe		Climate Control Module(CCM)	√	√	√	√		
VOLVO	1999	C70 Coupe		Combustion Preheater Module(CPM)	√	√	√	√	√	
VOLVO	1999	C70 Coupe		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	1999	C70 Coupe		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	1999	C70 Coupe		Power Seat Module,Right(PSR)	√	√	√	√	√	

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

VOLVO	1999	C70 Coupe		Road Traffic Information Module(RTI)	√	√	√	√	√	
VOLVO	1999	C70 Coupe		Immobilizer	√	√	√	√	√	
VOLVO	1999	C70 Coupe		Lock and alarm	√	√	√	√	√	
VOLVO	2000	C70 Coupe		Resetting the service reminder indicator(SRI)						√
VOLVO	2000	C70 Coupe	B5204T3	Fuel System/ Combined System	√	√	√	√		
VOLVO	2000	C70 Coupe	B5204T4	Fuel System/ Combined System	√	√	√	√		
VOLVO	2000	C70 Coupe	B5234T3	Fuel System/ Combined System	√	√	√	√		
VOLVO	2000	C70 Coupe	B5244S	Fuel System/ Combined System	√	√	√	√		
VOLVO	2000	C70 Coupe	B5244T	Fuel System/ Combined System	√	√	√	√		
VOLVO	2000	C70 Coupe	AW50-42	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	2000	C70 Coupe	AW55-50/51SN	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	2000	C70 Coupe		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	2000	C70 Coupe		Climate Control Module(CCM)	√	√	√	√		
VOLVO	2000	C70 Coupe		Combustion Preheater Module(CPM)	√	√	√	√	√	
VOLVO	2000	C70 Coupe		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	2000	C70 Coupe		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	2000	C70 Coupe		Power Seat Module,Right(PSR)	√	√	√	√	√	
VOLVO	2000	C70 Coupe		Road Traffic Information Module(RTI)	√	√	√	√	√	
VOLVO	2000	C70 Coupe		Immobilizer	√	√	√	√	√	
VOLVO	2000	C70 Coupe		Lock and alarm	√	√	√	√	√	
VOLVO	2001	C70 Coupe		Resetting the service reminder indicator(SRI)						√

VOLVO	2001	C70 Coupe	B5204T4	Fuel System/ Combined System	√	√	√	√		
VOLVO	2001	C70 Coupe	B5234T3	Fuel System/ Combined System	√	√	√	√		
VOLVO	2001	C70 Coupe	B5244T	Fuel System/ Combined System	√	√	√	√		
VOLVO	2001	C70 Coupe	AW55-50/51SN	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	2001	C70 Coupe		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	2001	C70 Coupe		Climate Control Module(CCM)	√	√	√	√		
VOLVO	2001	C70 Coupe		Combustion Preheater Module(CPM)	√	√	√	√	√	
VOLVO	2001	C70 Coupe		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	2001	C70 Coupe		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	2001	C70 Coupe		Power Seat Module,Right(PSR)	√	√	√	√	√	
VOLVO	2001	C70 Coupe		Road Traffic Information Module(RTI)	√	√	√	√	√	
VOLVO	2001	C70 Coupe		Immobilizer	√	√	√	√	√	
VOLVO	2001	C70 Coupe		Lock and alarm	√	√	√	√	√	
VOLVO	2002	C70 Coupe		Resetting the service reminder indicator(SRI)						√
VOLVO	2002	C70 Coupe	B5204T4	Fuel System/ Combined System	√	√	√	√		
VOLVO	2002	C70 Coupe	B5234T3	Fuel System/ Combined System	√	√	√	√		
VOLVO	2002	C70 Coupe	B5244T	Fuel System/ Combined System	√	√	√	√		
VOLVO	2002	C70 Coupe	AW55-50/51SN	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	2002	C70 Coupe		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	2002	C70 Coupe		Climate Control Module(CCM)	√	√	√	√		

VOLVO	2002	C70 Coupe		Combustion Preheater Module(CPM)	√	√	√	√	√	
VOLVO	2002	C70 Coupe		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	2002	C70 Coupe		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	2002	C70 Coupe		Power Seat Module,Right(PSR)	√	√	√	√	√	
VOLVO	2002	C70 Coupe		Road Traffic Information Module(RTI)	√	√	√	√	√	
VOLVO	2002	C70 Coupe		Immobilizer	√	√	√	√	√	
VOLVO	2002	C70 Coupe		Lock and alarm	√	√	√	√	√	
VOLVO	1998	C70 Conv		Resetting the service reminder indicator(SRI)						√
VOLVO	1998	C70 Conv	B5204T2	Fuel System/ Combined System	√	√	√	√		
VOLVO	1998	C70 Conv	B5204T3	Fuel System/ Combined System	√	√	√	√		
VOLVO	1998	C70 Conv	B5234T3	Fuel System/ Combined System	√	√	√	√		
VOLVO	1998	C70 Conv	B5254T	Fuel System/ Combined System	√	√	√	√		
VOLVO	1998	C70 Conv	AW50-42	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	1998	C70 Conv		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	1998	C70 Conv		Climate Control Module(CCM)	√	√	√	√		
VOLVO	1998	C70 Conv		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	1998	C70 Conv		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	1998	C70 Conv		Road Traffic Information Module(RTI)	√	√	√	√	√	
VOLVO	1998	C70 Conv		Immobilizer	√	√	√	√	√	
VOLVO	1999	C70 Conv		Resetting the service reminder indicator(SRI)						√
VOLVO	1999	C70 Conv	B5204T2	Fuel System/ Combined System	√	√	√	√		

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

VOLVO	1999	C70 Conv	B5204T3	Fuel System/ Combined System	√	√	√	√		
VOLVO	1999	C70 Conv	B5234T3	Fuel System/ Combined System	√	√	√	√		
VOLVO	1999	C70 Conv	B5254T	Fuel System/ Combined System	√	√	√	√		
VOLVO	1999	C70 Conv	AW50-42	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	1999	C70 Conv		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	1999	C70 Conv		Climate Control Module(CCM)	√	√	√	√		
VOLVO	1999	C70 Conv		Combustion Preheater Module(CPM)	√	√	√	√	√	
VOLVO	1999	C70 Conv		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	1999	C70 Conv		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	1999	C70 Conv		Power Seat Module,Right(PSR)	√	√	√	√	√	
VOLVO	1999	C70 Conv		Road Traffic Information Module(RTI)	√	√	√	√	√	
VOLVO	1999	C70 Conv		Immobilizer	√	√	√	√	√	
VOLVO	1999	C70 Conv		Lock and alarm	√	√	√	√	√	
VOLVO	2000	C70 Conv		Resetting the service reminder indicator(SRI)						√
VOLVO	2000	C70 Conv	B5204T2	Fuel System/ Combined System	√	√	√	√		
VOLVO	2000	C70 Conv	B5204T3	Fuel System/ Combined System	√	√	√	√		
VOLVO	2000	C70 Conv	B5234T3	Fuel System/ Combined System	√	√	√	√		
VOLVO	2000	C70 Conv	B5244S	Fuel System/ Combined System	√	√	√	√		
VOLVO	2000	C70 Conv	B5254T	Fuel System/ Combined System	√	√	√	√		
VOLVO	2000	C70 Conv	AW50-42	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	2000	C70 Conv	AW55-50/51SN	Transmission Control Module(TCM)	√	√	√	√		

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

VOLVO	2000	C70 Conv		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	2000	C70 Conv		Climate Control Module(CCM)	√	√	√	√		
VOLVO	2000	C70 Conv		Combustion Preheater Module(CPM)	√	√	√	√	√	
VOLVO	2000	C70 Conv		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	2000	C70 Conv		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	2000	C70 Conv		Power Seat Module,Right(PSR)	√	√	√	√	√	
VOLVO	2000	C70 Conv		Road Traffic Information Module(RTI)	√	√	√	√	√	
VOLVO	2000	C70 Conv		Immobilizer	√	√	√	√	√	
VOLVO	2000	C70 Conv		Lock and alarm	√	√	√	√	√	
VOLVO	2001	C70 Conv		Resetting the service reminder indicator(SRI)						√
VOLVO	2001	C70 Conv	B5204T4	Fuel System/ Combined System	√	√	√	√		
VOLVO	2001	C70 Conv	B5234T3	Fuel System/ Combined System	√	√	√	√		
VOLVO	2001	C70 Conv	B5244T	Fuel System/ Combined System	√	√	√	√		
VOLVO	2001	C70 Conv	AW55- 50/51SN	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	2001	C70 Conv		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	2001	C70 Conv		Climate Control Module(CCM)	√	√	√	√		
VOLVO	2001	C70 Conv		Combustion Preheater Module(CPM)	√	√	√	√	√	
VOLVO	2001	C70 Conv		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	2001	C70 Conv		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	2001	C70 Conv		Power Seat Module,Right(PSR)	√	√	√	√	√	

VOLVO	2001	C70 Conv		Road Traffic Information Module(RTI)	√	√	√	√	√	
VOLVO	2001	C70 Conv		Immobilizer	√	√	√	√	√	
VOLVO	2001	C70 Conv		Lock and alarm	√	√	√	√	√	
VOLVO	2002	C70 Conv		Resetting the service reminder indicator(SRI)						√
VOLVO	2002	C70 Conv	B5204T4	Fuel System/ Combined System	√	√	√	√		
VOLVO	2002	C70 Conv	B5234T3	Fuel System/ Combined System	√	√	√	√		
VOLVO	2002	C70 Conv	B5244T	Fuel System/ Combined System	√	√	√	√		
VOLVO	2002	C70 Conv	AW55-50/51SN	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	2002	C70 Conv		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	2002	C70 Conv		Climate Control Module(CCM)	√	√	√	√		
VOLVO	2002	C70 Conv		Combustion Preheater Module(CPM)	√	√	√	√	√	
VOLVO	2002	C70 Conv		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	2002	C70 Conv		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	2002	C70 Conv		Power Seat Module,Right(PSR)	√	√	√	√	√	
VOLVO	2002	C70 Conv		Road Traffic Information Module(RTI)	√	√	√	√	√	
VOLVO	2002	C70 Conv		Immobilizer	√	√	√	√	√	
VOLVO	2002	C70 Conv		Lock and alarm	√	√	√	√	√	
VOLVO	2003	C70 Conv		Resetting the service reminder indicator(SRI)						√
VOLVO	2003	C70 Conv	B5204T4	Fuel System/ Combined System	√	√	√	√		
VOLVO	2003	C70 Conv	B5234T9	Fuel System/ Combined System	√	√	√	√		
VOLVO	2003	C70 Conv	B5244T7	Fuel System/ Combined System	√	√	√	√		

VOLVO	2003	C70 Conv	AW55-50/51SN	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	2003	C70 Conv		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	2003	C70 Conv		Climate Control Module(CCM)	√	√	√	√		
VOLVO	2003	C70 Conv		Combustion Preheater Module(CPM)	√	√	√	√	√	
VOLVO	2003	C70 Conv		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	2003	C70 Conv		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	2003	C70 Conv		Power Seat Module,Right(PSR)	√	√	√	√	√	
VOLVO	2003	C70 Conv		Road Traffic Information Module(RTI)	√	√	√	√	√	
VOLVO	2003	C70 Conv		Immobilizer	√	√	√	√	√	
VOLVO	2003	C70 Conv		Lock and alarm	√	√	√	√	√	
VOLVO	2004	C70 Conv		Resetting the service reminder indicator(SRI)						√
VOLVO	2004	C70 Conv	B5204T4	Fuel System/ Combined System	√	√	√	√		
VOLVO	2004	C70 Conv	B5234T9	Fuel System/ Combined System	√	√	√	√		
VOLVO	2004	C70 Conv	B5244T7	Fuel System/ Combined System	√	√	√	√		
VOLVO	2004	C70 Conv	AW55-50/51SN	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	2004	C70 Conv		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	2004	C70 Conv		Climate Control Module(CCM)	√	√	√	√		
VOLVO	2004	C70 Conv		Combustion Preheater Module(CPM)	√	√	√	√	√	
VOLVO	2004	C70 Conv		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	2004	C70 Conv		Power Seat Module,Left(PSL)	√	√	√	√	√	

VOLVO	2004	C70 Conv		Power Seat Module,Right(PSR)	√	√	√	√	√	
VOLVO	2004	C70 Conv		Road Traffic Information Module(RTI)	√	√	√	√	√	
VOLVO	2004	C70 Conv		Immobilizer	√	√	√	√	√	
VOLVO	2004	C70 Conv		Lock and alarm	√	√	√	√	√	
VOLVO	2005	C70 Conv		Resetting the service reminder indicator(SRI)						√
VOLVO	2005	C70 Conv	B5204T4	Fuel System/ Combined System	√	√	√	√		
VOLVO	2005	C70 Conv	B5234T9	Fuel System/ Combined System	√	√	√	√		
VOLVO	2005	C70 Conv	B5244T7	Fuel System/ Combined System	√	√	√	√		
VOLVO	2005	C70 Conv	AW55- 50/51SN	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	2005	C70 Conv		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	2005	C70 Conv		Climate Control Module(CCM)	√	√	√	√		
VOLVO	2005	C70 Conv		Combustion Preheater Module(CPM)	√	√	√	√	√	
VOLVO	2005	C70 Conv		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	2005	C70 Conv		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	2005	C70 Conv		Power Seat Module,Right(PSR)	√	√	√	√	√	
VOLVO	2005	C70 Conv		Road Traffic Information Module(RTI)	√	√	√	√	√	
VOLVO	2005	C70 Conv		Immobilizer	√	√	√	√	√	
VOLVO	2005	C70 Conv		Lock and alarm	√	√	√	√	√	
VOLVO	2006	C70 Conv		Resetting the service reminder indicator(SRI)						√
VOLVO	2006	C70 Conv	B5204T4	Fuel System/ Combined System	√	√	√	√		
VOLVO	2006	C70 Conv	B5234T9	Fuel System/ Combined System	√	√	√	√		

VOLVO	2006	C70 Conv	B5244T7	Fuel System/ Combined System	√	√	√	√		
VOLVO	2006	C70 Conv	AW55-50/51SN	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	2006	C70 Conv		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	2006	C70 Conv		Climate Control Module(CCM)	√	√	√	√		
VOLVO	2006	C70 Conv		Combustion Preheater Module(CPM)	√	√	√	√	√	
VOLVO	2006	C70 Conv		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	2006	C70 Conv		Power Seat Module,Left(PSL)	√	√	√	√	√	
VOLVO	2006	C70 Conv		Power Seat Module,Right(PSR)	√	√	√	√	√	
VOLVO	2006	C70 Conv		Road Traffic Information Module(RTI)	√	√	√	√	√	
VOLVO	2006	C70 Conv		Immobilizer	√	√	√	√	√	
VOLVO	2006	C70 Conv		Lock and alarm	√	√	√	√	√	
VOLVO	2007	C70 Conv		Resetting the service reminder indicator(SRI)						√
VOLVO	2007	C70 Conv	B5204T4	Fuel System/ Combined System	√	√	√	√		
VOLVO	2007	C70 Conv	B5234T9	Fuel System/ Combined System	√	√	√	√		
VOLVO	2007	C70 Conv	B5244T7	Fuel System/ Combined System	√	√	√	√		
VOLVO	2007	C70 Conv	AW55-50/51SN	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	2007	C70 Conv		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	2007	C70 Conv		Climate Control Module(CCM)	√	√	√	√		
VOLVO	2007	C70 Conv		Combustion Preheater Module(CPM)	√	√	√	√	√	
VOLVO	2007	C70 Conv		Supplemental Restraint System Module(SRS)	√	√	√	√		

VOLVO	2007	C70 Conv		Power Module,Left(PSL) Seat	√	√	√	√	√	
VOLVO	2007	C70 Conv		Power Module,Right(PSR) Seat	√	√	√	√	√	
VOLVO	2007	C70 Conv		Road Traffic Information Module(RTI)	√	√	√	√	√	
VOLVO	2007	C70 Conv		Immobilizer	√	√	√	√	√	
VOLVO	2007	C70 Conv		Lock and alarm	√	√	√	√	√	
VOLVO	2008	C70 Conv		Resetting the service reminder indicator(SRI)						√
VOLVO	2008	C70 Conv	B5204T4	Fuel System/ Combined System	√	√	√	√		
VOLVO	2008	C70 Conv	B5234T9	Fuel System/ Combined System	√	√	√	√		
VOLVO	2008	C70 Conv	B5244T7	Fuel System/ Combined System	√	√	√	√		
VOLVO	2008	C70 Conv	AW55-50/51SN	Transmission Control Module(TCM)	√	√	√	√		
VOLVO	2008	C70 Conv		Anti-brake System Module(ABS/BCM)	√	√	√	√		
VOLVO	2008	C70 Conv		Climate Control Module(CCM)	√	√	√	√		
VOLVO	2008	C70 Conv		Combustion Preheater Module(CPM)	√	√	√	√	√	
VOLVO	2008	C70 Conv		Supplemental Restraint System Module(SRS)	√	√	√	√		
VOLVO	2008	C70 Conv		Power Module,Left(PSL) Seat	√	√	√	√	√	
VOLVO	2008	C70 Conv		Power Module,Right(PSR) Seat	√	√	√	√	√	
VOLVO	2008	C70 Conv		Road Traffic Information Module(RTI)	√	√	√	√	√	
VOLVO	2008	C70 Conv		Immobilizer	√	√	√	√	√	
VOLVO	2008	C70 Conv		Lock and alarm	√	√	√	√	√	
VOLVO	2003	XC90		Resetting the service reminder indicator(SRI)						√
VOLVO	2003	XC90	B5254T2	Engine Control Module(ECM)	√	√	√	√	√	

VOLVO	2003	XC90	B6294T	Engine Module(ECM)	Control	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	2003	XC90	D5244T	Engine Module(ECM)	Control	√	√	√	√	√	1.Programming optimising parameters
VOLVO	2003	XC90	4T65AWD	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	2003	XC90	AW50/51AW D	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	2003	XC90	4T65AWD	Differential Module(DEM)	Electronic	√	√	√	√		
VOLVO	2003	XC90	AW50/51AW D	Differential Module(DEM)	Electronic	√	√	√	√		
VOLVO	2003	XC90		Anti-brake Module(ABS/BCM)	System	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration
VOLVO	2003	XC90		Steering Wheel Angle Sensor Module(SAS)		√	√	√	√		
VOLVO	2003	XC90		Climate Module(CCM)	Control	√	√	√	√		1.Adjusting ECC parameters
VOLVO	2003	XC90		Driver Door Module(DDM)		√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting
VOLVO	2003	XC90		Passenger Module(PDM)	Door	√	√	√	√	√	1.Initializing the window position
VOLVO	2003	XC90		Power Seat Module(PSM)		√	√	√	√	√	1.Checking current values 2.Programming the remote control setting
VOLVO	2003	XC90		Supplemental Restraint System Module(SRS)		√	√	√	√		1.Calibrating the occupant weight sensor(OWS)
VOLVO	2003	XC90		Audio Module(AUM)		√	√	√			
VOLVO	2003	XC90		Central Module(CEM)	Electronic	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car

VOLVO	2003	XC90		Driver Information Module(DIM)	√	√	√	√	√	1.Resetting the service reminder indicator 2.Testing all needles and lamps in the dashboard 3.Programming the driver information module(DIM)
VOLVO	2003	XC90		Phone Module(PHM)	√	√	√	√		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
VOLVO	2003	XC90		Rear Electronic Module(REM)	√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	2003	XC90		Steering Wheel Module(SWM)	√	√	√	√		
VOLVO	2003	XC90		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2003	XC90		Infotainment control Module(ICM)	√	√	√	√	√	
VOLVO	2003	XC90		Multimedia Module(MMM)	√	√	√			
VOLVO	2003	XC90		Subwoofer Module(SUB)	√	√	√			
VOLVO	2003	XC90		Antenna Module(ATM)	√	√	√	√		
VOLVO	2003	XC90		CD Player Module(MP2)	√	√	√	√	√	
VOLVO	2003	XC90		MD Player Module(MP1)	√	√	√	√	√	
VOLVO	2004	XC90		Resetting the service reminder indicator(SRI)						√
VOLVO	2004	XC90	B5254T2	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2004	XC90	B6294T	Engine Control Module(ECM)	√	√	√	√	√	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	2004	XC90	D5244T	Engine Control Module(ECM)	√	√	√	√	√	1.Programming optimising parameters
VOLVO	2004	XC90	4T65AWD	Transmission Control Module(TCM)	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change

VOLVO	2004	XC90	AW50/51AW D	Transmission Module(TCM) Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	2004	XC90	4T65AWD	Differential Module(DEM) Electronic	√	√	√	√		
VOLVO	2004	XC90	AW50/51AW D	Differential Module(DEM) Electronic	√	√	√	√		
VOLVO	2004	XC90	M66AWD	Differential Module(DEM) Electronic	√	√	√	√		
VOLVO	2004	XC90		Anti-brake Module(ABS/BCM) System	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration
VOLVO	2004	XC90		Steering Wheel Angle Sensor Module(SAS)	√	√	√	√		
VOLVO	2004	XC90		Climate Module(CCM) Control	√	√	√	√		1.Adjusting ECC parameters
VOLVO	2004	XC90		Driver Door Module(DDM)	√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting
VOLVO	2004	XC90		Passenger Module(PDM) Door	√	√	√	√	√	1.Initializing the window position
VOLVO	2004	XC90		Power Seat Module(PSM)	√	√	√	√	√	1.Checking current values 2.Programming the remote control setting
VOLVO	2004	XC90		Supplemental Restraint System Module(SRS)	√	√	√	√		1.Calibrating the occupant weight sensor(OWS)
VOLVO	2004	XC90		Audio Module(AUM)	√	√	√			
VOLVO	2004	XC90		Central Module(CEM) Electronic	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2004	XC90		Driver Module(DIM) Information	√	√	√	√	√	1.Resetting the service reminder indicator 2.Testing all needles and lamps in the dashboard 3.Programming the driver information module(DIM)
VOLVO	2004	XC90		Phone Module(PHM)	√	√	√	√		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
VOLVO	2004	XC90		Rear Module(REM) Electronic	√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps

VOLVO	2004	XC90		Steering Module(SWM) Wheel	√	√	√	√		
VOLVO	2004	XC90		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2004	XC90		Infotainment control Module(ICM)	√	√	√	√	√	
VOLVO	2004	XC90		Multimedia Module(MMM)	√	√	√			
VOLVO	2004	XC90		Subwoofer Module(SUB)	√	√	√			
VOLVO	2004	XC90		Antenna Module(ATM)	√	√	√	√		
VOLVO	2004	XC90		CD Player Module(MP2)	√	√	√	√	√	
VOLVO	2004	XC90		MD Player Module(MP1)	√	√	√	√	√	
VOLVO	2005	XC90		Resetting the service reminder indicator(SRI)						√
VOLVO	2005	XC90	B5254T2	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2005	XC90	B6294T	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2005	XC90	D5244T	Engine Control Module(ECM)	√	√	√	√	√	1.Programming optimising parameters
VOLVO	2005	XC90	4T65AWD	Transmission Control Module(TCM)	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	2005	XC90	AW50/51AW D	Transmission Control Module(TCM)	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	2005	XC90	M66AWD	Transmission Control Module(TCM)	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	2005	XC90	4T65AWD	Differential Electronic Module(DEM)	√	√	√	√		
VOLVO	2005	XC90	AW50/51AW D	Differential Electronic Module(DEM)	√	√	√	√		
VOLVO	2005	XC90	M66AWD	Differential Electronic Module(DEM)	√	√	√	√		
VOLVO	2005	XC90		Anti-brake System Module(ABS/BCM)	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration

VOLVO	2005	XC90		Steering Wheel Angle Sensor Module(SAS)	√	√	√	√		
VOLVO	2005	XC90		Climate Control Module(CCM)	√	√	√	√		1.Adjusting ECC parameters
VOLVO	2005	XC90		Driver Door Module(DDM)	√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting
VOLVO	2005	XC90		Passenger Door Module(PDM)	√	√	√	√	√	1.Initializing the window position
VOLVO	2005	XC90		Power Seat Module(PSM)	√	√	√	√	√	1.Checking current values 2.Programming the remote control setting
VOLVO	2005	XC90		Supplemental Restraint System Module(SRS)	√	√	√	√		1.Calibrating the occupant weight sensor(OWS) 2.Storing the ID number for the occupant weight sensor (OWS).
VOLVO	2005	XC90		Audio Module(AUM)	√	√	√	√		
VOLVO	2005	XC90		Central Electronic Module(CEM)	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2005	XC90		Driver Information Module(DIM)	√	√	√	√	√	1.Resetting the service reminder indicator 2.Testing all needles and lamps in the dashboard 3.Programming the driver information module(DIM)
VOLVO	2005	XC90		Phone Module(PHM)	√	√	√	√		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
VOLVO	2005	XC90		Rear Electronic Module(REM)	√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	2005	XC90		Steering Wheel Module(SWM)	√	√	√	√		
VOLVO	2005	XC90		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2005	XC90		Infotainment control Module(ICM)	√	√	√	√	√	
VOLVO	2005	XC90		Multimedia Module(MMM)	√	√	√	√		
VOLVO	2005	XC90		Subwoofer Module(SUB)	√	√	√	√		
VOLVO	2005	XC90		Antenna Module(ATM)	√	√	√	√		

VOLVO	2005	XC90		CD Player Module(MP2)	✓	✓	✓	✓	✓	
VOLVO	2005	XC90		MD Player Module(MP1)	✓	✓	✓	✓	✓	
VOLVO	2006	XC90		Resetting the service reminder indicator(SRI)						✓
VOLVO	2006	XC90	B5254T2	Engine Module(ECM) Control	✓	✓	✓	✓	✓	
VOLVO	2006	XC90	B6294T	Engine Module(ECM) Control	✓	✓	✓	✓	✓	
VOLVO	2006	XC90	D5244T	Engine Module(ECM) Control	✓	✓	✓	✓	✓	1.Programming optimising parameters
VOLVO	2006	XC90	4T65AWD	Transmission Module(TCM) Control	✓	✓	✓	✓	✓	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	2006	XC90	AW50/51AW D	Transmission Module(TCM) Control	✓	✓	✓	✓	✓	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	2006	XC90	M66AWD	Transmission Module(TCM) Control	✓	✓	✓	✓	✓	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	2006	XC90	4T65AWD	Differential Module(DEM) Electronic	✓	✓	✓	✓		
VOLVO	2006	XC90	AW50/51AW D	Differential Module(DEM) Electronic	✓	✓	✓	✓		
VOLVO	2006	XC90	M66AWD	Differential Module(DEM) Electronic	✓	✓	✓	✓		
VOLVO	2006	XC90		Anti-brake System Module(ABS/BCM)	✓	✓	✓	✓	✓	1.Check brake light switch adjustment 2.Calibration
VOLVO	2006	XC90		Steering Wheel Angle Sensor Module(SAS)	✓	✓	✓	✓		
VOLVO	2006	XC90		Climate Control Module(CCM)	✓	✓	✓	✓		1.Adjusting ECC parameters
VOLVO	2006	XC90		Driver Door Module(DDM)	✓	✓	✓	✓	✓	1.Initializing the window position 2.Programming the remote control setting
VOLVO	2006	XC90		Passenger Door Module(PDM)	✓	✓	✓	✓	✓	1.Initializing the window position
VOLVO	2006	XC90		Power Seat Module(PSM)	✓	✓	✓	✓	✓	1.Checking current values 2.Programming the remote control setting

<http://www.autoboss.net>

<http://www.servicesolutions.com.cn>

VOLVO	2006	XC90		Supplemental Restraint System Module(SRS)	√	√	√	√		1.Calibrating the occupant weight sensor(OWS) 2.Storing the ID number for the occupant weight sensor (OWS).
VOLVO	2006	XC90		Audio Module(AUM)	√	√	√			
VOLVO	2006	XC90		Central Electronic Module(CEM)	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2006	XC90		Driver Information Module(DIM)	√	√	√	√	√	1.Resetting the service reminder indicator 2.Testing all needles and lamps in the dashboard 3.Programming the driver information module(DIM)
VOLVO	2006	XC90		Phone Module(PHM)	√	√	√	√		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
VOLVO	2006	XC90		Rear Electronic Module(REM)	√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	2006	XC90		Steering Wheel Module(SWM)	√	√	√	√		
VOLVO	2006	XC90		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2006	XC90		Infotainment control Module(ICM)	√	√	√	√	√	
VOLVO	2006	XC90		Multimedia Module(MMM)	√	√	√			
VOLVO	2006	XC90		Subwoofer Module(SUB)	√	√	√			
VOLVO	2006	XC90		Antenna Module(ATM)	√	√	√	√		
VOLVO	2006	XC90		CD Player Module(MP2)	√	√	√	√	√	
VOLVO	2006	XC90		MD Player Module(MP1)	√	√	√	√	√	
VOLVO	2007	XC90		Resetting the service reminder indicator(SRI)						√
VOLVO	2007	XC90	B5254T2	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2007	XC90	B6294T	Engine Control Module(ECM)	√	√	√	√	√	
VOLVO	2007	XC90	B6324S	Engine Control Module(ECM)	√	√	√	√	√	

VOLVO	2007	XC90	D5244T	Engine Module(ECM)	Control	√	√	√	√	√	1.Programming optimising parameters
VOLVO	2007	XC90	4T65AWD	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	2007	XC90	AW50/51AW D	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	2007	XC90	M66AWD	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	2007	XC90	TF-80SC AWD	Transmission Module(TCM)	Control	√	√	√	√	√	
VOLVO	2007	XC90	4T65AWD	Differential Module(DEM)	Electronic	√	√	√	√		
VOLVO	2007	XC90	AW50/51AW D	Differential Module(DEM)	Electronic	√	√	√	√		
VOLVO	2007	XC90	M66AWD	Differential Module(DEM)	Electronic	√	√	√	√		
VOLVO	2007	XC90		Anti-brake Module(ABS/BCM)	System	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration
VOLVO	2007	XC90		Steering Wheel Angle Sensor Module(SAS)		√	√	√	√		
VOLVO	2007	XC90		Climate Module(CCM)	Control	√	√	√	√		1.Adjusting ECC parameters
VOLVO	2007	XC90		Driver Door Module(DDM)		√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting
VOLVO	2007	XC90		Passenger Door Module(PDM)	Door	√	√	√	√	√	1.Initializing the window position
VOLVO	2007	XC90		Power Seat Module(PSM)		√	√	√	√	√	1.Checking current values 2.Programming the remote control setting
VOLVO	2007	XC90		Supplemental Restraint System Module(SRS)		√	√	√	√		1.Calibrating the occupant weight sensor(OWS) 2.Storing the ID number for the occupant weight sensor (OWS).
VOLVO	2007	XC90		Audio Module(AUM)		√	√	√			

VOLVO	2007	XC90		Central Electronic Module(CEM)	✓	✓	✓	✓	✓	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	2007	XC90		Driver Information Module(DIM)	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator 2.Testing all needles and lamps in the dashboard 3.Programming the driver information module(DIM)
VOLVO	2007	XC90		Phone Module(PHM)	✓	✓	✓	✓		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
VOLVO	2007	XC90		Rear Electronic Module(REM)	✓	✓	✓	✓	✓	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	2007	XC90		Steering Wheel Module(SWM)	✓	✓	✓	✓		
VOLVO	2007	XC90		Upper Electronic Module(UEM)	✓	✓	✓	✓	✓	
VOLVO	2007	XC90		Infotainment control Module(ICM)	✓	✓	✓	✓	✓	
VOLVO	2007	XC90		Multimedia Module(MMM)	✓	✓	✓			
VOLVO	2007	XC90		Subwoofer Module(SUB)	✓	✓	✓			
VOLVO	2007	XC90		Antenna Module(ATM)	✓	✓	✓	✓		
VOLVO	2007	XC90		CD Player Module(MP2)	✓	✓	✓	✓	✓	
VOLVO	2007	XC90		MD Player Module(MP1)	✓	✓	✓	✓	✓	
VOLVO	2008	XC90		Resetting the service reminder indicator(SRI)						✓
VOLVO	2008	XC90	B5254T2	Engine Control Module(ECM)	✓	✓	✓	✓	✓	
VOLVO	2008	XC90	B6294T	Engine Control Module(ECM)	✓	✓	✓	✓	✓	
VOLVO	2008	XC90	B6324S	Engine Control Module(ECM)	✓	✓	✓	✓	✓	
VOLVO	2008	XC90	D5244T	Engine Control Module(ECM)	✓	✓	✓	✓	✓	1.Programming optimising parameters
VOLVO	2008	XC90	4T65AWD	Transmission Control Module(TCM)	✓	✓	✓	✓	✓	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change

VOLVO	2008	XC90	AW50/51AW D	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	2008	XC90	M66AWD	Transmission Module(TCM)	Control	√	√	√	√	√	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	2008	XC90	TF-80SC AWD	Transmission Module(TCM)	Control	√	√	√	√	√	
VOLVO	2008	XC90	4T65AWD	Differential Module(DEM)	Electronic	√	√	√	√		
VOLVO	2008	XC90	AW50/51AW D	Differential Module(DEM)	Electronic	√	√	√	√		
VOLVO	2008	XC90	M66AWD	Differential Module(DEM)	Electronic	√	√	√	√		
VOLVO	2008	XC90		Anti-brake Module(ABS/BCM)	System	√	√	√	√	√	1.Check brake light switch adjustment 2.Calibration
VOLVO	2008	XC90		Steering Wheel Angle Sensor Module(SAS)		√	√	√	√		
VOLVO	2008	XC90		Climate Module(CCM)	Control	√	√	√	√		1.Adjusting ECC parameters
VOLVO	2008	XC90		Driver Door Module(DDM)		√	√	√	√	√	1.Initializing the window position 2.Programming the remote control setting
VOLVO	2008	XC90		Passenger Module(PDM)	Door	√	√	√	√	√	1.Initializing the window position
VOLVO	2008	XC90		Power Seat Module(PSM)		√	√	√	√	√	1.Checking current values 2.Programming the remote control setting
VOLVO	2008	XC90		Supplemental Restraint System Module(SRS)		√	√	√	√		1.Calibrating the occupant weight sensor(OWS) 2.Storing the ID number for the occupant weight sensor (OWS).
VOLVO	2008	XC90		Audio Module(AUM)		√	√	√			
VOLVO	2008	XC90		Central Module(CEM)	Electronic	√	√	√	√	√	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car

VOLVO	2008	XC90		Driver Information Module(DIM)	√	√	√	√	√	1.Resetting the service reminder indicator 2.Testing all needles and lamps in the dashboard 3.Programming the driver information module(DIM)
VOLVO	2008	XC90		Phone Module(PHM)	√	√	√	√		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
VOLVO	2008	XC90		Rear Electronic Module(REM)	√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	2008	XC90		Steering Wheel Module(SWM)	√	√	√	√		
VOLVO	2008	XC90		Upper Electronic Module(UEM)	√	√	√	√	√	
VOLVO	2008	XC90		Infotainment control Module(ICM)	√	√	√	√	√	
VOLVO	2008	XC90		Multimedia Module(MMM)	√	√	√			
VOLVO	2008	XC90		Subwoofer Module(SUB)	√	√	√			
VOLVO	2008	XC90		Antenna Module(ATM)	√	√	√	√		
VOLVO	2008	XC90		CD Player Module(MP2)	√	√	√	√	√	
VOLVO	2008	XC90		MD Player Module(MP1)	√	√	√	√	√	