

Porsche V10.06 Diagnostics List (Note: For reference only)

Vehicle	System	Functions						
		Sys. Info.	Read code	Clear code	Data stream	Input signals	Special functions	
911(996) Turbo	DME	√	√	√	√	√		
	Tiptronic	√	√	√	√	√		
	ABS	√	√	√	√	√		
	SRS	√	√	√				
	Air conditioning	√	√	√	√	√		
	Instrument cluster	√	√	√	√	√		
	PARKASSISTANT	√	√	√	√			
	Alarm system	√	√	√		√		
	Roll-over protection	√	√	√	√	√		
	SEAT MEMORY	√	√	√	√	√		
	Convertible top	√	√	√	√	√		
	HBA	√	√	√	√			
Boxster(986)	DME	√	√	√	√	√		
	Tiptronic	√	√	√	√	√		
	ABS	√	√	√	√	√		
	SRS	√	√	√				
	Air conditioning	√	√	√	√	√		
	Instrument cluster	√	√	√	√	√		
	PARKASSISTANT	√	√	√	√			
	Alarm system	√	√	√		√		
	SEAT MEMORY	√	√	√	√	√		
	HBA	√	√	√	√			
	DME	√	√	√	√	√		
	Tiptronic	√	√	√	√	√		
	PSM	√	√	√	√	√		
	Instrument cluster	√	√	√	√	√		
	Air conditioning	√	√	√	√	√		
	Gateway	√	√	√	√	√		

Porsche V10.06 Diagnostics List (Note: For reference only)

Vehicle	System	Functions						
		Sys. Info.	Read code	Clear code	Data stream	Input signals	Special functions	
Cayman	VEH.ELECTRICAL.SYS	√	√	√	√	√		
	STEERING COL. SWITCH	√	√	√	√	√		
	POSIP	√	√	√	√	√		
	TPM	√	√	√	√			
	CHRONOMETER	√	√	√	√			
	DRIVER'S DOOR	√	√	√	√	√		
	PASSENGER'S DOOR	√	√	√	√	√		
	PARKASSISTANT	√	√	√	√	√		
	FRONT	√	√	√	√	√		
	PAS	√	√	√	√	√		
	PASM	√	√	√	√	√		
	REAR	√	√	√		√		
	AWS	√	√	√	√	√		
Cayenne	DME	√	√	√	√	√		
	Tiptronic	√	√	√	√	√		
	SRS	√	√	√	√	√		
	PSM	√	√	√	√	√		
	KESY	√	√	√	√	√		
	Air conditioning	√	√	√	√	√		
	Gateway	√	√	√	√	√		
	VEH.ELECTRICAL.SYS	√	√	√	√			
	STEERING COL. SWITCH	√	√	√		√		
	WIPER	√	√	√	√			
	Headlight CU left	√	√	√	√			
	Headlight CU right	√	√	√	√			
	PARKASSISTANT	√	√	√	√	√		
	LEVEL CONTROL	√	√	√	√	√		
SEAT MEMORY,DRIVER	√	√	√	√	√			

Porsche V10.06 Diagnostics List (Note: For reference only)

Vehicle	System	Functions						
		Sys. Info.	Read code	Clear code	Data stream	Input signals	Special functions	
Cayenne	SEAT MEMORY,PASS	√	√	√	√	√		
	Instrument cluster	√	√	√	√	√		
	Transfer Case	√	√	√	√	√		
	REAR/DOORS	√	√	√				
	TPM	√	√	√	√			
	MAG.FIELD SENSOR	√	√	√	√	√		
	AWS	√	√	√	√			
	Tailgate	√	√	√	√			
	TRANSVERSE LOCK	√	√	√	√			
	PDCC/ORS	√	√	√	√			
	AHK	√	√	√	√			
	PANORAMA ROOF	√	√	√	√			
	AUXILIARY HEATER	√	√	√	√			
	LEFT HBA	√	√	√				
	RIGHT HBA	√	√	√				
911(997)	DME	√	√	√	√	√		
	Tiptronic	√	√	√	√	√		
	PSM	√	√	√	√	√		
	PAS	√	√	√	√	√		
	POSIP	√	√	√	√	√		
	AWS	√	√	√	√	√		
	Air conditioning	√	√	√	√	√		
	PTM	√	√	√	√	√		
	Instrument cluster	√	√	√	√	√		
	Gateway	√	√	√	√	√		
	VEH.ELECTRICAL.SYS	√	√	√	√	√		
	STEERING COL. SWITCH	√	√	√	√	√		
	Seat Memory	√	√	√	√	√		

Porsche V10.06 Diagnostics List (Note: For reference only)

Vehicle	System	Functions						
		Sys. Info.	Read code	Clear code	Data stream	Input signals	Special functions	
	PASM	√	√	√	√	√		
	TPM	√	√	√	√			
	Convertible top	√	√	√	√	√		
	Targa Roof	√	√	√	√	√		
	CHRONOMETER	√	√	√	√			
	DRIVER'S DOOR	√	√	√	√	√		
	PASSENGER'S DOOR	√	√	√	√	√		
	PARKASSISTANT	√	√	√	√	√		
	FRONT	√	√	√	√	√		
	REAR	√	√	√		√		
Boxter(987)	DME	√	√	√	√	√		
	Tiptronic	√	√	√	√	√		
	PSM	√	√	√	√	√		
	PAS	√	√	√	√	√		
	POSIP	√	√	√	√	√		
	AWS	√	√	√	√	√		
	Air conditioning	√	√	√	√	√		
	Instrument cluster	√	√	√	√	√		
	Gateway	√	√	√	√	√		
	VEH.ELECTRICAL.SYS	√	√	√	√	√		
	STEERING COL. SWITCH	√	√	√	√	√		
	Seat Memory	√	√	√	√	√		
	PASM	√	√	√	√	√		
	TPM	√	√	√	√			
	CHRONOMETER	√	√	√	√			
	DRIVER'S DOOR	√	√	√	√	√		
PASSENGER'S DOOR	√	√	√	√	√			
PARKASSISTANT	√	√	√	√	√			

Porsche V10.06 Diagnostics List (Note: For reference only)

Vehicle	System	Functions						
		Sys. Info.	Read code	Clear code	Data stream	Input signals	Special functions	
Cayenne(2011-2012)	Instrument cluster	√	√	√	√			
	Gateway	√	√	√	√			
	PARKASSISTANT	√	√	√				
	FRONT	√	√	√	√			
	REAR	√	√	√	√			
	HVAC	√	√	√	√			
	Parking Brake	√	√	√	√			
	Radio	√	√	√	√			
	Rear lid	√	√	√	√			
Panamera(970)	DME	√	√	√				
	SRS	√	√	√	√			
	PSM	√	√	√	√			
	Instrument cluster	√	√	√	√			
	Gateway	√	√	√	√			
	PARKASSISTANT	√	√	√				
	FRONT	√	√	√	√			
	REAR	√	√	√	√			
	HVAC	√	√	√	√			
	Parking Brake	√	√	√	√			
	Radio	√	√	√	√			
	Rear lid	√	√	√	√			
Boxter(981)	DME	√	√	√				
	SRS	√	√	√	√			
	PSM	√	√	√	√			
	Instrument cluster	√	√	√	√			
	Gateway	√	√	√	√			
	PARKASSISTANT	√	√	√				
	FRONT	√	√	√	√			

Porsche **V10.06** Diagnostics List (Note:For reference only)

Vehicle	System	Functions						
		Sys. Info.	Read code	Clear code	Data stream	Input signals	Special functions	
	REAR	√	√	√	√			
	HVAC	√	√	√	√			
	Parking Brake	√	√	√	√			
	Radio	√	√	√	√			
911(991)	DME	√	√	√				
	SRS	√	√	√	√			
	PSM	√	√	√	√			
	Instrument cluster	√	√	√	√			
	Gateway	√	√	√	√			
	PARKASSISTANT	√	√	√				
	FRONT	√	√	√	√			
	REAR	√	√	√	√			
	HVAC	√	√	√	√			
	Parking Brake	√	√	√	√			
Radio	√	√	√	√				

(*):Tested;