

# Infrared CO2 Sensor Module (Model: MH-Z19C)

**User's Manual** 

(Version 1.1)

Issue Date. 2020.08

Zhengzhou Winsen Electronics Technology Co., Ltd
ISO9001 Certificated Company

**Statement** 

This manual's copyright belongs to Zhengzhou Winsen Electronics Technology Co., LTD. Without

the written permission, any part of this manual shall not be copied, translated, stored in database

or retrieval system, also can't spread through electronic, copying, record ways.

Thanks for purchasing our product. In order to let customers use it better and reduce the faults

caused by misuse, please read the manual carefully and operate it correctly in accordance with the

instructions. If users disobey the terms or remove, disassemble, change the components inside of

the sensor, we shall not be responsible for the loss.

The specific such as color, appearance, sizes &etc., please in kind prevail.

We are devoting ourselves to products development and technical innovation, so we reserve the

right to improve the products without notice. Please confirm it is the valid version before using this

manual. At the same time, users' comments on optimized using way are welcome.

Please keep the manual properly, in order to get help if you have questions during the usage in the


future.

Zhengzhou Winsen Electronics Technology CO., LTD.

## MH-Z19C NDIR CO2 Module

## **Profile**

MH-Z19C NDIR infrared gas module is a common type, small size sensor, using non-dispersive infrared (NDIR) principle to detect the existence of CO2 in the air, with good selectivity, non-oxygen dependent and long life. Built-in temperature compensation; and it has UART output and PWM output. It is developed by the tight integration of mature infrared absorbing gas detection technology, precision optical circuit design and superior circuit design.

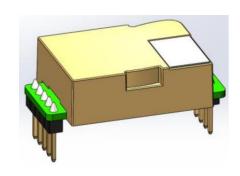

# **Applications**

\*Smart home


- \*HVAC refrigeration
- \*Air cleaner device
- \*Ventilation system
- \*Indoor air quality monitoring
- \*School

 
## **Main Features**

- \*Chamber is gold plated
- \*High sensitivity, low power consumption
- \*Good stability
- \*Temperature compensation, excellent linear output
- \*Multiple output modes: UART, PWM
- \*Long lifespan
- \*Anti-water vapor interference, anti-poisoning

# Main parameters

Model No.	MH-Z19C		
Detection Gas	CO2		
Working voltage	5.0±0.1V DC		
Average current	< 40mA (@5V power supply)		
Peak current	125mA (@5V power supply)		
Interface level	3.3 V (Compatible with 5V)		
Detection Range	400~5000ppm(optional)		
Output signal	Serial Port (UART) (TTL level 3.3V)		
Output signal	PWM		
Preheat time	1 min		
Response Time	T <sub>90</sub> < 120 s		
Working temperature	-10 ~ 50 °C		
Working humidity	0 ~ 95% RH (No condensation)		
Weight	5 g		
Lifespan	> 5 years		

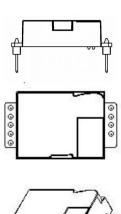





# **Detection range and accuracy**

Detection Gas	Formula	Detection Range	Accuracy
Carbon Dioxide CO		400~1500ppm	
	CO2	400~2000ppm	± (40ppm+5% reading value)
		400~5000ppm	


# **Dimensions**

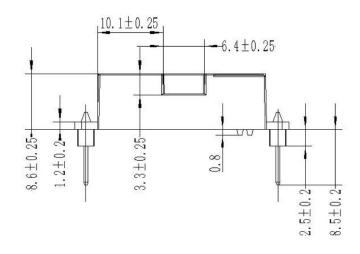

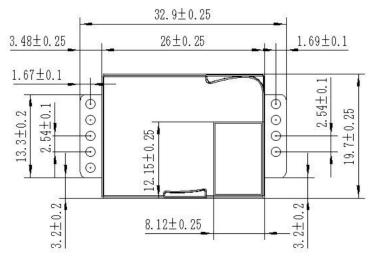

# Pins connection type:

Pin	Pin Definition		
Vin	Positive pole of power (Vin)		
GND	Negative pole of power (GND)		
PWM	PWM		
Hd	HD (zero-point calibration, low level		
на	lasting for over 7s is effective)		
Rx	UART(RXD)TTL Level data input		
Tx	UART(TXD)TTL Level data output		

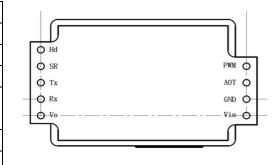

Tel: 86-371-67169097/67169670 Fax: 86-371-60932988

Email: sales@winsensor.com

# Output

PW	/M output
Take 400~2000ppm for example	
CO2 output range	400~2000ppm
Cycle	1004ms±5%
Cycle start high level output	2ms (theoretical value)
The middle cycle	1000ms±5%
cycle end low level output	2ms (theoretical value)
CO2 concentration: Cppr	m=2000×(TH-2ms)/(TH+TL-4ms)
$C_{\text{ppm}}$ : CO2 concentration co	ould be calculated by PWM output
TH high level ou	utput time during cycle
TL low level ou	tput time during cycle
202 m s  400 ppm 502 m s  1000 ppm 752 m s  1500 ppm 1002 m s  2000 ppm 1002 m s	

# Serial port output (UART)

## Hardware connection

Connect module's Vin-GND-RXD-TXD to users' 5V-GND-TXD-RXD. (Users must use TTL level. If RS232 level, it must be converted.)

The sensor factory default is to enable the automatic zero calibration function.

## Software setting

No return value

Set serial port baud rate be 9600, data bit 8 bytes, stop bit 1byte, parity bit null.

Commands					
0x86 Read CO2 concentration					
0x79	ON/OFF Self-calibration function for zero point				

d CO2 concer	ntration						
mmand							
Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7	Byte8
Start Byte Reserved Command		-	-	-	-	-	Checksum
0xFF 0x01 0x86		0x00	0x00	0x00	0x00	0x00	0x79
ue							
Byte0 Byte1 Byte2		Byte3	Byte4	Byte5	Byte6	Byte7	Byte8
Command	Concentration	Concentration	-	-	-	-	Checksum
	(High 8 Byte)	(Low 8 Byte)					
0x86	HIGH	LOW	-	-	-	-	Checksum
)	Byte1 Reserved 0x01 Je Byte1 Command	Byte1 Byte2  Reserved Command  0x01 0x86  Je  Byte1 Byte2  Command Concentration (High 8 Byte)	mmand  Byte1 Byte2 Byte3  Reserved Command - 0x01 0x86 0x00  Je  Byte1 Byte2 Byte3  Command Concentration Concentration (High 8 Byte) (Low 8 Byte)	mmand  Byte1 Byte2 Byte3 Byte4  Reserved Command  0x01 0x86 0x00 0x00  Je  Byte1 Byte2 Byte3 Byte4  Command Concentration Concentration -  (High 8 Byte) (Low 8 Byte)	mmand           Byte1         Byte2         Byte3         Byte4         Byte5           Reserved         Command         -         -         -         -           0x01         0x86         0x00         0x00         0x00           Je         Byte1         Byte2         Byte3         Byte4         Byte5           Command         Concentration         Concentration         -         -         -           (High 8 Byte)         (Low 8 Byte)         (Low 8 Byte)         -         -         -	mmand           Byte1         Byte2         Byte3         Byte4         Byte5         Byte6           Reserved         Command         -         -         -         -         -           0x01         0x86         0x00         0x00         0x00         0x00           Je         Byte1         Byte2         Byte3         Byte4         Byte5         Byte6           Command         Concentration (High 8 Byte)         (Low 8 Byte)         - </td <td>mmand           Byte1         Byte2         Byte3         Byte4         Byte5         Byte6         Byte7           Reserved         Command         -</td>	mmand           Byte1         Byte2         Byte3         Byte4         Byte5         Byte6         Byte7           Reserved         Command         -

0x79- On/Off Self-calibration for Zero Point								
Send command-No return value								
Byte0 Byte1 Byte2 Byte3 Byte4 Byte5 Byte6 Byte7 Byte8								Byte8
Start Byte	Reserved	Command	-	-	-	-	=	Checksum
0xFF	0x01	0x79	0xA0/0x00	0x00	0x00	0x00	0x00	Checksum

Note: when byte3 is 0xa0, the auto calibration function is turned on; when byte3 is 0x00, the auto calibration function is turned off.

Checksum	Checksum calculation method									
Checksum =	Checksum = (Negative (Byte1+Byte2+Byte3+Byte4+Byte5+Byte6+Byte7))+1									
For example	2:									
Byte0	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7	Byte8		
Start Byte	Reserved	Command	-	-	-	-	-	Check		
								sum		
0xFF	0x01	0x86	0x00	0x00	0x00	0x00	0x00	Check		
								sum		

Tel: 86-371-67169097/67169670 Fax: 86-371-60932988 Email: <u>sales@winsensor.com</u>

```
Calculating Checksum:

1. Add Byte 1 to Byte 7: 0x01 + 0x86 + 0x00 + 0x00 + 0x00 + 0x00 = 0x87

2. Negative: 0xFF - 0x87 = 0x78

3. Then+1: 0x78 + 0x01 = 0x79

C language

char getCheckSum(char *packet)
{
    char i, checksum;
    for( i = 1; i < 8; i++)
    {
        checksum += packet[i];
    }
    checksum = 0xff - checksum;
```

### **About Zero Point Calibration**

This module has **two methods** for zero point calibration: hand-operated method and self-calibration. All the zero point is at 400ppm CO2.

## Hand-operated method:

Connect module's HD pin to low level(0V), lasting for 7 seconds at least. Before calibrating the zero point, please ensure that the sensor is stable for more than 20 minutes at 400ppm ambient environment.

#### **Self-calibration function:**

The self-calibration function means that after the sensor runs continuously for a period of time, it can intelligently determine the zero point according to the environmental concentration and calibrate itself. The calibration cycle is automatic calibration every 24 hours since power-on operation. The zero point of automatic calibration is 400ppm.

The self-calibration function is suitable for office environment and home environment. However, it is not suitable for agricultural greenhouses, breeding farms, cold storage and other places. In such places, self-calibration function should be turned off. After the shutdown, users are required to periodically perform zero-point detection on the sensors, and if necessary, perform zero calibration or manual zero calibration.

# **Notes**

- Please avoid the pressure of its gilded plastic chamber from any direction, during welding, installation, and use.
- When placed in small space, the space should be well ventilated, especially for diffusion window.
- The module should be away from heat, and avoid direct sunlight or other heat radiation.
- The module should be calibrated termly, the suggested period is not longer than 6 months.
- Do not use the sensor in the high dusty environment for long time.
- ullet To ensure the normal work, the power supply must be among 5.0V  $\pm$  0.1V DC rang, the power current must be not less than 150mA. Out of this range, it will result in the failure of the sensor. (The concentration output is low, or the sensor cannot work normally.)
- During the zero point calibration procedure by manual, the sensor must work in stable gas environment (400ppm) for over 20 minutes. Connect the HD pin to low level (0V) for over 7 seconds.
- Forbid using wave soldering for the sensor.
- ullet When soldering with soldering iron, set the temperature to be (350  $\pm$  5)  $^{\circ}$  C, and soldering time must be within 3 seconds.
- As for pin version sensor, it is recommended to use soldering socket to directly insert or remove sensors for convenient maintenance.